
Fan (AGY-030)

AGY-030 increases the number of starts to 40/hour. The fan operates automatically during a soft start or soft stop and will continue to run if the heatsink temperature is > 45°C. The fan stops when the heatsink temperature has fallen below 40°C.

Fitting

Step 1. Remove screw (x1) and retain

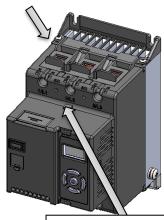

Step 2. Remove blanking plug (x1)

