SIEMENS



Installation manual

SINAMICS

SINAMICS G120 frequency converters

PM240-2 Power Modules, IP20 / push-through technology (PT)

Edition 01/2018

SIEMENS

SINAMICS

SINAMICS G120 Power Module PM240-2

Hardware Installation Manual

Preface	
Fundamental safety instructions	1
Introduction	2
Installing/mounting	3
Connecting-up	4
Service and maintenance	5
Technical data	6
Spare parts	7
Accessories	8
	Α
Appendix	

01/2018

A5E33294624B AJ

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

⚠DANGER

indicates that death or severe personal injury will result if proper precautions are not taken.

♠WARNING

indicates that death or severe personal injury may result if proper precautions are not taken.

∴ CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

/\ WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

Changes with respect to Edition 08/2017

The Power Module in frame size FSG has been integrated

Table of contents

	Preface.		3
1	Fundame	ental safety instructions	9
	1.1	General safety instructions	9
	1.2	Equipment damage due to electric fields or electrostatic discharge	14
	1.3	Warranty and liability for application examples	15
	1.4	Industrial security	16
	1.5	Residual risks of power drive systems	18
2	Introduct	ion	
3		/mounting	
	3.1	Installation conditions	
	3.2 3.2.1	EMC-compliant installation of a machine or system	24
	3.2.1	Cables	
	3.2.3	Electromechanical components	
	3.3	Power losses and air cooling requirements	30
	3.4 3.4.1	Mounting the Power Modules	
	3.4.2	Dimension drawings and drilling dimensions for built-in units - IP20 devices	
	3.4.3 3.4.4	Dimension drawings and drilling dimensions for PT Power Modules Mounting the shield plates	
	3.4.5	Mounting the shield plate, FSA FSC	40
	3.4.6	Mounting the shield plate, FSD FSG	4′
	3.4.7	Hoisting gear FSD FSG	
	3.4.8	Additional components	45
4	Connecti	ing-up	47
	4.1	Permissible line supplies	
	4.1.1	TN line system	
	4.1.2	TT line system	
	4.1.3 4.1.4	IT system Protective conductor	
	4.2	Connecting the line and motor cable at the inverter	
	4.2.1 4.2.2	Connection overview Length of the motor cable	
	4.2.3	Connection terminals at the inverter	
	4.2.4	Establishing connections	
	4.3	STO via Power Module terminals	
	4.4	Connecting the motor to the inverter in a star or delta connection	70

5	Service and	I maintenance	71
	5.1	Maintenance	72
	5.2	Commissioning after a long storage time	73
	5.3 5.3.1 5.3.2 5.3.3	Replacing a fan	75 76
6	Technical d	ata	79
	6.1	Electromagnetic compatibility - Overview	80
	6.2	Ambient conditions	81
	6.3	Overload capability of the inverter	83
	6.4	Cable cross-sections and tightening torques	85
	6.5 6.5.1 6.5.2 6.5.3	Technical data, 200 V inverters	87 89
	6.6 6.6.1 6.6.2 6.6.3	Technical data, 400 V inverters	98 100
	6.7 6.7.1 6.7.2 6.7.3	Technical data, 690 V inverters	110 112
	6.8	Restrictions for special ambient conditions	116
	6.9 6.9.1 6.9.1.1 6.9.1.2 6.9.2 6.9.3	Electromagnetic compatibility of variable-speed drives Inverter applications Operation in the Second Environment Operation in the First Environment Typical harmonic currents EMC limit values in South Korea	120 120 122 123
7	Spare parts		125
8	Accessories	3	127
	8.1	Top shield plate - FSD FSG	128
	8.2 8.2.1	Mounting frames for PT power modules	
	8.3	Mounting grips for PT Power Modules	133
	8.4	Line reactor	134
	8.5	Line filter	137
	8.6 8.6.1 8.6.2	Braking resistor Connecting a braking resistor Technical data of the braking resistor	142

	8.7	Connecting a motor holding brake	147
	8.7.1	Technical data of the brake relay?	
	8.7.2	Connections and circuit diagrams	148
	8.7.3	Mounting and connecting the brake relay	149
	8.8	Output reactor	150
	8.9	du/dt filter plus VPL	155
Α	Appendix	C	157
	A.1	Manuals and technical support	157
	A.1.1	Manuals for your inverter	
	A.1.2	Configuring support	159
	A.1.3	Product Support	160
	A.2	Disposal	161
	A.3	Directives and standards	162
	A.4	Abbreviations	164
	Index		165

Fundamental safety instructions

1

1.1 General safety instructions



MWARNING

Electric shock and danger to life due to other energy sources

Touching live components can result in death or severe injury.

- Only work on electrical devices when you are qualified for this job.
- · Always observe the country-specific safety rules.

Generally, the following six steps apply when establishing safety:

- 1. Prepare for disconnection. Notify all those who will be affected by the procedure.
- 2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
- 3. Wait until the discharge time specified on the warning labels has elapsed.
- 4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
- 5. Check whether the existing auxiliary supply circuits are de-energized.
- 6. Ensure that the motors cannot move.
- 7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. Switch the energy sources to a safe state.
- 8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness in the inverse sequence.



! WARNING

Risk of electric shock and fire from supply networks with an excessively high impedance

Excessively low short-circuit currents can lead to the protective devices not tripping or tripping too late, and thus causing electric shock or a fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the inverter is connected to the line supply at least meets the minimum requirements for the response of the protective device used.
- You must use an additional residual-current device (RCD) if a conductor-ground short circuit does not reach the short-circuit current required for the protective device to respond. The required short-circuit current can be too low, especially for TT supply systems.

1.1 General safety instructions



MARNING

Risk of electric shock and fire from supply networks with an excessively low impedance

Excessively high short-circuit currents can lead to the protective devices not being able to interrupt these short-circuit currents and being destroyed, and thus causing electric shock or a fire.

Ensure that the prospective short-circuit current at the line terminal of the inverter does
not exceed the breaking capacity (SCCR or Icc) of the protective device used.



MARNING

Electric shock if there is no ground connection

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

Ground the device in compliance with the applicable regulations.



. WARNING

Electric shock due to connection to an unsuitable power supply

When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage that might result in serious injury or death.

 Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV-(Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



/ WARNING

Electric shock due to equipment damage

Improper handling may cause damage to equipment. For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged devices.



! WARNING

Electric shock due to unconnected cable shield

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

 As a minimum, connect cable shields and the conductors of power cables that are not used (e.g. brake cores) at one end at the grounded housing potential.



MARNING

Arcing when a plug connection is opened during operation

Opening a plug connection when a system is operation can result in arcing that may cause serious injury or death.

• Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.



/ WARNING

Electric shock due to residual charges in power components

Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.

 Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.

NOTICE

Property damage due to loose power connections

Insufficient tightening torques or vibration can result in loose power connections. This can result in damage due to fire, device defects or malfunctions.

- Tighten all power connections to the prescribed torque.
- Check all power connections at regular intervals, particularly after equipment has been transported.

MARNING

Spread of fire from built-in devices

In the event of fire outbreak, the enclosures of built-in devices cannot prevent the escape of fire and smoke. This can result in serious personal injury or property damage.

- Install built-in units in a suitable metal cabinet in such a way that personnel are
 protected against fire and smoke, or take other appropriate measures to protect
 personnel.
- Ensure that smoke can only escape via controlled and monitored paths.

1.1 General safety instructions

MARNING

Active implant malfunctions due to electromagnetic fields

Inverters generate electromagnetic fields (EMF) in operation. People with active implants in the immediate vicinity of this equipment are at particular risk.

- As the operator of an EMF-emitting installation, assess the individual risks of persons with active implants. The following clearances are usually adequate:
 - No clearance to closed control cabinets and shielded MOTION-CONNECT supply cables
 - Forearm length (approx. 35 cm clearance) to distributed drive systems and open control cabinets

MARNING

Unexpected movement of machines caused by radio devices or mobile phones

When radio devices or mobile phones with a transmission power > 1 W are used in the immediate vicinity of components, they may cause the equipment to malfunction. Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- If you come closer than around 2 m to such components, switch off any radios or mobile phones.
- Use the "SIEMENS Industry Online Support app" only on equipment that has already been switched off.

NOTICE

Damage to motor insulation due to excessive voltages

When operated on systems with grounded line conductor or in the event of a ground fault in the IT system, the motor insulation can be damaged by the higher voltage to ground. If you use motors that have insulation that is not designed for operation with grounded line conductors, you must perform the following measures:

- IT system: Use a ground fault monitor and eliminate the fault as quickly as possible.
- TN or TT systems with grounded line conductor: Use an isolating transformer on the line side.

MARNING

Fire due to inadequate ventilation clearances

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

 Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

MARNING

Unrecognized dangers due to missing or illegible warning labels

Dangers might not be recognized if warning labels are missing or illegible. Unrecognized dangers may cause accidents resulting in serious injury or death.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, where necessary in the national language.
- Replace illegible warning labels.

NOTICE

Device damage caused by incorrect voltage/insulation tests

Incorrect voltage/insulation tests can damage the device.

Before carrying out a voltage/insulation check of the system/machine, disconnect the
devices as all converters and motors have been subject to a high voltage test by the
manufacturer, and therefore it is not necessary to perform an additional test within the
system/machine.

MARNING

Unexpected movement of machines caused by inactive safety functions

Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- · Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

Note

Important safety notices for Safety Integrated functions

If you want to use Safety Integrated functions, you must observe the safety notices in the Safety Integrated manuals.

1.2 Equipment damage due to electric fields or electrostatic discharge

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



NOTICE

Equipment damage due to electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g conductive foam rubber of aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
 - Wearing an ESD wrist strap
 - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

1.3 Warranty and liability for application examples

Application examples are not binding and do not claim to be complete regarding configuration, equipment or any eventuality which may arise. Application examples do not represent specific customer solutions, but are only intended to provide support for typical tasks.

As the user you yourself are responsible for ensuring that the products described are operated correctly. Application examples do not relieve you of your responsibility for safe handling when using, installing, operating and maintaining the equipment.

1.4 Industrial security

Note

Industrial security

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit:

Industrial security (http://www.siemens.com/industrialsecurity)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at:

Industrial security (http://www.siemens.com/industrialsecurity)

Further information is provided on the Internet:

Industrial Security Configuration Manual (https://support.industry.siemens.com/cs/ww/en/view/108862708)

MARNING

Unsafe operating states resulting from software manipulation

Software manipulations (e.g. viruses, trojans, malware or worms) can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.
- Make sure that you include all installed products into the holistic industrial security concept.
- Protect files stored on exchangeable storage media from malicious software by with suitable protection measures, e.g. virus scanners.
- Protect the drive against unauthorized changes by activating the "know-how protection" drive function.

1.5 Residual risks of power drive systems

When assessing the machine- or system-related risk in accordance with the respective local regulations (e.g., EC Machinery Directive), the machine manufacturer or system installer must take into account the following residual risks emanating from the control and drive components of a drive system:

- 1. Unintentional movements of driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example,
 - Hardware and/or software errors in the sensors, control system, actuators, and cables and connections
 - Response times of the control system and of the drive
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - Parameterization, programming, cabling, and installation errors
 - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
 - External influences/damage
 - X-ray, ionizing radiation and cosmic radiation
- 2. Unusually high temperatures, including open flames, as well as emissions of light, noise, particles, gases, etc., can occur inside and outside the components under fault conditions caused by, for example:
 - Component failure
 - Software errors
 - Operation and/or environmental conditions outside the specification
 - External influences/damage
- 3. Hazardous shock voltages caused by, for example:
 - Component failure
 - Influence during electrostatic charging
 - Induction of voltages in moving motors
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - External influences/damage
- Electrical, magnetic and electromagnetic fields generated in operation that can pose a
 risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too
 close
- 5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly
- 6. Influence of network-connected communication systems, e.g. ripple-control transmitters or data communication via the network

For more information about the residual risks of the drive system components, see the relevant sections in the technical user documentation.

Introduction

Overview

The Power Modules belong to the modular family of SINAMICS G120 inverters. A modular inverter comprises Control Unit and Power Module.

Depending on the power rating in frame sizes FSA ... FSG, the following Power Module versions are supplied:

•	1 AC 200 V	0.55 kW 4 kW	for line voltages from 1 AC 200 V 240 V
•	3 AC 200 V	0.55 kW 55 kW	for line voltages from 3 AC 200 V 240 V
•	3 AC 400 V	0.55 kW 250 kW	for line voltages from 3 AC 380 V 480 V
•	3 AC 690 V	11 kW 250 kW	for line voltages from 3 AC 500 V 690 V

Control Units for the Power Modules

You can operate the Power Modules with a Control Unit from one of the following listed families.

- CU230P-2
- CU240B-2
- CU240E-2
- CU250S-2

For Power Modules FSA ... FSC, you require a Control Unit with firmware version V4.4 or higher.

For Power Modules FSD ... FSF, you require a Control Unit with firmware version V4.7 HF8 or higher.

For Power Modules FSG, you require a Control Unit with firmware version V4.7 SP9 or higher.

Note

Commissioning the inverter

You must first commission the inverter before you can use it. Commissioning is described in the Operating Instructions of the relevant Control Unit.

Manuals for your inverter (Page 157)

STO independent of the Control Unit

Using the PM240-2 Power Modules, frame sizes FSD, FSE, FSF and FSG, you can implement the "Safe Torque Off" safety function (STO), corresponding to PL e according to EN 13849-1 and SIL 3 according to IEC61508.



STO via Power Module terminals (Page 68).

Permissible motors

Note

Motors for inverter operation

Only use motors that are suitable for operation with inverters with a DC link.

Motors for 200 V Power Modules

For the 200 V Power Modules, induction motors are permissible in the range from 25% ... 150% of the inverter power without any restrictions.

Motors for 400 V Power Modules

For the 400 V Power Modules, induction motors are permissible in the range from 25 % ... 150 % of the inverter power without any restrictions.

Motors for 690 V Power Modules

For the 690 V Power Modules, induction motors are permissible in the range from $50 \% \dots 150 \%$ of the inverter power without any restrictions.

Continuous development within the scope of product maintenance

Inverter components are being continuously developed within the scope of product maintenance. Product maintenance includes, for example, measures to increase the ruggedness or hardware changes which become necessary as components are discontinued.

These further developments are "spare parts-compatible" and do not change the article number.

In the scope of such spare parts-compatible ongoing development, plug connector or connection positions are sometimes slightly modified. This does not cause any problems when the components are properly used. Please take this fact into consideration in special installation situations (e.g. allow sufficient reserve regarding the cable length).

Installing/mounting 3

3.1 Installation conditions

General installation conditions

When installing the Power Modules carefully observe the conditions listed below in order to guarantee reliable, continuous and disturbance-free operation.

- The Power Modules are designed for installation in a control cabinet.
- The Power Modules are certified for use in environments with degree of pollution 2 without condensation; i.e. in environments where no conductive pollution/dirt occurs.
- The built-in units fulfill IP20 degree of protection.
- Fast temperature changes of the air drawn in (e.g. by using cooling units) are not permitted due to the risk of condensation.
- Condensation is not permissible when switching on.
- You can find the permissible conductor cross-sections for the terminals in:
 - Connection terminals at the inverter (Page 62)
- The following section describes how you can install the Power Module in compliance with EMC regulations:
 - EMC-compliant installation of a machine or system (Page 24)
- Devices in push-through technology PT devices
 - PT devices have IP20 degree of protection and at the rear of the control cabinet they fulfil IP55.
 - PT devices, FSF: A pressure compensation valve is necessary for the cabinet in order to prevent underpressure in the cabinet.

Inverters for systems in the United States / Canada (UL/cUL)

- For a system configuration in conformance with UL/cUL, use the fuse types approved for UL/cUL, specified in the Technical data, or the circuit breakers under the following Internet address.
 - Fuse types: Technical data (Page 79)
 - Circuit breaker (https://support.industry.siemens.com/cs/ww/en/view/109486009)
- The integrated semiconductor short-circuit protection does not provide cable protection.
- On the system side, provide cable protection in conformance with NEC or CEC, Part 1 and the local regulations.

3.1 Installation conditions

• The inverters provide internal motor protection corresponding to UL61800-5-1.

Protection threshold:

- 115% of the rated motor current entered for frame sizes FSA ... FSF
- 120% of the rated motor current entered for frame size FSG

You enter the motor data values and the protection functions when commissioning the inverter. Please observe the details in the associated operating instructions.

- For frame sizes FSF and FSG, to connect the line supply and motor only use UL
 approved ring-type cable lugs (ZMVV), which are certified for the particular voltage, with a
 permissible current of at least 125% of the input and output current. Use the higher value
 as basis.
- Carefully note that for plants and systems in conformance with UL/cUL, the line and output voltage may not be higher than 600 V.
- Only use copper cables rated for 60 °C or 75 °C.
- FSE, IP20: Only use cables that are certified for temperatures of 75 °C to connect the braking resistor.
- FSE, PT: Only use cables that are certified for temperatures of 75 °C to connect the line supply, motor and braking resistor.
- The inverters are Open Type devices.
- The push-through FSD ... FSF inverters are Open Type devices. At the rear of the control cabinet they fulfil Enclosure Type 1.

Additional requirements for CSA compliance, frame sizes FSA ... FSC

Install the inverter with an external suppression device with the following properties:

- Surge protection device with the appropriate certification (category checking numbers VZCA and VZCA7)
- Rated supply voltage
 - 240 V (phase with respect to ground), 240 V (phase to phase) for 200 V inverters
 - 480 V (phase to phase) for 400 V inverters
- Terminal voltage, V_{PR}
 - max. 2000 V for 200 V inverters
 - max. 2500 V for 400 V inverters
- Overvoltage category III
- Pollution degree 2
- Suitable for SPD applications, type 1 or type 2

Alternatively, use a surge protection device, article number 5SD7 424-1 from Siemens AG.

Additional requirements relating to CSA conformance, frame sizes FSD ... FSG

Overvoltage category OVC III must be ensured for all connections of the power circuit. This can mean that a surge suppressor must connected upstream on the line side. The rated voltage of the surge suppressor must not exceed the line voltage, and must guarantee the limit values (VPR) specified here.

Line voltage		Phase to gi	Phase to ground		Phase to phase	
		Rated voltage	VPR	Rated voltage	VPR	
3 AC 200 V 240 V	Grounded neutral conductor	139 V	2.5 kV	240 V	4 kV	
	Grounded line conductor	240 V	4 kV	240 V	4 kV	
3 AC 380 V 480 V	Grounded neutral conductor	277 V	4 kV	480 V	4 kV	
	Grounded line conductor	480 V	6 kV	480 V	4 kV	
3 AC 500 V 600 V	Grounded neutral conductor	347 V	6 kV	600 V	4 kV	
	Grounded line conductor	600 V	6 kV	600 V	4 kV	

3.2 EMC-compliant installation of a machine or system

The inverter is designed for operation in industrial environments where strong electromagnetic fields are to be expected.

Reliable and disturbance-free operation is only guaranteed for EMC-compliant installation.

To achieve this, subdivide the control cabinet and the machine or system into EMC zones:

EMC zones

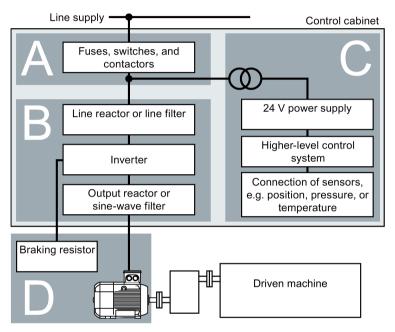


Figure 3-1 Example of the EMC zones of a plant or machine

Inside the control cabinet

- Zone A: Line supply connection
- Zone B: Power electronics

Devices in Zone B generate energy-rich electromagnetic fields.

• Zone C: Control and sensors

Devices in Zone C do not generate any energy-rich electromagnetic fields themselves, but their functions can be impaired by electromagnetic fields.

Outside the control cabinet

Zone D: Motors, braking resistors

Devices in Zone D generate electromagnetic fields with a significant amount of energy

3.2.1 Control cabinet

- Assign the various devices to zones in the control cabinet.
- Electromagnetically uncouple the zones from each other by means of one of the following actions:
 - Side clearance ≥ 25 cm
 - Separate metal enclosure
 - Large-area partition plates
- Route cables of various zones in separate cable harnesses or cable ducts.
- Install filters or isolation amplifiers at the interfaces of the zones.

Control cabinet assembly

- Connect the door, side panels, top and base plate of the control cabinet with the control cabinet frame using one of the following methods:
 - Electrical contact surface of several cm² for each contact location
 - Several screw connections
 - Short, finely stranded, braided copper wires with cross-sections
 ≥ 95 mm² / 000 (3/0) (-2) AWG
- Install a shield support for shielded cables that are routed out of the control cabinet.
- Connect the PE bar and the shield support to the control cabinet frame through a large surface area to establish a good electrical connection.
- Mount the control cabinet components on a bare metal mounting plate.
- Connect the mounting plate to the control cabinet frame and PE bar and shield support through a large surface area to establish a good electrical connection.
- For screw connections onto painted or anodized surfaces, establish a good conductive contact using one of the following methods:
 - Use special (serrated) contact washers that cut through the painted or anodized surface.
 - Remove the insulating coating at the contact locations.

Measures required for several control cabinets

- Install equipotential bonding for all control cabinets.
- Screw the frames of the control cabinets together at several locations through a large surface area using serrated washers to establish a good electrical connection.
- In plants and systems where the control cabinets are lined up next to one another, and which are installed in two groups back to back, connect the PE bars of the two cabinet groups at as many locations as possible.

3.2 EMC-compliant installation of a machine or system

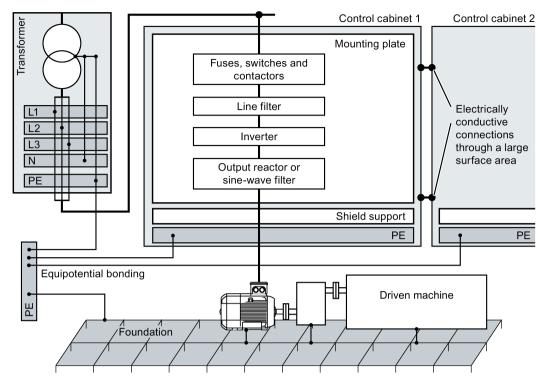


Figure 3-2 Grounding and high-frequency equipotential bonding measures in the control cabinet and in the plant/system

Further information

Additional information about EMC-compliant installation is available in the Internet:

EMC installation guideline

(https://support.industry.siemens.com/cs/ww/de/view/60612658/en)

3.2.2 Cables

Cables with a high level of interference and cables with a low level of interference are connected to the inverter:

- Cables with a high level of interference:
 - Cable between the line filter and inverter
 - Motor cable
 - Cable at the inverter DC link connection
 - Cable between the inverter and braking resistor
- Cables with a low level of interference:
 - Cable between the line and line filter.
 - Signal and data cables

Cable routing inside the cabinet

- Route the power cables with a high level of interference so that there is a minimum clearance of 25 cm to cables with a low level of interference.
 - If the minimum clearance of 25 cm is not possible, insert separating metal sheets between the cables with a high level of interference and cables with a low level of interference. Connect these separating metal sheets to the mounting plate to establish a good electrical connection.
- Cables with a high level of interference and cables with a low level of interference may only cross over at right angles:
- Keep all of the cables as short as possible.
- Route all of the cables close to the mounting plates or cabinet frames.
- Route signal and data cables as well as the associated equipotential bonding cables parallel and close to one another.
- Twist incoming and outgoing unshielded individual conductors.
 - Alternatively, you can route incoming and outgoing conductors in parallel, but close to one another.
- Ground any unused conductors of signal and data cables at both ends.
- Signal and data cables must only enter the cabinet from one side, e.g. from below.
- Using shielded cables for the following connections:
 - Cable between the inverter and line filter
 - Cable between the inverter and output reactor or sine-wave filter

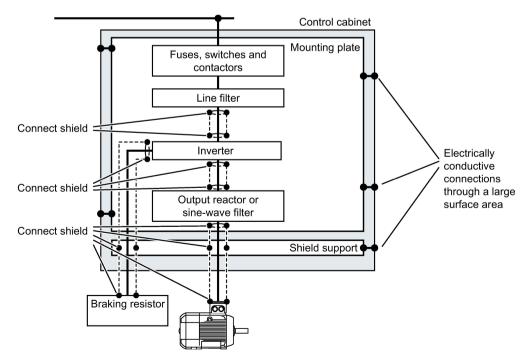


Figure 3-3 Routing inverter cables inside and outside a control cabinet

Routing cables outside the control cabinet

- Maintain a minimum clearance of 25 cm between cables with a high level of interference and cables with a low level of interference.
- Using shielded cables for the following connections:
 - Inverter motor cable
 - Cable between the inverter and braking resistor
 - Signal and data cables
- Connect the motor cable shield to the motor enclosure using a PG gland that establishes a good electrical connection.

Requirements relating to shielded cables

- Use cables with finely-stranded, braided shields.
- Connect the shield to at least one end of the cable.

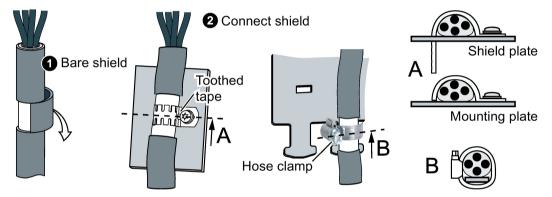


Figure 3-4 Examples for EMC-compliant shield support

- Attach the shield to the shield support directly after the cable enters the cabinet.
- Do not interrupt the shield.
- Only use metallic or metallized plug connectors for shielded data cables.

3.2.3 Electromechanical components

Surge voltage protection circuit

- Connect surge voltage protection circuits to the following components:
 - Coils of contactors
 - Relays
 - Solenoid valves
 - Motor holding brakes
- Connect the surge voltage protection circuit directly at the coil.
- Use RC elements or varistors for AC-operated coils and freewheeling diodes or varistors for DC-operated coils.

3.3 Power losses and air cooling requirements

Cooling requirements

To protect the components from overheating, the control cabinet requires a cooling air flow, which depends on the power loss of the individual components.

Formula for calculating the cooling airflow:


airflow [l/s] = power loss [W] * $0.86 / \Delta T$ [K]

Power loss: Total of the power losses of the individual components.

• Δ T: Permissible temperature rise in the control cabinet

Measures in order to ensure that the components are adequately cooled

- Add the power losses of the individual components.
 - Power Module data: Technical data (Page 79)".
 - The Control Unit power loss is less than 0.04 kW.
 - Use the manufacturers data for components, for example reactors or filters
- Calculate the air flow required, using the formula above.
- Ensure that the control cabinet is appropriately ventilated and equipped with suitable air filters.
- Ensure that the components maintain the specified clearances with respect to one another.

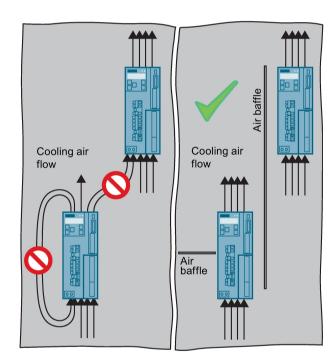

- Ensure that the components are provided with adequate cooling air through the cooling openings.
- Use the appropriate air barriers to prevent cooling air short circuits

Power loss for Power Modules with push-through technology - PT devices

When you use PT Power Modules, the majority of the power loss is dissipated through the heatsink located outside the control cabinet.

3.4 Mounting the Power Modules

Take note of the following listed specifications when installing the Power Module.

Protection against the spread of fire

The device may be operated only in closed housings or in control cabinets with protective covers that are closed, and when all of the protective devices are used. The installation of the device in a metal control cabinet or the protection with another equivalent measure must prevent the spread of fire and emissions outside the control cabinet.

Protection against condensation or electrically conductive contamination

Protect the device, e.g. by installing it in a control cabinet with degree of protection IP54 according to IEC 60529 or NEMA 12. Further measures may be necessary for particularly critical operating conditions.

If condensation or conductive pollution can be excluded at the installation site, a lower degree of control cabinet protection may be permitted.

Installing

NOTICE

Overheating due to inadmissible mounting


If mounted in an inadmissible fashion, the Power Module can overheat and therefore be damaged.

· Follow the mounting instructions.

Rules for admissible mounting:

 Only mount the Power Module in a vertical position with the motor connectors at the bottom.



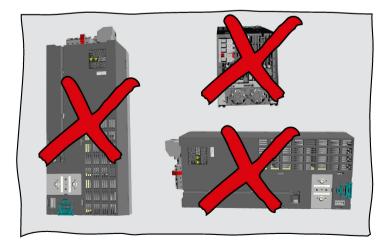

Maintain the minimum clearances to other components.

3.4 Mounting the Power Modules

- Use the specified installation parts and components.
- Comply with the specified torques.

3.4.1 Sequence for installing the Power Module

During installation, comply with the sequence listed below.

Frame sizes FSA ... FSC

- 1. Prepare the cabinet.
- 2. Mount the shield plates.
- 3. Install the Power Module.
- 4. If you are using a Brake Relay or Safe Brake Relay: Install the Brake Relay next to the inverter.

Frame sizes FSD ... FSG

- 1. Prepare the cabinet.
- 2. If you are using a Brake Relay or Safe Brake Relay: Install the Brake Relay on the rear side of the shield plate.
- 3. Mount the shield plates.
- 4. Install the Power Module.

3.4.2 Dimension drawings and drilling dimensions for built-in units - IP20 devices

The following dimension drawings and drilling patterns are not to scale.

Frame sizes FSA ... FSC

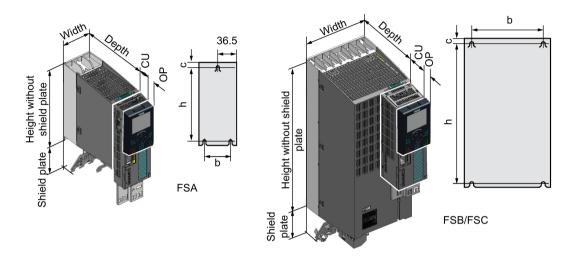


Table 3-1 Dimensions depend on the Control Unit (CU) and HMI device [mm]

Frame	Width	Heigh	t [mm]		Dej	oth [mm]	
size	[mm]	without shield plate	with shield plate	without CU	with CU230P-2 ¹⁾	with CU240B-2 ¹⁾ / CU240E-2 ¹⁾	with CU250S-2 ¹⁾
FSA	73	196	276	165	224	206	227
FSB	100	292	370	165	224	206	227
FSC	140	355	432	165	224	206	227


With a Smart Access Module plus 9 mm With blanking cover or with Operator Panel plus 11 mm.

Table 3-2 Drilling dimensions, cooling clearances and fixing

Frame	Drilling dimensions [mm] Cooling air clearances [mm] 1)						Fixing/torque [Nm]
size	h	b	С	Тор	Bottom	Front	
FSA	186	62.3	6	80	100	100	3 x M4 / 2.5
FSB	281	80	6	80	100	100	4 x M4 / 2.5
FSC	343	120	6	80	100	100	4 x M5 / 3.5

¹⁾ The Power Module is designed for mounting without any lateral cooling air clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

Frame sizes FSD ... FSG

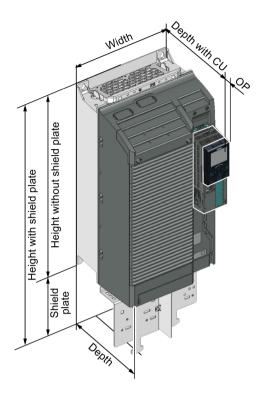

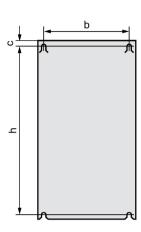


Table 3-3 Dimensions depend on the Control Unit (CU) and HMI device [mm]

Frame	Width	Heigh	t [mm]		Depth [mm]		
size	[mm]	without shield plate	with shield plate	without CU	with CU230P-2 ¹⁾	with CU240B-2 ¹⁾ / CU240E-2 ¹⁾	with CU250S-2 ¹⁾
FSD	200	472	624	237	253	237	256
FSE	275	551	728	237	253	237	256
FSF	305	709	966	357	373	357	376
FSG	305	1000	1257	357	373	357	376

With a Smart Access Module plus 9 mm With blanking cover or with Operator Panel plus 11 mm.

Table 3-4 Drilling dimensions, cooling clearances and fixing

Frame	Drilling dimensions [mm]			Cooling	air clearance	Fixing/torque [Nm]	
size	h	b	С	Top ²⁾	Bottom 2)	Front	
FSD	430	170	7	300	350	100	4 x M5 / 6.0
FSE	509	230	8.5	300	350	100	4 x M6 / 10
FSF	680	270	13	300	350	100	4 x M8 / 25
FSG	970.5	265	15	300	350	100	4 x M10 / 50

¹⁾ The Power Module is designed for mounting without any lateral cooling air clearance. For tolerance reasons, we recommend a lateral clearance of approx. 1 mm.

²⁾ The top and bottom cooling air clearances refer to the Power Module without shield plate

3.4.3 Dimension drawings and drilling dimensions for PT Power Modules

Use the optional mounting frame to mount a Power Module in push-through technology in a control cabinet. The mounting frame includes the necessary seals and frame to ensure compliance with degree of protection IP55.

If you do not use the optional mounting frame, then you must ensure that the required degree of protection is complied with using other appropriate measures. Mounting instructions are provided in the following section:

Mounting frames for PT power modules (Page 129)

The following dimension drawings and drilling patterns are not to scale.

Frame sizes FSA ... FSC

Wall thickness of the control cabinet ≤3.5 mm

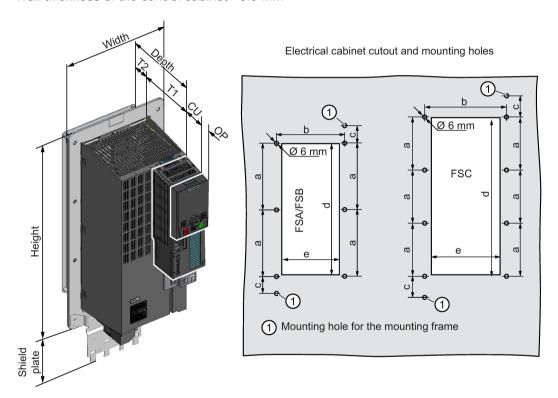


Figure 3-5 Dimension drawing and drilling dimensions for frame sizes FSA ... FSC

Frame	Width	Height [mm]		Overall depth in the cabinet [mm]				
size	[mm]	Without shield plate	With shield plate	T1	with CU230P- 2 ¹⁾	with CU240B- 2 ¹⁾ / CU240E- 2 ¹⁾	with CU250S- 2 ¹⁾	
FSA	126	238	322	118	177	159	180	
FSB	154	345	430	118	177	159	180	
FSC	200	411	500	118	177	159	180	

Table 3-5 Dimensions depend on the Control Unit (CU) and HMI device [mm]

Table 3-6 Cooling air clearances and additional dimensions

Frame	Power Mod	dule depth [n	nm]	Cooling air clearances [mm] 1)		
size	T1 + T2	T1	T2	Тор	Bottom	Front
FSA F SC	171	118	53	80	100	100

¹⁾ The Power Module is designed for mounting without any lateral cooling air clearance. For tolerance reasons, we recommend a lateral clearance of 1 mm.

Table 3-7 Electrical cabinet cutout and mounting

Frame		Fixing/torque [Nm]				
size	а	b	С	d	е	
FSA	103	106	27	198	88	8 × M5 / 3.5
FSB	148	134	34.5	304	116	8 × M5 / 3.5
FSC	123	174	30.5	365	156	10 × M5 / 3.5

With a Smart Access Module plus 9 mm With blanking cover or with Operator Panel plus 11 mm.

Frame sizes FSD ... FSF

Wall thickness of the control cabinet ≤3.5 mm

Cutouts of the control cabinet and mounting holes

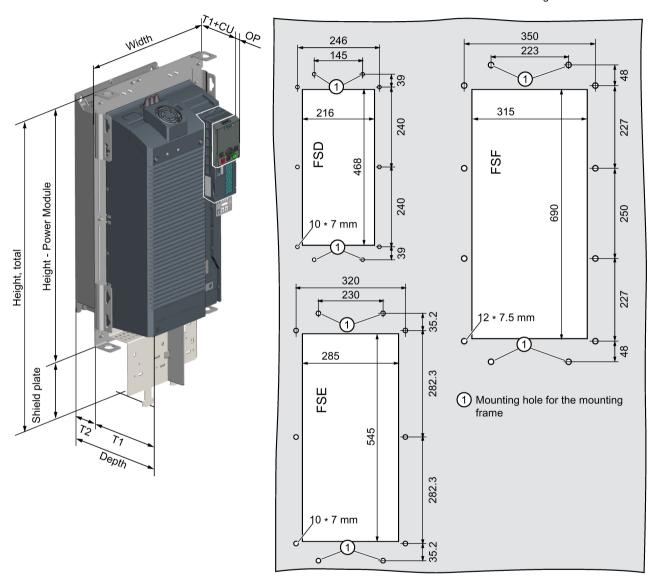


Figure 3-6 Dimension drawing and drilling dimensions for frame sizes FSD ... FSF

177.5

196

Frame Width Height [mm] Overall depth in the cabinet [mm] size [mm] Without With shield T1 with with with shield plate CU230P-CU240B-CU250S-2 1) 2 1) plate 21)/ CU240E-2 1) FSD 275 517 650 141 155 141 158 **FSE** 354 615 772 141 155 141 158

177.5

193

1021

Table 3-8 Dimensions depend on the Control Unit (CU) and HMI device [mm]

785

384

FSF

Table 3-9 Cooling air clearances, further dimensions and mounting

Frame	Power Module depth [mm]			Cooling	air clearanc	Fixing/torque	
size	T1 + T2	T1	T2	Тор	Bottom	Front	[Nm]
FSD	238.5	141	97.5	350	300	100	10 × M5 / 3.5
FSE	238.5	141	97.5	350	300	100	10 × M5 / 3.5
FSF	358	177.5	180.5	350	300	100	12 × M6 / 5.9

With a Smart Access Module plus 9 mm With blanking cover or with Operator Panel plus 11 mm.

3.4 Mounting the Power Modules


3.4.4 Mounting the shield plates

Use the provided shield plate for strain relief of the line and motor cable – as well as the shield support for the motor cable.


3.4.5 Mounting the shield plate, FSA ... FSC

The shield plates and fixings screws are included in the inverter accessory kit.

Mounting the shield plate, FSA ... FSC - Built-in devices

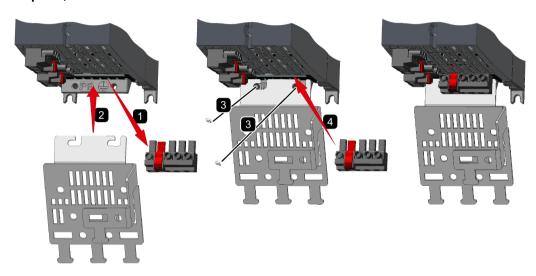

Mounting the shield plate, FSA ... FSC - PT Power Module

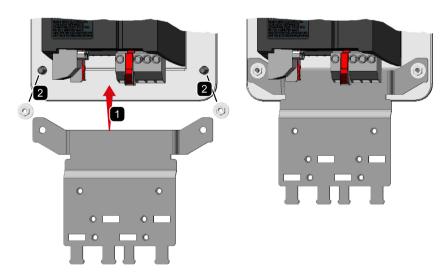

3.4.6 Mounting the shield plate, FSD ... FSG

Note

Built-in devices and PT Power Modules

The shield plates are mounted in the same way for PT and IP20 devices.

Upper shield plate

The top shield plate is not supplied with the inverter. You need it as a shield support when you connect an external braking resistor.



Braking resistor (Page 139)

EMC connecting bracket

The EMC connecting bracket is only supplied with inverters with integrated filter.


Mounting the shield plate, FSD and FSE

Procedure



Proceed as follows to mount the shield plate:

 If you are using a Brake Relay to control a motor holding brake, then mount the Brake Relay at the rear of the shield plate.

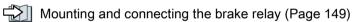

• If the device has an integrated line filter:

Fasten the EMC connecting bracket to the shield plate using four screws ①. Then slide the shield plate with the EMC connecting bracket into the inverter, so that it is held in the inverter by the clamping spring ②.


The EMC connecting bracket is positioned correctly if there is some resistance when it is withdrawn from the inverter.

Having ensured that it is positioned correctly, fasten the shield plate in place using the four screws ③.

3.4 Mounting the Power Modules

If the device is unfiltered:

Having ensured that it is positioned correctly, fasten the shield plate in place using the four screws ③.

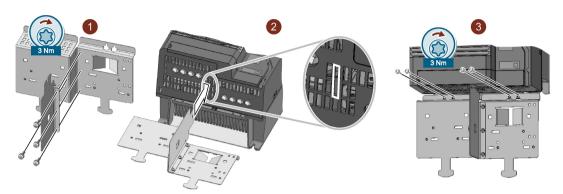

You have mounted the shield plate.

Mounting the shield plate, FSF

Procedure




Proceed as follows to mount the shield plate:

- If you are using a Brake Relay to control a motor holding brake, then mount the Brake Relay at the rear of the shield plate.
 - Mounting and connecting the brake relay (Page 149)
- If the device has an integrated line filter:

Fasten the EMC connecting bracket to the shield plate with four screws ①.

- Screw the shield plate to the inverter together with the EMC connecting bracket using three screws ②
- If the device is unfiltered:

Having ensured that it is positioned correctly, fasten the shield plate in place using the four screws ②.

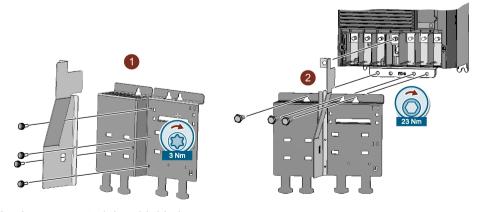

You have mounted the shield plate.


Mounting the shield plate, FSG

Procedure



Proceed as follows to mount the shield plate:

- If you are using a Brake Relay to control a motor holding brake, then mount the Brake Relay at the rear of the shield plate.
 - Mounting and connecting the brake relay (Page 149)
- Secure each side part to the shield plate with two screws ①.
- Fasten the EMC connecting bracket to the shield plate with four screws ②.
- Screw the shield plate to the inverter together with the side parts and EMC connecting bracket using four screws ②

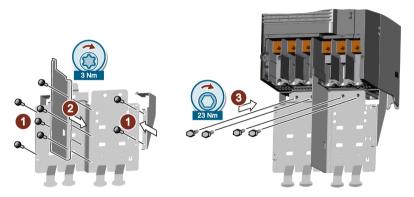

You have mounted the shield plate.

3.4 Mounting the Power Modules

3.4.7 Hoisting gear FSD ... FSG

Power Module weights:


200 V inverter (Page 89)

400 V inverter (Page 100)

690 V inverter (Page 112)

Hoisting gear - Built-in devices


Use crane lifting lugs and the appropriate hoisting gear when mounting built-in devices.

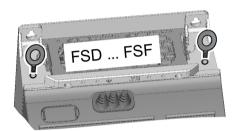



Hoisting gear - PT devices

Use the hoisting gear shown below when mounting the Power Modules

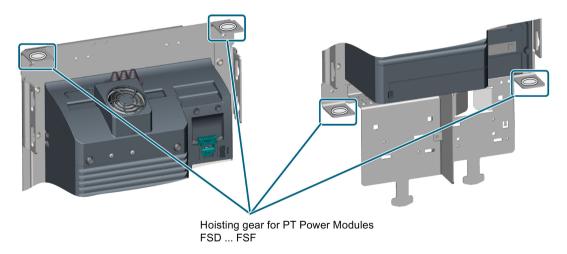


Alternatively, you have the option of attaching mounting grips onto the Power Module.

Mounting grips for PT Power Modules (Page 133).

3.4.8 Additional components

Depending on the particular application, additional components may be required for your system. Information about additional components is provided in the following Sections:

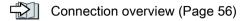

Accessories (Page 127).

3.4 Mounting the Power Modules

Connecting-up

Install the converter so that you are compliant with local regulations for erecting and installing low-voltage systems.

Note

Safety devices

Install suitable protective equipment between the line supply and converter.



Technical data (Page 79)

Note

Operating displays for converter operation

If, when switching over a function from ON to OFF, an LED or other similar display is not lit or not active; this does not indicate that the device is switched-off or in a no-current condition.

Observe the following product note about protection against indirect contact:

To protect against indirectly touching part of the motor circuit of an inverter and to automatically shut down in the case of a fault according to DIN EN 60364-4-41 (VDE 0100-410). (http://support.automation.siemens.com/WW/view/en/103474630)



Electric shock due to faulty contact protection

Due to faulty contact protection, the power connections of the inverter may be openly accessible. Touching live power connections can result in death or severe injury.

- Make the openings for the inverter power connections just large enough for the cables to be routed through.
- Cover power connections that are not used so that they cannot be touched.
- Use the dummy plugs provided in the accessory pack for unused terminals.

Note

Fault of the wireless services caused by high-frequency faults in residential environments

In a residential environment this product can cause high-frequency interference, which may make interference suppression measures necessary.

 Have qualified personnel carry out the installation and commissioning with suitable interference suppression measures.



Ch

Fire or electric shock due to unsuitable residual-current protective devices

The inverter may create a current through the protective conductor. The current through the protective conductor can cause the residual current device (RCD) or residual current monitor (RCM) to incorrectly trip (nuisance trip). In the case of a ground fault, the fault current can contain a DC component, which prevents the RCD or RCM from tripping, with the risk of subsequent fire or electric shock.

Use the protection and monitoring devices recommended in the documentation.



!CAUTION

Burns due to touching hot surfaces

Certain components (e.g. the heat sink or line reactor) can become very hot during operation. The components can remain hot for some time after operation. Touching hot surfaces can cause burns to the skin.

Do not touch hot components during operation or immediately following operation.

Protection and monitoring equipment

To provide protection against short-circuit, use the overcurrent devices listed in Technical data (fuses, circuit breakers etc.).

If the apparent impedance of the line supply at the infeed point is not suitable, so that fuses do not rupture in the specified time in the case of insulation failure (ground fault, fault to frame), then you must use additional fault current protective devices RCD (RCCB or MRCD), type B.

In order that an RCD does not unnecessarily trip as a result of operational leakage currents, the following preconditions must be fulfilled:

- The neutral point of the line supply is grounded.
- For inverters with rated input currents ≤ 125 A referred to LO, use an RCCB type B with a response limit current of 300 mA. Connect the RCCB in series with the overcurrent protective devices.

• For inverters with rated input currents> 125 A referred to LO, use a type B MRCD (for example, from the Bender company).

An MRCD comprises an RCM (differential current monitoring device), a measuring current transducer and a circuit breaker with additional undervoltage release, listed in the Technical data. An example of an MRCD design is provided in the following diagram.

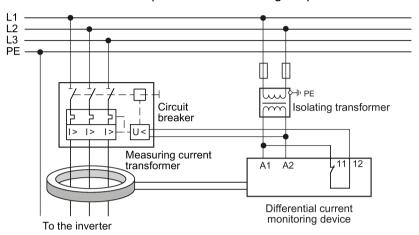


Figure 4-1 MRCD

- A dedicated RCD is used for every inverter.
- The motor cables are shorter than 50 m (164 ft) shielded, or 100 m (328 ft) unshielded.
 Additional information about motor cables
 - Length of the motor cable (Page 60)



Further protection and monitoring equipment (https://support.industry.siemens.com/cs/ww/en/view/109486009)

4.1 Permissible line supplies

4.1 Permissible line supplies

The converter is designed for the following line supplies according to IEC 60364-1 (2005).

- TN system
- TT system
- IT system

General requirements on line supply

The plant builder or machine manufacturer must ensure for operation with rated current I_{rated} that the voltage drop between the transformer input terminals and the inverter when operated with its rated values is less than 4% of the transformer rated current

Restrictions for installation altitudes above 2000 m

Above an installation altitude of 2000 m, the permissible line supplies are restricted.

Restrictions for special ambient conditions (Page 116)

Screw for functional grounding on the converter, frame size FSG

If you wish to use the inverters with integrated C3 line filter, please note the information in the sections "TN line system", "TT line system" and "IT system" below.



Figure 4-2 Remove screw for functional grounding


4.1.1 TN line system

A TN line system transfers the PE protective conductor to the installed plant or system using a cable.

Generally, in a TN line system the neutral point is grounded. There are versions of a TN system with a grounded line conductor, e.g. with grounded L1.

A TN line system can transfer the neutral conductor N and the PE protective conductor either separately or combined.

Example: Separate transfer of N and PE, grounded neutral point

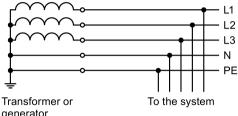

Inverter connected to a TN system

- Inverters with integrated line filter:
 - Operation on TN line systems with grounded neutral point permissible.
 - Operation on TN line systems with grounded line conductor not permissible.

Note

Special feature of FSG inverters

FSG inverters with integrated C3 line filter can be operated in TN line systems ≤ 600 V with a grounded line conductor if you remove the screw for functional grounding.



Figure 4-2 Remove screw for functional grounding (Page 50)

If you remove the screw for functional grounding, the EMC properties deteriorate and the requirements of Class C3 are no longer met.


- Inverters with external line filter:
 - Operation on TN line systems with grounded neutral point permissible.
 - Operation on TN line systems with grounded line conductor not permissible.
- Inverter without line filter:
 - Operation on all TN line systems ≤ 600 V permissible
 - Operation on TN line systems > 600 V and grounded neutral point permissible.
 - Operation on TN line systems > 600 V and grounded line conductor not permissible.

4.1 Permissible line supplies

4.1.2 TT line system

In a TT line system, the transformer grounding and the installation grounding are independent of one another.

There are TT line supplies where the neutral conductor N is either transferred - or not.

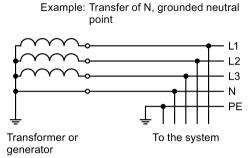

Note

Operation in IEC or UL systems

For installations in compliance with IEC, operation on TT line systems is permissible. For installations in compliance with UL, operation on TT line systems is not permissible.

Inverter connected to a TT system

- Inverters with integrated line filter:
 - Operation on TT line systems with grounded neutral point permissible.
 - Operation on TT line systems without grounded neutral point not permissible.

Note

Special feature of FSG inverters

FSG inverters with integrated C3 line filter can be operated in TT line systems without a grounded neutral point if you remove the screw for functional grounding.



Figure 4-2 Remove screw for functional grounding (Page 50)

If you remove the screw for functional grounding, the EMC properties deteriorate and the requirements of Class C3 are no longer met.

- Inverters with external line filter:
 - Operation on TT line systems with grounded neutral point permissible.
 - Operation on TT line systems without grounded neutral point not permissible.
- Inverter without line filter:
 - Operation on all TT line systems permissible.

4.1.3 IT system

In an IT line system, all of the conductors are insulated with respect to the PE protective conductor – or connected to the PE protective conductor through an impedance.

There are IT systems with and without transfer of the neutral conductor N.

respect to PE protective conductor

L1
L2
L3
N
PE

Transformer or To the system

Example: Transfer of N, impedance with

Note

Behavior of the inverter when a ground fault occurs

If the inverter is to remain operable even when a ground fault occurs at the inverter output, you must install an output reactor. This prevents an overcurrent trip or damage to the drive.

generator


Inverter connected to an IT system

- Inverters with integrated line filter:
 - Operation on IT line systems not permissible.

Note

Special feature of FSG inverters

FSG inverters with integrated C3 line filter can be operated in IT line systems if you remove the screw for functional grounding.

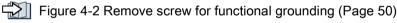

If you remove the screw for functional grounding, the EMC properties deteriorate and the requirements of Class C3 are no longer met.

- Inverter without line filter:
 - Operation on all IT line systems permissible.

Note

690 V inverters: Output reactors for frame sizes FSD and FSE

An output reactor is required for 690 V reactors in frame sizes FSD and FSE.

4.1.4 Protective conductor



MARNING


Electric shock due to interrupted protective conductor

The drive components conduct a high leakage current via the protective conductor. Touching conductive parts when the protective conductor is interrupted can result in death or serious injury.

• Dimension the protective conductor as stipulated in the appropriate regulations.

Dimensioning the protective conductor

Observe the local regulations for protective conductors subject to an increased leakage current at the site of operation.

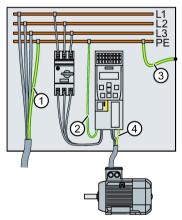

- 1) Protective conductor for line feeder cables
- 2 Protective conductor for inverter line feeder cables
- 3 Protective conductor between PE and the control cabinet
- 4) Protective conductor for motor feeder cables

The minimum cross-section of the protective conductor ① ... ④ depends on the cross-section of the line or motor feeder cable:

- Line or motor feeder cable ≤ 16 mm²
 - ⇒ Minimum cross-section of the protective conductor = cross-section of the line or motor feeder cable
- 16 mm² < line or motor feeder cable ≤ 35 mm²
 - ⇒ Minimum cross-section of the protective conductor = 16 mm²
- Line or motor feeder cable > 35 mm²
 - \Rightarrow Minimum cross-section of the protective conductor = $\frac{1}{2}$ cross-section of the line or motor feeder cable

Additional requirements placed on the protective conductor 1:

- For permanent connection, the protective conductor must fulfill at least one of the following conditions:
 - The protective conductor is routed so that it is protected against damage along its complete length.
 - Cables routed inside switch cabinets or enclosed machine housings are considered to be adequately protected against mechanical damage.
 - As a conductor of a multi-conductor cable, the protective conductor has a crosssection ≥ 2.5 mm² Cu.
 - For an individual conductor, the protective conductor has a cross-section ≥ 10 mm²
 Cu.
 - The protective conductor consists of two individual conductors with the same crosssection.
- When connecting a multi-core cable using an industrial plug connector according to EN 60309, the protective conductor must have a cross-section of ≥ 2.5 mm² Cu.

4.2 Connecting the line and motor cable at the inverter

4.2.1 Connection overview

Note

Line reactor

No line reactor is required for FSD ... FSG Power Modules.

Line filter

The inverters are available with or without integrated line filter (Class A). For frame sizes FSA ... FSC, 3 AC 400 V, there are external filters (Class B) for increased EMC requirements. Line filter (Page 137)

Output reactor

For frame sizes FSD ... FSG no output reactor is required in many cases on account of the long cable lengths between the inverter and the motor.

Available output reactors:

Output reactor (Page 150)

Braking resistor

Connect a braking resistor to the inverter via the R1 and R2 terminals.

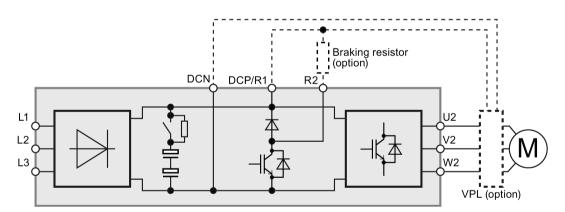


Figure 4-3 Block diagram of the inverter, FSA ... FSC

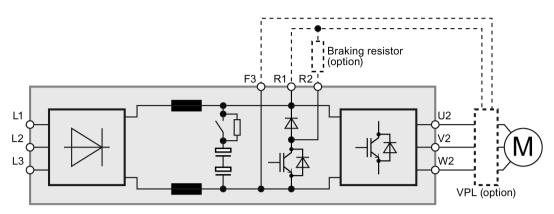


Figure 4-4 Block diagram for the inverter, FSD ... FSG

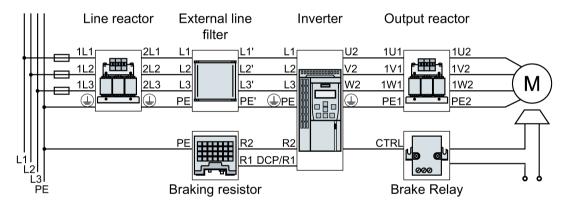


Figure 4-5 Connecting the PM240-2 Power Module, 200 V / 400 V 3 AC, FSA ... FSC

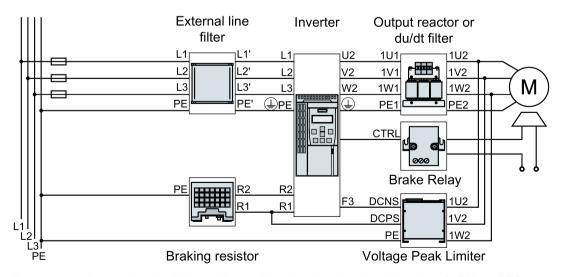


Figure 4-6 Connecting the PM240-2 Power Module, 200 V / 400 V / 690 V 3 AC, FSD ... FSG

Hardware Installation Manual, 01/2018, A5E33294624B AJ

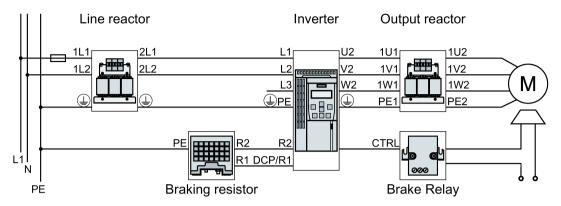


Figure 4-7 Connecting the PM240-2 Power Module, 200 V 1 AC, FSA ... FSC

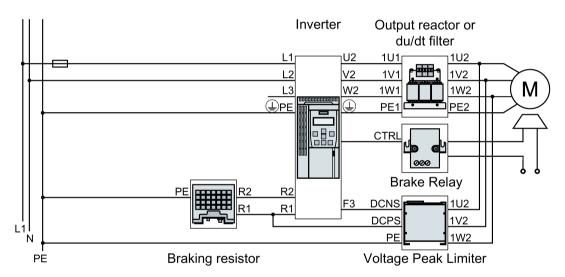


Figure 4-8 Connecting the PM240-2 Power Module, 200 V 1 AC, FSD ... FSF

Note

Connecting PM240-2 Power Modules, 200 V to 1 AC - only FSA ... FSC

For the 200 V versions and single-phase line systems, connect the phase conductor and neutral conductor to any two of the terminals L1, L2, L3.


Connect cables at the inverter so that they are EMC compliant

Attach the cable tie holders to the Power Module as shown to the left in the diagram before you establish the connections.

Fix the line connecting cable using a cable tie as shown in ①.

Fix the shield of the motor connecting cable using a hose clamp (②).

Connect the shield of the control cable with the shield plate of the Control Unit (③) using a steel band. Also attach the control cable to the Power Module using a cable tie (④).

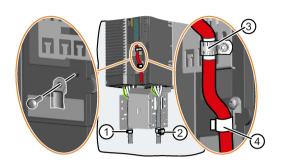

4.2.2 Length of the motor cable

Always dimension the motor cable so that the ohmic losses are less than 5 % of the inverter power rating.

The permissible length of the motor cable also depends on the quality of the motor cable and the inverter pulse frequency. The values specified below are applicable for high quality cables, such as CY100 or similar, and for the pulse frequencies set in the factory.

Pulse frequencies (Page 79).

If you set other pulse frequencies, then you must ensure that the EMC category is complied with on the plant or system side.

EMC-compliant wiring is required in order that the inverter complies with the EMC category listed in the following table.

EMC-compliant installation of a machine or system (Page 24)

Carefully observe the following section for operation in the first environment:

Electromagnetic compatibility of variable-speed drives (Page 119)

Table 4- 1	Permissible lengths of r	motor connecting cables.	inverter FSA FSC

EMC category	Seco	nd Environmer	nt, C2	No EMC category		
Inverter	with internal C2 filter	with external C2 filter	with external C1 filter, with output reactor	without filter, without output reac- tor	without filter, with output reactor	
Cable	Shielded	Shielded	Shielded	Shiel- ded/unshiel ded	Shielded Unshielded	
200 V	50 m	50 m		150 m	150 m	225 m
400 V	50 m ¹⁾	50 m ²⁾	150 m ³⁾	150 m	150 m	225 m

¹⁾ For a low-capacitance motor cable: FSB 100 m, FSC 150 m

Table 4-2 Permissible cable lengths for the motor connection, FSD ... FSE

EMC category	Second Environment, C2	No EMC category					
Inverter	with internal C2 filter		ut filter, with or tput reactor		vith two output in series		
Cable	Shielded	Shielded	Unshielded	Shielded	Unshielded		
200 V	150 m	200 m	300 m	350 m	525 m		
400 V	150 m	200 m	300 m	350 m	525 m		
690 V	100 m	200 m	300 m				

²⁾ For a low-capacitance motor cable: FSA 150 m, FSB 100 m, FSC 100 m

 $^{^{3)}}$ 150 m for voltages in the range 380 V ... 415 V, 100 m for voltages in the range 440 V ... 480 V

Table 4-3 Permissible cable lengths for the motor connection, FSF

Inverter	with internal C2 filter		ut filter, with or itput reactor	•	with two output in series	
EMC category	Second En- vironment, C2	No EMC category				
Cable	Shielded	Shielded	Unshielded	Shielded	Unshielded	
200 V	150 m	300 m	450 m	525 m	800 m	
400 V	150 m	300 m	450 m	525 m	800 m	
690 V	150 m ¹⁾	300 m	450 m	525 m	800 m	

Restriction for PT devices with 400 V: Use a double-shielded cable for the motor connection.

Table 4-4 Permissible cable lengths for the motor connection, FSG

Inverter	with internal C2 filter		ut filter, with or tput reactor	· ·	vith two output in series		
EMC category	Second Environment, C2		No EMC category				
Cable	Shielded	Shielded	Unshielded	Shielded	Unshielded		
400 V	150 m 300 m ¹⁾	300 m	450 m	525 m	800 m		
690 V	300 m ¹⁾	300 m	450 m	525 m	800 m		

¹⁾ only C3

¹⁾ only C3

4.2.3 Connection terminals at the inverter

Table 4-5 Connection, cross-section and tightening torque for PM240-2 Power Modules

Inverters	Conne	ection	Cross-section, tig	ghtening torque	Stripped
			Metric	Imperial	insulation length
FSA	Line system, motor	Lies	1.5 2.5 mm ² , 0.5 Nm	16 14 AWG, 4.5 lbf in	8 mm
FSB	and braking resistor		1.5 6 mm ² , 0.6 Nm	16 10 AWG, 5.5 lbf in	8 mm
FSC		Plug connector with screw termi- nals	616 mm², 1.3 Nm	10 6 AWG, 12 lbf in	10 mm
FSD	Line and motor	Screw-type termi- nal	10 35 mm², 2.5 4.5 Nm	20 10 AWG, 22 lbf in 8 2 AWG, 40 lbf in	18 mm
	Braking resistor		2.5 16 mm², 1.2 1.5 Nm	20 6 AWG, 15 lbf in	10 mm
FSE	Line and motor	Screw-type termi- nal	25 70 mm ² , 8 10 Nm	6 3/0 AWG, 88.5 lbf in	25 mm
	Braking resistor		10 35 mm², 2.5 4.5 Nm	20 10 AWG, 22 lbf in 8 2 AWG, 40 lbf in	18 mm
FSF	Line and motor	Cable lug according to SN71322 for M10 bolts	35 2 × 120 mm², 22 25 Nm	1 AWG 2 × 4/0 AWG, 210 lbf.in	-
	Braking resistor	Screw-type termi- nal	25 70 mm², 8 10 Nm	6 3/0 AWG, 88.5 lbf in	25 mm
FSG	Line and motor	Cable lug according to SN71322 for M10 bolts	35 2 × 185 mm ² , 22 25 Nm	1 AWG 2 × 350 MCM, 210 lbf.in	
	Braking resistor	Screw-type termi- nal	25 70 mm², 8 10 Nm	6 3/0 AWG, 88.5 lbf in	25 mm

4.2.4 Establishing connections


Procedure



Proceed as follows to establish the connections:

- 1. Ensure that the device is in a no-voltage condition and the DC link is discharged.
- 2. Establish the connections as described in the following sections.
- This means that you have established the connections.

Connections for frame sizes FSA ... FSC

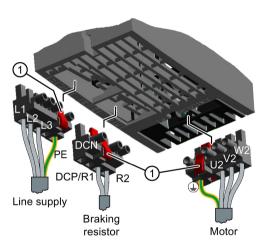

The Power Modules are equipped with withdrawable plug connectors that cannot be inadvertently interchanged.

To remove a plug connector, you must release it by pressing on the red lever.


Release lever

Connections for frame sizes FSD ... FSG

You must remove the covers from the connections in order to connect the line supply, braking resistor and motor to the inverter.


In addition, for frame sizes FSD and FSE, release the two terminal screws on the connections for the motor and braking resistor, and remove the dummy plug.

For frame sizes FSF and FSG, you must breakout the openings from the connection cover for the power connections. Use side cutters or a fine saw blade.

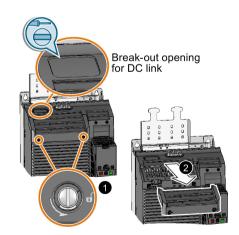

FSD ... FSG: Remove the top covers

4.2 Connecting the line and motor cable at the inverter

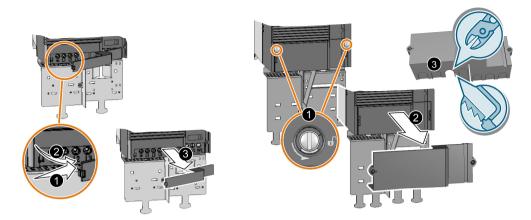

FSD, FSE: Remove the lower cover

FSF, FSG: Remove the lower cover

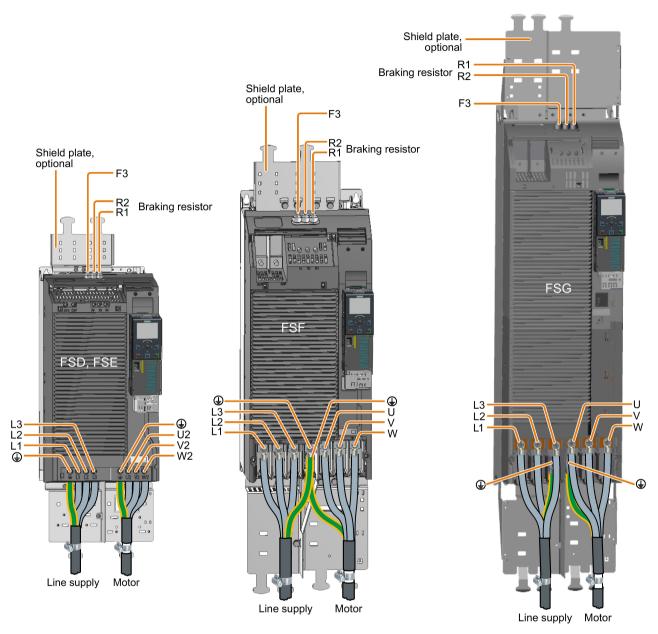


Figure 4-9 Connections for the line supply, motor and braking resistor

You must re-attach the connection covers in order to re-establish the touch protection of the inverter after it has been connected up.

4.2 Connecting the line and motor cable at the inverter

Additional information when connecting FSG inverters

Note

Conductor cross-section 240 mm²

Cable lugs for M10 bolts according to SN71322 are suitable for cables with cross-sections of $35 \text{ mm}^2 \dots 185 \text{ mm}^2$ (1 AWG ... 2 × 350 MCM).

If you wish to establish connections with cables of 240 mm² (500 MCM), you must use narrow cable lugs, e.g. Klauke 12SG10. Other cable lugs are not suitable due to the narrow design of the inverter.

The maximum permissible width of the cable lugs is 37 mm (1.45 inches).


Remove the plastic insulating plate as shown below to gain better access to the terminals for the power connections.




Damage to inverter as a result of operation without insulating plates

Without the insulating plates, voltage flashovers may occur between the phases.

Replace the insulating plates after connecting the cables.

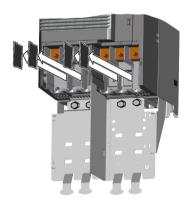

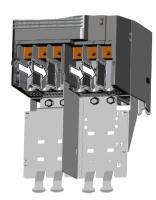

Braking resistor connection

Use the rubber cable gland as shown in the righthand figure for connecting the braking resistor.


Using a sharp knife, cut the cap of the cable gland corresponding to the diameter of the connection cable of the braking resistor and establish the connections.

Connect the braking resistor at the R1 and R2 terminals.

An optional shield plate is available as strain relief for the connection cable of the braking resistor.



Top shield plate - FSD ... FSG (Page 128)

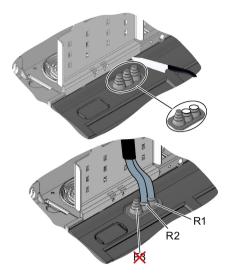

4.3 STO via Power Module terminals

Description

The "Safe Torque Off" (STO) safety function can be implemented via terminals on the power modules of frame sizes FSD ... FSG.

The "STO via power module terminals" safety function fulfills the following requirements:

- Safety integrity level 3 (SIL 3) to IEC 61508: 2010
- Category 3 and Performance Level (PL) e according to ISO 13849-1: 2008

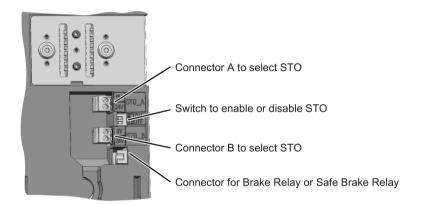


Figure 4-10 Terminals and switches for the "STO via power module terminals" function

The two switches have the following function:

- Both switches = ON: STO is enabled
- Both switches = OFF: STO is locked
- Two switches different: STO is disabled, the inverter signals a fault.

Terminals STO_A and STO_B are low active.

Connect line to select STO

Use a SELV or PELV power supply with 24 V DC (20.4 V ... 28.8 V, maximum 60 V briefly) for the STO_A and STO_B connections.

Use a shielded cable with the following properties:


- Length ≤30 m
- Cross section 0.5 mm² ... + 1.5 mm² (20 ... 16 AWG)
- Insulated for 600 V

Use conductor end sleeves, stripped length 7 mm.

Procedure



- 1. Connect the cable to select STO at terminals STO_A and STO_B on the front of the power module.
- 2. Tighten the screws of the terminals with a torque of 0.2 Nm (2 lbf in).
- 3. Attach the shield to the shield plate of the Control Unit through the largest possible surface area.

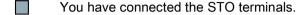


Note

Configuring a safety function

In order to use the "STO via power module terminals" safety function, the function has to be configured with a commissioning tool.

Further information and wiring examples are to be found in the "Safety Integrated" Function Manual.

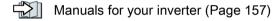


4.4 Connecting the motor to the inverter in a star or delta connection

4.4 Connecting the motor to the inverter in a star or delta connection

Standard induction motors with a rated power of approximately \leq 3 kW are normally connected in a star/delta connection (Y/ Δ) at 400 V/230 V. For a 400-V line supply, you can connect the motor to the inverter either in a star or in a delta connection.

Operating the motor in a star connection

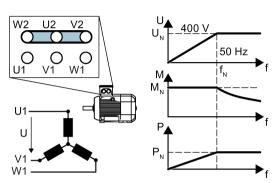


In a star connection, the motor can provide its rated torque M_N in the range 0 ... rated frequency f_N .

Rated voltage $U_N = 400 \text{ V}$ is available at a rated frequency $f_N = 50 \text{ Hz}$.

The motor goes into field weakening above the rated frequency. In field weakening, the available motor torque decreases linearly with 1/f. In field weakening, the available power remains constant.

Operating the motor in a delta connection with 87 Hz characteristic

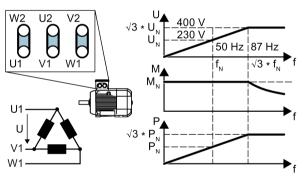

In a delta connection, the motor is operated with a voltage and frequency above its rated values. As a consequence, the motor power is increased by a factor $\sqrt{3} \approx 1.73$.

In the range $f = 0 \dots 87$ Hz, the motor can output its rated torque M_N .

The maximum voltage U = 400 V is available at a frequency of $f = \sqrt{3} \times 50 \text{ Hz} \approx 87 \text{ Hz}.$

The motor only goes into field weakening above 87 Hz.

The higher motor power when operated with an 87 Hz characteristic has the following disadvantages:

- The inverter must supply approximately 1.73x current. Select an inverter based on its rated current - and not its rated power.
- The motor temperature increases more significantly than when operated with f ≤ 50 Hz.
- The motor must have windings that are approved for a voltage > rated voltage U_N.
- As the fan impeller rotates faster, the motor has a higher noise level than operation with f ≤ 50 Hz.

Service and maintenance

MARNING

Fire or electric shock due to defective components

If an overcurrent protection device is triggered, the inverter may be defective. A defective inverter can cause a fire or electric shock.

Have the inverter and the overcurrent protection device checked by a specialist.

Repair

Fire or electric shock due to improper repair

Improper repair of the inverter may cause malfunctions or result in consequential damage such as fire or electric shock.

- Only commission the following persons to repair the inverter:
 - Siemens customer service
 - A repair center that has been authorized by Siemens
 - Specialist personnel who are thoroughly acquainted with all the warnings and operating procedures contained in this manual.
- Only use original spare parts when carrying out repairs.

Device disposal



This product is an electrical or electronic device that cannot be disposed of with household waste. Dispose of the device in accordance with the regulations valid in your country.

5.1 Maintenance

5.1 Maintenance

The purpose of maintenance is to maintain the specified condition of the Power Module. Regularly remove dirt and pollution, and replace the fan in plenty of time. Replacing a fan (Page 74)

Cleaning

Inverters with IP20 degree of protection - built-in units

Clean the inverter with an anti-static brush, a vacuum cleaner and areas that are difficult to access, using dry compressed air (max. 1 bar).

Inverters with push-through technology – PT devices

Clean the heatsink at regular intervals. If necessary, remove the air deflection plate at the rear. Use a torque of 2 Nm when reconnecting. The fans must be installed if you clean the heatsink using water.

Ventilation

The devices must be installed in a cabinet. Ensure that the cabinet's ventilation slots are not blocked. Check that the fan is functioning correctly.

Cables and screw terminals

Regularly check the cables for damage, and immediately replace any defective parts.

Regularly check that the screw terminals have been correctly tightened. Retighten the screws if necessary.

Note

The actual maintenance intervals depend on the installation and operating conditions.

Siemens offers its customers support in the form of service contracts. For further information, contact your Siemens regional office or sales office.

5.2 Commissioning after a long storage time

If the inverter was not operational for a longer period of time, it is possible that you must form the DC-link capacitors before switching on.

Form the DC-link capacitors in the following cases:

- If the inverter was not operational for longer than one year.
- If the date of manufacture of the inverter was more than one year ago when commissioning the drive system for the first time. The date of manufacture is coded in the serial number (see the next paragraph).

You form the DC-link capacitors by connecting power to the inverters as shown below.

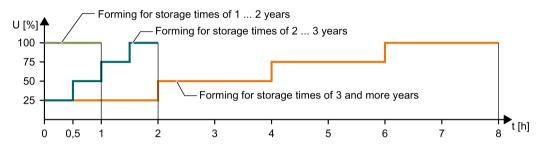


Figure 5-1 Forming the DC-link capacitors

Data of manufacture of the inverter

The date of manufacture of the inverter is coded in positions 3 - 6 of the serial number.

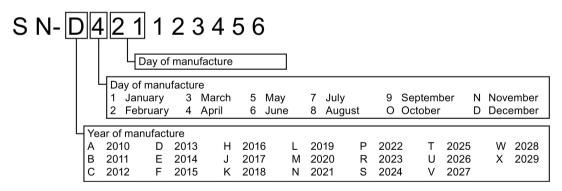


Figure 5-2 Data of manufacture in the serial number (example, April 21, 2013)

5.3 Replacing a fan

Service life of the fan

The average service life of the fan is 40,000 hours. In practice, however, the service life may deviate from this value. Especially a dusty environment can block up the fan.

The fan must be replaced in good time to ensure that the inverter is ready for operation.

Applies to all frame sizes

Proceed as follows to remove the fan unit:

Switch off the inverter power supply before replacing the fan.



/ WARNING

Electric shock as a result of a residual charge in power components

After the power supply has been switched off, it takes up to 5 min. until the capacitors in the inverter have discharged so that the residual charge is at a non-hazardous level.

• Check the voltage at the inverter connections before you carry out any installation work.


5.3.1 Fan replacement FSA ... FSC

The fan module is installed at the bottom. It has one fan each for frame sizes FSA and FSB, and two for frame size C.

Procedure



- 1. Withdraw the line and motor cable plug connectors and, if available, remove the braking resistor from the Power Module.
- 2. Remove the shield plate from the Power Module.
- 3. Remove the fan module from the Power Module in steps ① and ② as shown in the diagram. Use a screwdriver if necessary.

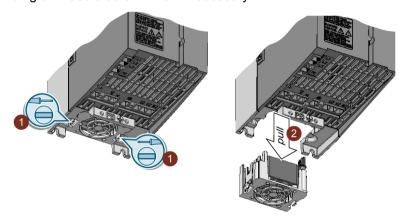

- 4. Install the new fan module in the inverse sequence.
- You have replaced the fan module.

5.3.2 Fan replacement FSD ... FSF

The fan module is installed at the top.

Procedure




1. Remove the fan module from the Power Module in steps ① and ② as shown in the diagram. Use a screwdriver if necessary.





2. Additionally for PT devices:

Remove the interior fan as shown below.

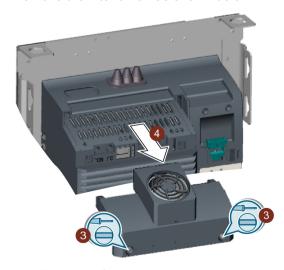

- Install the new fan module in inverse sequence.
 By inserting the fan module, you establish the electrical connection between the inverter and fan module.
- You have replaced the fan module.

5.3.3 FSG fan replacement


The fan module is installed at the top.

Procedure



1. Remove the fan module from the Power Module in steps ① and ② as shown in the diagram. Use a screwdriver.



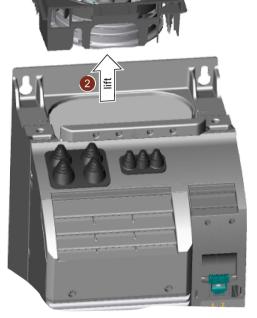

- Install the new fan module in inverse sequence.
 By inserting the fan module, you establish the electrical connection between the inverter and fan module.
- You have replaced the fan module.

5.3 Replacing a fan

Technical data

Power loss of the Power Modules

Note

Power loss for the FSA ... FSC Power Modules

The values specified for the power loss are typical values at 100% of the rated speed and 100% of the load corresponding to Low Overload.

Power loss for the FSD ... FSG Power Modules

The values specified for the power loss are typical values at 90% of the rated speed and 100% of the load corresponding to Low Overload.

Protective organs for the Power Module

The fuses listed in the following tables are examples of suitable fuses.

Additional components for branch protection are available in the Internet:

Branch protection and short-circuit strength according to UL and IEC (https://support.industry.siemens.com/cs/ww/en/view/109486009)

Number of starting operations for inverter

The frequency of operation for the inverter is every 120 s. Line supply $^{\bullet}$ The number of starting operations states how often line voltage may be switched to the de-energized inverter.

6.1 Electromagnetic compatibility - Overview

Electromagnetic compatibility according to EN61800-3

Property	Version			
Interference immunity	The inverters a	The inverters are suitable for use in the first and second industrial environments		
Interference emission - second environment	Category C2	for inverters with integrated radio interference suppression filter		
	Category C2	for inverters without filter with optional external radio interference suppression filter for grounded line supplies (recommended for operation in conjunction with a residual current protective device RCD)		
	Category C3	for 690-V inverters with integrated radio interference suppression filter, frame size FSF, FSG		
	Category C4	for inverters without integrated radio interference suppression filter for operation on IT line supplies		

Additional information as well as conditions for using the inverter in the first environment are provided in the following Section:

Electromagnetic compatibility of variable-speed drives (Page 119).

6.2 Ambient conditions

Property	Version
Ambient conditions for transp	port in the transport packaging
Climatic ambient conditions	- 40 °C + 70 °C, according to Class 2K4 to EN 60721-3-2 maximum humidity 95% at 40 °C
Mechanical ambient conditions	Shock and vibration permissible according to 1M2 to EN 60721-3-2
Protection against chemical substances	Protected according to Class 2C2 to EN 60721-3-2
Biological ambient conditions	Suitable according to Class 2B1 to EN 60721-3-2
Ambient conditions for long-t	erm storage in the product packaging
Climatic ambient conditions	- 25 °C + 55 °C, according to Class 1K3 to EN 60721-3-1
Protection against chemical substances	Protected according to Class 1C2 to EN 60721-3-1
Biological ambient conditions	Suitable according to class 1B1 to EN 60721-3-1
Ambient conditions in operat	ion
Installation altitude	Up to 1000 m above sea level without limitations
	Restrictions for special ambient conditions (Page 116)
Climatic ambient conditions 1)	 FSA FSC ambient operating temperature ²⁾ For operation according to Low Overload: -10 °C +40 °C For operation according to High Overload: -10 °C +50 °C Restrictions for special ambient conditions (Page 116) FSD FSG ambient operating temperature ²⁾ For operation according to Low Overload: -20 °C +40 °C For operation according to High Overload: -20 °C +50 °C Restrictions for special ambient conditions (Page 116) Relative humidity: 5 95%, condensation not permitted Oil mist, salt mist, ice formation, condensation, dripping water, spraying water, splashing water and water jets are not permitted
Mechanical ambient conditions	Vibration test during operation according to IEC 60068-2-6 Test Fc (sinusoidal) • 0 57 Hz: 0.075 mm deflection amplitude • 57 150 Hz: 1 g acceleration amplitude • 10 frequency cycles per axis Shock test according to IEC 60068-2-27 Test Ea (half-sine) • 5 g peak acceleration • 30 ms duration • 3 shocks in all three axes in both directions
Protection against chemical substances	 FSA FSC: Protected according to 3C2 to EN 60721-3-3 FSD FSG: 3C3 protection according to EN 60721-3-3

6.2 Ambient conditions

Property	Version
Biological ambient conditions	Suitable according to 3B1 to EN 60721-3-3
Pollution	Suitable for environments with degree of pollution 2 according to EN 61800-5-1
Cooling	Forced air cooling AF, according to EN 60146
Cooling air	Clean and dry air
Noise emission	Maximum 75 db(A)

Increased ruggedness regarding temperature range and relative humidity; therefore better than 3K3 according to EN 60721-3-3

²⁾ Observe the permissible ambient operating temperatures for the Control Unit and the Operator Panel (IOP-2 or BOP-2).

Overload capability of the inverter 6.3

Overload capability is the property of the inverter to temporarily supply a current that is higher than the rated current to accelerate a load. Two typical load cycles are defined to clearly demonstrate the overload capability: "Low Overload" and "High Overload"

Definitions

Base load

Constant load between the accelerating phases of the drive

Low Overload

- LO base load input current Permissible input current for a "Low Overload" load cycle
- LO base load output current Permissible output current for a "Low Overload" load cycle
- LO base load power Rated power based on the LO base load output current

High Overload

- HO base load input current Permissible input current for a "High Overload" load cycle
- HO base load output current Permissible output current for a "High Overload" load cycle
- HO base load power Rated power based on the HO base load output current

If not specified otherwise, the power and current data in the technical data always refer to a load cycle according to Low Overload.

We recommend the "SIZER" engineering software to select the inverter.

You can find additional information about SIZER on the Internet:



Download SIZER

(http://support.automation.siemens.com/WW/view/en/10804987/130000)

Load cycles and typical applications:

"Low Overload" load cycle

The "Low Overload" load cycle assumes a uniform base load with low requirements placed on brief accelerating p phases. Typical applications when designing according to "Low Overload" include:

- Pumps, fans and compressors
- Wet or dry blasting technology
- Mills, mixers, kneaders, crushers, agitators
- Basic spindles
- Rotary kilns
- Extruders

"High Overload" load cycle

The "High Overload" load cycle permits, for reduced base load, dynamic accelerating phases. Typical applications when designing according to "High Overload" include:

- Horizontal and vertical conveyor technology (conveyor belts, roller conveyors, chain conveyors)
- Centrifuges
- Escalators/moving stairways
- Lifters/Lowerers
- Elevators
- Gantry cranes
- Cable railways
- Storage and retrieval machines

Typical inverter load cycles

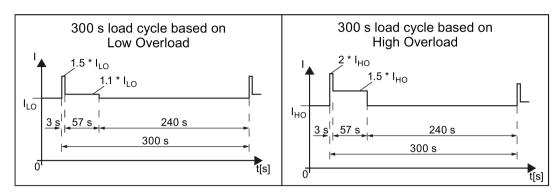


Figure 6-1 "Low Overload" and "High Overload" load cycles

6.4 Cable cross-sections and tightening torques

Table 6-1 Connection, cross-section and tightening torque for PM240-2 Power Modules

Inverters Conne		ection	Cross-section, tig	Stripped	
			Metric	Imperial	insulation length
FSA	Line system, motor	I rece	1.5 2.5 mm ² , 0.5 Nm	16 14 AWG, 4.5 lbf in	8 mm
FSB	and braking resistor		1.5 6 mm ² , 0.6 Nm	16 10 AWG, 5.5 lbf in	8 mm
FSC		Plug connector with screw termi- nals	616 mm², 1.3 Nm	10 6 AWG, 12 lbf in	10 mm
FSD	Line and motor	Screw-type termi- nal	10 35 mm², 2.5 4.5 Nm	20 10 AWG, 22 lbf in 8 2 AWG, 40 lbf in	18 mm
	Braking resistor		2.5 16 mm², 1.2 1.5 Nm	20 6 AWG, 15 lbf in	10 mm
FSE	Line and motor	Screw-type termi- nal	25 70 mm², 8 10 Nm	6 3/0 AWG, 88.5 lbf in	25 mm
	Braking resistor		10 35 mm², 2.5 4.5 Nm	20 10 AWG, 22 lbf in 8 2 AWG, 40 lbf in	18 mm
FSF	Line and motor	Cable lug according to SN71322 for M10 bolts	35 2 × 120 mm², 22 25 Nm	1 AWG 2 × 4/0 AWG, 210 lbf.in	
	Braking resistor	Screw-type termi- nal	25 70 mm², 8 10 Nm	6 3/0 AWG, 88.5 lbf in	25 mm
FSG	Line and motor	Cable lug according to SN71322 for M10 bolts	35 2 × 185 mm ² , 22 25 Nm	1 AWG 2 × 350 MCM, 210 lbf.in	
	Braking resistor	Screw-type termi- nal	25 70 mm², 8 10 Nm	6 3/0 AWG, 88.5 lbf in	25 mm

Motors for 200 V Power Modules

For the 200 V Power Modules, induction motors are permissible in the range from 25% ... 150% of the inverter power without any restrictions.

Permissible motors

Note


Motors for inverter operation

Only use motors that are suitable for operation with inverters with a DC link.

6.5.1 General data, 200 V inverters

Property	Version			
Line voltage	FSA FSC	200 V 240 V 1 AC ± 10%	0.55 kW 4 kW - LO	
			0.37 kW 3 kW - HO	
		200 V 240 V 3 AC ± 10%	0.55 kW 7.5 kW - LO	
			0.37 kW 5.5 kW - HO	
	FSD FSF	200 V 240 V 3 AC ± 10% (in	operation -20% < 1 min)	
Line supply configurations	Grounded TN/	TT line supplies or non-grounded I	T line supplies	
	Permis	sible line supplies (Page 50)		
Line impedance	FSA FSC	2% ≤ Uk < 4%. For Uk < 2%, we dule with the next higher power	e recommend a line reactor, or a Power Morating.	
	FSD FSF	No restrictions		
Power factor λ	FSA FSC	0.7 without line reactor for Uk ≥ 0.85 with line reactor for Uk < 20		
	FSD FSF	> 0.9		
Output voltage	0 V 3 AC 0.	95 × input voltage		
Input frequency	50 Hz 60 Hz	z, ± 3 Hz		
Output frequency	0 550 Hz, d	epending on the control mode		
Inrush current	< LO base load	< LO base load input current		
Overvoltage category according to EN 61800-5-1	III for line supplies			
Pulse frequency	4 kHz (factory setting),			
	Adjustable in s	Adjustable in steps of 2 kHz.		
	Current reduction as a function of the pulse frequency (Page 96)			
	If you increase	the pulse frequency, the inverter i	reduces the maximum output current.	
Short-circuit current	•	nissible line short-circuit current ≤		
(SCCR) and branch protection	Minimum required short-circuit current ≥ 5 kA rms			
todion	The length of the connecting cable from the line to the inverter may not reduce the minimum short-circuit current			
	Branch p	protection and short-circuit strength	according to UL and IEC	
	(https://suppor	t.industry.siemens.com/cs/ww/en/v	view/109479152)	
Braking methods	DC braking, compound braking, dynamic braking with integrated braking chopper			
Degree of protection ac-	IP20			
cording to EN 60529	IP55 PT dev	ices outside the control cabinet		
Protection class according to EN 61800-5-1	The inverters a	are devices with protection class I		
Touch protection according to EN 50274	DGUV regulation 3 when used for the intended purpose			
Cooling in compliance with EN 60146	Forced air cod	oling AF		

Dependent on the input voltage and output power

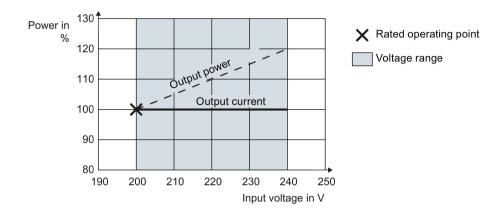

6.5.2 Specific technical data, 200 V inverters

Table 6- 2 PM240-2, IP20, frame size A, 200 V ... 240 V 1 AC / 3 AC

Article No. without filter Article No. with filter	6SL3210-1PB13-0UL0 6SL3210-1PB13-0AL0	6SL3210-1PB13-8UL0 6SL3210-1PB13-8AL0	
LO base load power	0.55 kW	0.75 kW	
1 AC LO base load input current	7.5 A	9.6 A	
3 AC LO base load input current	4.2 A	5.5 A	
LO base load output current	3.2 A	4.2 A	
HO base load power	0.37 kW	0.55 kW	
1 AC HO base load input current	6.6 A	8.4 A	
3 AC HO base load input current	3.0 A	4.2 A	
HO base load output current	2.3 A	3.2 A	
Fuse according to IEC Fuse according to UL, class J	3NA3805 (16 A) 15 A	3NA3805 (16 A) 15 A	
Power loss	0.04 kW	0.04 kW	
Required cooling air flow	5 l/s	5 l/s	
Weight without filter	1.4 kg	1.4 kg	
Weight with filter	1.6 kg	1.6 kg	

Table 6- 3 $\,$ PM240-2, PT, frame size A, 200 V \dots 240 V 1 AC / 3 AC

Article No. without filter Article No. with filter	6SL3211-1PB13-8UL0 6SL3211-1PB13-8AL0	
LO base load power	0.75 kW	
1 AC LO base load input current	9.6 A	
3 AC LO base load input current	5.5 A	
LO base load output current	4.2 A	
HO base load power	0.55 kW	
1 AC HO base load input current	8.4 A	
3 AC HO base load input current	4.2 A	
HO base load output current	3.2 A	
Fuse according to IEC Fuse according to UL, class J	3NA3 805 (16 A) 15 A	
Power loss	0.04 kW	
Required cooling air flow	5 l/s	
Weight without filter	1.8 kg	
Weight with filter	2.0 kg	

Table 6- 4 PM240-2, IP20, frame size B, 200 V ... 240 V 1 AC / 3 AC

Article No. without filter Article No. with filter	6SL3210-1PB15-5UL0 6SL3210-1PB15-5AL0	6SL3210-1PB17-4UL0 6SL3210-1PB17-4AL0	6SL3210-1PB21-0UL0 6SL3210-1PB21-0AL0
LO base load power	1.1 kW	1.5 kW	2.2 kW
1 AC LO base load input current	13.5 A	18.1 A	24.0 A
3 AC LO base load input current	7.8 A	9.7 A	13.6 A
LO base load output current	6 A	7.4 A	10.4 A
HO base load power	0.75 kW	1.1 kW	1.5 kW
1 AC HO base load input current	11.8 A	15.8 A	20.9 A
3 AC HO base load input current	5.5 A	7.8 A	9.7 A
HO base load output current	4.2 A	6 A	7.4 A
Fuse according to IEC Fuse according to UL, class J	3NA3812 (32 A) 35 A	3NA3812 (32 A) 35 A	3NA3812 (32 A) 35 A
Power loss	0.05 kW	0.07 kW	0.12 kW
Required cooling air flow	9.2 l/s	9.2 l/s	9.2 l/s
Weight without filter	2.8 kg	2.8 kg	2.8 kg
Weight with filter	3.1 kg	3.1 kg	3.1 kg

Table 6- 5 PM240-2, PT, frame size B, 200 V ... 240 V 1 AC / 3 AC

Article No. without filter Article No. with filter	6SL3211-1PB21-0UL0 6SL3211-1PB21-0AL0	
LO base load power	2.2 kW	
1 AC LO base load input current	24.0 A	
3 AC LO base load input current	13.6 A	
LO base load output current	10.4 A	
HO base load power	1.5 kW	
1 AC HO base load input current	20.9 A	
3 AC HO base load input current	9.7 A	
HO base load output current	7.4 A	
Fuse according to IEC Fuse according to UL, class J	3NA3812 (32 A) 35 A	
Power loss	0.12 kW ¹⁾	
Required cooling air flow	9.2 l/s	
Weight without filter	3.4 kg	
Weight with filter	3.7 kg	

¹⁾ approx. 0.08 kW through the heat sink

Table 6- 6 $\,$ PM240-2, IP 20, frame size C, 200 V \dots 240 V 1 AC / 3 AC

Article No. without filter Article No. with filter	6SL3210-1PB21-4UL0 6SL3210-1PB21-4AL0	6SL3210-1PB21-8UL0 6SL3210-1PB21-8AL0	
LO base load power	3 kW	4 kW	
1 AC LO base load input current	35.9 A	43.0 A	
3 AC LO base load input current	17.7 A	22.8 A	
LO base load output current	13.6 A	17.5 A	_
HO base load power	2.2 kW	3 kW	_
1 AC HO base load input current	31.3 A	37.5 A	
3 AC HO base load input current	13.6 A	17.7 A	
HO base load output current	10.4 A	13.6 A	
Fuse according to IEC Fuse according to UL, class J	3NA3820 (50 A) 50 A	3NA3820 (50 A) 50 A	
Power loss	0.14 kW	0.18 kW	
Required cooling air flow	18.5 l/s	18.5 l/s	
Weight without filter	5.0 kg	5.0 kg	_
Weight with filter	5.2 kg	5.2 kg	

Table 6- 7 PM240-2, PT, frame size C, 200 V ... 240 V 1 AC / 3 AC

Article No. without filter Article No. with filter	6SL3211-1PB21-8UL0 6SL3211-1PB21-8AL0	
LO base load power	4 kW	
1 AC LO base load input current	43.0 A	
3 AC LO base load input current	22.8 A	
LO base load output current	17.5 A	
HO base load power	3 kW	
1 AC HO base load input current	37.5 A	
3 AC HO base load input current	17.7 A	
HO base load output current	13.6 A	
Fuse according to IEC Fuse according to UL, class J	3NA3820 (50 A) 50 A	
Power loss	0.18 kW ¹⁾	
Required cooling air flow	18.5 l/s	
Weight without filter	5.9 kg	
Weight with filter	6.2 kg	

¹⁾ approx. 0.09 kW through the heat sink

Table 6-8 PM240-2, IP 20, frame size C, 200 V ... 240 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PC22-2UL0 6SL3210-1PC22-2AL0	6SL3210-1PC22-8UL0 6SL3210-1PC22-8AL0	
LO base load power	5.5 kW	7.5 kW	
LO base load input current	28.6 A	36.4 A	
LO base load output current	22.0 A	28.0 A	
HO base load power	4 kW	5.5 kW	
HO base load input current	22.8 A	28.6 A	
HO base load output current	17.5 A	22.0 A	
Fuse according to IEC Fuse according to UL, class J	3NA3820 (50 A) 50 A	3NA3820 (50 A) 50 A	
Power loss	0.2 kW	0.26 kW	
Required cooling air flow	18.5 l/s	18.5 l/s	
Weight without filter	5.0 kg	5.0 kg	
Weight with filter	5.2 kg	5.2 kg	

Table 6- 9 PM240-2, PT, frame size C, 200 V ... 240 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PC22-2UL0 6SL3211-1PC22-2AL0	6SL3211-1PC22-8UL0 6SL3211-1PC22-8AL0	
LO base load power	5.5 kW	7.5 kW	
LO base load input current	28.6 A	36.4 A	
LO base load output current	22.0 A	28.0 A	
HO base load power	4 kW	5.5 kW	
HO base load input current	22.8 A	28.6 A	
HO base load output current	17.5 A	22.0 A	
Fuse according to IEC Fuse according to UL, class J	3NA3820 (50 A) 50 A	3NA3820 (50 A) 50 A	
Power loss	0.2 kW ¹⁾	0.26 kW ²⁾	
Required cooling air flow	18.5 l/s	18.5 l/s	
Weight without filter	5.9 kg	5.9 kg	
Weight with filter	6.2 kg	6.2 kg	

¹⁾ approx. 0.2 kW through the heatsink

²⁾ approx. 0.25 kW through the heatsink

Table 6- 10 PM240-2, IP20, frame size D, 200 V ... 240 V 3 AC

Article No. without filter	6SL3210-1PC24-2UL0	6SL3210-1PC25-4UL0	6SL3210-1PC26-8UL0
LO base load power	11 kW	15 kW	18.5 kW
LO base load input current	40 A	51 A	64 A
LO base load output current	42 A	54 A	68 A
HO base load power	7.5 kW	11 kW	15 kW
HO base load input current	36 A	43 A	56 A
HO base load output current	35 A	42 A	54 A
Fuse according to IEC Fuse according to UL, class J	3NA3822 (63 A) 60 A	3NA3824 (80 A) 70 A	3NA3830 (100 A) 90 A
Power loss	0.45 kW	0.61 kW	0.82 kW
Required cooling air flow	55 l/s	55 l/s	55 l/s
Weight	17 kg	17 kg	17 kg

Table 6- 11 PM240-2, PT, frame size D, 200 V ... 240 V 3 AC

Article No. without filter	6SL3211-1PC26-8UL0	
LO base load power	18.5 kW	
LO base load input current	64 A	
LO base load output current	68 A	
HO base load power	15 kW	
HO base load input current	56 A	
HO base load output current	54 A	
Fuse according to IEC Fuse according to UL, class J	3NA3830 (100 A) 90 A	
Power loss	0.82 kW ¹⁾	
Required cooling air flow	55 l/s	
Weight	19.5 kg	

¹⁾ approx. 0.72 kW through the heatsink

Table 6- 12 PM240-2, IP20, frame size E, 200 V ... 240 V 3 AC

Article No. without filter	6SL3210-1PC28-0UL0	6SL3210-1PC31-1UL0
LO base load power	22 kW	30 kW
LO base load input current	76 A	98 A
_O base load output current	80 A	104 A
HO base load power	18.5 kW	22 kW
HO base load input current	71 A	83 A
HO base load output current	68 A	80 A
Fuse according to IEC Fuse according to UL, class J	3NA3830 (100 A) 100 A	3NA3836 (160 A) 150 A
Power loss	0.92 kW	1.28 kW
Required cooling air flow	83 l/s	83 l/s
Weight	26 kg	26 kg

Table 6- 13 PM240-2, PT, frame size E, 200 V to 240 V 3 AC

Article No. without filter	6SL3211-1PC31-1UL0	
LO base load power	30 kW	
LO base load input current	98 A	
LO base load output current	104 A	
HO base load power	22 kW	
HO base load input current	83 A	
HO base load output current	80 A	
Fuse according to IEC Fuse according to UL, class J	3NA3836 (160 A) 150 A	
Power loss	1.28 kW ¹⁾	
Required cooling air flow	83 l/s	
Weight	29 kg	

¹⁾ approx. 1.1 kW through the heatsink

Table 6- 14 PM240-2, IP20, frame size F, 200 V ... 240 V 3 AC

Article No. without filter	6SL3210-1PC31-3UL0	6SL3210-1PC31-6UL0	6SL3210-1PC31-8UL0
LO base load power	37 kW	45 kW	55 kW
LO base load input current	126 A	149 A	172 A
LO base load output current	130 A	154 A	178 A
HO base load power	30 kW	37 kW	45 kW
HO base load input current	110 A	138 A	164 A
HO base load output current	104 A	130 A	154 A
Fuse according to IEC Fuse according to UL, class J	3NA3140 (200 A) 175 A	3NA3140 (200 A) 200 A	3NA3142 (224 A) 250 A
Power loss	1.38 kW	1.72 kW	2.09 kW
Required cooling air flow	153 l/s	153 l/s	153 l/s
Weight	57 kg	57 kg	57 kg

Table 6- 15 PM240-2, PT, frame size F, 200 V to 240 V 3 AC

Article No. without filter	6SL3211-1PC31-8UL0	
LO base load power	55 kW	
LO base load input current	172 A	
LO base load output current	178 A	
HO base load power	45 kW	
HO base load input current	164 A	
HO base load output current	154 A	
Fuse according to IEC Fuse according to UL, class J	3NA3142 (224 A) 250 A	
Power loss	2.09 kW ¹⁾	
Required cooling air flow	153 l/s	
Weight	60 kg	

¹⁾ approx. 1.9 kW through the heatsink

6.5.3 Current derating depending on the pulse frequency, 200 V inverters

Article number	LO		Pulse frequency [kHz]						
	power	2	4 *)	6	8	10	12	14	16
	[kW]			LO bas	e load o	utput cu	rrent [A]		
6SL3210-1PB13-0 . L0	0.55	3.2	3.2	2.7	2.2	1.9	1.6	1.4	1.3
6SL3211PB13-8 . L0	0.75	4.2	4.2	3.6	2.9	2.5	2.1	1.9	1.7
6SL3210-1PB15-5 . L0	1.1	6	6	5.1	4.2	3.6	3	2.7	2.4
6SL3210-1PB17-4 . L0	1.5	7.4	7.4	6.3	5.2	4.4	3.7	3.3	3
6SL3211PB21-0 . L0	2.2	10.4	10.4	8.8	7.3	6.2	5.2	4.7	4.2
6SL3210-1PB21-4 . L0	3	13.6	13.6	11.6	9.5	8.2	6.8	6.1	5.4
6SL3211PB21-8 . L0	4	17.5	17.5	14.9	12.3	10.5	8.8	7.9	7
6SL3210-1PC22-2 . L0	5.5	22	22	18.7	15.4	13.2	11	9.9	8.8
6SL3210-1PC22-8 . L0	7.5	28	28	23.8	19.6	16.8	14	12.6	11.2
6SL3210-1PC24-2UL0	11	42	42	35.7	29.4	25.2	21	18.9	16.8
6SL3210-1PC25-4UL0	15	54	54	45.9	37.8	32.4	27	24.3	21.6
6SL3211PC26-8UL0	18.5	68	68	57.8	47.6	40.8	34	30.6	27.2
6SL3210-1PC28-0UL0	22	80	80	68	56	48	40	36	32
6SL3211PC31-1UL0	30	104	104	88.4	72.8	62.4	52	46.8	41.6
6SL3210-1PC31-3UL0	37	130	130	110.5	91				
6SL3210-1PC31-6UL0	45	154	154	130.9	107.8				
6SL3211PC31-8UL0	55	178	178	151.3	124.6				

^{*)} Factory setting

The permissible motor cable length depends on the particular cable type and the pulse frequency that has been selected

Motors for 400 V Power Modules

For the 400 V Power Modules, induction motors are permissible in the range from $25 \% \dots 150 \%$ of the inverter power without any restrictions.

Permissible motors

Note


Motors for inverter operation

Only use motors that are suitable for operation with inverters with a DC link.

6.6.1 General data, 400 V inverters

Property	Version			
Line voltage	FSA FSC 380 V 480 V 3 AC ± 10%			
	FSD FSG 380 V 480 V 3 AC ± 10% (in operation -20% < 1 min)			
Line supply configurations	Grounded TN/TT line supplies or non-grounded IT line supplies			
	Permissible line supplies (Page 50)			
Line impedance	FSA FSC 1% ≤ Uk < 4%, for values smaller than 1%, we recommend a line reactor, or a Power Module with the next higher power rating.			
	FSD FSG No restrictions			
Power factor λ	FSA FSC 0.7 without line reactor for Uk ≥ 1% 0.85 with line reactor for Uk < 1%			
	FSD FSG > 0.9			
Output voltage	0 V 3 AC 0.95 x input voltage (max.)			
Input frequency	50 Hz 60 Hz, ± 3 Hz			
Output frequency	0 550 Hz, depending on the control mode			
Inrush current	< LO base load input current			
Overvoltage category according to EN 61800-5-1	III for line supplies			
Pulse frequency	Factory setting			
	 4 kHz for devices with an LO base load power < 110 kW 			
	• 2 kHz for devices with an LO base load power ≥ 110 kW			
	Can be adjusted in 2 kHz steps as follows:			
	• 2 kHz 16 kHz for devices with an LO base load power < 55 kW			
	• 2 kHz 8 kHz for devices with an LO base load output of 55 kW 90 kW and ≥ 160 kW			
	2 kHz 4 kHz for devices with an LO base load power of 110 kW 132 kW			
	Current reduction as a function of the pulse frequency (Page 108) If you increase the pulse frequency, the inverter reduces the maximum output current.			
Short-circuit current	Maximum permissible line short-circuit current ≤ 100 kA rms			
(SCCR) and branch protec-	Maximum permissible line short-circuit current ≤ 100 kA rms Minimum required short-circuit current ≥ 18 kA rms			
tion	The length of the connecting cable from the line to the inverter may not reduce the minimum short-circuit current			
	Branch protection and short-circuit strength according to UL and IEC			
	(https://support.industry.siemens.com/cs/ww/en/view/109479152)			
Braking methods	DC braking, compound braking, dynamic braking with integrated braking chopper			
Degree of protection ac-	IP20			
cording to EN 60529	IP55 PT devices outside the control cabinet			
Protection class according to EN 61800-5-1	The inverters are devices with protection class I			
Touch protection according to EN 50274	DGUV regulation 3 when used for the intended purpose			
Cooling in compliance with EN 60146	Forced air cooling AF			

Dependent on the input voltage and output power

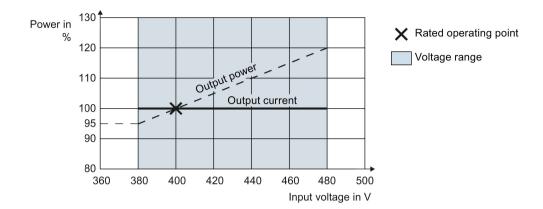

6.6.2 Specific technical data, 400 V inverters

Table 6- 16 PM240-2, IP20, frame size A, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE11-8UL1 6SL3210-1PE11-8AL1	6SL3210-1PE12-3UL1 6SL3210-1PE12-3AL1	6SL3210-1PE13-2UL1 6SL3210-1PE13-2AL1
LO base load power	0.55 kW	0.75 kW	1.1 kW
LO base load input current	2.3 A	2.9 A	4.1 A
LO base load output current	1.7 A	2.2 A	3.1 A
HO base load power	0.37 kW	0.55 kW	0.75 kW
HO base load input current	2.0 A	2.6 A	3.3 A
HO base load output current	1.3 A	1.7 A	2.2 A
Fuse according to IEC Fuse according to UL, class J	3NA3805 (16 A) 10 A	3NA3805 (16 A) 10 A	3NA3805 (16 A) 15 A
Power loss	0.04 kW	0.04 kW	0.04 kW
Required cooling air flow	5 l/s	5 l/s	5 l/s
Weight without filter	1.3 kg	1.3 kg	1.3 kg
Weight with filter	1.5 kg	1.5 kg	1.5 kg

Table 6- 17 PM240-2, IP20, frame size A, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE14-3UL1 6SL3210-1PE14-3AL1	6SL3210-1PE16-1UL1 6SL3210-1PE16-1AL1	6SL3210-1PE18-0UL1 6SL3210-1PE18-0AL1
LO base load power	1.5 kW	2.2 kW	3.0 kW
LO base load input current	5.5 A	7.7 A	10.1 A
LO base load output current	4.1 A	5.9 A	7.7 A
HO base load power	1.1 kW	1.5 kW	2.2 kW
HO base load input current	4.7 A	6.1 A	8.8 A
HO base load output current	3.1 A	4.1 A	5.9 A
Fuse according to IEC Fuse according to UL, class J	3NA3805 (16 A) 20 A	3NA3805 (16 A) 30 A	3NA3805 (16 A) 30 A
Power loss	0.07 kW	0.1 kW	0.12 kW
Required cooling air flow	5 l/s	5 l/s	5 l/s
Weight without filter	1.4 kg	1.4 kg	1.4 kg
Weight with filter	1.6 kg	1.6 kg	1.6 kg

Table 6- 18 PM240-2, PT, frame size A, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PE18-0UL1 6SL3211-1PE18-0AL1	
LO base load power	3.0 kW	
LO base load input current	10.1 A	
LO base load output current	7.7 A	
HO base load power	2.2 kW	
HO base load input current	8.8 A	
HO base load output current	5.9 A	
Fuse according to IEC Fuse according to UL, class J	3NA3805 (16 A) 30 A	
Power loss without filter	0.12 kW ¹⁾	
Required cooling air flow	7 l/s	
Weight without filter	1.8 kg	
Weight with filter	2.0 kg	

¹⁾ approx. 0.1 kW through the heatsink

Table 6- 19 PM240-2, IP20, frame size B, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE21-1UL0 6SL3210-1PE21-1AL0	6SL3210-1PE21-4UL0 6SL3210-1PE21-4AL0	6SL3210-1PE21-8UL0 6SL3210-1PE21-8AL0
LO base load power	4.0 kW	5.5 kW	7.5 kW
LO base load input current	13.3 A	17.2 A	22.2 A
LO base load output current	10.2 A	13.2 A	18.0 A
HO base load power	3.0 kW	4.0 kW	5.5 kW
HO base load input current	11.6 A	15.3 A	19.8 A
HO base load output current	7.7 A	10.2 A	13.2 A
Fuse according to IEC Fuse according to UL, class J	3NA3812 (32 A) 35 A	3NA3812 (32 A) 35 A	3NA3812 (32 A) 35 A
Power loss	0.11 kW	0.15 kW	0.2 kW
Required cooling air flow	9.2 l/s	9.2 l/s	9.2 l/s
Weight without filter	2.9 kg	2.9 kg	3.0 kg
Weight with filter	3.1 kg	3.1 kg	3.2 kg

Table 6- 20 PM240-2, PT, frame size B, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PE21-8UL0 6SL3211-1PE21-8AL0	
LO base load power	7.5 kW	
LO base load input current	22.2 A	
LO base load output current	18.0 A	
HO base load power	5.5 kW	
HO base load input current	19.8 A	
HO base load output current	13.7 A	
Fuse according to IEC Fuse according to UL, class J	3NA3812 (32 A) 35 A	
Power loss	0.2 kW ¹⁾	
Required cooling air flow	9.2 l/s	
Weight without filter	3.6 kg	
Weight with filter	3.9 kg	

¹⁾ approx. 0.16 kW through the heatsink

Table 6- 21 PM240-2, IP20, frame size C, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE22-7UL0 6SL3210-1PE22-7AL0	6SL3210-1PE23-3UL0 6SL3210-1PE23-3AL0
LO base load power	11.0 kW	15.0 kW
LO base load input current	32.6 A	39.9 A
LO base load output current	26.0 A	32.0 A
HO base load power	7.5 kW	11.0 kW
HO base load input current	27.0 A	36.0 A
HO base load output current	18.0 A	26.0 A
Fuse according to IEC Fuse according to UL, class J	3NA3820 (50 A) 50 A	3NA3820 (50 A) 50 A
Power loss	0.3 kW	0.37 kW
Required cooling air flow	18.5 l/s	18.5 l/s
Weight without filter	4.7 kg	4.8 kg
Weight with filter	5.3 kg	5.4 kg

Table 6- 22 PM240-2, PT, frame size C, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PE23-3UL0 6SL3211-1PE23-3AL0	
LO base load power	15.0 kW	
LO base load input current	39.9 A	
LO base load output current	32.0 A	
HO base load power	11.0 kW	
HO base load input current	36.0 A	
HO base load output current	26.0 A	
Fuse according to IEC Fuse according to UL, class J	3NA3820 (50 A) 50 A	
Power loss	0.37 kW ¹⁾	
Required cooling air flow	18.5 l/s	
Weight without filter	5.8 kg	
Weight with filter	6.3 kg	

¹⁾ approx. 0.3 kW through the heatsink

Table 6- 23 PM240-2, IP20, frame size D, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE23-8UL0 6SL3210-1PE23-8AL0	6SL3210-1PE24-5UL0 6SL3210-1PE24-5AL0	6SL3210-1PE26-0UL0 6SL3210-1PE26-0AL0
LO base load power	18.5 kW	22 kW	30 kW
LO base load input current	36 A	42 A	57 A
LO base load output current	38 A	45 A	60 A
HO base load power	15 kW	18.5 kW	22 kW
HO base load input current	33 A	38 A	47 A
HO base load output current	32 A	38 A	45 A
Fuse according to IEC Fuse according to UL, class J	3NA3822 (63 A) 60 A	3NA3824 (80 A) 70 A	3NA3830 (100 A) 90 A
Power loss without filter	0.57 kW	0.70 kW	0.82 kW
Power loss with filter	0.58 kW	0.71 kW	0.83 kW
Required cooling air flow	55 l/s	55 l/s	55 l/s
Weight without filter	16 kg	16 kg	17 kg
Weight with filter	17.5 kg	17.5 kg	18.5 kg

Table 6- 24 PM240-2, IP20, frame size D, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE27-5UL0 6SL3210-1PE27-5AL0	
LO base load power	37 kW	
LO base load input current	70 A	
LO base load output current	75 A	
HO base load power	30 kW	
HO base load input current	62 A	
HO base load output current	60 A	
Fuse according to IEC Fuse according to UL, class J	3NA3830 (100 A) 100 A	
Power loss without filter	1.09 kW	
Power loss with filter	1.10 kW	
Required cooling air flow	55 l/s	
Weight without filter	17 kg	
Weight with filter	18.5 kg	

Table 6- 25 PM240-2, PT, frame size D, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PE27-5UL0 6SL3211-1PE27-5AL0	
LO base load power	37 kW	
LO base load input current	70 A	
LO base load output current	75 A	
HO base load power	30 kW	
HO base load input current	62 A	
HO base load output current	60 A	
Fuse according to IEC Fuse according to UL, class J	3NA3830 (100 A) 100 A	
Power loss without filter	1.09 kW ¹⁾	
Power loss with filter	1.10 kW ¹⁾	
Required cooling air flow	55 l/s	
Weight without filter	20 kg	
Weight with filter	21.5 kg	

¹⁾ Approx. 1 kW through the heatsink

Table 6- 26 PM240-2, IP20, frame size E, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE28-8UL0 6SL3210-1PE28-8AL0	6SL3210-1PE31-1UL0 6SL3210-1PE31-1AL0	
LO base load power	45 kW	55 kW	
LO base load input current	86 A	104 A	
LO base load output current	90 A	110 A	
HO base load power	37 kW	45 kW	
HO base load input current	78 A	94 A	
HO base load output current	75 A	90 A	
Fuse according to IEC Fuse according to UL, class J	3NA3832 (125 A) 125 A	3NA3836 (160 A) 150 A	
Power loss without filter	1.29 kW	1.65 kW	
Power loss with filter	1.30 kW	1.67 kW	
Required cooling air flow	83 l/s	83 l/s	
Weight without filter	26 kg	26 kg	
Weight with filter	28 kg	28 kg	

Table 6- 27 PM240-2, PT, frame size E, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PE31-1UL0 6SL3211-1PE31-1AL0	
LO base load power	55 kW	
LO base load input current	104 A	
LO base load output current	110 A	
HO base load power	45 kW	
HO base load input current	94 A	
HO base load output current	90 A	
Fuse according to IEC Fuse according to UL, class J	3NA3836 (160 A) 150 A	
Power loss without filter	1.65 kW ¹⁾	
Power loss with filter	1.67 kW ¹⁾	
Required cooling air flow	83 l/s	
Weight without filter	30.5 kg	
Weight with filter	32 kg	

¹⁾ Approx. 1.4 kW through the heatsink

Table 6- 28 PM240-2, IP20, frame size F, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE31-5UL0 6SL3210-1PE31-5AL0	6SL3210-1PE31-8UL0 6SL3210-1PE31-8AL0	6SL3210-1PE32-1UL0 6SL3210-1PE32-1AL0
LO base load power	75 kW	90 kW	110 kW
LO base load input current	140 A	172 A	198 A
LO base load output current	145 A	178 A	205 A
HO base load power	55 kW	75 kW	90 kW
HO base load input current	117 A	154 A	189 A
HO base load output current	110 A	145 A	178 A
Fuse according to IEC Fuse according to UL, class J	3NA3140 (200 A) 200 A	3NA3142 (224 A) 250 A	3NA3250 (300 A) 300 A
Power loss without filter	1.91 kW	2.46 kW	2.28 kW
Power loss with filter	1.93 kW	2.48 kW	2.30 kW
Required cooling air flow	153 l/s	153 l/s	153 l/s
Weight without filter	57 kg	57 kg	61 kg
Weight with filter	63 kg	63 kg	65 kg

Table 6- 29 PM240-2, IP20, frame size F, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3210-1PE32-5UL0 6SL3210-1PE32-5AL0	
LO base load power	132 kW	
LO base load input current	242 A	
LO base load output current	250 A	
HO base load power	110 kW	
HO base load input current	218 A	
HO base load output current	205 A	
Fuse according to IEC Fuse according to UL, class J	3NA3252 (315 A) 350 A	
Power loss without filter	2.98 kW	
Power loss with filter	3.02 kW	
Required cooling air flow	153 l/s	
Weight without filter	61 kg	
Weight with filter	65 kg	

Table 6- 30 PM240-2, PT, frame size F, 380 V ... 480 V 3 AC

Article No. without filter Article No. with filter	6SL3211-1PE32-5UL0 6SL3211-1PE32-5AL0	
LO base load power	132 kW	
LO base load input current	242 A	
LO base load output current	250 A	
HO base load power	110 kW	
HO base load input current	218 A	
HO base load output current	205 A	
Fuse according to IEC Fuse according to UL, class J	3NA3252 (315 A) 350 A	
Power loss without filter	2.98 kW ¹⁾	
Power loss with filter	3.02 kW ¹⁾	
Required cooling air flow	153 l/s	
Weight without filter	63.5 kg	
Weight with filter	68 kg	

¹⁾ Approx. 2.6 kW through the heatsink

Table 6- 31 PM240-2, frame size G, 380 V ... 480 V 3 AC

Article No. with filter class C3 Article No. with filter class C2	6SL3210-1PE33-0CL0 6SL3210-1PE33-0AL0	6SL3210-1PE33-7CL0 6SL3210-1PE33-7AL0	6SL3210-1PE34-8CL0 6SL3210-1PE34-8AL0
LO base load power	160 kW	200 kW	250 kW
LO base load input current	300 A	365 A	470 A
LO base load output current	302 A	370 A	477 A
HO base load power	132 kW	160 kW	200 kW
HO base load input current	275 A	330 A	400 A
HO base load output current	250 A	302 A	370 A
Fuse according to IEC Fuse according to UL, class J Fuse according to IEC/UL	3NA3254 (355 A) 400 A 3NE1334-2 (500A)	3NA3260 (400 A) 500 A 3NE1334-2 (500A)	3NA3372 (630 A) 600 A 3NE1436-2 (630A)
Power loss with filter class C3 Power loss with filter class C2	3.67 kW 3.67 kW	4.62 kW 4.62 kW	6.18 kW 6.18 kW
Required cooling air flow	210 l/s	210 l/s	210 l/s
Weight with filter class C3 Weight with filter class C2	105 kg 107 kg	113 kg 114 kg	120 kg 120 kg

6.6.3 Current derating depending on the pulse frequency, 400 V inverters

Article number	LO			Pu	ılse frequ	uency [k	Hz]		
	power	2	4 *)	6	8	10	12	14	16
	[kW]			LO bas	e load o	utput cu	rrent [A]		
6SL3210-1PE11-8 . L1	0.55	1.7	1.7	1.4	1.2	1	0.9	0.8	0.7
6SL3210-1PE12-3 . L1	0.75	2.2	2.2	1.9	1.5	1.3	1.1	1	0.9
6SL3210-1PE13-2 . L1	1.1	3.1	3.1	2.6	2.2	1.9	1.6	1.4	1.2
6SL3210-1PE14-3 . L1	1.5	4.1	4.1	3.5	2.9	2.5	2.1	1.8	1.6
6SL3210-1PE16-1 . L1	2.2	5.9	5.9	5	4.1	3.5	3	2.7	2.4
6SL3211PE18-0 . L1	3	7.7	7.7	6.5	5.4	4.6	3.9	3.5	3.1
6SL3210-1PE21-1 . L0	4	10.2	10.2	8.7	7.1	6.1	5.1	4.6	4.1
6SL3210-1PE21-4 . L0	5.5	13.2	13.2	11.2	9.2	7.9	6.6	5.9	5.3
6SL3211PE21-8 . L0	7.5	18	18	15.3	12.6	10.8	9	8.1	7.2
6SL3210-1PE22-7 . L0	11	26	26	22.1	18.2	15.6	13	11.7	10.4
6SL3211PE23-3 . L0	15	32	32	27.2	22.4	19.2	16	14.4	12.8
6SL3210-1PE23-8 . L0	18.5	38	38	32.3	26.6	22.8	19	17.1	15.2
6SL3210-1PE24-5 . L0	22	45	45	38.3	31.5	27	22.5	20.3	18
6SL3210-1PE26-0 . L0	30	60	60	51	42	36	30	27	24
6SL3211PE27-5 . L0	37	75	75	63.8	52.5	45	37.5	33.8	30
6SL3210-1PE28-8 . L0	45	90	90	76.5	63	54	45	40.5	36
6SL3211PE31-1 . L0	55	110	110	93.5	77	-			
6SL3210-1PE31-5 . L0	75	145	145	123.3	101.5				
6SL3210-1PE31-8 . L0	90	178	178	151.3	124.6				
Article number	_			Pι	ılse frequ	uency [k	Hz]		
	_	2 *)	4	6	8	10	12	14	16
				LO bas	e load o	utput cu	rrent [A]		
6SL3210-1PE32-1 . L0	110	205	143.5						
6SL3211PE32-5 . L0	132	250	175						
6SL3210-1PE33-0AL0	160	302	211.4	151	120.8				
6SL3210-1PE33-7AL0	200	370	259	185	148				
6SL3210-1PE34-8AL0	250	477	333.9	238.5	190.8				

^{*)} Factory setting

The permissible motor cable length depends on the particular cable type and the pulse frequency that has been selected

6.7 Technical data, 690 V inverters

Motors for 690 V Power Modules

For the 690 V Power Modules, induction motors are permissible in the range from 50 $\% \dots$ 150 % of the inverter power without any restrictions.

Note

Motors for inverter operation


Only use motors that are suitable for operation with inverters with a DC link.

For 690 V Power Modules, motors with a suitable insulation system for 690 V inverter operation are required (e.g. PREMIUM).

6.7.1 General data, 690 V inverters

Property	Version
Line voltage	 for systems according to IEC: 500 V 690 V 3 AC ± 10% (in operation -20% < 1 min) for systems according to UL 500 V 600 V 3 AC ± 10% (in operation -20% < 1 min) filtered devices only with Slash Rating (600Y/347V AC)
Line supply configurations	Grounded TN/TT line supplies or non-grounded IT line supplies Permissible line supplies (Page 50)
Line impedance	No restrictions
Power factor λ	> 0.9
Output voltage	0 V 3 AC 0.95 x input voltage (max.)
Input frequency	50 Hz 60 Hz, ± 3 Hz
Output frequency	0 550 Hz, depending on the control mode
Inrush current	< LO base load input current
Overvoltage category according to EN 61800-5-1	III for line supplies
Pulse frequency	2 kHz (factory setting), can be adjusted to 4 kHz
	Adjustable in steps of 2 kHz.
	Current reduction as a function of the pulse frequency (Page 115)
	If you increase the pulse frequency, the inverter reduces the maximum output current.
Short-circuit current (SCCR) and branch pro-	Maximum permissible line short-circuit current ≤ 100 kA rms Minimum required short-circuit current ≥ 10 kA rms
tection	The length of the connecting cable from the line to the inverter may not reduce the minimum short-circuit current
	Branch protection and short-circuit strength according to UL and IEC
	(https://support.industry.siemens.com/cs/ww/en/view/109479152)
Braking methods	DC braking, compound braking, dynamic braking with integrated braking chopper
Degree of protection ac- cording to EN 60529	IP20; must be installed in a control cabinet
Protection class according to EN 61800-5-1	The inverters are devices with protection class I
Touch protection accord- ing to EN 50274	DGUV regulation 3 when used for the intended purpose
Cooling in compliance with EN 60146	Forced air cooling AF

Dependent on the input voltage and output power

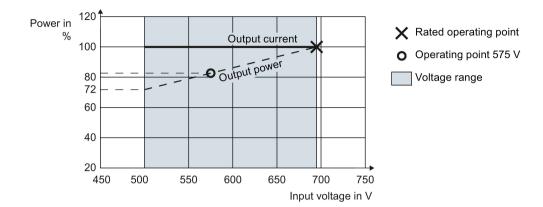

6.7.2 Specific technical data, 690 V inverters

Table 6- 32 PM240-2, IP20, frame size D, 500 V ... 690 V 3 AC

Article No without filter Article No with filter	6SL3210-1PH21-4UL0 6SL3210-1PH21-4AL0	6SL3210-1PH22-0UL0 6SL3210-1PH22 -0AL0	6SL3210-1PH22-3UL0 6SL3210-1PH22 -3AL0
LO base load power	11 kW	15 kW	18.5 kW
LO base load input current	14 A	18 A	22 A
LO base load output current	14 A	19 A	23 A
HO base load power	7.5 kW	11 kW	15 kW
HO base load input current	11 A	14 A	20 A
HO base load output current	11 A	14 A	19 A
Fuse according to IEC Fuse according to UL, class J	3NA3807-6 (20 A) 20 A	3NA3810-6 (25 A) 25 A	3NA3812-6 (32 A) 30 A
Power loss without filter	0.35 kW	0.44 kW	0.52 kW
Power loss with filter	0.35 kW	0.45 kW	0.52 kW
Required cooling air flow	55 l/s	55 l/s	55 l/s
Weight without filter	17 kg	17 kg	17 kg
Weight with filter	18.5 kg	18.5 kg	18.5 kg

Table 6- 33 PM240-2, IP20, frame size D, 500 V ... 690 V 3 AC

Article No without filter Article No with filter	6SL3210-1PH22-7UL0 6SL3210-1PH22-7AL0	6SL3210-1PH23-5UL0 6SL3210-1PH23 -5AL0	6SL3210-1PH24-2UL0 6SL3210-1PH24-2AL0
LO base load power	22 kW	30 kW	37 kW
LO base load input current	25 A	33 A	40 A
LO base load output current	27 A	35 A	42 A
HO base load power	18.5 kW	22 kW	30 kW
HO base load input current	24 A	28 A	36 A
HO base load output current	23 A	27 A	35 A
Siemens fuse according to IEC Fuse according to UL, class J	3NA3817-6KJ (40 A) 35 A	3NA3820-6KJ (50 A) 45 A	33NA3822-6 (63 A) 60 A
Power loss without filter	0.60 kW	0.77 kW	0.93 kW
Power loss with filter	0.60 kW	0.78 kW	0.94 kW
Required cooling air flow	55 l/s	55 l/s	55 l/s
Weight without filter	17 kg	17 kg	17 kg
Weight with filter	18.5 kg	18.5 kg	18.5 kg

Table 6- 34 PM240-2, IP20, frame size E, 500 V ... 690 V 3 AC

Article No without filter Article No with filter	6SL3210-1PH25-2UL0 6SL3210-1PH25-2AL0	6SL3210-1PH26-2UL0 6SL3210-1PH26-2AL0	
LO base load power	45 kW	55 kW	
LO base load input current	50 A	59 A	
LO base load output current	52 A	62 A	
HO base load power	37 kW	45 kW	
HO base load input current	44 A	54 A	
HO base load output current	42 A	52 A	
Siemens fuse according to IEC Fuse according to UL, class J	3NA3824-6 (80A) 80 A	3NA3824-6 (80A) 80 A	
Power loss without filter	1.07 kW	1.30 kW	
Power loss with filter	1.08 kW	1.31 kW	
Required cooling air flow	83 l/s	83 l/s	
Weight without filter	26 kg	26 kg	
Weight with filter	28 kg	28 kg	

Table 6- 35 PM240-2, IP20, frame size F, 500 V ... 690 V 3 AC

Article No without filter Article No with filter	6SL3210-1PH28-0UL0 6SL3210-1PH28-0AL0	6SL3210-1PH31-0UL0 6SL3210-1PH31-0AL0	6SL3210-1PH31-2UL0 6SL3210-1PH31-2AL0
LO base load power	75 kW	90 kW	110 kW
LO base load input current	78 A	97 A	111 A
LO base load output current	80 A	100 A	115 A
HO base load power	55 kW	75 kW	90 kW
HO base load input current	66 A	85 A	106 A
HO base load output current	62 A	80 A	100 A
Siemens fuse according to IEC Fuse according to UL, class J	3NA3830-6 (100 A) 100 A	3NA3132-6 (125 A) 125 A	3NA3136-6 (160 A) 150 A
Power loss without filter	1.37 kW	1.74 kW	1.95 kW
Power loss with filter	1.38 kW	1.76 kW	1.97 kW
Required cooling air flow	153 l/s	153 l/s	153 l/s
Weight without filter	60 kg	60 kg	60 kg
Weight with filter	64 kg	64 kg	64 kg

6.7 Technical data, 690 V inverters

Table 6- 36 PM240-2, IP20, frame size F, 500 V ... 690 V 3 AC

Article No without filter Article No with filter	6SL3210-1PH31-4UL0 6SL3210-1PH31-4AL0	
LO base load power	132 kW	
LO base load input current	137 A	
LO base load output current	142 A	
HO base load power	110 kW	
HO base load input current	122 A	
HO base load output current	115 A	
Siemens fuse according to IEC Fuse according to UL, class J	3NA3140-6 (200 A) 200 A	
Power loss without filter	2.48 kW	
Power loss with filter	2.51 kW	
Required cooling air flow	153 l/s	
Weight without filter	60 kg	
Weight with filter	64 kg	

Table 6- 37 PM240-2, frame size G, 500 V ... 690 V 3 AC

Article No. with filter	6SL3210-1PH31-7CL0	6SL3210-1PH32-1CL0	6SL3210-1PH32-5CL0
LO base load power	160 kW	200 kW	250 kW
LO base load input current	170 A	205 A	250 A
LO base load output current	171 A	208 A	250 A
HO base load power	132 kW	160 kW	200 kW
HO base load input current	160 A	185 A	225 A
HO base load output current	144 A	171 A	208 A
Fuse according to the IEC/UL	3NE1227-0 (250A)	3NE1230-0 (315A)	3NE1331-0 (350A)
Power loss	2.94 kW	3.70 kW	4.64 kW
Required cooling air flow	210 l/s	210 l/s	210 l/s
Weight	114 kg	114 kg	114 kg

6.7.3 Current derating depending on the pulse frequency, 690 V inverters

Article number	LO power [kW]	Pulse fr	equency [kHz]
		2 *)	4
		LO base load	d output current [A]
6SL3210-1PH21-4 . L0	11	14	8.4
6SL3210-1PH22-0 . L0	15	19	11.4
6SL3210-1PH22-3 . L0	18.5	23	13.8
6SL3210-1PH22-7 . L0	22	27	16.2
6SL3210-1PH23-5 . L0	30	35	21
6SL3211PH24-2 . L0	37	42	25.2
6SL3210-1PH25-2 . L0	45	52	31.2
6SL3211PH26-2 . L0	55	62	37.2
6SL3210-1PH28-0 . L0	75	80	48
6SL3210-1PH31-0 . L0	90	100	60
6SL3210-1PH31-2 . L0	110	115	69
6SL3210-1PH31-4 . L0	132	142	85.2
6SL3210-1PH31-7CL0	160	171	102.6
6SL3210-1PH32-1CL0	200	208	124.8
6SL3210-1PH32-5CL0	250	250	150

^{*)} Factory setting

The permissible motor cable length depends on the particular cable type and the pulse frequency that has been selected

6.8 Restrictions for special ambient conditions

Maximum current at low speeds

NOTICE

Overheating the inverter due to unsuitable load

Loading the inverter with a high output current and at the same time with a low output frequency can cause the current-conducting components in the inverter to overheat. Excessively high temperatures can damage the inverter or have a negative impact on the inverter service life.

- Never operate the inverter continuously with an output frequency = 0 Hz.
- Only operate the inverter in the permissible operating range.

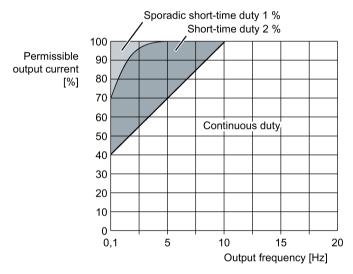


Figure 6-2 Permissible operating range of the inverter

Continuous operation:

Operating state that is permissible for the complete operating time.

Short-time duty:

Operating state that is permissible for less than 2 % of the operating time.

Sporadic short-time duty:

Operating state that is permissible for less than 1 % of the operating time.

Current reduction as a function of the installation altitude and ambient temperature

At installation altitudes above 1000 m the permissible inverter output current is reduced.

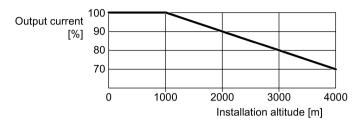


Figure 6-3 Current reduction as a function of the installation altitude

At installation altitudes above 1000 m, you can compensate the permissible inverter output current to a certain extent using the ambient temperature. The following tables contain the details.

Table 6- 38	Maximum ı	permitted	output	current for	or loading	according	ı to LC)

		Ambient temperature [°C]									
Installation	20	25	30	35	40	45	50	55	60		
altitude [m] up to		Output current in [%] when loading to LO									
1000			100			93	85	76	66		
1500		100					81	72	63		
2000		100		97	90	83	77	68	59		
2500	10	00	98	91	85	79	72	64	56		
3000	100	98	92	86	80	74	68	60	53		
3500	98	92	86	81	75	69	64	57	50		
4000	91	86	81	75	70	65	60	53	46		

Table 6-39 Maximum permitted output current when loading according to HO

		Ambient temperature [°C]								
Installation	20 25 30 35 40 45 50								60	
altitude [m] up to		Output current in [%] when loading to HO								
1000		100							74	
1500			10	00			95	83	70	
2000		10	00		99	95	90	78	67	
2500		100		98	94	89	85	74	63	
3000	10	100 96			88	84	80	70	59	
3500	98	94	90	86	83	79	75	65	56	
4000	91	88	84	81	77	74	70	61	52	

Also observe the maximum permissible ambient operating temperatures for the Control Unit and possibly the Operator Panel.

6.8 Restrictions for special ambient conditions

Permissible line supplies dependent on the installation altitude

- For installation altitudes ≤ 2000 m above sea level, it is permissible to connect the inverter to any of the line supplies that are specified for it.
- For installation altitudes 2000 m ... 4000 m above sea level, the following applies:
 - Connection to a TN line system with grounded neutral point is permissible.
 - TN systems with grounded line conductor are not permitted.
 - The TN line system with grounded neutral point can also be supplied using an isolation transformer.
 - The phase-to-phase voltage does not have to be reduced.

Note

Using Power Modules connected to TN line supplies with voltages ≥ 600 V for installation altitudes 2000 m ... 4000 m

For voltages ≥ 600 V, the TN line supply must have a grounded neutral point established using an isolating transformer.

6.9 Electromagnetic compatibility of variable-speed drives

EMC (electromagnetic compatibility) means that the devices function satisfactorily without interfering with other devices and without being disrupted by other devices. EMC applies when the emitted interference (emission level) and the interference immunity are matched with each other.

The product standard IEC/EN 61800-3 describes the EMC requirements placed on "Variable-speed drive systems".

A variable-speed drive system (or Power Drive System PDS) consists of the inverter as well as the associated electric motors and encoders including the connecting cables.

The driven machine is not part of the drive system.

Note

PDS as component of machines or systems

When you install PDS into machines or systems, additional measures may be required so that the product standards of these machines or systems is complied with. The machine or system builder is responsible for taking these measures.

Environments and categories

Environments

IEC/EN 61800-3 makes a distinction between the "first environment" and "second environment" - and defines different requirements for these environments.

First environment:

Residential buildings or locations at which the PDS is directly connected to a public low-voltage supply without intermediate transformer.

Second environment:

All industrial plant/systems or locations that are connected to the public grid through their own, dedicated transformer.

Categories

IEC/EN 61800-3 makes a distinction between four drive system categories:

Category C1:

Drive systems for rated voltages < 1000 V for unrestricted use in the "first environment"

Category C2:

Stationary PDS for rated voltages < 1000 V for operation in the "second environment".

Appropriately qualified personnel are required to install the PDS. An appropriately trained and qualified person has the necessary experience for installing and commissioning a PDS, including the associated EMC aspects.

Additional measures are required for operation in the "first environment".

Category C3:

PDS for rated voltages < 1000 V - only for operation in the "second environment".

Category C4:

PDS for IT line supplies for operation in complex systems in the "second environment".

An EMC plan is required.

6.9.1 Inverter applications

Inverters involve equipment used on a professional basis, deployed in certain areas of business and industry - and are not operated in the general public domain.



For an EMC-compliant installation, observe the information provided in the Configuration manual: EMC installation guideline (http://support.automation.siemens.com/WW/view/en/60612658).

The devices described there are intended for operation in the first and second environments. Conditions for operation in the respective environment are subsequently listed.

6.9.1.1 Operation in the Second Environment

Interference immunity

You do not have to take any additional measures regarding interference immunity.

Interference emission - operation in the second environment, Category C2

The drive system must comply with the following conditions in order to comply with the limit values of the second environment, Category C2:

- The drive system is installed by appropriately qualified personnel in compliance with EMC regulations - and the installation notes provided in the manual.
- You use a shielded motor cable with low capacitance.
- The pulse frequency is not higher than the value set in the factory.

- The drive system is connected to a TN or TT line supply.
- You comply with the permissible motor cable length.
 - Length of the motor cable (Page 60).
- The inverters are equipped with a Category C2 line filter (internal or external).
 - 200 V inverter frame size FSA ... FSC

Inverters with integrated filter are suitable for operation in the second environment, Category C2.

200 V inverter frame size FSD ... FSF

The inverters require an external filter, Category C2

- 400 V inverter

Inverters with integrated filter are suitable for operation in the second environment, Category C2.

- 690 V inverter

Inverters of frame sizes FSD and FSE with integrated filter are suitable for operation in the Second Environment, Category C2.

Inverters of frame sizes FSF and FSG with integrated filter are suitable for operation in the Second Environment, Category C3.

With the external filters, from Section Line filter (Page 137), the inverters without integrated filter comply with the requirements of the Second Environment, Category C2 with reference to interference emission.

If you use inverters without integrated filter or a filter other than those mentioned above, then you are responsible for verifying that the interference emission is limited.

You can use a dedicated radio interference suppression filter for each inverter - or a common filter for several inverters.



Further information on unfiltered devices can be found on the Internet:

Compliance with EMC limits with unfiltered devices (https://support.industry.siemens.com/cs/ww/en/view/109750634)

Interference emission - operation in the second environment, Category C4

When connected to IT line supplies, only filtered inverters are permissible. Use external filters without capacitors with respect to ground to limit symmetrical interference emission. When necessary, contact one of our Solution Partners

(https://www.automation.siemens.com/solutionpartner/partnerfinder/Home/Index?country=D E&program=1&technology=19&lang=en).

6.9.1.2 Operation in the First Environment

Interference immunity

You do not have to take any additional measures regarding interference immunity.

Interference emission - operation in the first environment, Category C2

In order that you may operate the drive system in the first environment, Category C2, then in addition to the requirements for use in the second environment, you must also observe the limit values related to harmonic currents.

Note

Maintaining the limit values for harmonic currents

With respect to the compliance with limits for harmonic currents, the EMC product standard EN61800-3 for PDS refers to compliance with standards EN 61000-3-2 and EN 61000-3-12.

Inverter with an LO base load power ≤ 1 kW:

It cannot be guaranteed that the limit values are complied with corresponding to IEC 61000-3-2. The installation person/company or company operating the professionally used device must obtain authorization from the grid operator to connect the device regarding the harmonic currents.

Typical harmonic currents (Page 123)

Inverters with an LO base load input current ≤ 16 A:

These devices are not subject to any limit values, and as a consequence can be connected to the public low-voltage grid without any prior consultation.

Inverters with an LO base load input current > 16 A and ≤ 75 A

The drive system is in compliance with IEC/EN 61000-3-12 under the following preconditions:

- FSC Power Module, input voltage 3 AC 200 ... 240 V: You use a 3% or 4% line reactor.
- FSD Power Module, input voltage 3 AC 200 ... 240 V: A line reactor is not required
- FSB/FSC Power Module, input voltage 3 AC 380 ... 480 V: You use a 3% or 4% line reactor.

Power Module FSD, input voltage 380 ... 480 V 3 AC: A line reactor is not required

Note

Line reactor

Contact our Solution Partners

(https://www.automation.siemens.com/solutionpartner/partnerfinder/Home/Index?country =DE&program=1&technology=19&lang=en) for a line reactor.

Short-circuit power S_{SC} at the connection point of the customer's system to the public grid, is greater than or equal to the value according to the following formula:

 $S_{SC} \ge 120 \text{ x } \sqrt{3} \text{ x V}_{in} \text{ x LO base load input current}$

Example: FSD inverter, 400 V, input current, 70 A:

 $S_{SC} \ge 120 \text{ x} \sqrt{3} \text{ x} 400 \text{ V} \text{ x} 70 \text{ A}$

This corresponds to a low-voltage transformer with an apparent power rating of 300 kVA ... 400 kVA with $V_K = 4\%$... 6%

The installation company or company operating the equipment is responsible for ensuring that this equipment is only connected at a connection point with an appropriate shortcircuit power (fault level).

If these preconditions do not apply, then the installation company or company operating the device must obtain authorization from the grid operator to connect the device regarding the harmonic currents.



Typical harmonic currents (Page 123)

Inverters with an LO base load current > 75A

There are no standard-related requirements for installing devices such as these. However, we recommend that the grid operator is informed when such a device is connected. 400 V inverters conform to EN 61000-3-12.

6.9.2 Typical harmonic currents

Table 6- 40 Typical harmonic currents (%) of the inverter

Inverter		Harmonic number						
	5th	7th	11th	13th	17th	19th	23rd	25th
FSA FSC, 200 V, 400 V ¹⁾	54	39	11	5.5	5	3	2	2
FSD FSF, 200 V ²⁾	28	14	8	6	5	4	3	3
FSD FSG, 400 V ²⁾	37	21	7	5	4	3	3	2
FSD FSG, 690 V ²⁾	34	18	8	5	4	3	3	2

Values relative to the LO input current for V_K 1%

²⁾ Values relative to the LO input current

6.9.3 **EMC limit values in South Korea**

The following statements apply for filtered 400 V inverters, frame sizes FSD ... FSF.

All other inverters do not comply with the limit values.

이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

For sellers or users, please keep in mind that this device is an A-grade electromagnetic wave device. This device is intended to be used in areas other than home.

The EMC limit values to be observed for Korea correspond to the limit values of the EMC product standard for variable-speed electric drives EN 61800-3 of category C2 or the limit value class A. Group 1 to KN11.

By implementing appropriate additional measures, the limit values according to category C2 or limit value class A, Group 1, are observed.

Additional measures, such as the use of an additional RFI suppression filter (EMC filter), may be necessary.

In addition, measures for EMC-compliant configuration of the plant or system are described in detail in this manual.

You can find additional information about EMC-compliant configuration of the plant or system on the Internet:



EMC installation guideline

(http://support.automation.siemens.com/WW/view/en/60612658)

The final statement on compliance with the applicable standard is given by the respective label attached to the individual device.

Spare parts

Spare parts for frame sizes FSA ... FSC

	Article number						
	FSA	FSB	FSC				
Accessory kit IP20*)	A5E33860501A	A5E33879111A	A5E33879131A				
Accessory kit PT*)	A5E03396337	A5E03395273	A5E03343234				

^{*)} Included in the scope of delivery of the inverter

Can be ordered through the Siemens Repair Center

Spare parts for frame sizes FSD ... FSG

	Article number						
	FSD	FSE	FSF	FSG			
Set of small components	6SL3200-	6SL3200-	6SL3200-	6SL3200-			
	0SK08-0AA0	0SK08-0AA0	0SK08-0AA0	0SK08-0AA0			
Mechanical kit	6SL3200-	6SL3200-	6SL3200-	6SL3200-			
	0SM13-0AA0	0SM14-0AA0	0SM15-0AA0	0SM16-0AA0			
Fan kit, IP20	6SL3200-	6SL3200-	6SL3200-	6SL3200-			
devices	0SF25-0AA0	0SF27-0AA0	0SF28-0AA0	0SF18-0AA0			
Fan kit, PT de-	6SL3200-	6SL3200-	6SL3200-				
vices	0SF25-0AA0	0SF27-0AA0	0SF28-0AA0				
Accessory kit / shield connec- tion kit	6SL3262- 1AD01-0DA0	6SL3262- 1AE01-0DA0	6SL3262- 1AF01-0DA0	6SL3262- 1AG01-0DA0			

Accessories

Available components

- Accessory kit / shield connection kit (includes the upper shield plate)
- Mounting frames for PT Power Modules
- Mounting grips for PT Power Modules frame sizes FSD ... FSF
- Line reactors for frame sizes FSA ... FSC Line reactors are not required for frame sizes FSD ... FSG.
- External line filters, Class B for frame sizes FSA ... FSC.
 No Class B filters are available for frame sizes FSD ... FSG.
- Braking resistors
- Brake Relay or Safe Brake Relay for controlling a motor holding brake
- Output reactors
- Voltage limiter and du/dt filter

Connection components

Connection overview for the electrical components Connection overview (Page 56).

8.1 Top shield plate - FSD ... FSG

The shield plate is included in the accessory kit / shield connection kit. Order numbers:

Spare parts (Page 125)

Fasten the shield plate as shown in the graphic:

FSD and FSE: 2 x M5 / 3 Nm
 FSF and FSG: 4 x M8 / 23 Nm





8.2 Mounting frames for PT power modules

Order numbers for mounting frames

• FSA: 6SL3260-6AA00-0DA0

FSB: 6SL3260-6AB00-0DA0

• FSC: 6SL3260-6AC00-0DA0

• FSD: 6SL3200-0SM17-0AA0

• FSE: 6SL3200-0SM18-0AA0

• FSF: 6SL3200-0SM20-0AA0

All of the necessary nuts and seals are included in the scope of delivery.


NOTICE

Damage to devices due to defective mounting frame seals


If seals are defective, liquid or dirt can enter the control cabinet. This can damage or even destroy devices.

- · Check the seals for damage.
- · Replace any damaged seals.

Dimension drawings for mounting frames, FSA ... FSC

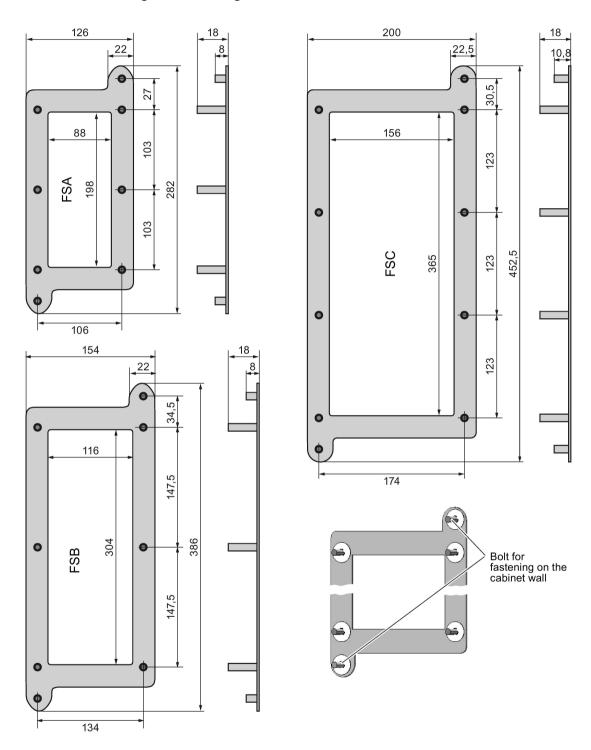

Dimension drawings for mounting frames, FSD ... FSF

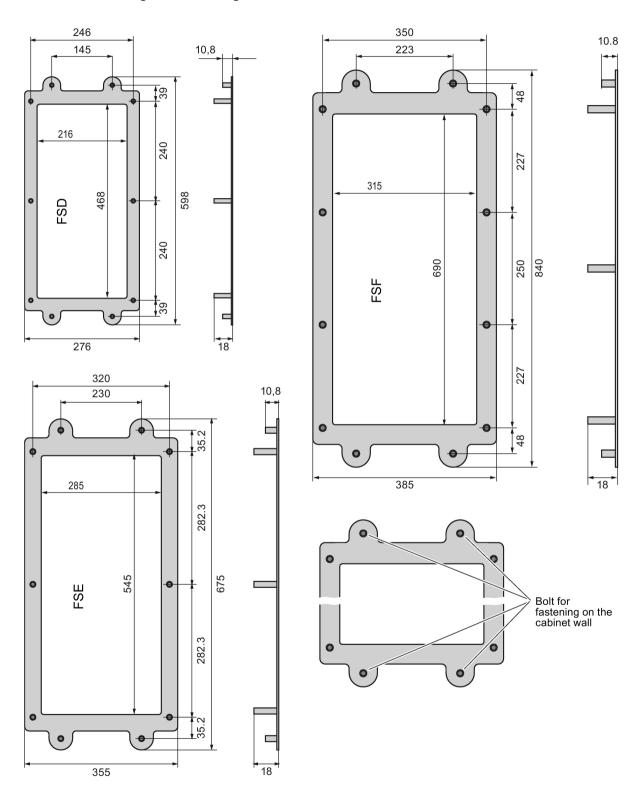

8.2.1 Mounting instructions with mounting frame

Procedure



Proceed as follows to correctly mount the Power Module with the mounting frame:

- 1. Prepare a cutout and holes in the control cabinet panel for the mounting frame corresponding to the dimension drawing.
- 2. Insert the mounting frame from the rear of the control cabinet through the corresponding holes and fix it in place at the fixing screws for the control cabinet panel; tighten the two / four nuts by hand.
- 3. Attach the seal to the inner side of the control cabinet (frame sizes FSA ... FSC only).
- 4. Insert the Power Module and tighten the screws by hand.
- 5. Mount the Power Module.
- 6. Finally, tighten the screws with the following torques.
 - M5 screws: 3.5 NmM6 screws: 5.9 Nm
- You have correctly installed the Power Module.

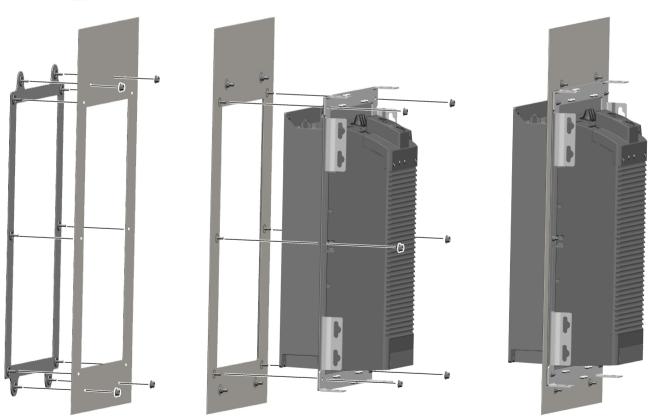



Figure 8-1 Installation instructions for the PT Power Modules with the optional mounting frame

8.3 Mounting grips for PT Power Modules

Mounting grips can be ordered for the PT Power Modules FSD ... FSF. The mounting grips enable the installation of the Power Module without hoisting gear.

Install the four hoisting grips as shown in the following image.


Article number: 6SL3200-0SM22-0AA0

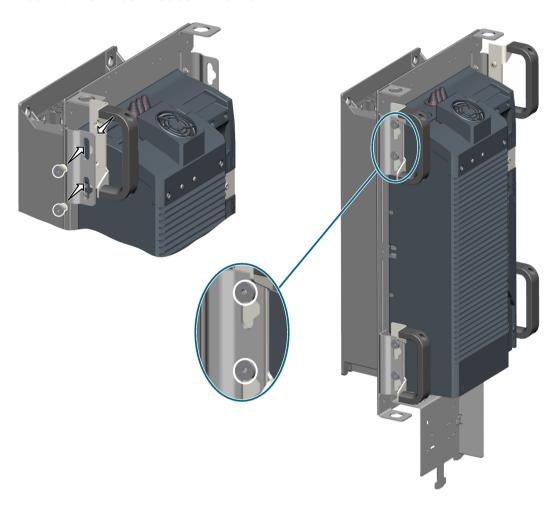

8.4 Line reactor

A line reactor protects the inverter when connected to dirty line supplies (line supply environment). A line reactor supports the overvoltage protection, smooths the harmonics in the line supply and buffers commutation dips.

Mounting position

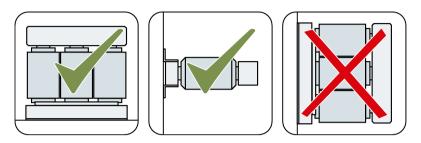

Clearances to other devices

Keep shaded areas free of any devices and components.


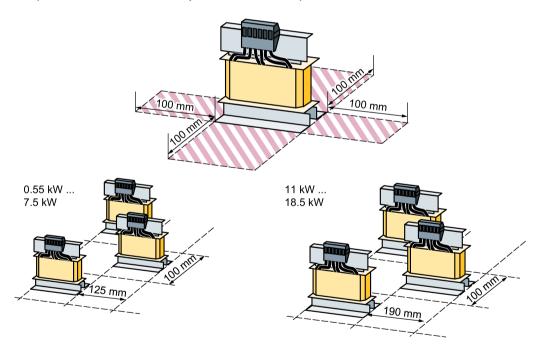


Figure 8-2 Clearances between the line reactors and other devices, examples for space-saving installation

Dimensions [mm] and drilling patterns

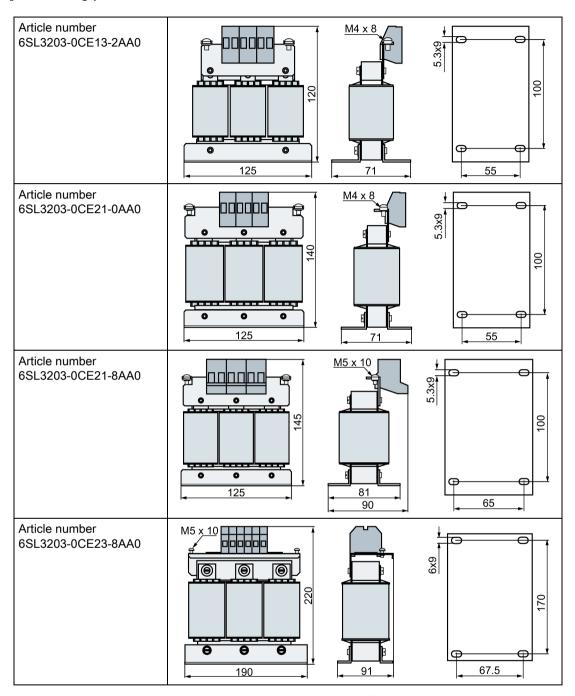

Mount the line reactor using M5 screws, nuts and washers. Tightening torque: 6 Nm

Assignment of line reactor to inverter:

Table 8-2 Assignment table (Page 136)

Table 8- 1 Technical data of the line reactors

Article number	In-	Line/load	connection	PE connection	Weight
	ductance [mH]	[mm² / nM]	[AWG / lbf in]	[mm² / lbf in]	[kg]
6SL3203-0CE13-2AA0	2.5	2.5 / 0.8	14 / 7	M4 [3 / 26.5]	1.1
6SL3203-0CE21-0AA0	1	6 / 1.8	10 / 15.9	M4 [3 / 26.5]	2.1
6SL3203-0CE21-8AA0	0.5	6 / 1.8	10 / 15.9	M5 [5 / 44.3]	2.95
6SL3203-0CE23-8AA0	0.3	16 / 4	6 / 34.5	M5 [5 / 44.3]	7.80

The line reactors are designed to IP20 degree of protection.

Table 8- 2 Assignment table

Line reactors	Power Module, 400 V		Power Module, 200 V		
6SL3203-0CE13-2AA0	6SL3210-1PE11-8 . L1, 6SL3210-1PE12-3 . L1 6SL3210-1PE13-2 . L1	FSA	6SL3210-1PB13-0 . L0, 6SL3211PB13-8 . L0	FSA	
6SL3203-0CE21-0AA0	6SL3210-1PE14-3 . L1, 6SL3211PE16-1 . L1 6SL3211PE18-0 . L1	FSA	6SL3210-1PB15-5 . L0, 6SL3210-1PB17-4 . L0 6SL3211PB21-0 . L0	FSB	
6SL3203-0CE21-8AA0	6SL3210-1PE21-1 . L0, 6SL3210-1PE21-4 . L0 6SL3211PE21-8 . L0	FSB	6SL3210-1PB21-4 . L0 6SL3211PB21-8 . L0	FSC	
6SL3203-0CE23-8AA0	6SL3210-1PE22-7 . L0, 6SL3211PE23-3 . L0	FSC	6SL3211PC22-2 . L0 6SL3210-1PC22-8 . L0	FSC	

Line reactors for 1 AC 200 V

For inverters with 1 AC 200 V connection, rather than the line reactors listed above, you can also deploy the following or similar products:

- FSA: NKE 10 / 2.93 (Block company)
- FSB NKE 25 / 1.17 (Block company)
- FSC NKE 35 / 1.46 (Block company)

The technical properties and statements made by the manufacturer apply.

8.5 Line filter

Dimensions for mounting the line filter

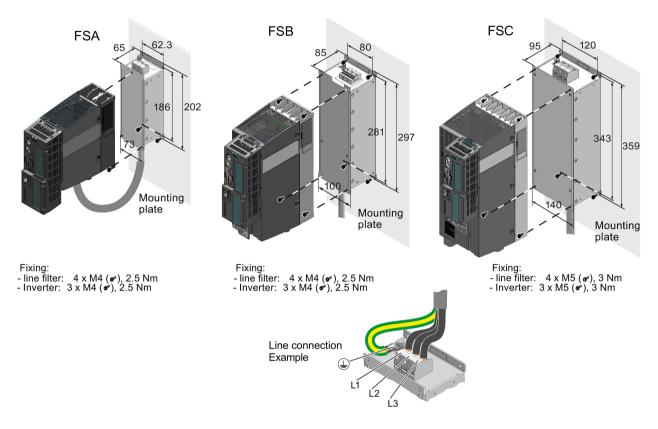


Table 8-3 Technical data of the line filter (Class B)

Article number	Power	Connection	Weight		
	loss [W]	Line supply and Power Module	PE	[kg]	
6SL3203-0BE17-7BA0	13	2.5 mm ² / 0.8 Nm 14 AWG / 7 lbf in	2.5 mm ² / 2 Nm 14 AWG / 17.7 lbf in	1.75	
6SL3203-0BE21-8BA0	22	6 mm ² / 1.8 Nm 10 AWG / 15.9 lbf in	2.5 mm ² / 2 Nm 14 AWG / 17.7 lbf in	4.0	
6SL3203-0BE23-8BA0	50	16 mm ² / 4 Nm 6 AWG / 35.4 lbf in	16 mm ² / 32 Nm 6 AWG / 26.5 lbf in	7.3	

Line filters are designed to IP20 degree of protection.

8.5 Line filter

Table 8-4 Assignment table

Power Module	, 400 V	Line filter (Class B)			
Frame size	Article number	Article number Power			
FSA	6SL3210-1PE11-8UL1	0.55	6SL3203-0BE17-7BA0		
	6SL3210-1PE12-3UL1	0.75			
	6SL3210-1PE13-2UL1	1.1			
	6SL3210-1PE14-3UL1	1.5			
	6SL3210-1PE16-1UL1	2.2			
	6SL3211PE18-0UL1	3.0			
FSB	6SL3210-1PE21-1UL0	4.0	6SL3203-0BE21-8BA0		
	6SL3210-1PE21-4UL0	5.5			
	6SL3211PE21-8UL0	7.5			
FSC	6SL3210-1PE22-7UL0	11	6SL3203-0BE23-8BA0		
	6SL3211PE23-3UL0	15			

8.6 Braking resistor

The braking resistor enables loads with a large moment of inertia to be braked quickly. During braking of the motor and the load, excess energy is fed back to the converter. This causes the voltage to rise in the DC link. The converter transfers the excess energy to the externally mounted braking resistor.



/ WARNING

Fire caused by an unsuitable or incorrectly installed braking resistor

Using an unsuitable or improperly installed braking resistor can cause fires and smoke to develop. Fire and smoke development can cause severe personal injury or material damage.

- Only use braking resistors that are approved for the inverter.
- Install the braking resistor in accordance with regulations.
- · Monitor the temperature of the braking resistor.

Mounting position









Mounting instructions

Mount the resistor on a heat resistant surface with a high thermal conductivity.

Do not cover the ventilation openings of the braking resistor.

You can mount the braking resistor either outside or inside the switchgear room. When mounted outside, the cooling air requirement for the switchgear room is lower.

Clearances to other devices

The following data are applicable for devices, frame sizes FSA ... FSC.

The clearances for braking resistors for devices, frame sizes FSD ... FSG are specified in the documentation, which is supplied with the braking resistor.

8.6 Braking resistor

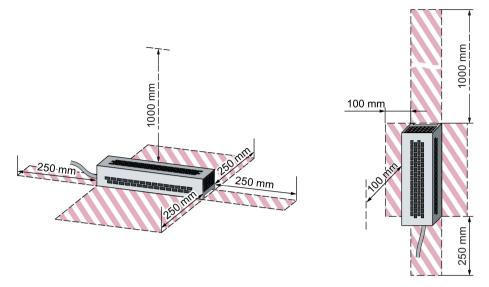


Figure 8-3 Minimum clearances for the braking resistor when mounting on a flat surface and for wall/panel mounting

Keep shaded areas free of any devices and components.

Dimensions and drilling patterns

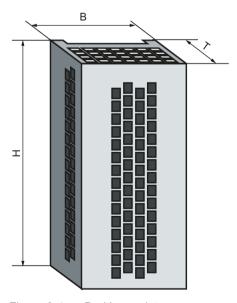


Figure 8-4 Braking resistor

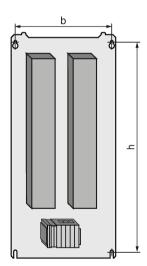


Table 8-5 Dimensions and weights

Article number	Overall dimensions [mm]			Drilling dimensions [mm]		Fixing/torque	Weight [kg]	Inverter frame size
	W	Н	D	b	h			
for 200 V inverters								
JJY:023146720008	105	295	100	72	266	M4 / 3 Nm	1.5	FSA
JJY:023151720007	105	345	100	72	316	M4 / 3 Nm	1.8	FSB
JJY:02 3163720018	175	345	100	142	316	M4 / 3 Nm	2.7	FSC
JJY:023433720001	250	490	140	217	460	M5 / 6 Nm	6.2	FSC
JJY:023422620002	220	470	180	187	430	M5 / 6 Nm	7	FSD
JJY:023423320001	220	560	180	187	500	M5 / 6 Nm	8.5	FSE
JJY:023434020003	350	630	180	317	570	M5 / 6 Nm	13.5	FSF
for 400 V inverters								
6SL3201-0BE14-3AA0	105	295	100	72	266	M4 / 3 Nm	1.5	FSA
6SL3201-0BE21-0AA0	105	345	100	72	316	M4 / 3 Nm	1.8	FSA
6SL3201-0BE21-8AA0	175	345	100	142	316	M4 / 3 Nm	2.7	FSB
6SL3201-0BE23-8AA0	250	490	140	217	460	M5 / 6 Nm	6.2	FSC
JJY:023422620001	220	470	180	187	430	M5 / 6 Nm	7	FSD
JJY:023424020001	220	610	180	187	570	M5 / 6 Nm	9.5	FSD
JJY:023434020001	350	630	180	317	570	M5 / 6 Nm	13.5	FSE
JJY:023454020001*) • JJY:023422620001 • JJY:023434020001	220 350	470 630	180 180	187 317	430 570	M5 / 6 Nm M5 / 6 Nm	7 13.5	FSF (FSD) (FSE)
JJY:023464020001*) • JJY:023434020001 • JJY:023434020001	350 350	630 630	180 180	317 317	570 570	M5 / 6 Nm M5 / 6 Nm	13.5 13.5	FSF (FSE) (FSE)
for 690 V inverters		T	T	1				1
JJY:023424020002	220	610	180	187	570	M5 / 6 Nm	9.5	FSD
JJY:023434020002	350	630	180	317	570	M5 / 6 Nm	13.5	FSE
JJY:023464020002*) • JJY:023434020002 • JJY:023434020002	350 350	630 630	180 180	317 317	570 570	M5 / 6 Nm M5 / 6 Nm	13.5 13.5	FSF (FSE) (FSE)

Use the screws, nuts and washers when fixing the braking resistors

^{*)} This braking resistor comprises two components, which must be connected in parallel on the plant/system side

8.6.1 Connecting a braking resistor

Some braking resistors have an integrated connection cable for the power connections (R1/R2) on the inverter. Thus, the length and cross-section of the connection cable are given.

For braking resistors without integrated connection cable, the maximum cable length is 10 m. The required conductor cross-sections are contained in the following tables.

The conductor cross-sections for the temperature monitoring are contained in the Operating Instructions of the Control Unit of your inverter.

Monitoring the temperature of the braking resistor without line contactor control

The braking contactors for FSA ... FSF inverters are intrinsically safe braking resistors and shut down in the event of overheating.

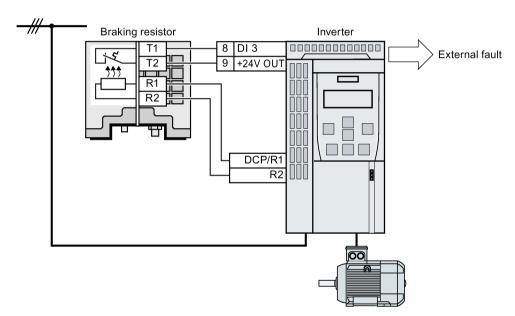


Figure 8-5 Connecting a braking resistor with temperature monitoring via digital input DI 3

Procedure



Proceed as follows to monitor the braking resistor temperature:

- 1. Connect the temperature monitoring system of the braking resistor (terminals T1 and T2 on the braking resistor) to a free digital input at the Control Unit of the inverter.
- 2. When commissioning the drive, define the function of the digital input used as external fault, using p2106.

As an example with temperature monitoring via digital input DI 3: p2106 = 722.3.

You have ensured that the temperature is monitored.

Monitoring the temperature of the braking resistor with line contactor control

With respect to FSG inverters, you not only have to monitor the temperature of the braking resistor but also have to ensure that the inverter is disconnected from the line in the event of a braking resistor overload. To do so, activate the line contactor control via a digital output of the inverter.

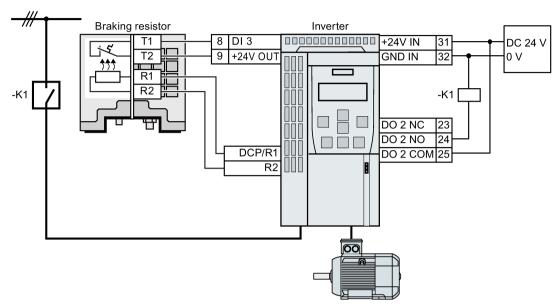


Figure 8-6 Connecting a braking resistor with temperature monitoring via digital input DI 3 and line contactor control (-K1) via digital output DO 2

Procedure



Proceed as follows to monitor the braking resistor temperature and activate the line contactor control:

- 1. Connect the temperature monitoring system of the braking resistor (terminals T1 and T2 on the braking resistor) to a free digital input at the Control Unit of the inverter.
- 2. When commissioning the drive, define the function of the digital input used as external fault, using p2106.
 - As an example with temperature monitoring via digital input DI 3: p2106 = 722.3.
- 3. Connect the digital output with the signal r0863.1 (line contactor control). For example for DO2 P0732 = 863.1
- You have set the temperature monitoring and line contactor control.

8.6.2 Technical data of the braking resistor

For the inverters, use the following or comparable braking resistors. The technical properties and statements made by the manufacturer apply.

Note

Braking resistors FSD ... FSF

Only use braking resistors that are UL approved, and have successfully passed the "Abnormal Operation Test" according to UL 508.

FSG braking resistors

Make sure that the monitoring system for braking resistor temperature shuts down the inverter in the event of any overload.

Example: Figure 8-6 Connecting a braking resistor with temperature monitoring via digital input DI 3 and line contactor control (-K1) via digital output DO 2 (Page 143)

Braking resistors for PM240-2, 200 V

Table 8- 6 Technical data

Article number	Re- sistance	Maximum power, P _{max}	Connection R1 / R2	Degree of protection	Power Module	
		Rated power P _{db}		Weight	Article numbers	Frame size
JJY:023146720008	200 Ω	0.75 kW	Connecting cable	IP20	6SL3210-1PB13-0 . L0	FSA
		37.5 W	integrated in the	1.5 kg	6SL3211PB13-8 . L0	
JJY:023151720007	68 Ω	2.2 kW	braking resistor	IP20	6SL3210-1PB15-5 . L0	FSB
		110 W		1.8 kg	6SL3210-1PB17-4 . L0 6SL3211PB21-0 . L0	
JJY:02 3163720018	37 Ω	4 kW		IP20	6SL3210-1PB21-4 . L0	FSC
		200 W		2.7 kg	6SL3211PB21-8 . L0	
JJY:023433720001	20 Ω	7.5 kW		IP20	6SL3210-1PC22-2 . L0	FSC
		375 W		6.2	6SL3210-1PC22-8 . L0	
JJY:023422620002	7.5 Ω	18.5 kW	10 mm ² / 0.5 Nm	IP21	6SL3210-1PC24-2UL0	FSD
		930 W	8 AWG / 4.5 lbf in	7.0 kg	6SL3210-1PC25-4UL0 6SL3211PC26-8UL0	
JJY:023423320001	4.5 Ω	30 kW	16 mm ² / 1.2 Nm	IP21	6SL3210-1PC28-0UL0	FSE
		1500 W	6 AWG / 10.6 lbf in	8.5 kg	6SL3211PC31-1UL0	
JJY:023434020003	2.5 Ω	55 kW	16 mm ² / 1.2 Nm	IP21	6SL3210-1PC31-3UL0	FSF
		2750 W	6 AWG / 10.6 lbf in	13.5 kg	6SL3210-1PC31-6UL0 6SL3211PC31-8UL0	

Braking resistors for PM240-2, 400 V

Table 8-7 Technical data

Article number	Re- sistance	Maximum power, P _{max}	Connection R1 / R2	Degree of protection	Power Module	
		Rated power Pdb		Weight	Article numbers	Frame size
6SL3201-0BE14-3AA0	370 Ω	1.5 kW	2.5 mm ² / 0.5 Nm	IP20	6SL3210-1PE11-8 . L1	FSA
		75 W	14 AWG / 4.5 lbf in	1.5 kg	6SL3210-1PE12-3 . L1 6SL3210-1PE13-2 . L1 6SL3210-1PE14-3 . L1	
6SL3201-0BE21-0AA0	140 Ω	4 kW	2.5 mm ² / 0.5 Nm	IP20	6SL3211PE16-1 . L1	FSA
		200 W	14 AWG / 4.5 lbf in	1.8 kg	6SL3211PE18-0 . L1	
6SL3201-0BE21-8AA0	75 Ω	7.5 kW	4 mm ² / 0.7 Nm	IP20	6SL3210-1PE21-1 . L0	FSB
		375 W	10 AWG / 6.2 lbf in	2.7 kg	6SL3210-1PE21-4 . L0 6SL3211PE21-8 . L0	
6SL3201-0BE23-8AA0	30 Ω	18.5 kW	4 mm ² / 0.7 Nm	IP20	6SL3210-1PE22-7 . L0	FSC
		925 W	10 AWG / 6.2 lbf in	6.2 kg	6SL3211PE23-3 . L0	
JJY:023422620001	25 Ω	22 kW	10 mm ² / 0.8 Nm	IP21	6SL3210-1PE23-8 . L0	FSD
		1100 W	8 AWG / 7.1 lbf in	7.0 kg	6SL3210-1PE24-5 . L0	
JJY:023424020001	15 Ω	37 kW	10 mm ² / 0.8 Nm	IP21	6SL3210-1PE26-0 . L0	FSD
		1850 W	8 AWG / 7.1 lbf in	9.5 kg	6SL3211PE27-5 . L0	
JJY:023434020001	10 Ω	55 kW	16 mm ² / 1.2 Nm	IP21	6SL3210-1PE28-8 . L0	FSE
		2750 W	6 AWG / 4.5 lbf in	13.5 kg	6SL3211PE31-1 . L0	
JJY:023454020001 (JJY:023422620001	7.1 Ω	77 kW	10 mm ² / 0.8 Nm 8 AWG / 7.1 lbf in	IP21	6SL3210-1PE31-5 . L0 6SL3210-1PE31-8 . L0	FSF
JJY:023434020001)		3850 W	16 mm ² / 1.2 Nm 6 AWG / 4.5 lbf in	20.5 kg		
JJY:023464020001		110 kW	16 mm ² / 1.2 Nm	IP21	6SL3210-1PE32-1 . L0	FSF
(JJY:023434020001	5 Ω	5500 W	6 AWG / 4.5 lbf in	27 kg	6SL3211PE32-5 . L0	
JJY:023434020001)			16 mm ² / 1.2 Nm 6 AWG / 4.5 lbf in			
6SL3000-1BE32-5AA0	2.2 Ω	250 kW	70 mm ² / M10	IP00	6SL3210-1PE33-0 . L0	FSG
		12.5 kW		120 kg	6SL3210-1PE33-7 . L0 6SL3210-1PE34-8 . L0	

Braking resistors for PM240-2, 690 V

Table 8-8 Technical data

Article number	Re- sistance	Maximum power, P _{max}	Connection R1 / R2	Degree of protection	Power Module	
		Rated power P _{db}		Weight	Article Nos.	Frame size
JJY:023424020002	31 Ω	37 kW 1850 W	10 mm ² / 0.8 Nm 8 AWG / 7.1 lbf in	IP21 9.5 kg	6SL3210-1PH21-4 . L0 6SL3210-1PH22-0 . L0 6SL3210-1PH22-3 . L0 6SL3210-1PH22-7 . L0 6SL3210-1PH23-5 . L0 6SL3211PH24-2 . L0	FSD
JJY:023434020002	21 Ω	55 kW 2750 W	16 mm ² / 1.2 Nm 6 AWG / 4.5 lbf in	IP21 13.5 kg	6SL3210-1PH25-2 . L0 6SL3211PH26-2 . L0	FSE
JJY:023464020002 (JJY:023434020002 JJY:023434020002)	10.5 Ω	110 kW 5500 W	16 mm ² / 1.2 Nm 6 AWG / 10.6 lbf in 16 mm ² / 1.2 Nm 6 AWG / 10.6 lbf in	IP21 27 kg	6SL3210-1PH28-0 . L0 6SL3210-1PH31-0 . L0 6SL3210-1PH31-2 . L0 6SL3210-1PH31-4 . L0	FSF
6SL3000-1BH32-5AA0	4.9 Ω	250 kW 12.5 kW	70 mm² / M10	IP00 120 kg	6SL3210-1PH31-7CL0 6SL3210-1PH32-1CL0 6SL3210-1PH32-5CL0	FSG

Load cycles for the braking resistors

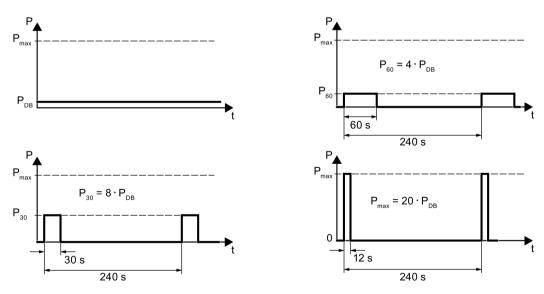


Figure 8-7 Pulse power, rated power and examples of the switch-on duration of the braking resistor

8.7 Connecting a motor holding brake

The inverter uses the Brake Relay to control the motor holding brake. Two types of Brake Relay exist:

- The Brake Relay controls the motor holding brake
- The Safe Brake Relay controls a 24 V motor holding brake and monitors the brake control for short-circuit or cable breakage.

Note

Brake Relay and Safe Brake Relay

The Brake Relay and the Safe Brake Relay do not differ from each other in the installation and the connection to the inverter.

Connection to the inverter

To ensure that you have the correct cable for connecting the Brake Relay irrespective of the inverter size, you are supplied with two preassembled cables with different lengths. Connect the appropriate cable to the Brake Module and to the inverter as shown below.

If you are using your own cable, ensure that the cable is insulated and rated for 600 V.

Connecting the motor holding brake via a PELV circuit

The Brake Relay must be connected to the protective conductor if the motor brake is supplied from a PELV circuit.


8.7.1 Technical data of the brake relay?

	Brake Relay	Safe Brake Relay
	6SL3252-0BB00-0AA0	6SL3252-0BB01-0AA0
Input voltage	via the Power Module	20.4 28.8 VDC ¹⁾
Input current	via the Power Module	Max. 2.5 A
Max. connection cross-section:	2.5 mm²	2.5 mm²
Degree of protection	IP20	IP20
Switching capability of the NO contact	1-phase 440 VAC, 3.5 A 1-phase 30 VDC, 12 A	-
Output voltage	-	24 V
Output current	-	max. 2 A


¹⁾ External, controlled power supply required. Recommended voltage: 26 VDC

8.7.2 Connections and circuit diagrams

Brake Relay

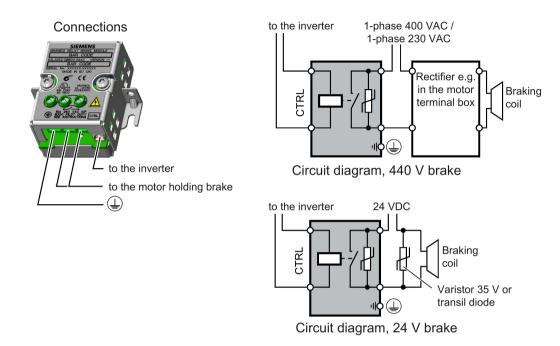

Safe Brake Relay

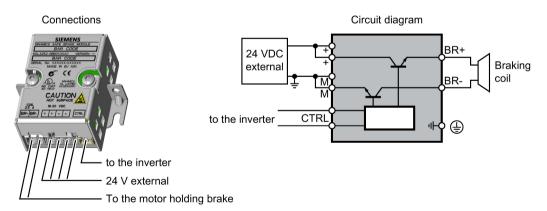


8.7.3 Mounting and connecting the brake relay

Installing the Brake Relay

- FSA ... FSC: Install the Brake Relay next to the Power Module.
- FSD ... FSG: Install the Brake Relay at the rear of the lower shield plate. Attach the Brake Relay before you install the shield plate.
- Mounting the shield plates (Page 40)

Connecting the Brake Relay to the inverter

The connector for the Brake Relay is located at the front of the Power Module. Lay the cable harness for the Brake Relay in the cable routing.

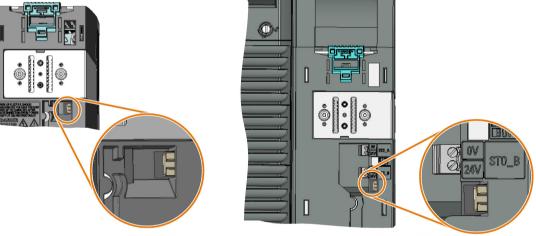

Brake relay connector for FSA ... FSC Power Modules without STO terminals


Brake relay connector for FSD ... FSF Power Modules with STO terminals

8.8 Output reactor

Output reactors reduce the voltage stress on the motor windings and the load placed on the inverter as a result of capacitive recharging currents in the cables.


When using the output reactor it is not permissible that the output frequency exceeds 150 Hz. It is not permissible that the pulse frequency exceeds 4 kHz

Mounting position

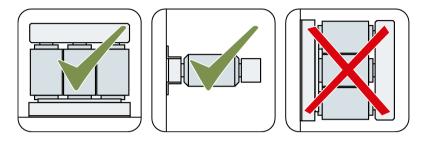


Clearances to other devices

Keep shaded areas free of any devices and components.

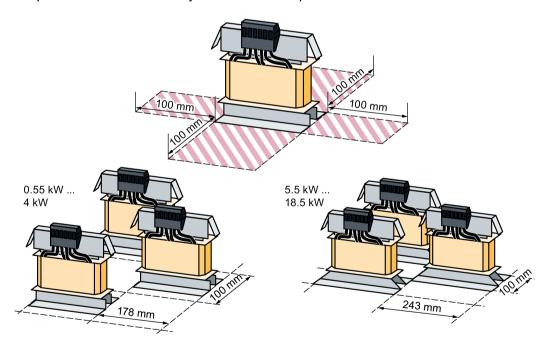

Minimum clearances of the output reactor to other devices, space-saving mounting examples

Dimensions, drilling patterns and weights for FSA ... FSC inverters

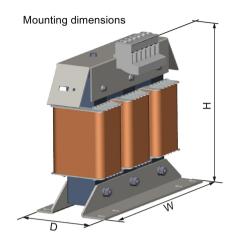

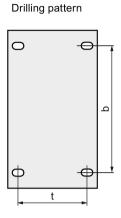


Table 8- 9 Dimensions and weights


Article number	nber In- ductanc e Overall dimensions Drilling di- mensions [mm] [mm]				Fixing/torque [Nm]	Weigh t [kg]		
	[mH]	W	Н	D	b	t		
6SL3202-0AE16-1CA0	2.5	207	166	73	166	57	4 x M4 / 3	3.4
6SL3202-0AE18-8CA0	1.3	207	166	73	166	57	4 x M4 / 3	3.9
6SL3202-0AE21-8CA0	0.54	247	211	100	225	81	4 x M5 / 6	10.1
6SL3202-0AE23-8CA0	0.26	257	228	115	225	85	4 x M5 / 6	11.2

Output reactors are designed to IP20 degree of protection.

Table 8- 10 Connections to the Power Module and to the motor

Article number	Connection				
	Motor Module and motor	PE			
6SL3202-0AE16-1CA0	Screw terminals 4 mm ² ; 0.6 0.8 Nm	Threaded bolt M4 / 3 Nm			
6SL3202-0AE18-8CA0					
6SL3202-0AE21-8CA0	Screw terminals 10 mm ² ; 1.5 1.8 Nm	Threaded bolt M5 / 5 Nm			
6SL3202-0AE23-8CA0	Screw terminals 16 mm ² ; 2 4 Nm	Threaded bolt M5 / 5 Nm			

Dimensions, drilling patterns and weights for FSD ... FSF inverters

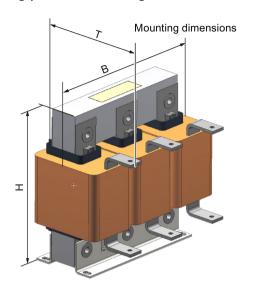

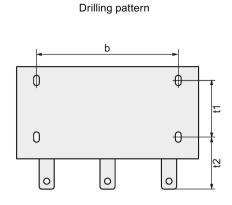


Figure 8-8 Dimensions and drilling patterns

Table 8- 11 Dimensions and weights

Article number	Overall dimensions [mm]		Drilling dimensions [mm]			Fixing/torque [Nm]	Weight [kg]	
	w	Н	D	b	t1	t2		
6SE6400-3TC07-5ED0	270	248	209	200	102	91.5	4 x M8 / 25	26.5
6SE6400-3TC14-5FD0	350	321	288	264	140	134	4 x M8 / 25	57
6SL3000-2BE32-1AA0	300	285	257	224	165	78	4 x M8 / 25	60
6SL3000-2BE32-6AA0	300	315	277	224	185	78	4 x M8 / 25	66
6SL3000-2AH31-0AA0	270	248	200	200	103	82	4 x M8 / 25	25
6SL3000-2AH31-5AA0	270	248	200	200	103	82	4 x M8 / 25	26
6SL3000-2BE33-2AA0	300	285	277	224	183	79	4 x M8 / 25	66
6SL3000-2BE33-8AA0	300	285	277	224	183	79	4 x M8 / 25	73
6SL3000-2BE35-0AA0	300	365	277	224	183	79	4 x M8 / 25	100
6SL3000-2AH32-4AA0	300	285	212	224	118	79	4 x M8 / 25	34
6SL3000-2AH31-8AA0	300	285	212	224	118	79	4 x M8 / 25	34
6SL3000-2AH32-6AA0	300	285	212	224	118	79	4 x M8 / 25	40

The output reactors have a protection rating of IP00.

Table 8- 12 Connections to the Power Module and to the motor

Article number	Connection			
	Motor Module and motor	PE		
6SE6400-3TC07-5ED0	Cable lug M6 / 6 Nm	Screw M6 / 10 Nm		
6SE6400-3TC14-5FD0	Cable lug M8 / 13 Nm	Screw M8 / 25 Nm		
6SL3000-2BE32-1AA0	Cable lug M10 / 25 Nm	Screw M8 / 25 Nm		
6SL3000-2BE32-6AA0				
6SL3000-2AH31-0AA0	Cable lug M10 / 25 Nm	Screw M6 / 10 Nm		
6SL3000-2AH31-5AA0				
6SL3000-2BE33-2AA0	Cable lug M10 / 25 Nm	Screw M8 / 25 Nm		
6SL3000-2BE33-8AA0	Cable lug M10 / 50 Nm	Screw M8 / 25 Nm		
6SL3000-2BE35-0AA0	Cable lug M12 / 50 Nm	Screw M8 / 25 Nm		
6SL3000-2AH32-4AA0	Cable lug M10 / 25 Nm	Screw M6 / 10 Nm		
6SL3000-2AH31-8AA0	Cable lug M10 / 25 Nm	Screw M6 / 10 Nm		
6SL3000-2AH32-6AA0	Cable lug M10 / 25 Nm	Screw M6 / 10 Nm		

Table 8- 13 Assignment table for 200 V Power Modules

Power Module		Output reactor	
Frame size	Article number	Power [kW]	Article number
FSA	6SL3210-1PB13-0 . L0	0.55	6SL3202-0AE16-1CA0
FSA	6SL3211PB13-8 . L0	0.75	
FSB	6SL3210-1PB15-5 . L0	1.1	
FSB	6SL3210-1PB17-4 . L0	1.5	6SL3202-0AE18-8CA0
FSB	6SL3211PB21-0 . L0	2.2	6SL3202-0AE21-8CA0
FSC	6SL3210-1PB21-4 . L0	3	
FSC	6SL3211PB21-8 . L0	4	
FSC	6SL3211PC22-2 . L0	5.5	6SL3202-0AE23-8CA0
FSC	6SL3210-1PC22-8 . L0	7.5	
FSD	6SL3210-1PC24-2UL0	11	6SE6400-3TC07-5ED0
FSD	6SL3210-1PC25-4UL0	15	
FSD	6SL3211PC26-8UL0	18.5	
FSE FSE FSF FSF	6SL3210-1PC28-0UL0 6SL3211PC31-1UL0 6SL3210-1PC31-3UL0 6SL3210-1PC31-6UL0 6SL3211PC31-8UL0	22 30 37 45 55	6SE6400-3TC14-5FD0

Output reactors are not required for inverters of frame sizes FSD \dots FSF

Table 8- 14 Assignment table for 400 V Power Modules

Power Module		Output reactor	
Frame size	Article number Power [kW]		Article number
FSA FSA FSA	6SL3210-1PE11-8 . L1 6SL3210-1PE12-3 . L1 6SL3210-1PE13-2 . L1 6SL3210-1PE14-3 . L1	0.55 0.75 1.1 1.5	6SL3202-0AE16-1CA0
FSA	6SL3210-1PE16-1 . L1	2.2	
FSA	6SL3211PE18-0 . L1	3	6SL3202-0AE18-8CA0
FSB FSB	6SL3210-1PE21-1 . L0 6SL3210-1PE21-4 . L0 6SL3211PE21-8 . L0	4 5.5 7.5	6SL3202-0AE21-8CA0
FSC FSC	6SL3210-1PE22-7 . L0 6SL3211PE23-3 . L0	11 15	6SL3202-0AE23-8CA0
FSD FSD FSD	6SL3210-1PE23-8 . L0 6SL3210-1PE24-5 . L0 6SL3210-1PE26-0 . L0 6SL3211PE27-5 . L0	18.5 22 30 37	6SE6400-3TC07-5ED0
FSE FSE FSF FSF	6SL3210-1PE28-8 . L0 6SL3211PE31-1 . L0 6SL3210-1PE31-5 . L0 6SL3210-1PE31-8 . L0	45 55 75 90	6SE6400-3TC14-5FD0
FSF	6SL3210-1PE32-1 . L0	110	6SL3000-2BE32-1AA0
FSF	6SL3211PE32-5 . L0	132	6SL3000-2BE32-6AA0
FSG	6SL3210-1PE33-0 . L0	160	6SL3000-2BE33-2AA0
FSG	6SL3210-1PE33-7 . L0	200	6SL3000-2BE33-8AA0
FSG	6SL3210-1PE34-8 . L0	250	6SL3000-2BE35-0AA0

Output reactors are not required for inverters of frame sizes FSD ... FSG

Table 8- 15 Assignment table for 690 V Power Modules

Power Module		Output reactor	
Frame size	Article number	Power [kW]	Article number
FSF FSF	6SL3210-1PH28-0 . L0 6SL3210-1PH31-0 . L0	75 90	6SL3000-2AH31-0AA0
FSF FSF	6SL3210-1PH31-2 . L0 6SL3210-1PH31-4 . L0	110 132	6SL3000-2AH31-5AA0
FSG	6SL3210-1PH31-7CL0	160	6SL3000-2AH31-8AA0
FSG	6SL3210-1PH32-1CL0	200	6SL3000-2AH32-4AA0
FSG	6SL3210-1PH32-5CL0	250	6SL3000-2AH32-6AA0

Output reactors are not required for 690 V inverters

8.9 du/dt filter plus VPL

A combination of du/dt filter and a voltage peak limiter (VPL) – du/dt filter plus VPL – are available to suppress voltage peaks.

When using the du/dt filter plus VPL, the output frequency must not exceed 150 Hz. It is not permissible that the pulse frequency exceeds 4 kHz

Further details for the functional principle and the application cases are available at: Voltage limiter and du/dt filter

(https://support.industry.siemens.com/cs/ww/de/view/109742112)

The assignment of the du/dt filter / VPL combination to the Power Modules is contained in the following tables.

Assignment tables

Table 8- 16 Assignment table for 400 V Power Modules

Power Module		VPL-du/dt	
Frame size	Article number	Power [kW]	Article number
FSD	6SL3210-1PE23-8 . L0	18.5	JTA:TEF1203-0HB
FSD	6SL3210-1PE24-5 . L0	22	JTA:TEF1203-0JB
FSD	6SL3210-1PE26-0 . L0	30	
FSD	6SL3211PE27-5 . L0	37	JTA:TEF1203-0KB
FSE	6SL3210-1PE28-8 . L0	45	
FSE	6SL3211PE31-1 . L0	55	JTA:TEF1203-0LB
FSF	6SL3210-1PE31-5 . L0	75	
FSF	6SL3210-1PE31-8 . L0	90	JTA:TEF1203-0MB
FSF	6SL3210-1PE32-1 . L0	110	
FSF	6SL3211PE32-5 . L0	132	

Table 8- 17 Assignment table for 690 V Power Modules

Power Module		VPL-du/dt	
Frame size	Article number	Power [kW]	Article number
FSD	6SL3210-1PH21-4 . L0	11	JTA:TEF1203-0GB
FSD	6SL3210-1PH22-0 . L0	15	
FSD	6SL3210-1PH22-3 . L0	18.5	
FSD	6SL3210-1PH22-7 . L0	22	JTA:TEF1203-0HB
FSD	6SL3210-1PH23-5 . L0	30	
FSD	6SL3210-1PH24-2 . L0	37	
FSE	6SL3210-1PH25-2 . L0	45	JTA:TEF1203-0JB
FSE	6SL3210-1PH26-2 . L0	55	
FSF	6SL3210-1PH28-0 . L0	75	JTA:TEF1203-0KB
FSF	6SL3210-1PH31-0 . L0	90	
FSF	6SL3210-1PH31-2 . L0	110	JTA:TEF1203-0LB
FSF	6SL3210-1PH31-4 . L0	132	
FSG	6SL3210-1PH31-7CL0	160	JTA:TEF1203-0MB
FSG	6SL3210-1PH32-1CL0	200	
FSG	6SL3210-1PH32-5CL0	250	

Appendix

A.1 Manuals and technical support

A.1.1 Manuals for your inverter

Ch



 Power Module Installation Manual (https://support.industry.siemens.com/cs/ww/en/ps/13224/man)
 Installing Power Modules, reactors and filters. Technical specifications, maintenance (this manual)



 CU230P-2 Compact Operating Instructions (https://support.industry.siemens.com/cs/ww/en/view/109477360)
 Commissioning the inverter

Manuals with additional information that can be downloaded:



 CU240B/E-2 Compact Operating Instructions (https://support.industry.siemens.com/cs/ww/en/view/109477361)
 Commissioning the inverter



 CU250S-2 Compact Operating Instructions (https://support.industry.siemens.com/cs/ww/en/view/99730303)
 Commissioning the inverter.



CU230P-2 operating instructions
 (https://support.industry.siemens.com/cs/ww/en/view/109478827)

 Installing, commissioning and maintaining the inverter. Advanced commissioning



CU240B/E-2 operating instructions
 (https://support.industry.siemens.com/cs/ww/en/view/109478828)

 Installing, commissioning and maintaining the inverter. Advanced commissioning



A.1 Manuals and technical support

 CU250S-2 operating instructions (https://support.industry.siemens.com/cs/ww/en/view/109478829)
 Installing, commissioning and maintaining the inverter. Advanced commissioning



 "Safety Integrated" function manual (https://support.industry.siemens.com/cs/ww/ene/view/109751320)
 Configuring PROFIsafe, Installing, commissioning and operating fail-safe forms.

Configuring PROFIsafe. Installing, commissioning and operating fail-safe functions of the frequency converter.



CU230P-2 List Manual (https://support.industry.siemens.com/cs/ww/en/view/109477248)
 Parameter list, alarms and faults. Graphic function diagrams



 CU240B/E-2 List Manual (https://support.industry.siemens.com/cs/ww/en/view/109477251)
 Parameter list, alarms and faults. Graphic function diagrams



CU250S-2 List Manual (https://support.industry.siemens.com/cs/ww/en/view/109477253)
 Parameter list, alarms and faults. Graphic function diagrams



EMC installation guideline
 (http://support.automation.siemens.com/WW/view/en/60612658)

 EMC-compliant control cabinet design, equipotential bonding and cable routing



Accessories manual (https://support.industry.siemens.com/cs/ww/en/ps/13225/man)
Installation descriptions for inverter components, e.g. line reactors and line filters. The printed installation descriptions are supplied together with the components.



Finding the most recent edition of a manual

If there a multiple editions of a manual, select the latest edition:



Configuring a manual

Further information about the configurability of manuals is available in the Internet:



MyDocumentationManager

(https://www.industry.siemens.com/topics/global/en/planningefficiency/documentation/Pages/default.aspx).

Select "Display and configure" and add the manual to your "mySupport-documentation":



Not all manuals can be configured.

The configured manual can be exported in RTF, PDF or XML format.

A.1.2 Configuring support

Catalog

Ordering data and technical information for SINAMICS G inverters.











Catalogs for download or online catalog (Industry Mall):



All about SINAMICS G120 (www.siemens.com/sinamics-g120)

SIZER

The configuration tool for SINAMICS, MICROMASTER and DYNAVERT T drives, motor starters, as well as SINUMERIK, SIMOTION controllers and SIMATIC technology













SIZER on DVD:

Article number: 6SL3070-0AA00-0AG0



Download SIZER

(http://support.automation.siemens.com/WW/view/en/10804987/130000)

A.1 Manuals and technical support

EMC (electromagnetic compatibility) technical overview

Standards and guidelines, EMC-compliant control cabinet design









EMC overview (https://support.industry.siemens.com/cs/ww/en/view/103704610)

EMC Guidelines configuration manual

EMC-compliant control cabinet design, potential equalization and cable routing















EMC installation guideline

(http://support.automation.siemens.com/WW/view/en/60612658)

Safety Integrated for novices technical overview

Application examples for SINAMICS G drives with Safety Integrated











Safety Integrated for novices (https://support.industry.siemens.com/cs/ww/en/view/80561520)

A.1.3 **Product Support**

You can find additional information about the product on the Internet:



Product support (https://support.industry.siemens.com/cs/ww/en/)

This URL provides the following:

- Up-to-date product information (product announcements)
- FAQs
- Downloads
- The Newsletter contains the latest information on the products you use.
- The Knowledge Manager (Intelligent Search) helps you find the documents you need.
- Users and specialists from around the world share their experience and knowledge in the Forum.
- You can find your local representative for Automation & Drives via our contact database under "Contact & Partner".
- Information about local service, repair, spare parts and much more can be found under "Services".

A.2 Disposal

Dispose of the inverter in compliance with the local regulations and statutory provisions.

A.3 Directives and standards

Relevant directives and standards

The following directives and standards are relevant for the inverters:



European Low Voltage Directive

The inverters fulfil the requirements stipulated in Low Voltage Directive 2014/35/EU insofar as they are covered by the scope of application of this Directive.

European Machinery Directive

The inverters fulfil the requirements stipulated in Machinery Directive 2006/42//EU insofar as they are covered by the scope of application of this Directive.


Use of the inverters in a typical machine application has been fully assessed for compliance with the main regulations in this Directive concerning health and safety.

European EMC Directive

By completely complying with IEC/EN 61800-3, it has been proven that the inverter is in compliance with Directive 2004/108/EC or 2014/30/EU.



Underwriters Laboratories (North American market)

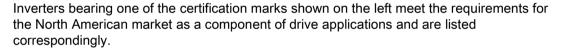







EMC requirements for South Korea

The inverters with the KC marking on the rating plate satisfy the EMC requirements for South Korea.



Eurasian conformity

The inverters comply with the requirements of the Russia/Belarus/Kazakhstan customs union (EAC).



Australia and New Zealand (RCM formerly C-Tick)

The inverters bearing the certification mark shown here meet the EMC requirements for Australia and New Zealand.

Specification for semiconductor process equipment voltage drop immunity

The inverters comply with the requirements of standard SEMI F47-0706.

Quality systems

Siemens AG employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

Certificates for download



EC Declaration of Conformity:

(https://support.industry.siemens.com/cs/ww/en/view/58275445)

 Certificates for the relevant directives, prototype test certificates, manufacturers declarations and test certificates for functions relating to functional safety ("Safety Integrated"):

(http://support.automation.siemens.com/WW/view/en/22339653/134200)

UL certificates:

(http://database.ul.com/cgi-bin/XYV/template/LISEXT/1FRAME/index.html)

FSA, FSB, FSC: 200 V
 FSA, FSB, FSC: 400 V
 FSD, FSE, FSF: 200 V / 400 V / 690 V
 FSG: 400 V / 690 V
 UL File E121068, Vol. 2 Sec. 27
 UL File E192450, Vol. 13 Sec. 4
 FSG: 400 V / 690 V
 ???

Standards that are not relevant



China Compulsory Certification

The inverters do not fall in the area of validity of the China Compulsory Certification (CCC).

A.4 Abbreviations

Abbreviation	Explanation
AC	Alternating current
CE	Communauté Européenne
CU	Control Unit
DC	Direct current
DI	Digital input
DIP switch	DIP switches are small switches, found mostly on PBCs, for making basic device settings
DO	Digital output
ECD	Equivalent circuit diagram
EEC	European Economic Community
ELCB	Earth leakage circuit breaker
EMC	Electromagnetic compatibility (EMC)
EMI	Electromagnetic interference
FS	Frame size
НО	High overload
I/O	Input/Output
IGBT	Insulated gate bipolar transistor
LED	Light emitting diode
LO	Low overload
NC	NC contact
NEMA	National Electrical Manufacturers Association
NO	NO contact
OPI	Operating instructions
PELV	Protective extra low voltage
PM	Power Module
PPE	Personnel protective equipment
PT	Push-through technology
RCCB	Residual-current operated circuit breaker
RCD	Residual current device
RFI	Radio frequency interference
SELV	Safety extra-low voltage
VPL	Voltage Peak Limiter; component for limiting voltage peaks

Index

	Dimension drawings, 135, 140, 150, 151, 152			
8	Drilling pattern, 135, 140, 151, 152			
87 Hz characteristic, 70, 70				
	E			
Α	Electrical installation, 47			
Air barrier, 30	EMC, 24			
В	F			
Base load, 83	Field weakening, 70			
Base load input current, 83	Function Manual, 157			
Base load output current, 83				
Base load power, 83	G			
Brake Relay, 147	Getting Started, 157			
Braking resistor				
Clearances, 139	Н			
Dimension drawings, 140	Hardware Installation Manual, 157			
Installation, 139	Harmonic currents, 123			
	Harmonics, 123, 134			
С	High Overload, 83			
Catalog, 159	Hotline, 160			
Category C2, 60				
Category C3, 60	I			
Clearances, 139	Industry Mall, 159			
Commutation dips, 134	Installation altitude, 118			
Configuring support, 159	Installing, 31			
Cooling, 30	IT system, 50			
D	L			
Degree of protection, 21	Line reactor			
Delta connection, 70	Dimension drawings, 135			
Derating	Line supply type, 50			
Installation altitude, 118	List Manual, 157			

Low Overload, 83 М Maintenance Cleaning, 72 Dirt, 72 Pollution, 72 Terminals, 72 Ventilation, 72 Ν Neutral conductor, 50 Number of starting operations, 79 0 Operating instructions, 157 Output reactor Dimension drawings, 150, 151, 152 Overvoltage protection, 134 Ρ Power distribution systems, 50 Protective conductor, 50 Q Questions, 160 S Safe Brake Relay, 147 Safety notes Electrical installation, 47 Service life of the fan, 74 **SIZER, 159** Standards EN 61800-3, 162

Star connection (Y), 70 Support, 160

Т

Tightening torque, 135 TN system, 50

TT system, 50

Further information

SINAMICS inverters:

www.siemens.com/sinamics

Industry Online Support (Service and Support):

www.siemens.com/online-support

Industry Mall:

www.siemens.com/industrymall

Siemens AG Digital Factory Motion Control Postfach 3180 91050 ERLANGEN Germany



