



# TS8000





Cable  
Diagrams  
HA471054U002

# TS8000 HMI Cable Diagrams

RS-232 To 590+, 631, 637F, 650v, 690+, 890, Link ( CM471054 )

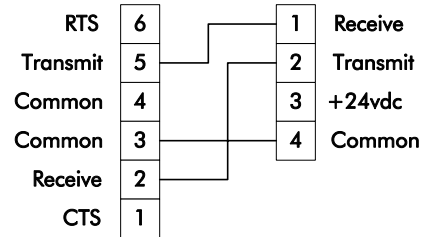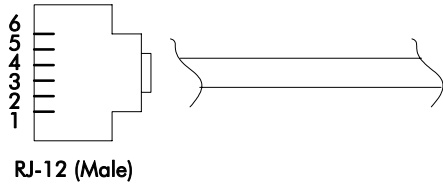


RS-232 To Serial PC, PLC

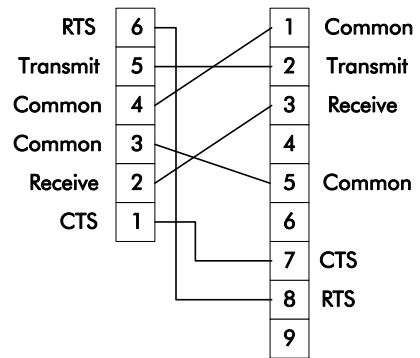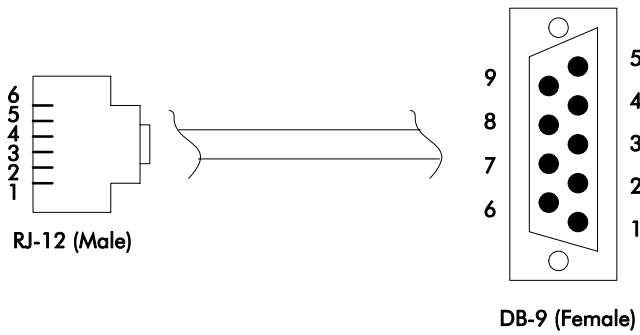


# TS8000 HMI Cable Diagrams


## RS-485 (2-Wire) To 6053/6055 Techbox

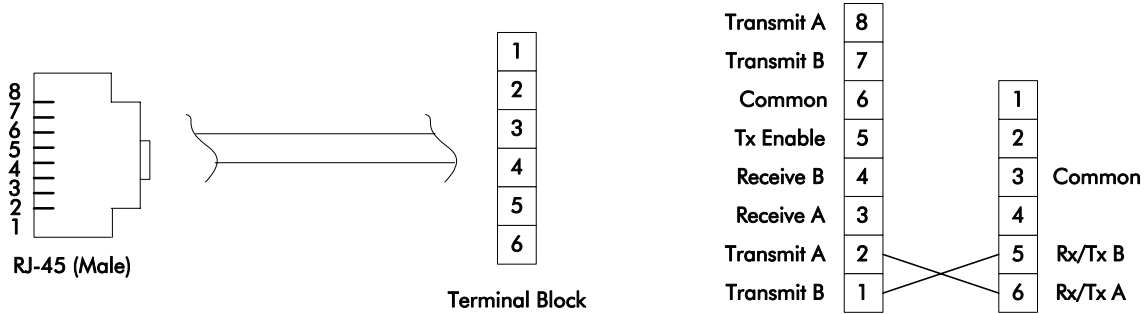

## RS-485 (4-Wire) To 6053/6055 Techbox

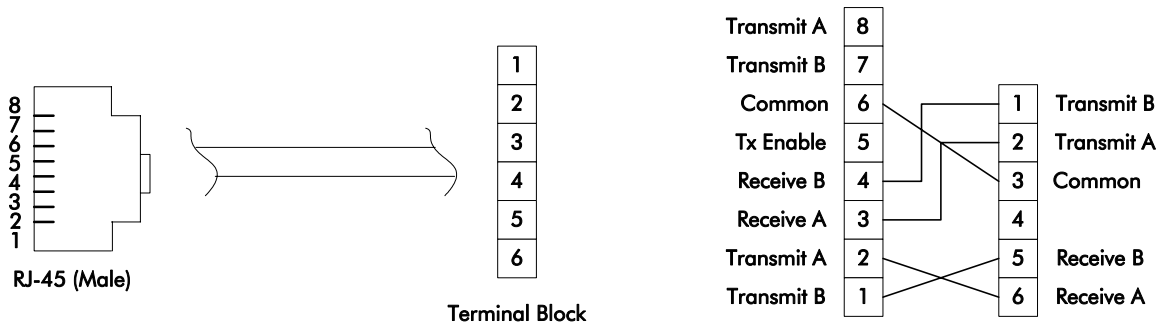


## RS-485 (4-Wire) To 6053/6055 Techbox (Multidrop)

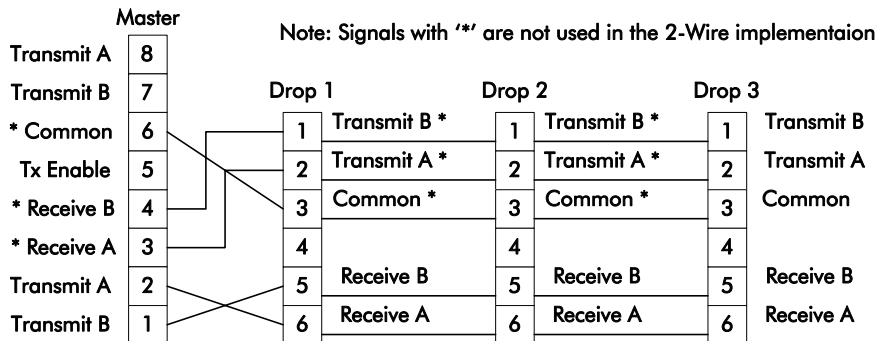


# TS8000 HMI Cable Diagrams

## RS-232 To 635, 637 Servo

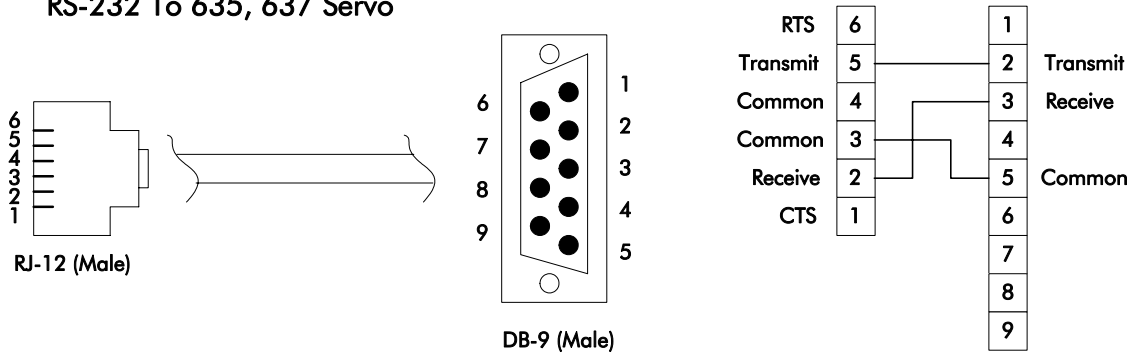

## RS-485 (4-Wire) To 635, 637 Servo

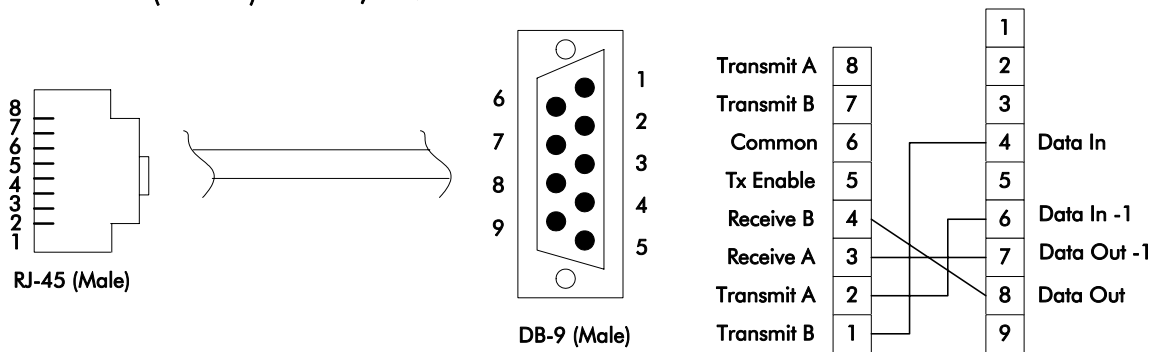

## RS-485 (4-Wire) To 635, 637 Servo (Multidrop)

