


SoftPLC

CFW100

User Manual

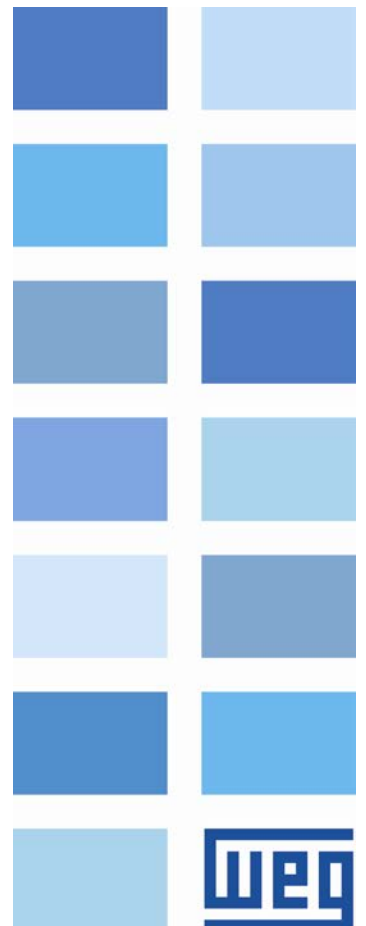



SoftPLC User Manual

Series: CFW100

Language: English

Document Number: 10002965849 / 02

Publication Date: 10/2014

CONTENTS

ABOUT THE MANUAL	5
ABBREVIATIONS AND DEFINITIONS	5
1 INTRODUCTION TO SOFTPLC.....	6
1.1 SYMBOL OF THE DATA TYPES	6
2 SOFTPLC MEMORY	7
2.1 MEMORY.....	7
2.2 DATA MEMORY	7
2.2.1 Constants.....	7
2.2.2 Physical Inputs and Outputs (Hardware).....	7
2.2.3 Volatile Markers (Variables).....	8
2.2.4 System Markers	8
2.2.5 Parameters	10
2.3 MODBUS	11
2.3.1 Modbus protocol SoftPLC addresses	11
2.3.2 Protocol.....	11
3 RESUME OF THE FUNCTION BLOCKS.....	12
3.1 CONTACTS	12
3.1.1 Normally Open Contact – NO CONTACT.....	12
3.1.2 Normally Closed Contact – NC CONTACT	12
3.1.3 “AND” Logic with Contacts	12
3.1.4 “OR” Logic with Contacts.....	12
3.2 COILS	13
3.2.1 Normal Coil - COIL.....	13
3.2.2 Negated Coil – NEG COIL.....	13
3.2.3 Set Coil – SET COIL	13
3.2.4 Reset Coil – RESET COIL	13
3.2.5 Positive Transition Coil – PTS COIL.....	13
3.2.6 Negative Transition Coil – NTS COIL	13
3.3 MOVEMENT BLOCKS	13
3.3.1 Speed and/or Torque Reference – REF.....	13
3.4 PLC BLOCKS	14
3.4.1 Timer – TON.....	14
3.4.2 Incremental Counter – CTU	14
3.4.3 Proportional-Integral-Derivative Controller – PID	14
3.4.4 Low-pass or High-pass Filter – FILTER.....	15
3.5 CALCULATION BLOCKS	15
3.5.1 Comparator – COMP	15
3.5.2 Math Operation – MATH.....	15
3.5.3 Math Function – FUNC	16
3.5.4 Saturator – SAT	16
3.6 TRANSFER BLOCKS.....	17
3.6.1 Data Transfer – TRANSFER	17
3.6.2 Conversion from Integer (16 bits) to Floating Point – INT2FL	17
3.6.3 User Fault or Alarm Generator - USERERR	17
3.6.4 Convert from Floating Point to Integer (16 bits) – FL2INT	17
3.6.5 Indirect Data Transfer – IDATA.....	18
3.6.6 Multiplexer – MUX.....	18
3.6.7 Demultiplexer – DMUX	19
4 INVERTER PARAMETER SETTINGS.....	20
4.1 SYMBOLS FOR PROPERTY DESCRIPTION	20
4.2 CFW100 CONFIGURATION PARAMETERS	20
4.3 EXCLUSIVE SOFTPLC PARAMETERS	21

P900 – SoftPLC Status.....	21
P901 – SoftPLC Command.....	21
P902 – Scan Cycle Time	21
P910 to P959 – SoftPLC User Parameters.....	21
5 SUMMARY OF THE WLP MAIN FUNCTIONS.....	22
5.1 PROJECT – NEW	22
5.2 PROJECT – OPEN	22
5.3 PROJECT – PROPERTIES	23
5.4 VIEW – COMPILATION INFORMATION	23
5.5 VIEW – USER PARAMETER CONFIGURATION	23
5.6 CONSTRUCT – COMPILE.....	24
5.7 COMMUNICATION – CONFIGURATION.....	24
5.8 COMMUNICATION – DOWNLOAD	25
5.9 COMMUNICATION – UPLOAD	26
6 ALARMS, FAULTS AND POSSIBLE CAUSES	27

ABOUT THE MANUAL

This manual provides the required information for the operation of the CFW100 frequency inverter using the user's programming module, called SoftPLC. This manual must be used together with the user's manual of the CFW100 and WLP software.

ABBREVIATIONS AND DEFINITIONS

PLC	Programmable Logic Controller
CRC	Cycling Redundancy Check
RAM	Random Access Memory
WLP	Programming Software in Ladder Language
USB	Universal Serial Bus

1 INTRODUCTION TO SOFTPLC

The SoftPLC is a resource that adds the functionalities of a PLC to the CFW100, making the product flexible and allowing the user to develop its own applications (user's programs).

The main SoftPLC characteristics are:

- Programming in "Ladder Language" using the WLP software.
- Access to all Parameters and I/Os of the CFW100.
- 50 configurable parameters for the user to set.
- PLC, Mathematical and Control Blocks
- On-line transfer and monitoring of the software application via Serial/USB interface.
- Transfer of the application software installed on the CFW100 to the PC with password restriction.
- Storage of the software application on the FLASH memory module.
- Execution directly on the RAM.

1.1 SYMBOL OF THE DATA TYPES

%KW	word-type constants (16 bits)
%KF	float-type constants (32 bits, floating point)
%MX	bit markers
%MW	word markers (16 bits)
%MF	float markers (32 bits, floating point)
%SX	system bit markers
%SW	system word markers (16 bits)
%IX	digital Inputs
%IW	analog inputs (16 bits)
%QX	digital outputs
%QW	analog outputs (16 bits)
%UW	user parameters (16 bits)
%UW	system parameters (16 bits)
%PD	drive parameter (16 bits)

2 SOFTPLC MEMORY

The total size of the SoftPLC memory is 4712 bytes for programming memory and data memory.

2.1 MEMORY

- SoftPLC function: 4712 bytes
- SoftPLC User Parameter: 408 bytes

2.2 DATA MEMORY

The SoftPLC data memory area (user variables) is shared with the programming memory. Therefore, the total size of an application may vary as a function of the number of variables used by the user.

The bit, word and float markers are allocated according to the **LAST** address used on the application, that is, the longer the last address, the larger the allocated area. Therefore, it is recommended to use the markers in a **SEQUENTIAL** manner.

The word and float constants also use programming memory space.

2.2.1 Constants

Table 2.1: Memory Map of the Constants

Sym.	Description	Bytes
%KW	Word Constants (16 bits)	It depends on the number of different word constants. E.g.: If it was used: - %KW: 327 = 2 bytes - %KW: 5; 67 = 4 bytes - %KW: 13; 1000; 13; 4 = 6 bytes
%KF	Float Constants (32 bits – IEEE)	It depends on the number of different float constants. E.g.: If it was used: - %KF: -0.335 = 4 bytes - %KF: 5.1; 114.2 = 8 bytes - %KF: 0.0; 115.3; 0; 13.333 = 12 bytes

2.2.2 Physical Inputs and Outputs (Hardware)

Table 2.2: I/O Memory Map

Sym.	Description	Range	Bytes
%IX	Digital Inputs	1 ... 8	2
%QX	Digital Outputs	1 ... 3	2
%IW	Analog/Frequency Inputs	1 ... 2	4
%QW	Analog Output	1	2



NOTE!

The %IW3 marker corresponds to the frequency input. In order to activate this input, it is necessary to set P246 to 1.



NOTE!

The values of the Analog/Frequency Inputs (%IW) and Analog Output (%QW) read and written via SoftPLC respect their gains (P232, P247: %IW1, %IW3 e P252: %QW1) and offsets (P234, P249: %IW1, %IW3).


NOTE!

The values read and written via SoftPLC obey the following rules, respecting the parameters related to the analog input and output signal types (P233: %IW1 and P253: %QW1):

- Option: 0 to 10 V / 20 mA
 - 0 V or 0 mA = 0
 - 10 V or 20 mA = 32767
- Option: 4 to 20 mA,
 - 4 mA = 0
 - 20 mA = 32767
- Option: 10 V / 20 mA to 0
 - 10 V or 20 mA = 0
 - 0 V or 0 mA = 32767
- Option: 20 to 4 mA,
 - 20 mA = 0
 - 4 mA = 32767

2.2.3 Volatile Markers (Variables)

They consist of variables that can be applied by the user to execute the logics of the application. They can be bit markers (1 bit), word markers (16 bit) or float markers (32 bit – IEEE).

Table 2.3: Volatile Marker Memory Map

Sym.	Description	Range	Bytes
%MX	Bit Markers	5000 ... 6099	It depends on the last used marker. They are organized in byte pairs. E.g.: - last marker: %MX5000 = 2 bytes - last marker: %MX5014 = 2 bytes - last marker: %MX5016 = 4 bytes - last marker: %MX5039 = 6 bytes
%MW	Word Markers	8000 ... 8199	It depends on the last used marker. E.g.: - last marker: %MX8000 = 2 bytes - last marker: %MX8001 = 4 bytes - last marker: %MX8007 = 16 bytes
%MF	Float Markers	9000 ... 9199	It depends on the last used marker. E.g.: - last marker: %MX9000 = 4 bytes - last marker: %MX9001 = 8 bytes - last marker: %MX9007 = 32 bytes


NOTE!

In order to minimize the application size, use the markers in a sequential manner.

E.g.:

- Bit markers: %MX5000, %MX5001, %MX5002, ...
- Word markers: %MW8000, %MW8001, %MW8002, ...
- Float markers: %MF9000, %MF9001, %MF9002, ...

2.2.4 System Markers

They consist of special variables that allow the user to read and change inverter data that may or may not be available in the parameters. They may be: system bit markers (1 bit) or system word markers (16 bits).

Table 2.4.a: Memory Map for the Odd System Bits – Writing/Command

Sym.	Description	Range	Bytes
Type	System Bits	3000 ... 3040	4 bytes
<i>Writing/Command (odd)</i>			
%SX	3001	General Enable	0: It disables the inverter completely, interrupting the motor supply. 1: It enables the inverter, allowing the motor operation.
	3003	Run/Stop	0: Stops the motor by deceleration ramp. 1: The motor runs according to the acceleration ramp until reaching the speed reference value.
	3005	Speed Direction	0: The motor runs in the reverse direction. 1: The motor runs in the forward direction.
	3007	JOG	0: It disables the JOG function. 1: It enables the JOG function.
	3009	LOC/REM	0: The inverter goes to the local situation. 1: The inverter goes to the remote situation.
	3011	Fault Reset	0: No function. 1: If in fault condition, it resets the inverter. NOTE: When this command is executed, the inverter and the SoftPLC Application are reinitialized. This is also true for reset via keypad.
	3021	Activate the Second Ramp	0: The values for the motor acceleration and deceleration are those from the first Ramp (P100 and P101). 1: The values for the motor acceleration and deceleration are those from the first Ramp (P102 and P103). Note: Set P105 to 6 in order to enable the selection via SoftPLC.

Table 2.4.b: Memory Map for the Even System Bit – Reading/State

Sym.	Description	Range	Bytes
Type	System Bits	3000 ... 3020	4 bytes
<i>Reading/State (Even)</i>			
%SX	3000	General Enabling	0: General enabling is not active. 1: General enabling is active and the inverter is ready to run the motor.
	3002	Motor Running (RUN)	0: The motor is stopped. 1: The inverter is driving the motor at the set point speed, or executing either the acceleration or the deceleration ramp.
	3004	Speed Direction	0: The motor is running reverse. 1: The motor is running forward.
	3006	JOG	0: JOG function inactive. 1: JOG function active.
	3008	LOC/REM	0: Inverter in local mode. 1: Inverter in remote mode.
	3010	In Fault	0: Inverter is not in fault state. 1: Some fault registered by the inverter. Note: The number of the fault can be read through parameter P049 – Current Fault.
	3012	Undervoltage	0: No undervoltage. 1: With undervoltage.
	3016	Alarm Condition	0: Inverter is not in an alarm condition. 1: Inverter is in an alarm condition. Note: The number of the alarm can be read by means of parameter P048 – Current Alarm.
	3018	In Configuration Mode	0: Inverter operating normally. 1: Inverter in configuration state. It indicates a special condition when the inverter cannot be enabled: - There is a parameter setting incompatibility. Note: Parameter P047 shows the cause of the parameter setting incompatibility.
	3020	Ramp Active	0: It indicates that the first Ramp is active. 1: It indicates that the second Ramp is active.
	3032	Start key	0: Not pressed. 1: Pressed during 1 scan cycle.
	3034	Stop key	Note: Only use to visualize the key status with Run/Stop Selection via HMI keys (P224 = 0 or P227 = 0).
	3046	Up key	0: Not pressed.
3048	Down key	1: Pressed during 1 scan cycle.	

Table 2.5: Memory Map for the Even System Word Markers

Sym.	Description	Range	Bytes
	System Words	3300 ... 3324	48 bytes
	<i>Reading Markers/Status (Even)</i>		
%SW	3300	Motor speed [13 bits]	
	3302	Motor synchronous speed [rpm]	
	3304	Motor speed [rpm]	
	3306	Speed reference [rpm]	
	3308	Alarm	
	3310	Fault	
	3320	Inverter rated current [A x10]	
	3322	Unfiltered motor current (P003) [A x10]	
	3324	Unfiltered motor torque [% x10]	


NOTE!

The system word marker %SW3300 uses a 13-bit resolution (8192 → to 8191), which represents the motor synchronous speed. Thus, if the speed reference via “Reference” block (%SW3301) is 4096 for a VI pole motor (this means a synchronous speed of 1200 rpm), the motor will run at 600 rpm.


NOTE!

Equation for the calculation of the motor speed in rpm:

$$\text{Speed in rpm} = \frac{\text{synchronous speed in rpm} \times \text{speed in 13 bits}}{8192}$$


NOTE!

Equation for the calculation of the motor speed in Hz:

$$\text{Speed in Hz} = \frac{\text{synchronous frequency in Hz (P403)} \times \text{speed in 13 bits}}{8192}$$

2.2.5 Parameters

The parameters from P910 to P959 appear on the keypad of the CFW100 only when there is a valid application (user program) in the memory, i.e., when P900 > 0.

Table 2.6: Parameter Memory Map

Sym.	Description	Range	Bytes
%PD	System Parameters (refer to the CFW100 manual)	0... 999	
%PW	SoftPLC Parameters	900 ... 959	6 bytes
	P900: SoftPLC Status [Read-only parameter]	0: No application 1: Install. Applic. 2: Applic. Incomp. 3: Applic. Stopped 4: Applic. Running	
	P901: SoftPLC Command	0: Stop Program 1: Run Program 2: Delete Program	
	P902: Scan Cycle Time [ms] [Read-only parameter]		
%UW	User Parameters	910 ... 959	100 bytes

2.3 MODBUS

2.3.1 Modbus protocol SoftPLC addresses

Table 2.7: SoftPLC x Modbus Address Range

Sym.	Description	SoftPLC	MODBUS
%IX	Digital Inputs	1 ... 8	2201...2208
%QX	Digital Outputs	1 ... 3	2401...2403
%IW	Analog/Frequency Inputs	1 ... 2	2601...2602
%QW	Analog Output	1	2801



NOTE!

The %IW3 marker corresponds to the frequency input. In order to activate this input, it is necessary to set P246 to 1.



NOTE!

All the other data types have the user addresses (SoftPLC) equal to the Modbus addresses. E.g.: %PD0100 = Modbus address 100; %MX5000 = Modbus address 5000; %SW3308 = Modbus address 3308.

2.3.2 Protocol

Refer to the Modbus RTU (CFW100) User Manual, Modbus Protocol chapter.

3 RESUME OF THE FUNCTION BLOCKS

This chapter contains a summary of the function blocks that are available for the user programming.

 
3.1 CONTACTS

They send to the stack the content of a programmed data (0 or 1), which can be of the following type:

- %MX: Bit Marker
- %IX: Digital Input
- %QX: Digital Output
- %UW: User Parameter
- %SX: System Bit Marker – Reading

3.1.1 Normally Open Contact – NO CONTACT

%MX5000




Menu: *Insert-Contacts-NO CONTACT.*

E.g.: It sends the content of bit marker 5000 to the stack.

3.1.2 Normally Closed Contact – NC CONTACT

 %QX1



Menu: *Insert-Contacts-NC CONTACT.*

E.g.: It sends the negated content of digital output 1 to the stack.

3.1.3 “AND” Logic with Contacts

When the contacts are in series, an “AND” logic is executed among them, storing the result in the stack. Examples:

Example	Truth Table		
<p>%IX1 %IX2</p> <p>%IX1.%IX2</p>	%IX1	%IX2	Stack
	0	0	0
	0	1	0
	1	0	0
<p>%UW910 %QX1</p> <p>%UW910. (~%QX1)</p>	%UW910	%QX1	Stack
	0	0	0
	0	1	0
	1	0	1
	1	1	0

3.1.4 “OR” Logic with Contacts

When the contacts are in parallel, an “OR” logic is executed among them, storing the result in the stack. Examples:

Example	Operation	Truth Table		
<p>%IX1</p> <p>%IX2</p>	%IX1 + %IX2	%IX1	%IX2	Stack
		0	0	0
		0	1	1
		1	0	1
<p>%UW910</p> <p>%QX1</p>	%UW910 + (~%QX1)	%UW910	%QX1	Stack
		0	0	1
		0	1	0
		1	0	1
		1	1	1

 
3.2 COILS

They save the content of the stack in the programmed data (0 or 1), which can be of the following type:


- %MX: Bit Marker
- %QX: Digital Output
- %UW: User Parameter
- %SX: System Bit Marker – Writing

It is allowed to add coils in parallel in the last column.


3.2.1 Normal Coil - COIL

%MX5001
 **Menu:** *Insert-Coils-COIL*
 E.g.: It sets the bit marker 5001 with the stack content


3.2.2 Negated Coil – NEG COIL

%QX2
 **Menu:** *Insert-Coils-NEG COIL*
 E.g.: It sets the digital output 2 with the negated content of the stack

 
3.2.3 Set Coil – SET COIL

%UW911
 **Menu:** *Insert-Coils-SET COIL*
 E.g.: It sets the user parameter 911, provided that the content of the stack is not 0


3.2.4 Reset Coil – RESET COIL

%UW911
 **Menu:** *Insert-Coils-RESET COIL*
 E.g.: It resets the user parameter 911, provided that the content of the stack is not 0

3.2.5 Positive Transition Coil – PTS COIL


%MX5002
 **Menu:** *Insert-Coils-PTS COIL*
 E.g.: It sets the bit marker 5002 during 1 scan cycle, provided that a transition from 0 to 1 in the stack is detected.

3.2.6 Negative Transition Coil – NTS COIL

%SX3011
 **Menu:** *Insert-Coils-NTS COIL*
 E.g.: It sets the system bit marker 3011 during 1 scan cycle, provided that a transition from 1 to 0 in the stack is detected.

3.3 MOVEMENT BLOCKS

3.3.1 Speed and/or Torque Reference – REF

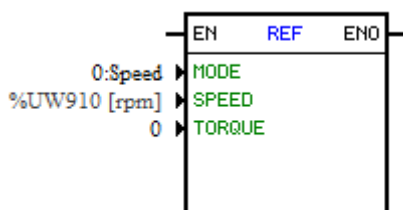

Menu: *Insert-Function Blocks-Movement-REF*

Input:

EN: Enables the block

Output:

ENO: Goes to 1 when EN ≠ 0 and without error

Properties:

MODE: 0=Speed Mode


SPEED: Speed reference [RPM, 13 Bits, Hz (x10)]

TORQUE: Not available

In the example above, if the EN is active, and the digital input 1 is off, then the block will generate a speed reference according to the user parameter 910 in the rpm unit. If there is no error (example: disabled inverter), the ENO output goes to 1.

3.4 PLC BLOCKS

3.4.1 Timer – TON

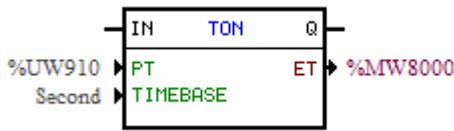

Menu: *Insert-Function Blocks-PLC-TON*

Input:

IN: Enables the block

Output:

Q: Goes to 1 when $IN \neq 0$ and $ET \geq PT$


Properties:

PT: Preset time

ET: Elapsed Time

In the example above, if the IN input is active and the content of the word marker 8000 is greater than or equal to the content of the user parameter 910, the output Q goes to set 1.

3.4.2 Incremental Counter – CTU

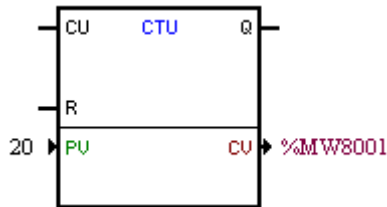

Menu: *Insert-Function Blocks-PLC-CTU*

Inputs:

CU: Captures the transitions from 0 to 1 at this input (*Counter Up*)

R: Resets CV

Output:

Q: Goes to 1 when $CV \geq PV$


Properties:

PV: Preset value

CV: Counter Value

In the example above, if the content of the word marker 8001 is greater than or equal to 20, the output Q goes to 1.

3.4.3 Proportional-Integral-Derivative Controller – PID

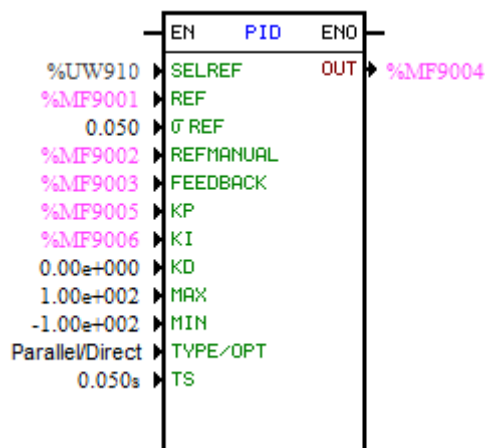

Menu: *Insert-Function Blocks-PLC-PID*

Inputs:

EN: Enables the block

Output:

ENO: EN input image

Properties:

TS: Sampling period

SELREF: Automatic/manual reference

REF: Automatic reference

δREF: Time constant of the automatic reference filter

REFMANUAL: Manual reference

FEEDBACK: Process feedback

KP: Proportional gain

KI: Integral gain

KD: Derivative gain

MAX: Maximum output value

MIN: Minimum output value

TYPE: Academic/parallel


OPT: Direct/reverse

OUT: Controller output

In the example above, if the input EN is active, the controller starts its operation. The content of the user parameter 910 selects the reference that is active, that is, whether it is the float marker 9001 (automatic reference) or 9002 (manual reference). There is a 0.05s filter for the automatic reference. Since the derivative

gain is fixed in 0, this indicates that de PID was converted into a PI. The value of the control output OUT, represented by the float marker 9004, has the maximum and minimum limits of 100 and -100 and the sampling time of 0.050s.

3.4.4 Low-pass or High-pass Filter – FILTER

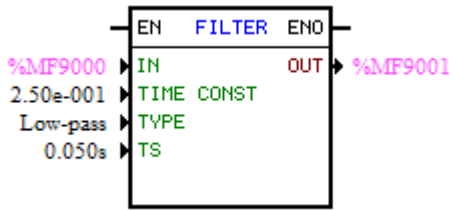

Menu: *Insert-Function Blocks-PLC-FILTER*

Inputs:

EN: Enables the block

Output:

ENO: EN input image

Properties:

TS: Sampling period

IN: Input data

TIMECONST: Filter time constant


TYPE: Low-pass/High-pass

OUT: Input data filtered value

In the example above, if the EN input is active, the content of the float marker 9000 will be filtered with a time constant of 0.25s by a low-pass filter and it will be transferred to the float marker 9001.

3.5 CALCULATION BLOCKS

3.5.1 Comparator – COMP

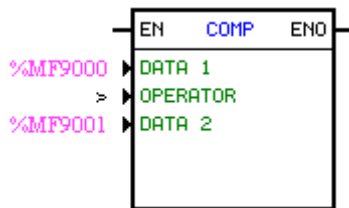

Menu: *Insert-Function Blocks-Calculation-COMP*

Input:

EN: Enables the block

Output:

ENO: Goes to 1 when the comparison condition is fulfilled

Properties:

FORMAT: Integer or floating point

DATA 1: Comparison data 1

OPERATOR: Comparison operator

DATA 2: Comparison data 2


In the example above, if the EN input is active and the content of the float marker 9000 is greater than the float marker 9001, then the output ENO goes to 1.



NOTE!

If FORMAT is integer, all the numerical data are considered words of 15 bits + signal (-32768 to 32767).

3.5.2 Math Operation – MATH

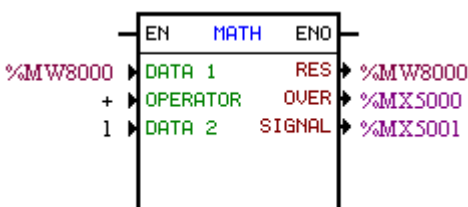

Menu: *Insert-Function Blocks-Calculation-MATH*

Input:

EN: Enables the block

Output:

ENO: Indicates if the calculation has been executed

Properties:

FORMAT: Integer or floating point

DATA1: Calculation Data 1. It may also appear as DATA1H and DATA1L (representing the high and low parts of data 1)

OPERATOR: Mathematic operator (+, -, *, etc.)

DATA2: Calculation Data 2. It may also appear as DATA2H and DATA2L (representing the high and low parts of data 2)

RES:	Calculation result. It may also appear as RESH and RESL (representing the high and low parts of the result) and also as QUOC and REM (representing the quotient and remainder of a division)
OVER:	Indicates if the result exceeded its limit.
SIGNAL:	Result signal


In the example above, when the input EN is active, the value of the word marker 8000 is incremented at each scan cycle. When the bit marker 5000 goes to 1, it indicates overflow and the word marker 8000 remains in 32767.



NOTE!

If FORMAT is integer, all the numerical data are considered words of 15 bits + signal (-32768 to 32767).

3.5.3 Math Function – FUNC

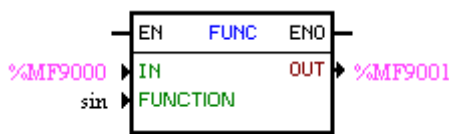

Menu: *Insert-Function Blocks-Calculation-FUNC*

Input:

EN: Enables the block

Output:

ENO: Indicates if the calculation was executed

Properties:

FORMAT: Integer or floating point

IN: Data to be calculated

FUNCTION: Mathematic function (sin, cos, etc.)

OUT: Calculation result


In the example above, when the EN input is active, the float marker 9001 presents the result of the float marker 9000 sine calculation.



NOTE!

If FORMAT is integer, all the numerical data are considered words of 15 bits + signal (-32768 to 32767).

3.5.4 Saturator – SAT

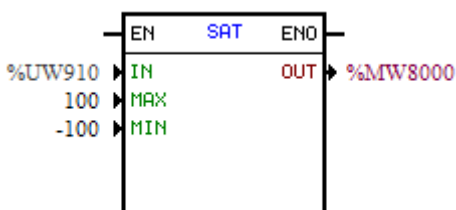

Menu: *Insert-Function Blocks-Calculation-SAT*

Input:

EN: Enables the block

Output:

ENO: Indicates if saturation has occurred, provided that EN ≠ 0

Properties:

FORMAT: Integer or floating point

IN: Input data

MAX: Maximum allowed value

MIN: Minimum allowed value

OUT: Output data

In the example above, when the EN input is active, the word marker 8000 contains the user parameter 910 value, but limited between the maximum of 100 and the minimum of -100.



NOTE!

If FORMAT is integer, all the numerical data are considered words of 15 bits + signal (-32768 to 32767).




NOTE!

If the value of MIN is greater than the MAX, the outputs OUT and ENO are reset to zero.

3.6 TRANSFER BLOCKS

3.6.1 Data Transfer – TRANSFER

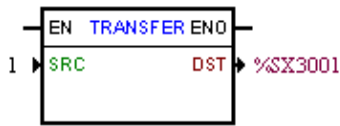

Menu: *Insert-Function Blocks-Transfer-TRANSFER*

Input:

EN: Enables the block

Output:

ENO: Indicates that the transfer has been done


Properties:

SRC: Source data

DST: Destine data

In the example above, if the EN input is active, the word constant 1 is transferred to the system bit marker 3001 (general enable).

3.6.2 Conversion from Integer (16 bits) to Floating Point – INT2FL

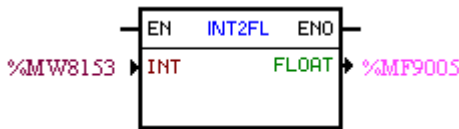

Menu: *Insert-Function Blocks-Transfer-INT2FL*

Input:

EN: Enables the block

Output:

ENO: Indicates that the transfer has been done

Properties:

INT: Integer data

FLOAT: Data converted into floating point


In the example above, if the EN input is active, the content of word marker 8153 (taking into account its signal) is converted to floating point to the float marker 9005.



NOTE!

INT is treated as word of 15 bits + signal (-32768 to 32767).

3.6.3 User Fault or Alarm Generator - USERERR

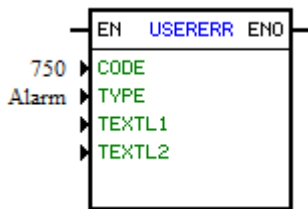

Menu: *Insert-Function Blocks-Transfer-USERERR*

Input:

EN: Enables the block

Output:

ENO: It indicates 1 when EN = 1 and the alarm or error has been effectively generated.

Properties:

CODE: Fault or alarm code.

TYPE: 0: Generates alarm, 1: Generates fault

TEXTL1: HMI line 1 text (Not available)

TEXTL2: HMI line 2 text (Not available)


In the example above, if the EN input is active, A750 will appear.



NOTE!

If this block is configured as Fault, it is necessary to reset the drive so as to enable it again.

3.6.4 Convert from Floating Point to Integer (16 bits) – FL2INT

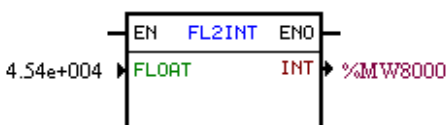

Menu: *Insert-Function Blocks-Transfer-FL2INT*

Input:

EN: Enables the block

Output:

ENO: Indicates that the transfer has been done

Properties:

FLOAT: Floating point data

INT: Data converted into integer


In the example above, if the EN input is active, the float constant 4.54×10^4 is converted into an integer with signal via word marker 8000. However, after the conversion, the word marker 8000 will remain with the value 32767, because this is the positive limit for a Word.



NOTE!

INT is treated as word of 15 bits + signal (-32768 to 32767).

3.6.5 Indirect Data Transfer – IDATA

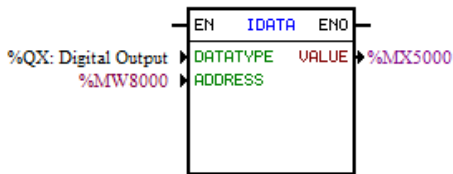

Menu: *Insert-Function Blocks-Transfer-IDATA*

Input:

EN: Enables the block

Output:

ENO: Indicates that the transfer has been done

Properties:

CMD: Read/Write command


DATATYPE: Data type

ADDRESS: User address

VALUE: Read content/Value to be written

In the example above, if the EN input is active, the content of the bit marker 5000 is written to the digital output whose address is the content of the word marker 8000.

3.6.6 Multiplexer – MUX

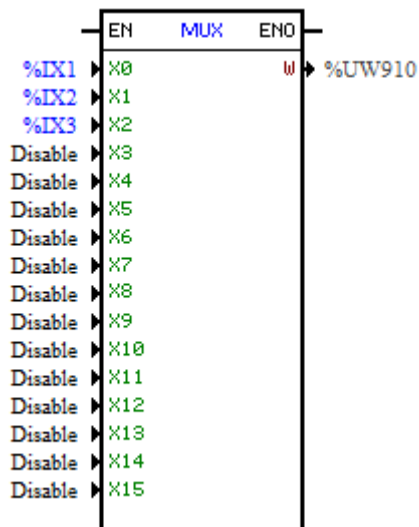

Menu: *Insert-Function Blocks -Transfer-MUX*

Input:

EN: Enables the mathematic operation

Output:

ENO: Indicates that the transfer has been done


Properties:

X0-X15: Binary data vector

W: Resulting word

In the example above, when the EN input is active, the digital inputs 1, 2 and 3 transfer their content to the bits 0, 1 and 2 of the user parameter P910.

3.6.7 Demultiplexer – DMUX

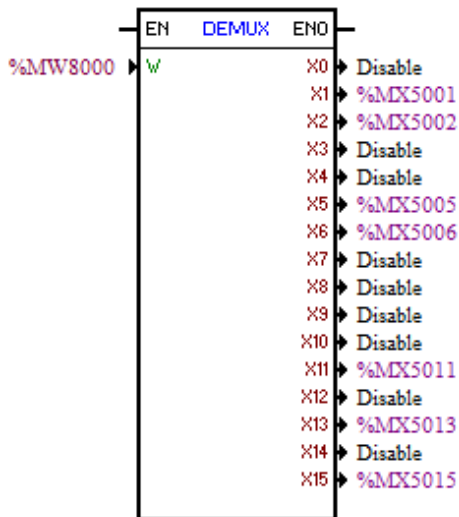

Menu: *Insert-Function Blocks-Transfer-DMUX*

Input:

EN: Enables the mathematic operation

Output:

ENO: Indicates that the transfer has been done

Properties:

W: Source word

X0-X15: Resulting binary data vector

In the above example, when the EN input is active, the bits 1, 2, 5, 6, 11, 13 and 15 of the word marker 8000 are transferred respectively to the bit markers 5001, 5002, 5005, 5006, 5011, 5013 and 5015.

4 INVERTER PARAMETER SETTINGS

Below, only the parameters of the CFW100 frequency inverter that are related to the SoftPLC will be presented.

4.1 SYMBOLS FOR PROPERTY DESCRIPTION

ro	Read only parameter
cfg	Parameter that can be changed only with a stopped motor

4.2 CFW100 CONFIGURATION PARAMETERS

P100 – Acceleration Time

P101 – Deceleration Time

P220 – Selection of the LOCAL/REMOTE Source

P221 – Selection of the Speed Reference – LOCAL Status

P222 – Selection of the Speed Reference – REMOTE Status

P223 – Selection of the Direction of Rotation – LOCAL Status

P224 – Selection of Run/Stop (Local Status)

P225 – Selection of JOG – LOCAL Status

P226 – Selection of the Direction of Rotation – REMOTE Status

P227 – Selection of Run/Stop (Remote Status)

P228 – Selection of JOG – REMOTE Status

P246 – Frequency Input FI

P251 – Analog Output AO1 Function

P263 – Digital Input DI1 Function

P264 – Digital Input DI2 Function

P265 – Digital Input DI3 Function

P266 – Digital Input DI4 Function

P267 – Digital Input DI5 Function

P268 – Digital Input DI6 Function

P269 – Digital Input DI7 Function

P270 – Digital Input DI8 Function

P271 – Digital Input Signal

P275 – DO1 Output Function (RL1)

P276 – DO2 Output Function (RL2)

P277 – DO3 Output Function (RL3)



NOTE!

The resources of available inputs and outputs depend on the used accessory. For further information, please, refer to the CFW100 Programming Manual.

4.3 EXCLUSIVE SOFTPLC PARAMETERS

P900 – SoftPLC Status

Adjustable	0 = No Application	Factory Setting: 0
Range:	1 = Install. Applic.	
	2 = Applic. Incomp.	
	3 = Applic. Stopped	
	4 = Applic. Running	

Properties: ro

Description:

It allows the user to view the SoftPLC status. If there are no applications installed, the parameters P910 to P959 will not be shown on the keypad.

If this parameter presents the option 2 (“Incomp. Applic.”), it indicates that the version that has been loaded in the flash memory module is not compatible with the current CFW100 firmware.

In this case, the user needs to recompile its project in the WLP, considering the new CFW100 version and download it. If that is not possible, the upload of this application can be done with the WLP, provided that the application password is known or is not enabled.

P901 – SoftPLC Command

Adjustable	0 = Stop Applic.	Factory Setting: 0
Range:	1 = Run Applic	
	2 = Delete Applic.	

Properties: cfg

Description:

It allows stopping, running or excluding an installed application, but the motor must be disabled in order to do so.

P902 – Scan Cycle Time

Adjustable	0.00 to 9.999 s	Factory Setting: Not applicable
Range:		
Properties:	ro	

Description:

It consists of the application scanning time. The larger the application, the longer the scanning time.

P910 to P959 – SoftPLC User Parameters

Adjustable	-9999 to 9999	Factory Setting: 0
Range:		
Properties:	-	

Description:


They consist of use parameters defined by the user via WLP software, as described in item 5.5.

5 SUMMARY OF THE WLP MAIN FUNCTIONS

This chapter brings basic information about the operations done with the WLP software for the use of the CFW100 inverter. More information can be obtained in the help of the WLP software


5.1 PROJECT – NEW

It creates a new project. Besides defining the project name, it is also necessary to configure the equipment and the respective firmware version.

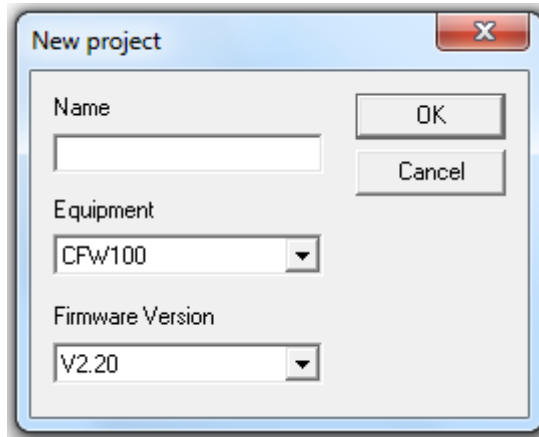


5.2 PROJECT – OPEN

It opens the selected project.

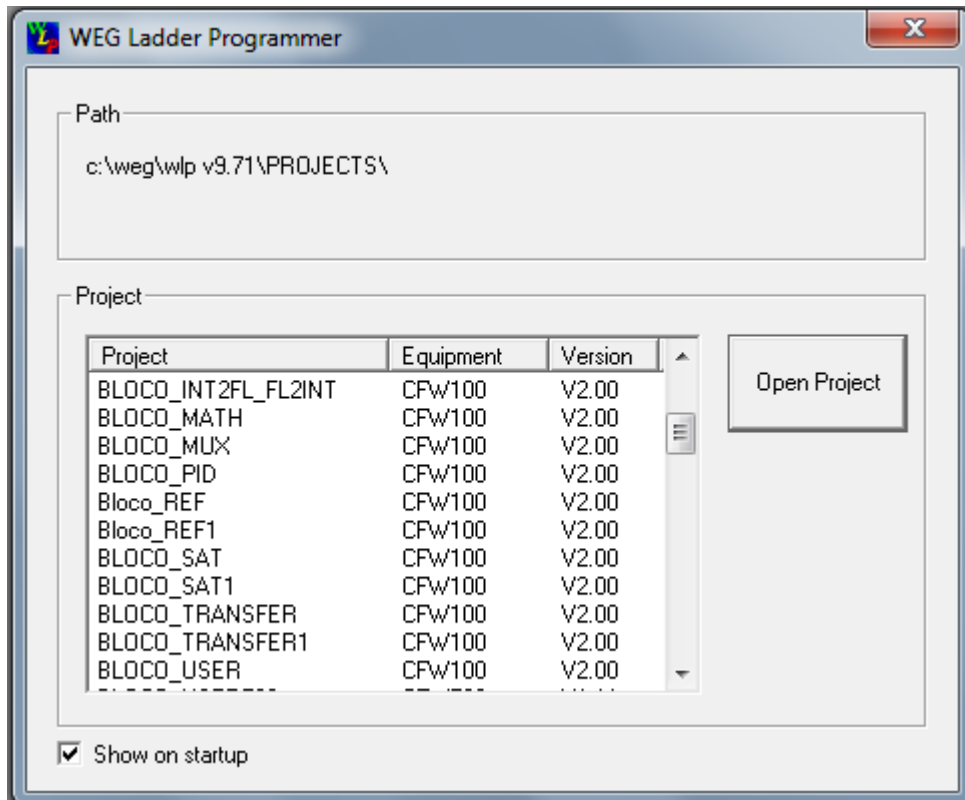


5.3 PROJECT – PROPERTIES

It allows the user to define the equipment and firmware version. In this box, it is also configured whether the project will have upload password or not.

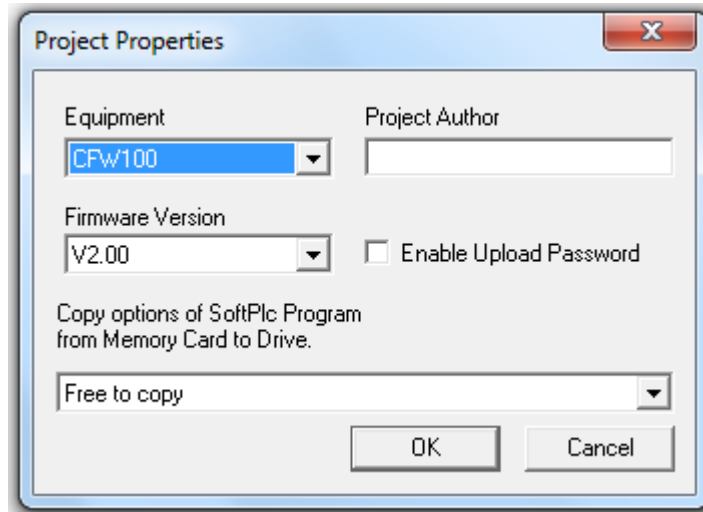

5.4 VIEW – COMPILATION INFORMATION

It allows the user to know the size in bytes of the compiled application (<projectname>.bin) to be sent to the equipment.

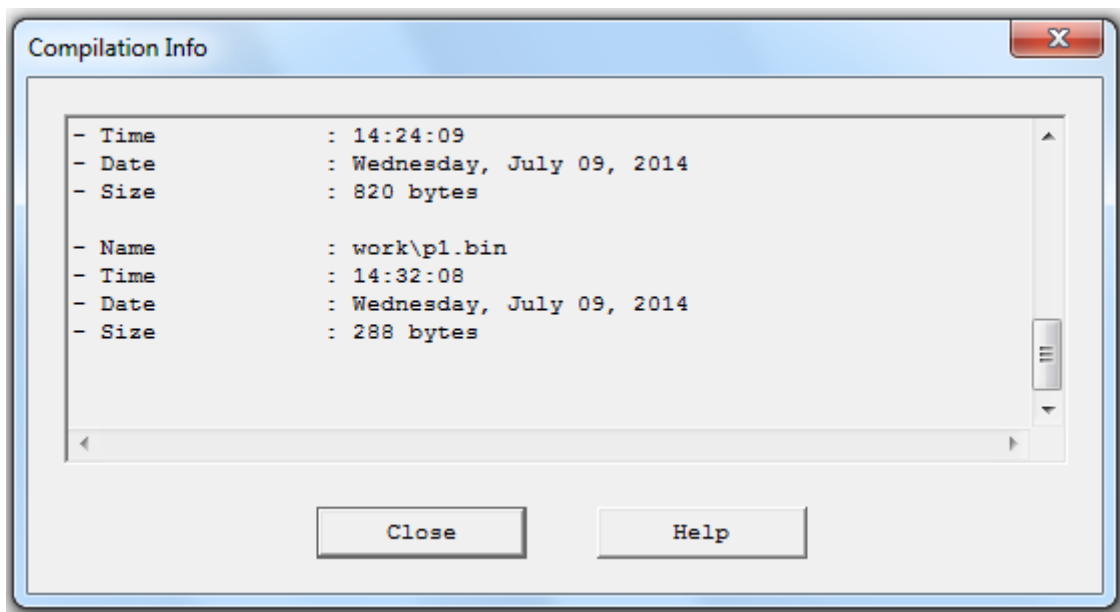

5.5 VIEW – USER PARAMETER CONFIGURATION

It opens an attribute visualization window for all the user parameters. With a double click on the selected parameter, it is permitted the configuration of these attributes, which includes:

- Parameter descriptive text (up to 21 characters);
- Unit selection;
- Minimum and maximum limit;
- Default value;
- Number of decimal positions;
- Hexadecimal or regular format;
- Reading or writing only;
- Modification only with a stopped motor or online;
- Ignore the password (allow modification regardless of the inverter password (P000)) or normal;


- Display or hide the parameter;
- Allow saving the parameter value (retentive), when it is used in some blocks (PLC, Calculations and Transfers) on power down;
- Configuration parameter which allows modification with the motor running.

Those configurations can be transferred to the CFW100 with the “Download” button.

Parameter	Tag	Unit	Minimum	Maximum	Standardt	Dec. Digit	Hexadecimal	Read Only	Stop Motor	Ignore Password	Show in HMI	Retentive	Press Save to Use
P910	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P911	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P912	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P913	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P914	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P915	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P916	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P917	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P918	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P919	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P920	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P921	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P922	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P923	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P924	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0
P925	Param.SoftPLC		-9999	9999	0	0	0	0	0	0	1	0	0

5.6 CONSTRUCT – COMPILE

It analyzes the application and generates the compiled code for the specified equipment.

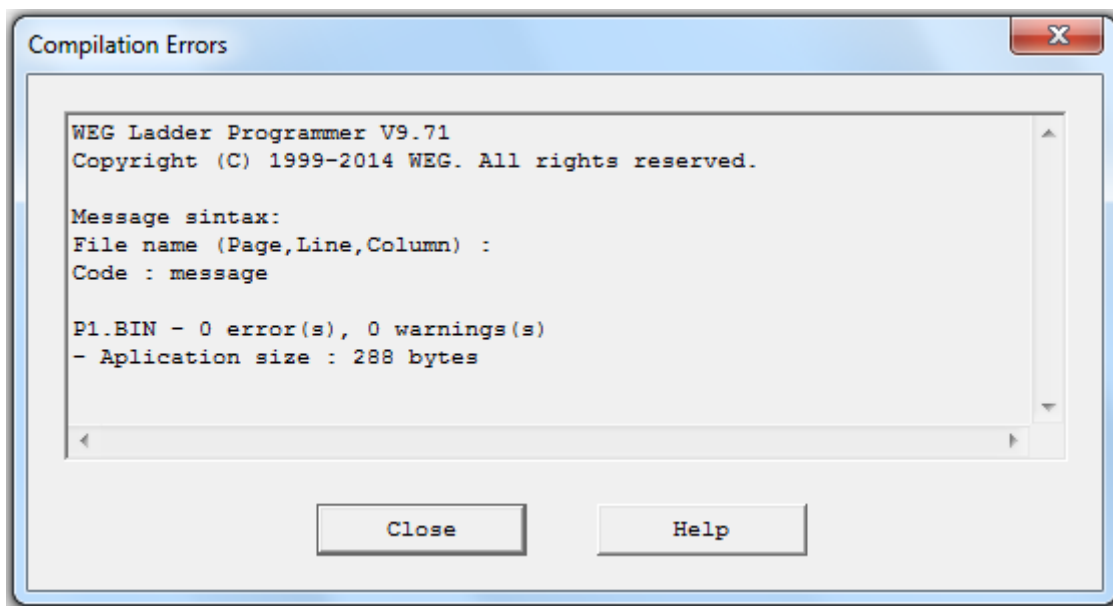


5.7 COMMUNICATION – CONFIGURATION

The Serial port is used for the CFW100.




NOTE!

It is recommended to use the CFW100-CRS485 and CFW100-CUSB accessories to establish the communication of the CFW100 with the WLP.

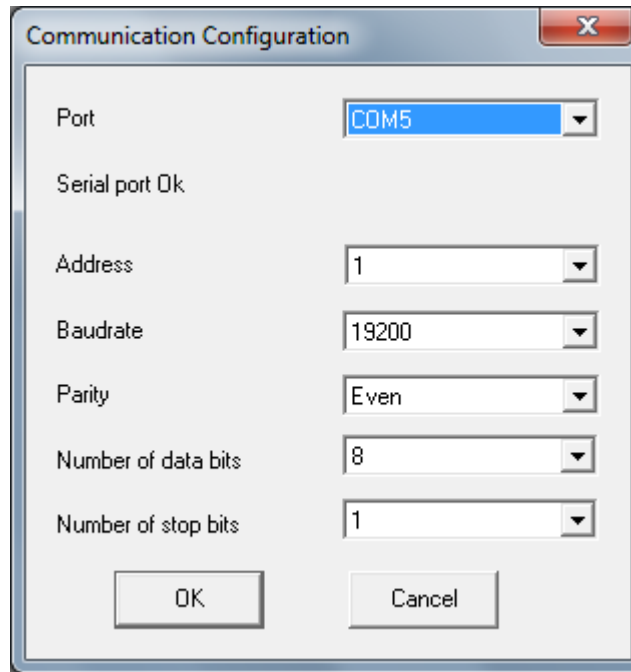


5.8 COMMUNICATION – DOWNLOAD

This command allows downloading the application and/or user parameter configurations to the CFW100.

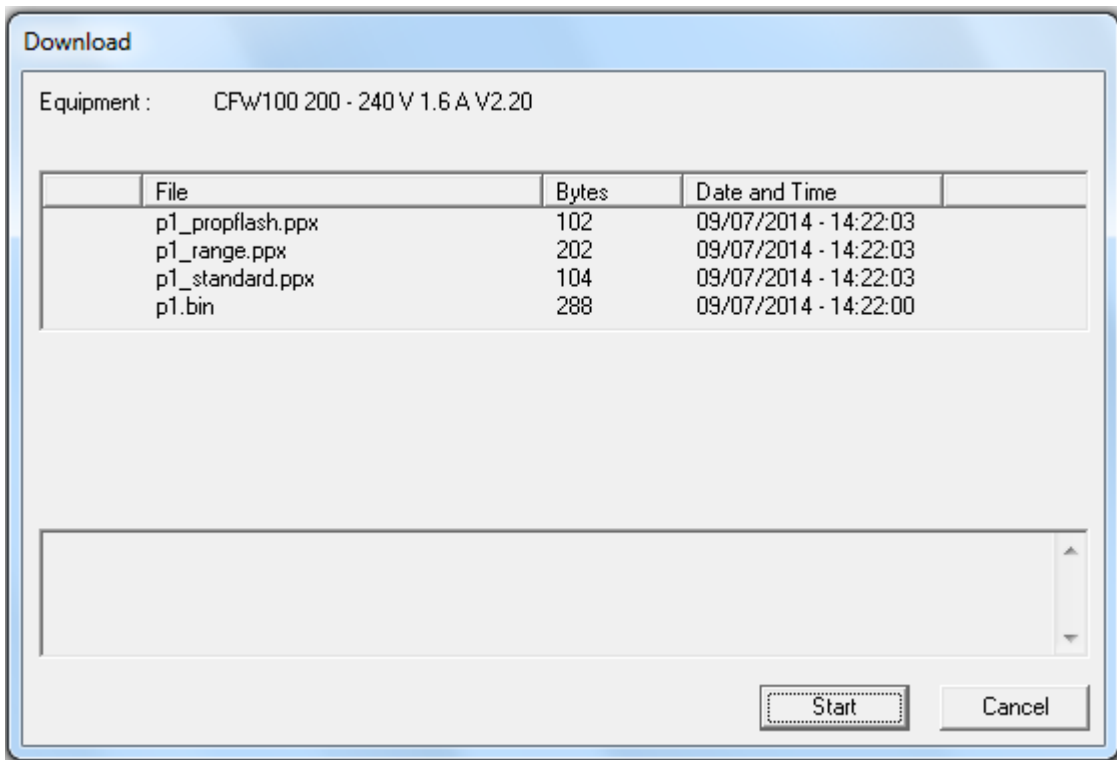

5.9 COMMUNICATION – UPLOAD

This command makes it possible to upload and open the application installed on the CFW100, provided that the password is valid.

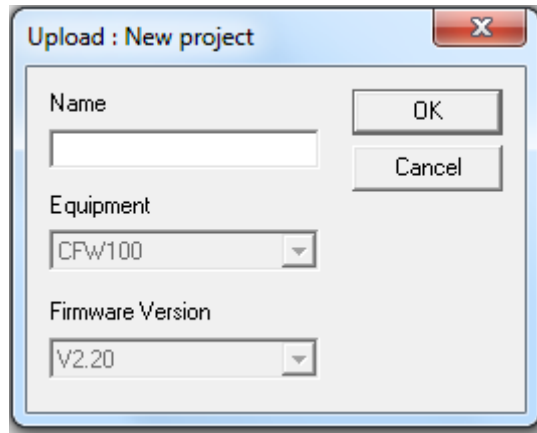

6 ALARMS, FAULTS AND POSSIBLE CAUSES

Table 6.1: "Alarms", "Faults" and possible causes

Fault/Alarm	Description	Possible Causes
A702: Inverter Disabled	It occurs when a SoftPLC movement block (REF Block) is not active.	<ul style="list-style-type: none"> ▪ Check if the drive general enable command is active.
A704: Two Movem. Enabled	It occurs when 2 or more movement blocks (REF Block) are enabled simultaneously.	<ul style="list-style-type: none"> ▪ Check the user program logic.
A706: SPLC Ref. Not Prog.	It occurs when a movement block is enabled and the speed reference is not programmed for the SoftPLC	<ul style="list-style-type: none"> ▪ Check the programming of the references in the local and/or remote modes (P221 and P222).
F711: The upload of the SoftPLC application failed	The upload or the SoftPLC application failed.	<ul style="list-style-type: none"> ▪ Fault in the SoftPLC boot by the CPU. ▪ Loaded application incompatible (P900=2) and Command for Application (P901=0);
A712: SoftPLC protected against copy	It occurs when there is an attempt to copy the SoftPLC application protected against copies.	<ul style="list-style-type: none"> ▪ Attempt to copy WLP application protected against copies ("never permit to copy"). ▪ Attempt to copy the WLP from a protected copy ("never permit to copy from a copy");