



Compatível com disjuntores-motores MPW25 e MPW40 a partir da versão "V1A" e "V0A" respectivamente.

Compatible with motor-protective-circuit-breaker MPW25 and MPW40 from version "V1A" and "V0A" respectively.

Compatible con guardamotors MPW25 y MPW40 a partir de la versión "V1A" e "V0A" respectivamente...

RMMP und RMMP-E kann mit Motorschutzschalter MPW25, und MPW40 ab Version "V1A" und "V0A" eingesetzt werden.

0757.2336.10


## INSTRUÇÕES DE MONTAGEM ASSEMBLY INSTRUCTIONS INSTRUCCIONES DE MONTAJE MONTAGEANLEITUNG

Manopla Rotativa para montagem em painel MPW25 e MPW40 (RMMP / RMMP-E)  
Door Coupling Rotary Handle MPW25 and MPW40 (RMMP / RMMP-E)  
Manija Rotativa para Purta de Tableros MPW25 y MPW40 (RMMP / RMMP-E)  
Türkupplungsgriff MPW25 und MPW40 (RMMP / RMMP-E)




Montagem MPW25 e MPW40 / MPW25 and MPW40 Assembly  
Montaje MPW25 y MPW40 / Einbaulage MPW25 und MPW40

Vertical  
Vertical  
Vertical  
Vertical

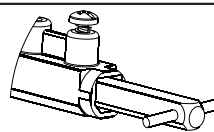

Horizontal  
Horizontal  
Horizontal  
Horizontal

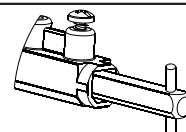

Fixação do Suporte / Fastening of the Support  
Fijación del Soporte / Befestigungsvorrichtung aufkleben



A tentativa de abertura do painel com MPW na posição "I", danificará o disjuntor.

The attempt of opening of the panel with the MPW in the "I" position, will damage the circuit breaker.

La tentativa de la abertura del panel con MPW en la posición "I", dañará el interruptor.

Der Versuch der Öffnung der Schaltschrankes mit dem MPW in der Pos. "I", beschädigt den Leistungsschalter.

Furação da porta do painel  
Drilling the panel door  
Agujero en la puerta de tableros  
Bohren der Schaltschranktür


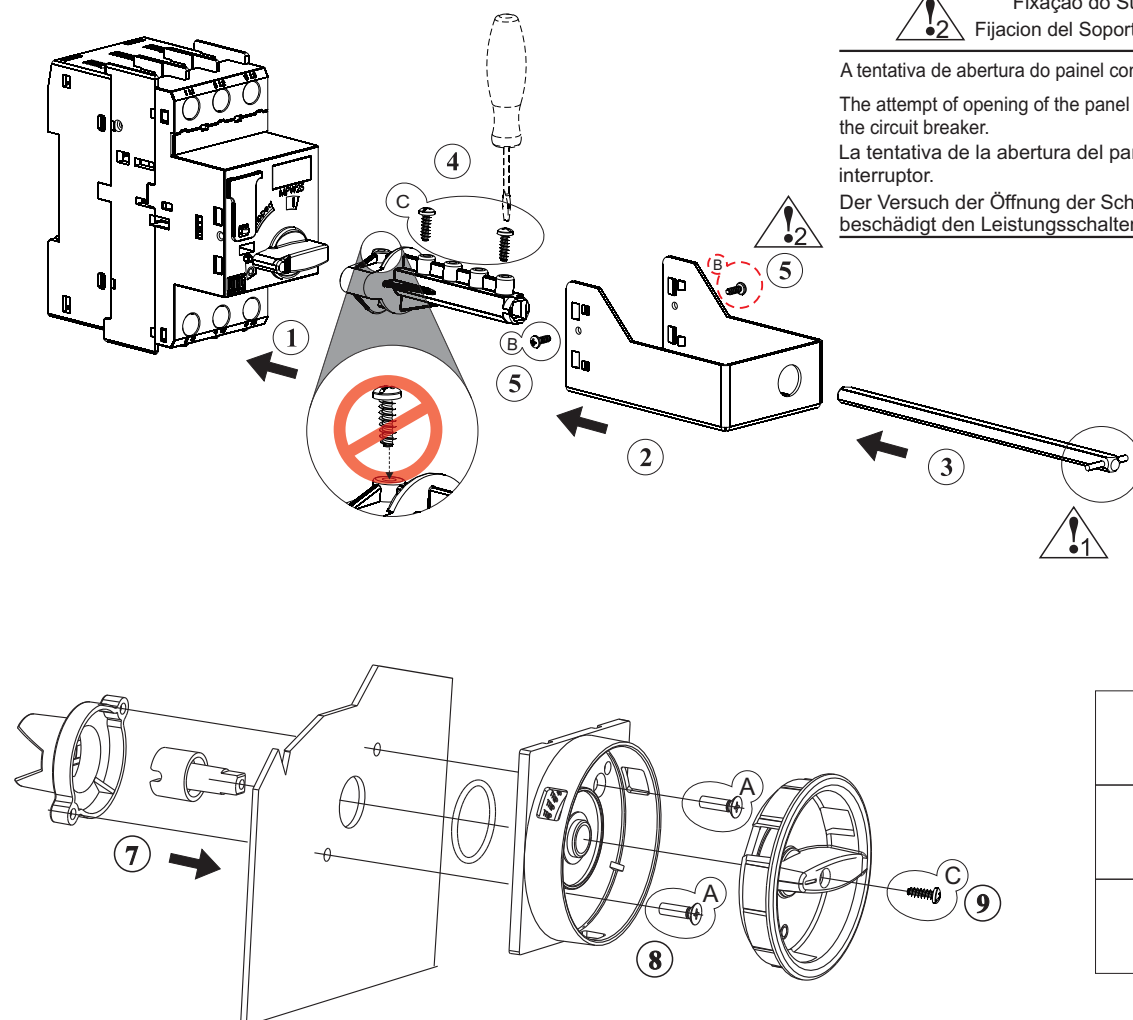
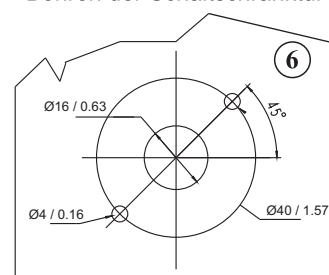


|   |   |  |                            |
|---|---|--|----------------------------|
| 2 | A |  | PHILLIPS #2<br>Ø3.5 X 10mm |
| 2 | B |  | PHILLIPS #1<br>Ø2.2 X 6mm  |
| 3 | C |  | PHILLIPS #1<br>Ø3 X 10mm   |

Dimensões  
Dimensions  
Dimensiones  
Maße

mm/in

Dimensão mínima para corte do eixo (mm)  
Minimun dimension for cut the shaft (mm)  
Dimensiones mínimas para corte del eje (mm)  
Mindestmaß für das Kürzen der Achse (mm)

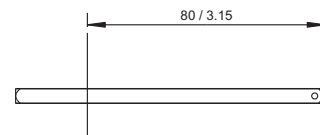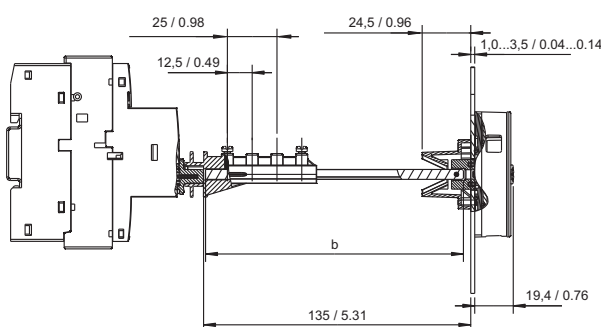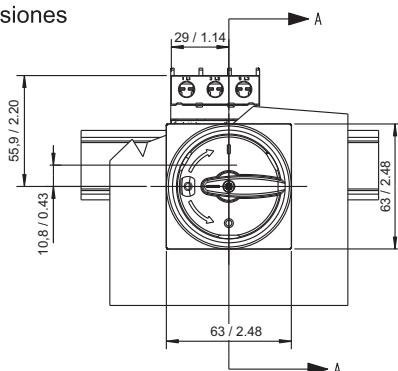

| b<br>(mm / in) | Possibilidade de ajuste<br>Possible adjustment<br>Posibilidad del ajuste<br>Mögliche Einstellung |
|----------------|--------------------------------------------------------------------------------------------------|
| 130 / 5.12     | 130 / 5.12...155 / 6.10                                                                          |
| 330 / 12.99    | 330 / 12.99...355 / 13.98                                                                        |

### - Atenção / Warning / Atención / Warnung

A porta do painel só poderá ser aberta com o MPW na posição "O"

The panel door can be opened only with the MPW in the "O" position

Apertura de la puerta del tablero solamente con MPW en la posición desconectado

Die Schaltschranktür kann nur bei Pos. "O" MPW geöffnet werden

WEG Automação  
www.weg.net