

8 Frequency Converter Wiring

8.1 Wiring Diagram

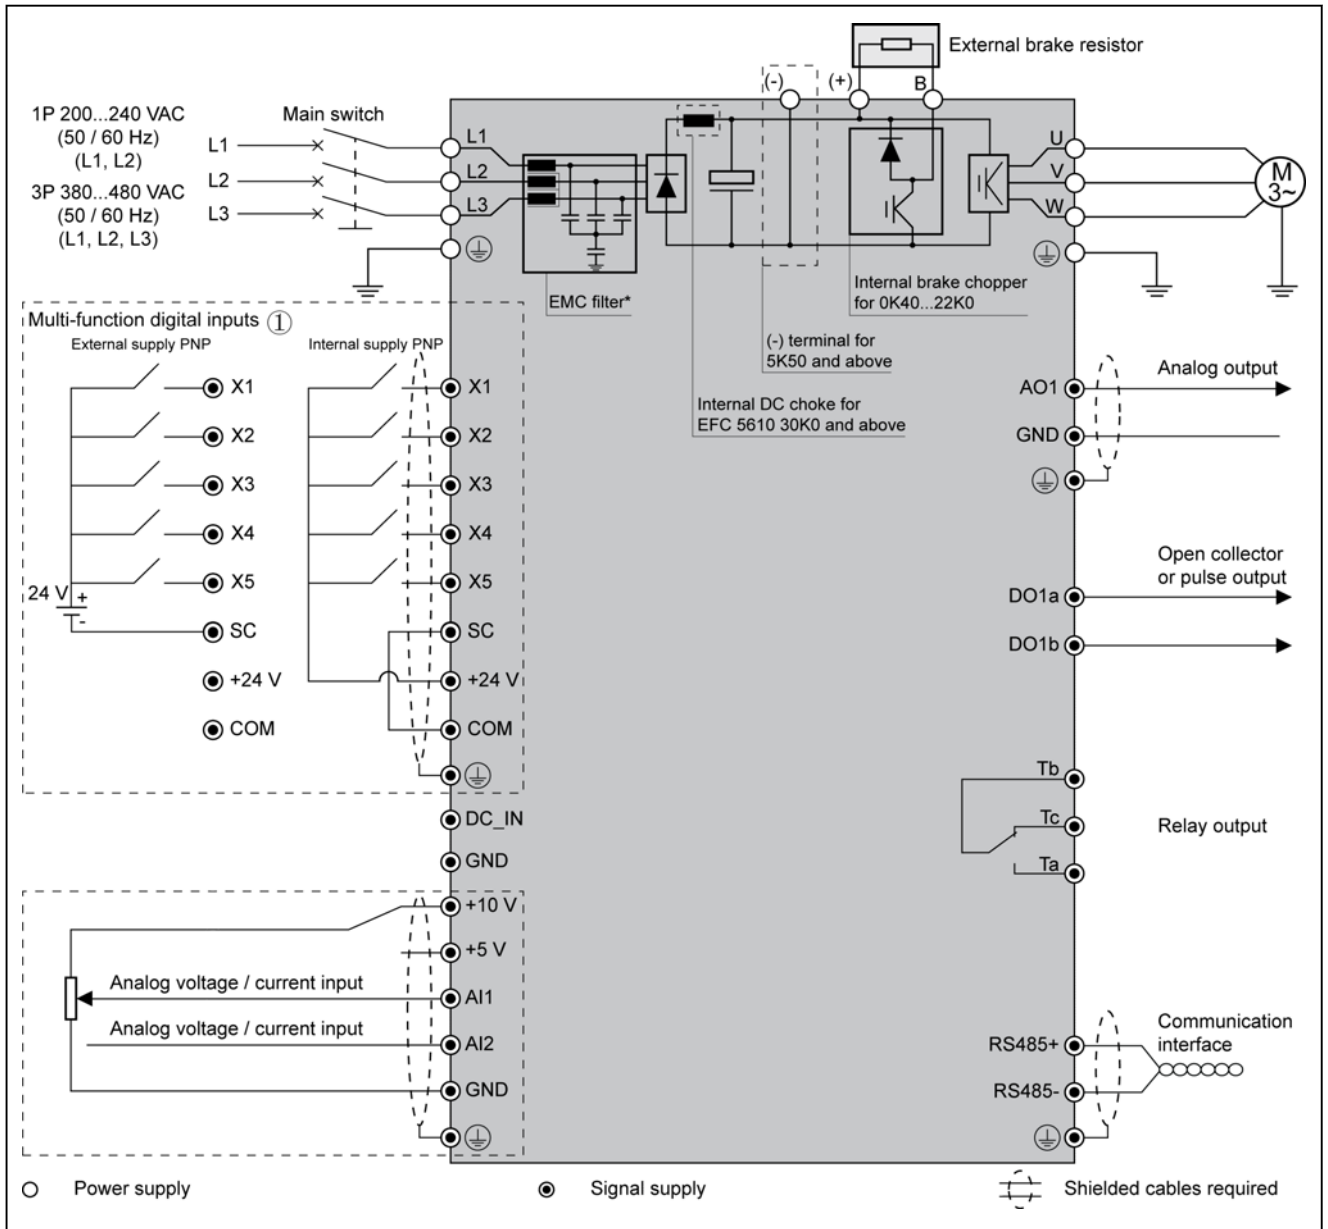


Fig. 8-1: Wiring diagram



- For cable size, fuse, screw torque, see [chapter 8.2 "Cable Specifications" on page 38](#).
- For terminals, see [chapter 8.3 "Terminals" on page 42](#).
- ①: NPN modes, see [fig. 8-9 "Digital input NPN / PNP wiring" on page 51](#).
- *: Can be disconnected by disassembly of a screw.
- Pulse input can be **ONLY** set via 'Multi-function digital input X5'.