


Operating constructions for PK 1023..., PW 1023-... with galvanic isolation

FERNSTEUERGERÄTE
Kurt Oelsch GmbH
Jahnstr. 68 + 70
12347 Berlin (Britz)



Illustration 1 Fixing

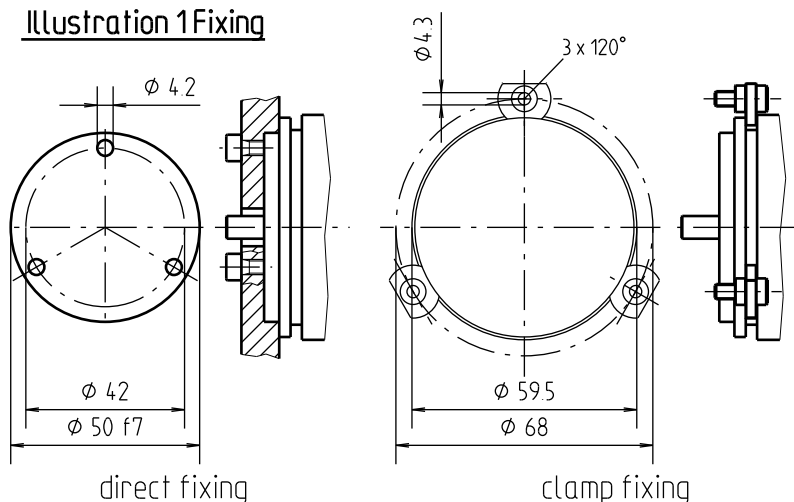

1. Attachment and centering according to illustration 1.
2. Wiring possibilities and measurement range please look illustration 2.
3. Driving mechanics is to drive to initial position.
4. Connect transducer with aid of coupler with driving mechanics.
5. Zero point adjustment
Adjust the zero point range through turning of the transmitter housing.
Zero point will be signalized through lighting of the diode.
ATTENTION!
Luminous diode only signalizes the zero point range, electrical zero point determine through examination of the output signal.
Transmitter is to tighten and the output signal with the zero point trimmer is to adjust to 0 or 4 mA.
Zero point trimmer and steepness trimmer respectively after removal of the protective screw (illustration 3) accessible.
6. End-angle adjustment
Driving mechanics is to drive to 100% position and to adjust with the steepness trimmer to 20 mA.
7. Initial position and final position are to controll and if necessary, you have to iterate the alignment.
8. Protective screws are to fix.

Illustration 2

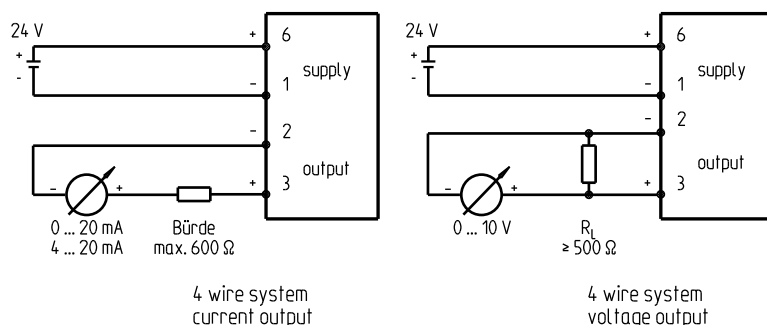


Illustration 3


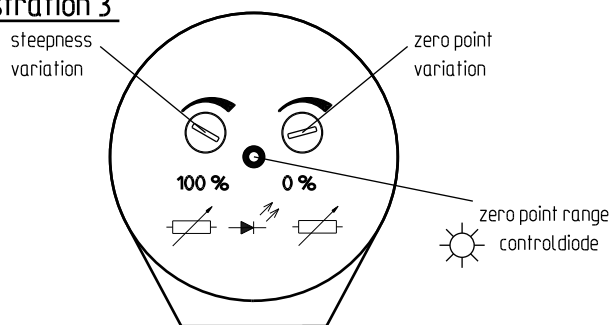


Illustration 4

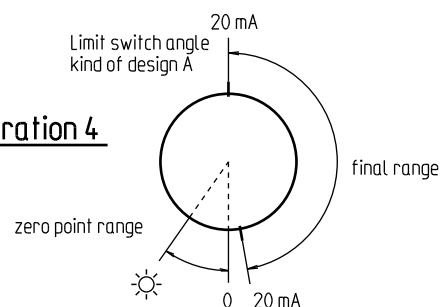

Type key:

P	K	1	0	2	3	*	*	*
P	W							

*)Variant-No.
will be determined
through addition of
the single
figures.

Variant - No. *
Casing - synchro - size
Shaft diameter
Device group

0	1	2 (3/4) wire system current, 4...20 mA, without galv. isolation
0	2	3/4 wire system current, 0/4...20 mA, without galv. isolation
0	3	4 wire system current, 0/4...20 mA, with galv. isolation
0	4	4 wire system current, ± 20 mA, with galv. isolation
0	5	3/4 wire system voltage, 0...10 V, without galv. isolation
0	6	4 wire system voltage, 0...10 V with galv. isolation
0	7	4 wire system voltage, ± 10 V, with galv. isolation
0	0	clockwise direction of rotation
1	6	clockwise direction of rotation
0	0	continuous rotation
3	2	stops
0	0	circular connector (angeled)
6	4	circular connector (straight)
1	2	cable connection
2	5	spring release (for Rope Length Transmitter)

* * * - The variant no. will be determined by addition of the individual numbers.

5710Z02-BA:02E

2010	Datum	Name	Maßstab
gez.	25.10.	RODE	--
gepr.	25.10.2010	BAUM	
Ursprung	23.08.04	Butut/Sta.	

5710Z106