

GETRIEBEBAU NORD

Member of the NORD DRIVESYSTEMS Group

Getriebebau NORD GmbH & Co. KG

Getriebebau-Nord-Straße 1 • 22941 Bargteheide, Germany • www.nord.com



SK CU5-MLT

Part number: 275 298 200

Optional modules – Functional extensions incl.
functional safety



The customer unit SK CU5-MLT described below may only be installed and commissioned by qualified electricians. A qualified electrician is a person who, because of their technical training and experience, has sufficient knowledge with regard to

- Switching on, switching off, disconnection, earthing and labelling of electric circuits and devices,
- Correct maintenance and use of protective devices according to specified safety standards.

DANGER

Danger of electric shock

The frequency inverter has a hazardous voltage for up to 5 minutes after it has been switched off.

- Only carry out work when the frequency inverter has been disconnected and at least 5 minutes have elapsed since the mains was switched off!

NOTICE

Validity of document

This document is only valid in combination with the operating instructions BU0600 for the NORDAC *PRO* frequency inverter SK 500P and the supplementary instructions BU0610 POSICON positioning control as well as BU0630 functional safety ( "Further documentation and software (www.nord.com)"). Only these documents contain all of the information that is required for safe commissioning of the modules and the frequency inverter.

Technical Information / Datasheet		SK CU5-MLT			
NORDAC <i>PRO</i> (SK 500P series)	275298200	1.2	1026	en-GB	

Scope of delivery

1 x	Customer unit	SK CU5-MLT
1 x	Screw for fastening the module to the frequency inverter	



Field of use

Plug-in customer unit for functional extension of a NORDAC PRO series frequency inverter of device types SK 530P and SK 550P. This module can be mounted on the front side of the frequency inverter. An encoder interface for connection of different encoder systems as well as 4 digital IOs are available. A plug-in 2-channel connection is available on the module for functional safety requirements.

The module ensures safe shut-down methods for Safe Pulse Block and Safety Digital Input to execute the STO and SS1-t stop functions.

Technical Data

Module

Temperature range	-10°C ... +50°C	Vibration resistance	3M4
Temperature class	Class 3k3	Firmware version	V1.0 R1
Protection class	IP20	Hardware version	AA
Max. installation altitude above sea level	≤ 2000 m	Dimensions [mm] H x W x D	145 x 65 x 23

Digital inputs

Quantity	4
Work area	Low level: 0 V ... 5 V, High level: 14 V ... 30 V
Specific data	$R_i = \sim 3 \text{ k}\Omega$, Input capacitance: 10 nF, Response time 1 ms ... 2 ms, Inputs according to EN 61131-2

Digital outputs

Quantity	4
Supply voltage	24 VDC $\pm$ 25%
Output current	20 mA
Short circuit current limit	150 mA
Work area	Low level = 0 V, High level = 24 V; max. 200 mA
Specific data	$R_i = 8 \text{ k}\Omega$, Input capacitance: 10 nF, Response time 10 ms, Outputs according to EN 61131-2

“Safe Pulse Block” and “Safety Digital Input”

You will find the data in the supplementary manual [BU0630](#).

Installation

Installation of the SK CU5-... must be carried out as follows:

1. Switch off the mains voltage and observe the waiting period.
2. Push the control terminal cover down and remove it.
3. Remove the blank cover by activating the release mechanism at the lower edge and removing it with an upward rotating movement.
4. Break out the internal jumper of the STO contact with the aid of a small screwdriver. Otherwise the customer unit cannot be installed.
5. Hook the customer unit onto the upper edge and press in lightly until it engages. Take care that the connector strip makes proper contact.
6. Screw the module firmly to the frequency inverter using the enclosed screw!
7. Install the control terminals and blank cover.



Remove the control terminals and blank cover.



Remove the STO contact jumper.



Install the SK CU5-... customer unit.



Install the control terminals and blank cover.



Information

Once the jumper of the STO contact has been removed, the frequency inverter cannot be operated without the customer unit with functional safety (SK CU5-...).

Wiring guidelines

If flexible cables (multiple strand or fine-wire) are used for connections on the terminal block X20, wire end sleeves must be used. In addition, the wiring guidelines in the frequency inverter manual (BU0600) and the supplementary instructions BU0630  "Further documentation and software (www.nord.com)" apply.

For the connections on terminal block X21 and X22, the wiring guidelines of the supplementary instructions BU0610 must also be observed  "Further documentation and software (www.nord.com)".

Electrical connection

X20: Functional safety: STO, SS1-t

X21: Universal encoder interface (Sin/Cos, HIPERFACE, EnDat 2.1, SSI, BiSS, UART)

X22: Digital inputs and outputs

NOTICE**Ensure proper strain relief and shielding for control cables**

Control cables must be protected against cable breakage and electromagnetic interference.

- Route power and motor cables separately from control cables.
- Ensure proper strain relief for the connecting cables.
- Lay the cable shields flat against the PE. Use the appropriate EMV-Kit from the accessories for this purpose. For details, refer to the [BU0600](#) frequency inverter manual.

The electrical connection of the functional safety is established at the customer unit SK CU5-MLT via connection terminals on the terminal block X20.

The appropriate contacts must be used depending on the functional safety function in use.

Terminal block X20	Designation	No.	Description
 Top view	VIS2_24V	92	24 V STO input 2 (SI2)
	VIS12_0V	93	Reference potential for STO inputs (SI1/2)
	VISD_24V	94	Safety Digital Input
 Bottom view	VIS12_0V	93	Reference potential for STO inputs(SI1/2)
	VIS1_24V	91	24 V STO input 1 (SI1)
	VISD_0V	95	Reference potential for the Safety Digital Input

Terminals: Push-in, wire stripping length 10 mm

Cross section: 0.2 mm²... 1.5 mm², AWG 24 ... 16, rigid

0.25 mm²... 1.5 mm², AWG 24 ... 16, flexible with wire end sleeve

Cross section [mm²]	Wire end sleeve length without insulating collar according to DIN 46228-1 [mm]	Wire end sleeve length with insulating collar according to DIN 46228-4 [mm]
0.25	5 ... 7	8 ... 10
0.34	7	8 ... 10
0.50	8 ... 10	8 ... 10
0.75	8 ... 10	8 ... 10
1.00	8 ... 10	-
1.50	10	-

Two wires with the same cross section are not possible.



Information

All information on electrical connections can be found in the frequency inverter manual (BU0600) as well as in the supplementary instructions BU0630  "Further documentation and software (www.nord.com)".

Electrical connection of the travel measurement systems is made via connection terminals on the universal encoder interface on the terminal block X21.

The appropriate contacts must be used depending on the travel measurement system which is used.

Terminal block X21	Designation	No.	Description
	CLK+	63	CLK signal for BISS-/SSI-/EnDat encoder
	CLK-	64	CLK signal for BISS-/SSI-/EnDat encoder
	DAT+/RS485+	65	Data signal DAT+ for BISS-/SSI-/EnDat encoder, RS485+ Hiperface
	DAT-/ RS485-	66	Data signal DAT- for BISS-/SSI-/EnDat encoder, RS485- Hiperface
	A+/ SIN+	57	Track A+ incremental encoder SIN+ from Hiperface or SIN/COS encoder
	A-/ SIN-	58	Track A- incremental encoder SIN- from Hiperface or SIN/COS encoder
	B+/ COS+	59	Track B+ incremental encoder COS+ from Hiperface or SIN/COS encoder
	B-/ COS-	60	Track B- incremental encoder COS- from Hiperface or SIN/COS encoder
	Z+	61	Zero track Z+ incremental encoder
	Z-	62	Zero track Z- incremental encoder
	VO_12V	49	Encoder supply max. 80 mA
	VO_0V	40	Reference potential for encoder

Further connection terminals are available for 4 selectable digital inputs and outputs (I/Os) on the terminal block X22.

Terminal block X22	Designation	No.	Description
	VO_24V	43	Initiator supply (maximum 200 mA)
	VO_0V	40	Reference potential for I/Os
	DIO1	30	Digital input 7 or digital output 3
	DIO2	31	Digital input 8 or digital output 4
	DIO3	32	Digital input 9 or digital output 5
	DIO4	33	Digital input 10 or digital output 6



Information

All information on electrical connections can be found in the frequency inverter manual (BU0600) as well as in the supplementary instructions BU0610  "Further documentation and software (www.nord.com)".

EMC-compliant shield connection

If shielded connection cables are used, the encoder cable shielding and the terminal connection cables must always be connected on both sides. The connection can be made as follows:

- Shielding on the rear wall of the control cabinet
- Use of EMC kits


Depending on size and type or configuration level of the frequency inverter, two different optional EMC kits of type SK HE5-EMC-... can be used for connection. The EMC kits are divided into three different categories and depend on size.



SK 550P without
blank covers



SK 550P with mounted
SK CU5-MLT

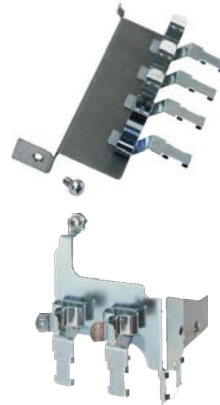

SK HE5-EMC-MS-HS12
SK HE5-EMC-CS-HS23



Detailed view of
mounted EMC kits



Information

The EMC kits used for connection to the customer unit (SK HE5-EMC-CS-...) can only be mounted and used in conjunction with those for motor connection (SK HE5-EMC-MS-...). Detailed information can be found in the technical information on EMC kits  "Further documentation and software (www.nord.com)".

Encoder

All information on the connecting of an encoder can be found in supplementary instructions BU0610  "Further documentation and software (www.nord.com)".

Commissioning of functional safety

All information on the commissioning of the device, operating status messages or error messages related to the customer unit or the functional safety function can be found in the frequency inverter manual BU0600 as well as in the supplementary instructions BU0630  "Further documentation and software (www.nord.com)".

Commissioning of travel measurement system (encoder)

All information on the commissioning of the device, operating status messages or error messages related to the customer unit or the travel measurement system can be found in the frequency inverter manual BU0600 as well as in the supplementary instructions BU0610  "Further documentation and software (www.nord.com)".

Parameter overview

All information on parametrisation can be found in the frequency inverter manual (BU0600) as well as in the supplementary instructions BU0610 and BU0630  "Further documentation and software (www.nord.com)".



Information

Restricted visibility of parameters with external 24 V

Via terminal 44 the device can be externally supplied with 24 V (X6). This enables the values of most parameters to be read out and changed by the usual parameterisation methods. However, this does not apply for all parameters. The available display range is limited and essentially consists of the setting values for bus communication (Ethernet, CANopen, USS). The device statuses are not available if the mains voltage is not applied (X1). Except for the communication sector, the device is therefore in a switched-off state. For complete diagnosis of the device, a mains voltage supply (X1) is required (230 V for single-phase devices, 400 V for 3-phase devices).

Error messages

Error messages that occur in connection with the customer unit are displayed in the frequency inverter's error memory in parameter **P700/P701**.

Error messages of the optional modules can be found in the frequency inverter manual (BU0600) and the supplementary instructions BU0630  "Further documentation and software (www.nord.com)".

Error messages of the optional modules related to the POSICON positioning control or the travel measurement system (encoder) can be found in the supplementary instructions BU0610  "Further documentation and software (www.nord.com)".

Further documentation and software (www.nord.com)

Document	Description	Document	Description
BU0600	Manual for frequency inverter NORDAC PRO SK 5xxP	BU0630	Supplementary instructions Functional safety for frequency inverter NORDAC PRO SK 5xxP
BU0610	Supplementary instructions POSICON positioning control for NORDAC PRO SK 5xxP	TI2752923xx	Technical information EMC kits for SK HE5-EMC-xx-...