■ External/Face-mount Installation

1. Cut an opening in the enclosure panel for the LCD Operator Option according to ***Figure 8***.
2. Position the LCD Operator Option so the LCD display faces outwards, and mount it to the enclosure panel as shown in ***Figure 7***.

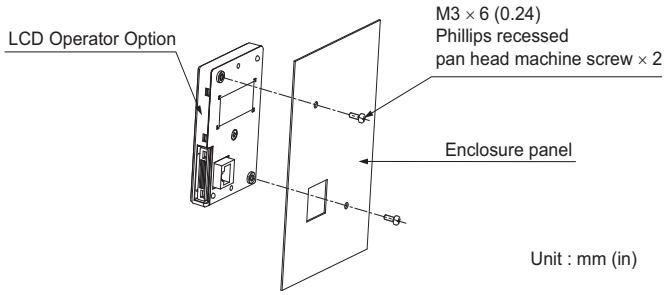

Figure 7 External/Face-mount Installation

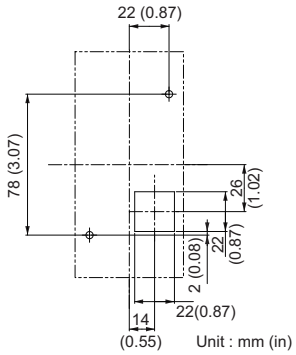

Figure 8 Panel Cut-out Dimensions (External/Face-mount Installation)