

Operating Instructions

SINAMICS

V20

www.siemens.com/drives

Edition 06/2018

SIEMENS

SINAMICS

SINAMICS V20 Inverter

Operating Instructions

Fundamental safety instructions	1
Introduction	2
Mechanical installation	3
Electrical installation	4
Commissioning via the built- in BOP	5
Commissioning using SINAMICS V20 Smart Access	6
Communicating with the PLC	7
Parameter list	8
	8
Parameter list	
Parameter list Faults and alarms	
Parameter list Faults and alarms Technical specifications	

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

A DANGER

indicates that death or severe personal injury will result if proper precautions are not taken.

▲WARNING

indicates that death or severe personal injury may result if proper precautions are not taken.

ACAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

AWARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

Purpose of this manual

This manual provides you with information about the proper installation, commissioning, operation, and maintenance of SINAMICS V20 inverters.

SINAMICS V20 user documentation components

Document	Content	Available languages
Operating Instructions	(this manual)	English
		Chinese
		French
		German
		Italian
		Korean
		Portuguese
		Spanish
Compact Operating Instructions	Describes how you install, operate, and per-	English
	form basic commissioning of the SINAMICS V20 inverter	Chinese
Product Information	Describes how you install and operate the	English
	following options or spare parts:	Chinese
	Parameter Loaders	Turkish (for SINAMICS V20 Smart
	Dynamic Braking Modules	Access only)
	External Basic Operator Panels (BOPs)	
	BOP Interface Modules	
	Migration mounting kit	
	Shield Connection Kits	
	SINAMICS V20 Smart Access	
	I/O Extension Module	
	Replacement Fans	

Product maintenance

The components are subject to continuous further development within the scope of product maintenance (improvements to robustness, discontinuations of components, etc).

These further developments are "spare parts-compatible" and do not change the article number.

In the scope of such spare parts-compatible further developments, connector positions are sometimes changed slightly. This does not cause any problems with proper use of the components. Please take this fact into consideration in special installation situations (e.g. allow sufficient clearance for the cable length).

Use of third-party products

This document contains recommendations relating to third-party products. Siemens accepts the fundamental suitability of these third-party products.

You can use equivalent products from other manufacturers.

Siemens does not accept any warranty for the properties of third-party products.

Environmental protection



Waste electrical products cannot be disposed of with household waste. Recycle where facilities exist. Check with your local authority or retailer for recycling advice.

Technical support

Country	Hotline			
China	+86 400 810 4288			
France	+33 0821 801 122			
Germany	+49 (0) 911 895 7222			
Italy	+39 (02) 24362000			
Brazil	+55 11 3833 4040			
India	+91 22 2760 0150			
Korea	+82 2 3450 7114			
Turkey	+90 (216) 4440747			
United States of America	+1 423 262 5710			
Poland	+48 22 870 8200			
Further service contact information: Support contacts (https://support.industry.siemens.com/cs/ww/en/ps)				

Table of contents

	Preface		3
1	Fundam	ental safety instructions	
	1.1	General safety instructions	
	1.2	Equipment damage due to electric fields or electrostatic discharge	14
	1.3	Warranty and liability for application examples	14
	1.4	Industrial security	15
	1.5	Residual risks of power drive systems	16
2	Introduc	tion	17
	2.1	Components of the inverter system	17
	2.2	Inverter rating plate	19
3	Mechani	ical installation	2 ²
	3.1	Mounting orientation and clearance	2′
	3.2	Cabinet panel mounting	22
	3.3	SINAMICS V20 Flat Plate variant	25
	3.4	Push-through mounting (frame sizes B E)	27
	3.5	DIN rail mounting (frame sizes AA B)	30
4	Electrica	al installation	33
	4.1	Typical system connections	34
	4.2	Terminal description	39
	4.3	EMC-compliant installation	45
	4.4	EMC-compliant cabinet design	48
5	Commis	sioning via the built-in BOP	5′
	5.1	The built-in Basic Operator Panel (BOP)	5′
	5.1.1 5.1.2	Introduction to the built-in BOP	
	5.1.3	Viewing inverter status	
	5.1.4	Editing parameters	
	5.1.5 5.1.6	Screen displays LED states	
	5.1.0	Checking before power-on	
	5.2	Setting the 50/60 Hz selection menu	
	5.3 5.4	Starting the motor for test run	
		•	
	5.5	Quick commissioning	62

	5.5.1	Quick commissioning through the setup menu	
	5.5.1.1	Structure of the setup menu	
	5.5.1.2	Setting motor data	
	5.5.1.3	Setting connection macros	65
	5.5.1.4	Setting application macros	76
	5.5.1.5	Setting common parameters	78
	5.5.2	Quick commissioning through the parameter menu	79
	5.6	Function commissioning	
	5.6.1	Overview of inverter functions	
	5.6.2	Commissioning basic functions	85
	5.6.2.1	Selecting the stop mode	85
	5.6.2.2	Running the inverter in JOG mode	87
	5.6.2.3	Setting the voltage boost	89
	5.6.2.4	Setting the PID controller	91
	5.6.2.5	Setting the braking function	93
	5.6.2.6	Setting the ramp time	102
	5.6.2.7	Setting the Imax controller	
	5.6.2.8	Setting the Vdc controller	
	5.6.2.9	Setting the load torque monitoring function	
	5.6.3	Commissioning advanced functions	
	5.6.3.1	Starting the motor in super torque mode	
	5.6.3.2	Starting the motor in hammer start mode	
	5.6.3.3	Starting the motor in blockage clearing mode	
	5.6.3.4	Running the inverter in economy mode	
	5.6.3.5	Setting the UL508C/UL61800-5-1-compliant motor overtemperature protection	
	5.6.3.6	Setting the free function blocks (FFBs)	
	5.6.3.7	Setting the flying start function	
	5.6.3.8	Setting the automatic restart function	
	5.6.3.9	Running the inverter in frost protection mode	
	5.6.3.10	Running the inverter in condensation protection mode	
	5.6.3.11	Running the inverter in sleep mode	
	5.6.3.12	Setting the wobble generator	
	5.6.3.13	Running the inverter in motor staging mode	
	5.6.3.14	Running the inverter in cavitation protection mode	
	5.6.3.15	Setting the user default parameter set	
	5.6.3.16	Setting the dual ramp function	
		Setting the DC coupling function	
	5.6.3.17	Setting high/low overload (HO/LO) mode	129 122
	5.6.3.18		
	5.7	Restoring to defaults	
3	Commissio	ning using SINAMICS V20 Smart Access	135
	6.1	System requirements	136
	6.2	Accessing the SINAMICS V20 Web pages	136
	6.2.1	Overview of the steps	
	6.2.2	Fitting SINAMICS V20 Smart Access to the inverter	137
	6.2.3	Establishing the wireless network connection	
	6.2.4	Accessing the Web pages	139
	6.3	Overview of the Web pages	140
	6.4	View connection status	141

	6.5	Viewing inverter information	141
	6.6 6.6.1 6.6.2 6.6.3	Making optional Web access settings Configuring Wi-Fi Changing the display language Synchronizing the time	142 144 144
	6.6.4 6.6.5	UpgradingViewing additional information	
	6.7	Quick commissioning	145
	6.8	Setting parameters	150
	6.9	Starting motor test run (JOG/HAND)	155
	6.10	Monitoring	157
	6.11	Diagnosing	157
	6.12 6.12.1 6.12.2	Backing up and restoring Backing up Restoring	160
	6.13	Upgrading Web application and SINAMICS V20 Smart Access firmware versions	164
	6.14	Viewing the support information	167
7	Communic	cating with the PLC	169
	7.1	USS communication	169
	7.2	MODBUS communication	173
8	Parameter	· list	183
	8.1	Introduction to parameters	183
	8.2	Parameter list	187
9	Faults and	alarms	323
	9.1	Faults	323
	9.2	Alarms	331
Α	Technical	specifications	335
В	Options ar	nd spare parts	345
	B.1	Options	
	B.1.1	Parameter Loader External BOP and BOP Interface Module	
	B.1.2 B.1.3	Dynamic braking module	
	B.1.4	Braking resistor	
	B.1.5	Line reactor	
	B.1.6	Output reactor	367
	B.1.7	External line filter Class B	
	B.1.8	Shield connection kits	
	B.1.9	Memory card	
	B.1.10	RS485 termination resistor	
	B.1.11	Residual current circuit breaker (RCCB)	
	B.1.12 B.1.13	DIN rail mounting kits (only for FSAA FSB)	
	11 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	WINGERING TO COUNTY AND THE FORM TO THE FO	. 1(1,1)

	Index		401
С	General l	license conditions	395
	B.2	Spare parts - replacement fans	390
	B.1.16	User documentation	390
	B.1.15	I/O Extension Module	389
	B.1.14	SINAMICS V20 Smart Access	386

Fundamental safety instructions

1.1 General safety instructions



AWARNING

Electric shock and danger to life due to other energy sources

Touching live components can result in death or severe injury.

- Only work on electrical devices when you are qualified for this job.
- · Always observe the country-specific safety rules.

Generally, the following six steps apply when establishing safety:

- 1. Prepare for disconnection. Notify all those who will be affected by the procedure.
- 2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
- 3. Wait until the discharge time specified on the warning labels has elapsed.
- 4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
- 5. Check whether the existing auxiliary supply circuits are de-energized.
- 6. Ensure that the motors cannot move.
- 7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. Switch the energy sources to a safe state.
- 8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness in the inverse sequence.



AWARNING

Risk of electric shock and fire from supply networks with an excessively high impedance

Excessively low short-circuit currents can lead to the protective devices not tripping or tripping too late, and thus causing electric shock or a fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the inverter is connected to the line supply at least meets the minimum requirements for the response of the protective device used.
- You must use an additional residual-current device (RCD) if a conductor-ground short circuit does not reach the short-circuit current required for the protective device to respond. The required short-circuit current can be too low, especially for TT supply systems.

1.1 General safety instructions





Risk of electric shock and fire from supply networks with an excessively low impedance

Excessively high short-circuit currents can lead to the protective devices not being able to interrupt these short-circuit currents and being destroyed, and thus causing electric shock or a fire.

• Ensure that the prospective short-circuit current at the line terminal of the inverter does not exceed the breaking capacity (SCCR or Icc) of the protective device used.



AWARNING

Electric shock if there is no ground connection

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

• Ground the device in compliance with the applicable regulations.





Electric shock due to connection to an unsuitable power supply

When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage that might result in serious injury or death.

 Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV-(Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.





Electric shock due to equipment damage

Improper handling may cause damage to equipment. For damaged devices, hazardous voltages can be present at the enclosure or at exposed components; if touched, this can result in death or severe injury.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged devices.





Electric shock due to unconnected cable shield

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

• As a minimum, connect cable shields and the conductors of power cables that are not used (e.g. brake cores) at one end at the grounded housing potential.





Arcing when a plug connection is opened during operation

Opening a plug connection when a system is operation can result in arcing that may cause serious injury or death.

• Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.





Electric shock due to residual charges in power components

Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.

 Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.

NOTICE

Property damage due to loose power connections

Insufficient tightening torques or vibration can result in loose power connections. This can result in damage due to fire, device defects or malfunctions.

- Tighten all power connections to the prescribed torque.
- Check all power connections at regular intervals, particularly after equipment has been transported.



Spread of fire from built-in devices

In the event of fire outbreak, the enclosures of built-in devices cannot prevent the escape of fire and smoke. This can result in serious personal injury or property damage.

- Install built-in units in a suitable metal cabinet in such a way that personnel are
 protected against fire and smoke, or take other appropriate measures to protect
 personnel.
- Ensure that smoke can only escape via controlled and monitored paths.



Active implant malfunctions due to electromagnetic fields

Inverters generate electromagnetic fields (EMF) in operation. People with active implants in the immediate vicinity of this equipment are at particular risk.

- As the operator of an EMF-emitting installation, assess the individual risks of persons with active implants. The following clearances are usually adequate:
 - No clearance to closed control cabinets and shielded MOTION-CONNECT supply cables
 - Forearm length (approx. 35 cm clearance) to distributed drive systems and open control cabinets

1.1 General safety instructions



Unexpected movement of machines caused by radio devices or mobile phones

When radio devices or mobile phones with a transmission power > 1 W are used in the immediate vicinity of components, they may cause the equipment to malfunction. Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- If you come closer than around 2 m to such components, switch off any radios or mobile phones.
- Use the "SIEMENS Industry Online Support app" only on equipment that has already been switched off.

NOTICE

Damage to motor insulation due to excessive voltages

When operated on systems with grounded line conductor or in the event of a ground fault in the IT system, the motor insulation can be damaged by the higher voltage to ground. If you use motors that have insulation that is not designed for operation with grounded line conductors, you must perform the following measures:

- IT system: Use a ground fault monitor and eliminate the fault as quickly as possible.
- TN or TT systems with grounded line conductor: Use an isolating transformer on the line side.



Fire due to inadequate ventilation clearances

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

 Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.



Unrecognized dangers due to missing or illegible warning labels

Dangers might not be recognized if warning labels are missing or illegible. Unrecognized dangers may cause accidents resulting in serious injury or death.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, where necessary in the national language.
- Replace illegible warning labels.

NOTICE

Device damage caused by incorrect voltage/insulation tests

Incorrect voltage/insulation tests can damage the device.

Before carrying out a voltage/insulation check of the system/machine, disconnect the
devices as all converters and motors have been subject to a high voltage test by the
manufacturer, and therefore it is not necessary to perform an additional test within the
system/machine.

MARNING

Unexpected movement of machines caused by inactive safety functions

Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

Note

Important safety notices for Safety Integrated functions

If you want to use Safety Integrated functions, you must observe the safety notices in the Safety Integrated manuals.



Malfunctions of the machine as a result of incorrect or changed parameter settings

As a result of incorrect or changed parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the parameterization (parameter assignments) against unauthorized access.
- Handle possible malfunctions by taking suitable measures, e.g. emergency stop or emergency off.

1.2 Equipment damage due to electric fields or electrostatic discharge

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



NOTICE

Equipment damage due to electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g conductive foam rubber of aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
 - Wearing an ESD wrist strap
 - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

1.3 Warranty and liability for application examples

Application examples are not binding and do not claim to be complete regarding configuration, equipment or any eventuality which may arise. Application examples do not represent specific customer solutions, but are only intended to provide support for typical tasks.

As the user you yourself are responsible for ensuring that the products described are operated correctly. Application examples do not relieve you of your responsibility for safe handling when using, installing, operating and maintaining the equipment.

1.4 Industrial security

Note

Industrial security

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit:

Industrial security (http://www.siemens.com/industrialsecurity)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at:

Industrial security (http://www.siemens.com/industrialsecurity)

Further information is provided on the Internet:

Industrial Security Configuration Manual (https://support.industry.siemens.com/cs/ww/en/view/108862708)



Unsafe operating states resulting from software manipulation

Software manipulations (e.g. viruses, trojans, malware or worms) can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.
- Make sure that you include all installed products into the holistic industrial security concept.
- Protect files stored on exchangeable storage media from malicious software by with suitable protection measures, e.g. virus scanners.
- Protect the drive against unauthorized changes by activating the "know-how protection" drive function.

1.5 Residual risks of power drive systems

When assessing the machine- or system-related risk in accordance with the respective local regulations (e.g., EC Machinery Directive), the machine manufacturer or system installer must take into account the following residual risks emanating from the control and drive components of a drive system:

- 1. Unintentional movements of driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example,
 - Hardware and/or software errors in the sensors, control system, actuators, and cables and connections
 - Response times of the control system and of the drive
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - Parameterization, programming, cabling, and installation errors
 - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
 - External influences/damage
 - X-ray, ionizing radiation and cosmic radiation
- 2. Unusually high temperatures, including open flames, as well as emissions of light, noise, particles, gases, etc., can occur inside and outside the components under fault conditions caused by, for example:
 - Component failure
 - Software errors
 - Operation and/or environmental conditions outside the specification
 - External influences/damage
- 3. Hazardous shock voltages caused by, for example:
 - Component failure
 - Influence during electrostatic charging
 - Induction of voltages in moving motors
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - External influences/damage
- Electrical, magnetic and electromagnetic fields generated in operation that can pose a
 risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too
 close
- Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly
- 6. Influence of network-connected communication systems, e.g. ripple-control transmitters or data communication via the network

For more information about the residual risks of the drive system components, see the relevant sections in the technical user documentation.


Introduction

2.1 Components of the inverter system

The SINAMICS V20 is a range of inverters designed for controlling the speed of three phase asynchronous motors.

Three phase AC 400 V variants

The three phase AC 400 V inverters are available in five frame sizes.

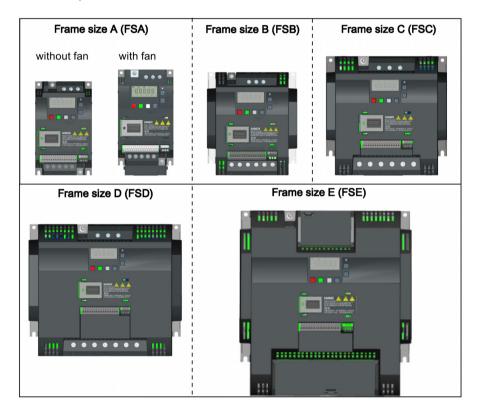

Component	Rated output	Rated	Rated	Output cur-	cur- Article number	
	power	input current	output current	rent at 480 V at 4kHz/40°C	unfiltered	filtered
FSA	0.37 kW	1.7 A	1.3 A	1.3 A	6SL3210-5BE13-7UV0	6SL3210-5BE13-7CV0
(without fan)	0.55 kW	2.1 A	1.7 A	1.6 A	6SL3210-5BE15-5UV0	6SL3210-5BE15-5CV0
	0.75 kW	2.6 A	2.2 A	2.2 A	6SL3210-5BE17-5UV0	6SL3210-5BE17-5CV0
	0.75 kW ¹⁾	2.6 A	2.2 A	2.2 A	-	6SL3216-5BE17-5CV0
FSA	1.1 kW	4.0 A	3.1 A	3.1 A	6SL3210-5BE21-1UV0	6SL3210-5BE21-1CV0
(with single fan)	1.5 kW	5.0 A	4.1 A	4.1 A	6SL3210-5BE21-5UV0	6SL3210-5BE21-5CV0
	2.2 kW	6.4 A	5.6 A	4.8 A	6SL3210-5BE22-2UV0	6SL3210-5BE22-2CV0


2.1 Components of the inverter system

Component	Rated output	Rated	Rated	Output cur-	Article number	
	power	input current	output current	rent at 480 V at 4kHz/40°C	unfiltered	filtered
FSB	3.0 kW	8.6 A	7.3 A	7.3 A	6SL3210-5BE23-0UV0	6SL3210-5BE23-0CV0
(with single fan)	4.0 kW	11.3 A	8.8 A	8.24 A	6SL3210-5BE24-0UV0	6SL3210-5BE24-0CV0
FSC	5.5 kW	15.2 A	12.5 A	11 A	6SL3210-5BE25-5UV0	6SL3210-5BE25-5CV0
(with single fan)						
FSD	7.5 kW	20.7 A	16.5 A	16.5 A	6SL3210-5BE27-5UV0	6SL3210-5BE27-5CV0
(with two fans)	11 kW	30.4 A	25 A	21 A	6SL3210-5BE31-1UV0	6SL3210-5BE31-1CV0
	15 kW	38.1 A	31 A	31 A	6SL3210-5BE31-5UV0	6SL3210-5BE31-5CV0
FSE	18.5 kW (HO) ²⁾	45 A	38 A	34 A	6SL3210-5BE31-8UV0	6SL3210-5BE31-8CV0
(with two fans)	22 kW (LO)	54 A	45 A	40 A		
·	22 kW (HO)	54 A	45 A	40 A	6SL3210-5BE32-2UV0	6SL3210-5BE32-2CV0
	30 kW (LO)	72 A	60 A	52 A		

This variant refers to the Flat Plate inverter with a flat plate heatsink.

Single phase AC 230 V variants

The single phase AC 230 V inverters are available in three frame sizes.

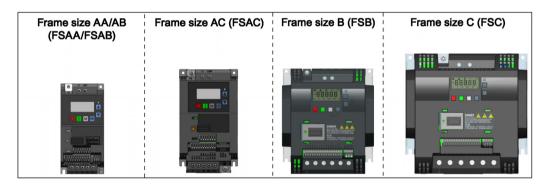


Component	nponent Rated out- Rated input R		Rated out-	Article number	
	put power	current	put current	unfiltered	filtered
FSAA	0.12 kW	2.3 A	0.9 A	6SL3210-5BB11-2UV1	6SL3210-5BB11-2BV1
(without fan)	0.25 kW	4.5 A	1.7 A	6SL3210-5BB12-5UV1	6SL3210-5BB12-5BV1
	0.37 kW	6.2 A	2.3 A	6SL3210-5BB13-7UV1	6SL3210-5BB13-7BV1
FSAB	0.55 kW	7.7 A	3.2 A	6SL3210-5BB15-5UV1	6SL3210-5BB15-5BV1
(without fan)	0.75 kW	10 A	4.2 A	6SL3210-5BB17-5UV1	6SL3210-5BB17-5BV1
FSAC	1.1 kW	14.7 A	6.0 A	6SL3210-5BB21-1UV1	6SL3210-5BB21-1BV1
(with single fan)	1.5 kW	19.7 A	7.8 A	6SL3210-5BB21-5UV1	6SL3210-5BB21-5BV1
FSB	1.1 kW	14.7 A	6.0 A	6SL3210-5BB21-1UV0	6SL3210-5BB21-1AV0
(with single fan)	1.5 kW	19.7 A	7.8 A	6SL3210-5BB21-5UV0	6SL3210-5BB21-5AV0
FSC	2.2 kW	27.2 A	11 A	6SL3210-5BB22-2UV0	6SL3210-5BB22-2AV0
(with single fan)	3.0 kW	32 A	13.6 A	6SL3210-5BB23-0UV0	6SL3210-5BB23-0AV0


^{2) &}quot;HO" and "LO" indicate high overload and low overload respectively. You can set the HO/LO mode through relevant parameter settings.

Options and spare parts


For more information about the options and spare parts, refer to Appendices "Options (Page 345)" and "Spare parts - replacement fans (Page 390)".

2.2 Inverter rating plate

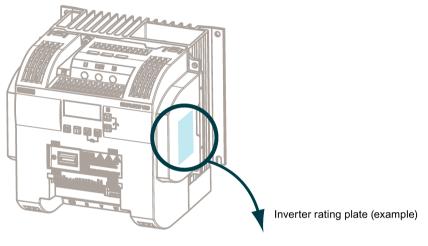

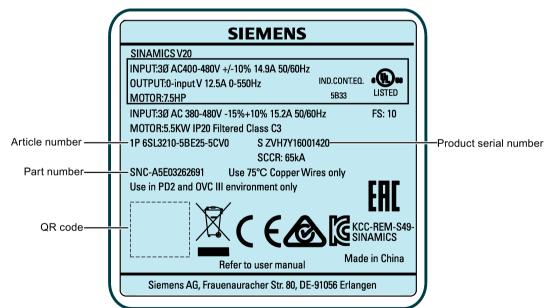

Serial number explanation (example)

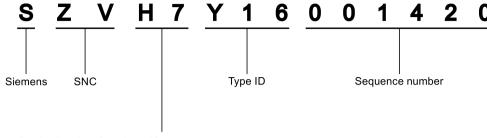

Production data (year/month)

Code *	Calendar year	Code *	Month
Α	1990, 2010	1	Janauary
В	1991, 2011	2	February
С	1992, 2012	3	March
D	1993, 2013	4	April
Е	1994, 2014	5	May
F	1995, 2015	6	June
Н	1996, 2016	7	July
J	1997, 2017	8	Auguest
K	1998, 2018	9	September
L	1999, 2019	0	October
М	2000, 2020	N	November
N	2001, 2021	D	December
Р	2002, 2022	* In accord	lance with DIN EN 60062
R	2003, 2023		
S	2004, 2024		
Т	2005, 2025		
U	2006, 2026		
V	2007, 2027		
W	2008, 2028		
Х	2009, 2029		

Mechanical installation

Protection against the spread of fire

The device may be operated only in closed housings or in control cabinets with protective covers that are closed, and when all of the protective devices are used. The installation of the device in a metal control cabinet or the protection with another equivalent measure must prevent the spread of fire and emissions outside the control cabinet.

Protection against condensation or electrically conductive contamination

Protect the device, e.g. by installing it in a control cabinet with degree of protection IP54 according to IEC 60529 or NEMA 12. Further measures may be necessary for particularly critical operating conditions.


If condensation or conductive pollution can be excluded at the installation site, a lower degree of control cabinet protection may be permitted.

3.1 Mounting orientation and clearance

The inverter must be mounted in an enclosed electrical operating area or a control cabinet.


Mounting orientation

Always mount the inverter vertically to a flat and non-combustible surface.

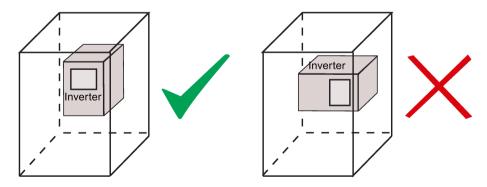

Mounting clearance

Тор	≥ 100 mm		
Bottom	≥100 mm (for frame sizes AA AC, B E, and frame size A without fan)		
	≥ 85 mm (for fan-cooled frame size A)		
Side	≥ 0 mm		

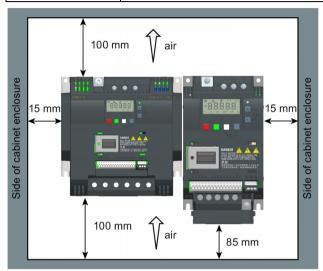

3.2 Cabinet panel mounting


You can mount the inverter directly on the surface of the cabinet panel.


Two additional mounting methods are also available for different frame sizes. For more information, refer to the following sections:

Push-through mounting (frame sizes B ... E) (Page 27)


DIN rail mounting (frame sizes AA ... B) (Page 30)

Outline dimensions and drill patterns

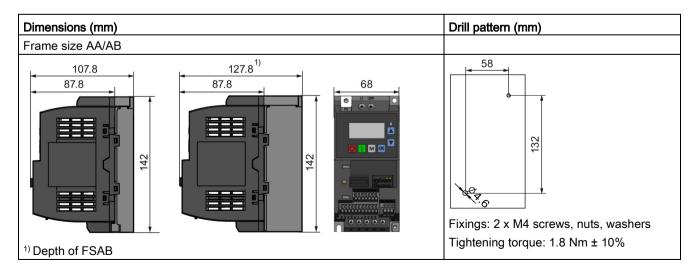

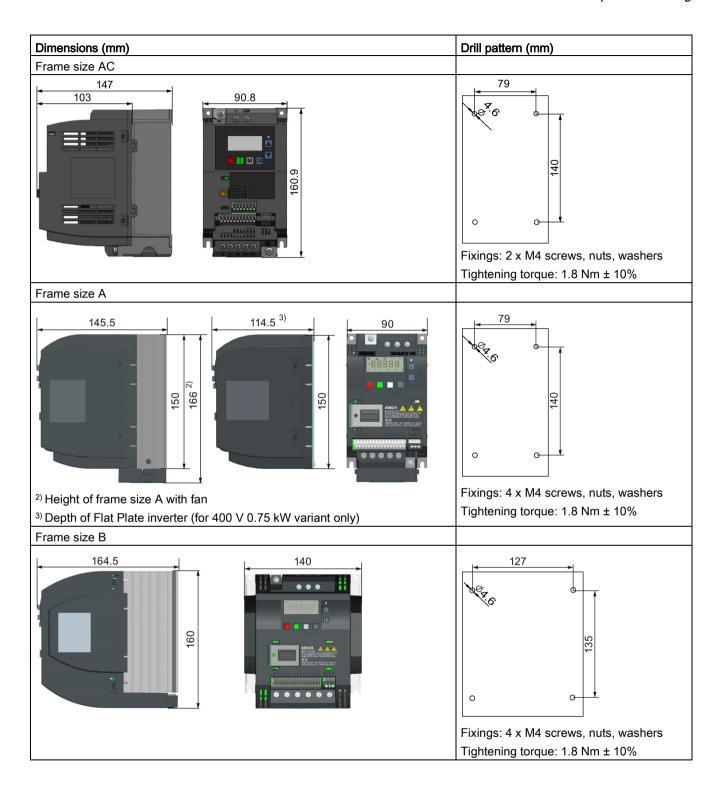

3.2 Cabinet panel mounting

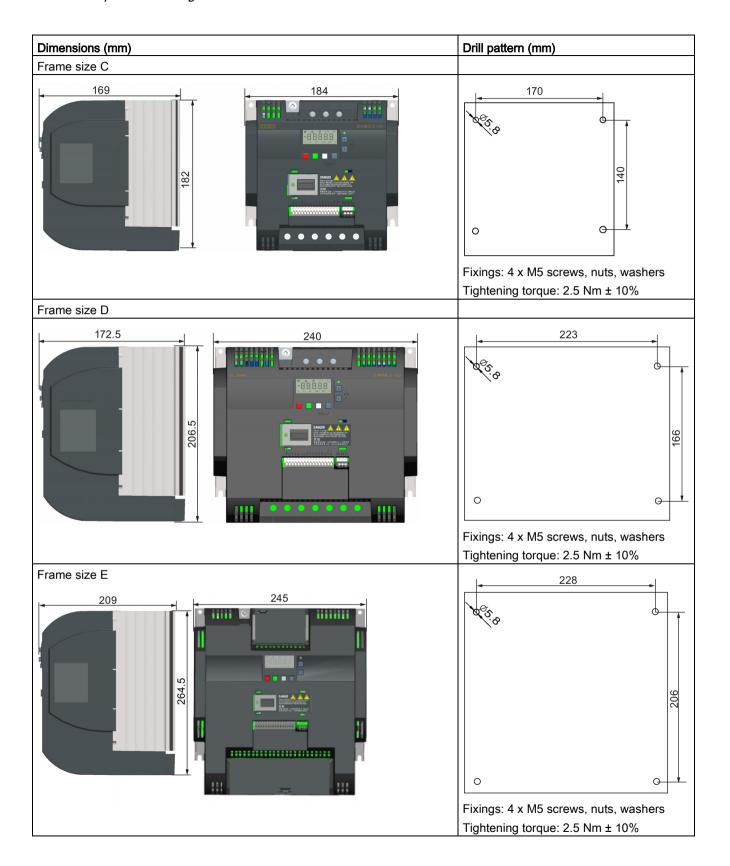

3.3 SINAMICS V20 Flat Plate variant

The SINAMICS V20 Flat Plate variant is designed to allow greater flexibility in the installation of the inverter. Adequate measures must be taken to ensure the correct heat dissipation, which may require an additional external heatsink outside the electrical enclosure.







Additional heat load

Operation with an input voltage greater than 400 V and 50 Hz or with a pulse frequency greater than 4 kHz will cause an additional heat load on the inverter. These factors must be taken into account when designing the installation conditions and must be verified by a practical load test.



Cooling considerations

The minimum vertical clearance of 100 mm above and below the inverter must be observed. Stacked mounting is not allowed for the SINAMICS V20 inverters.

Technical data

Flat Plate variant	Average power output		
6SL3216-5BE17-5CV0	370 W	550 W	750 W
Operating temperature range	-10 °C to 40 °C		
Max. heatsink loss	24 W	27 W	31 W
Max. control loss *	9.25 W	9.25 W	9.25 W
Recommended thermal resistance of heatsink	1.8 K/W	1.5 K/W	1.2 K/W
Recommended output current	1.3 A	1.7 A	2.2 A

^{*} With I/O fully loaded

3.3 SINAMICS V20 Flat Plate variant

Installing

- 1. Prepare the mounting surface for the inverter using the dimensions given in Section "Cabinet panel mounting (Page 22)".
- 2. Ensure that any rough edges are removed from the drilled holes, the flat plate heatsink is clean and free from dust and grease, and the mounting surface and if applicable the external heatsink are smooth and made of unpainted metal (steel or aluminium).
- 3. Apply a non-silicone heat transfer compound with a minimum thermal transfer co-efficient of 0.9 W/m.K evenly to the rear surface of the flat plate heatsink and the surface of the rear plate.
- 4. Mount the inverter securely using four M4 screws with a tightening torque of 1.8 Nm (tolerance: ± 10%).
- 5. If it is required to use an external heatsink, first apply the paste specified in Step 3 evenly to the surface of the external heatsink and the surface of the rear plate, and then connect the external heatsink on the other side of the rear plate.
- 6. When the installation is completed, run the inverter in the intended application while monitoring r0037[0] (measured heatsink temperature) to verify the cooling effectiveness.

The heatsink temperature must not exceed 90 °C during normal operation, after the allowance has been made for the expected surrounding temperature range for the application.

Example:

If the measurements are made in 20 $^{\circ}$ C surrounding, and the machine is specified up to 40 $^{\circ}$ C, then the heatsink temperature reading must be increased by [40-20] = 20 $^{\circ}$ C, and the result must remain below 90 $^{\circ}$ C.

If the heatsink temperature exceeds the above limit, then further cooling must be provided (for example, with an extra heatsink) until the conditions are met.

Note

The inverter will trip with fault condition F4 if the heatsink temperature rises above 100 °C. This protects the inverter from potential damage due to high temperatures.


3.4 Push-through mounting (frame sizes B ... E)

The frame sizes B to E are designed to be compatible with "push-through" applications, allowing you to mount the heatsink of the inverter through the back of the cabinet panel. When the inverter is mounted as the push-through variant, no higher IP rating is achieved. Make sure that the required IP rating for the enclosure is maintained.


Two additional mounting methods are also available for different frame sizes. For more information, refer to the following sections:

- Cabinet panel mounting (Page 22)
- DIN rail mounting (frame sizes AA ... B) (Page 30)

Outline dimensions, drill patterns, and cut-outs

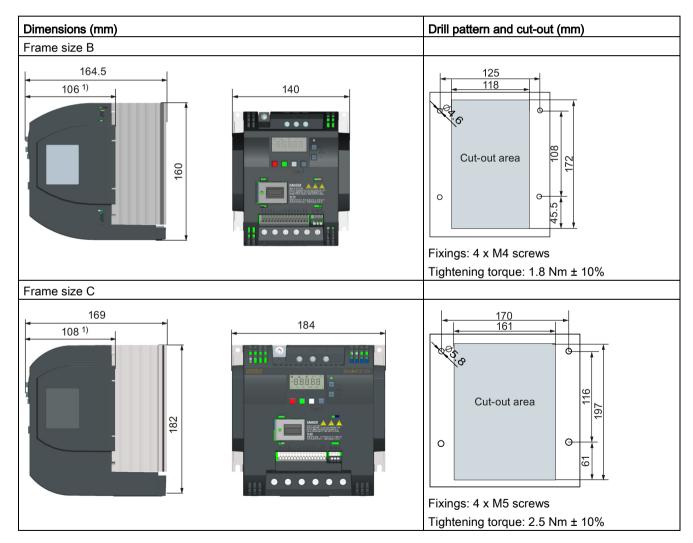



3.4 Push-through mounting (frame sizes B ... E)

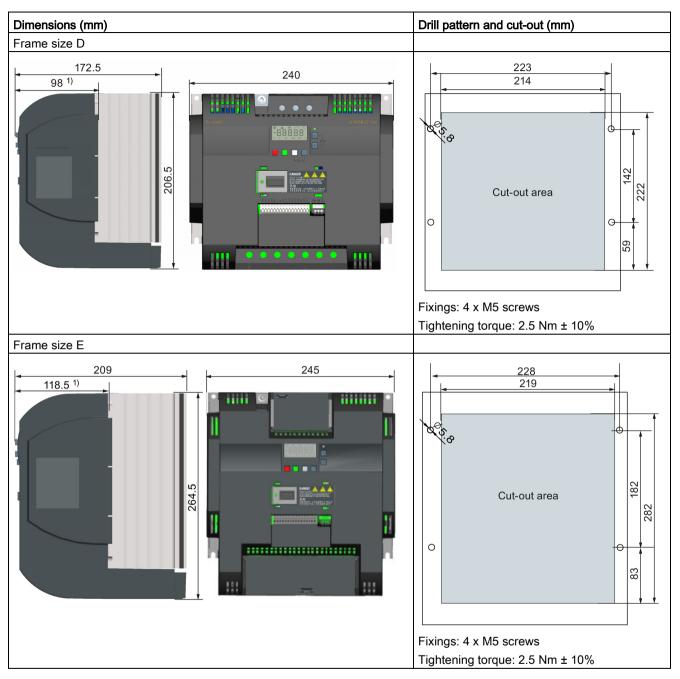


1) Depth inside the cabinet

Mounting

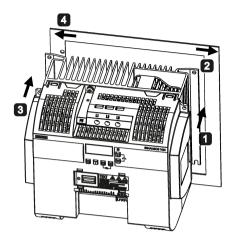

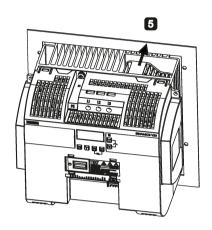


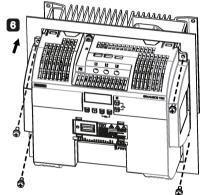

- 1 For FSB to FSD: Push one side of the heatsink through the back of the cabinet panel. For FSE: Push the right side of the heatsink through the back of the cabinet panel.
- 2 Move the heatsink towards the edge of the cut-out area until the concaved slot of the heatsink engages with the edge of the cut-out area.
- 3 Push the other side of the heatsink through the back of the cabinet panel.
- Move the heatsink towards the edge of the cut-out area until sufficient space for pushing the entire heatsink through the back of the cabinet panel is left.
- 5 Push the entire heatsink through the back of the cabinet panel.
- **6** Align the four mounting holes in the inverter with the corresponding holes in the cabinet panel. Fix the aligned holes with four screws.

Note

A gap is reserved at the bottom of the cut-out area to allow fan removal from outside the cabinet without removing the inverter.

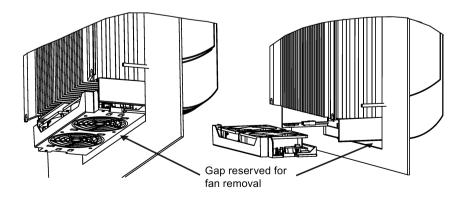

3.5 DIN rail mounting (frame sizes AA ... B)

By means of the optional DIN rail mounting kit, you can mount the frame size AA, AB, AC, A, or B to the DIN rail.

Two additional mounting methods are also available for different frame sizes. For more information, refer to the following sections:

- Cabinet panel mounting (Page 22)
- Push-through mounting (frame sizes B ... E) (Page 27)


Note


To install or remove the inverter, use a cross-tip or flat-bit screwdriver.


Installing and removing FSAA/FSAB/FSAC to and from the DIN rail


For more information, see Section "Migration mounting kit for FSAA ... FSAC (Page 383)".

Installing FSA/FSAC to the DIN rail

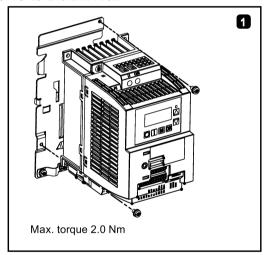


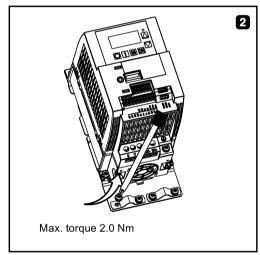


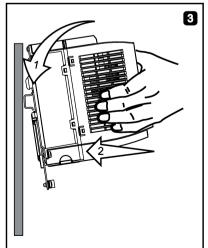


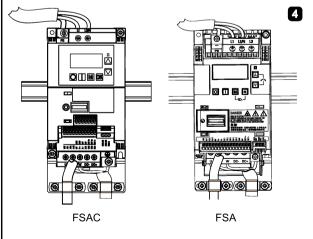


Removing FSA/FSAC from the DIN rail

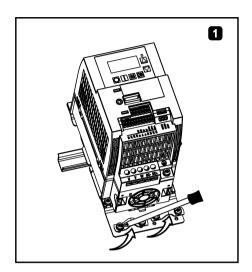


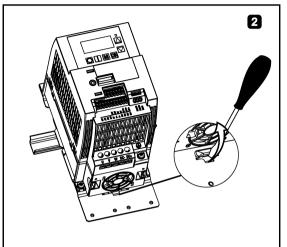


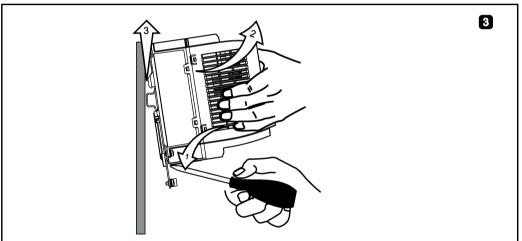


Installing FSB to the DIN rail

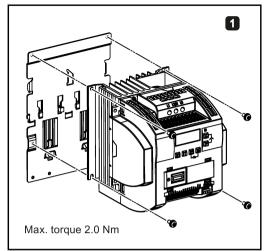


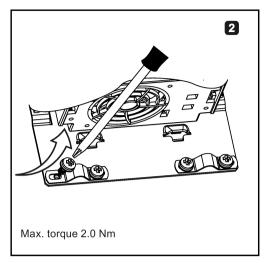


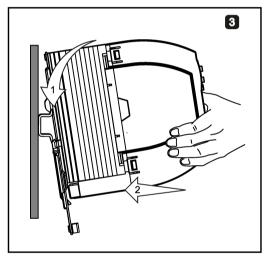

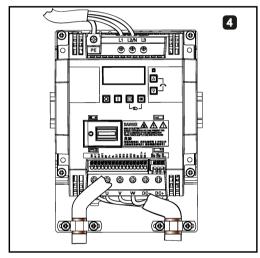

Removing FSB from the DIN rail

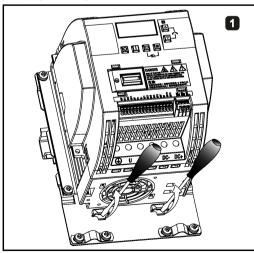

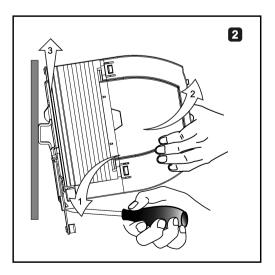

Electrical installation

Third-party motors that can be operated

You can operate standard asynchronous motors from other manufacturers with the inverter:

NOTICE

Motor damage due to the use of an unsuitable third-party motor


A higher load occurs on the motor insulation in inverter mode than with mains operation. Damage to the motor winding may occur as a result.

Please observe the notes in the System Manual "Requirements for third-party motors"

Additional information is provided on the Internet: Requirements for third-party motors (https://support.industry.siemens.com/cs/ww/en/view/79690594)

4.1 Typical system connections

Typical system connections

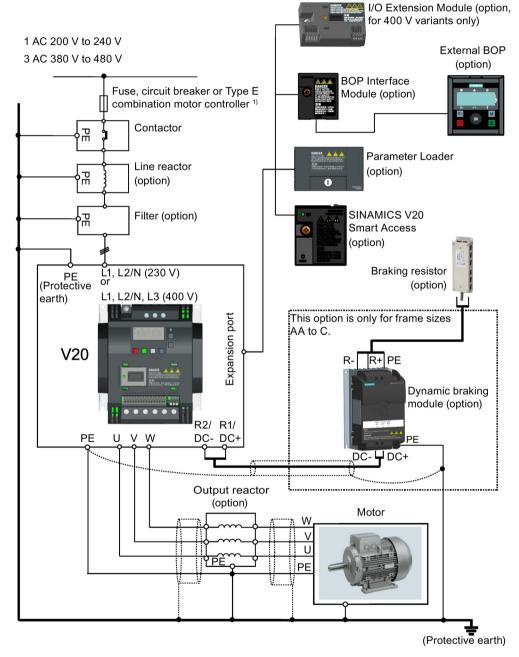

¹⁾ For more information on the permissible types for these branch circuit protection devices, see the Product Information of Protective Devices for SINAMICS V20 Inverter (https://support.industry.siemens.com/cs/ww/en/ps/13208/man).

Note

Requirements for United States/Canadian installations (UL/cUL)

For configurations in conformance with UL/cUL, use the UL/cUL approved fuses, circuit breakers and Type E combination motor controllers (CMC). Refer to the Product Information of Protective Devices for SINAMICS V20 Inverter

(https://support.industry.siemens.com/cs/ww/en/ps/13208/man) for specific types of branch circuit protection for each inverter and corresponding Short-Circuit Current Rating (SCCR). For each frame size, use 75 °C copper wire only.

This equipment is capable of providing internal motor overload protection according to UL508C/UL61800-5-1. In order to comply with UL508C/UL61800-5-1, parameter P0610 must not be changed from its factory setting of 6.

For Canadian (cUL) installations the inverter mains supply must be fitted with any external recommended suppressor with the following features:

- Surge-protective devices; device shall be a Listed Surge-protective device (Category code VZCA and VZCA7)
- Rated nominal voltage 480/277 VAC (for 400 V variants) or 240 VAC (for 230 V variants),
 50/60 Hz, three phase (for 400 V variants) or single phase (for 230V variants)
- Clamping voltage VPR = 2000 V (for 400 V variants)/1000 V (for 230 V variants), IN = 3 kA min, MCOV = 508 VAC (for 400 V variants)/264 VAC (for 230V variants), short circuit current rating (SCCR) = 40 kA
- Suitable for Type 1 or Type 2 SPD application
- · Clamping shall be provided between phases and also between phase and ground



Risk of electric shock and fire from a network with an excessively high impedance

Excessively low short-circuit currents can lead to the protective devices not tripping or tripping too late, and so causing electric shock or a fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the inverter is connected to the line supply at least meets the minimum requirements for the response of the protective device used.
- You must use an additional residual-current device (RCD) if a conductor-ground short circuit does not reach the short-circuit current required for the protective device to respond. The required short-circuit current can be too low, especially for TT systems.



AWARNING

Risk of electric shock and fire from a network with an impedance that is too low

Excessively high short-circuit currents can lead to the protective devices not being able to interrupt these short-circuit currents and being destroyed, and so causing electric shock or a fire.

 Ensure that the uninfluenced short-circuit current at the line terminal of the inverter does not exceed the breaking capacity (SCCR or Icc) of the protective device used.

4.1 Typical system connections





Danger to life through electric shock as well as fire hazard due to protective devices that either do not trip or trip too late

Overcurrent protective equipment that trips too late or not all can cause electric shock or fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the inverter is connected to the line supply corresponds as a minimum to the requirements of the protective equipment used.
- You must additionally use a residual-current protective device (RCD) if, for a conductorground short circuit, the required short-circuit current is not reached. Especially for TT line systems, the required short-circuit can be too low.
- It is not permissible that the short-circuit current exceeds the SCCR or the lcc of the inverter and the disconnecting capacity of the protective equipment.





Danger to life caused by high leakage currents for an interrupted protective conductor

The inverter components conduct a high leakage current via the protective conductor. The earth leakage current of the SINAMICS V20 inverter may exceed 3.5 mA AC.

Touching conductive parts when the protective conductor is interrupted can result in death or serious injury.

A fixed earth connection or a multicore supply cable with connectors for industrial applications according to IEC 60309 is required and the minimum size of the protective earth conductor shall comply with the local safety regulations for high leakage current equipment.




MARNING

Danger to life due to fire spreading because of an unsuitable or improperly installed braking resistor

Using an unsuitable or improperly installed braking resistor can cause fires and smoke to develop. Fire and smoke development can cause severe personal injury or material damage.

- Only use braking resistors that are approved for the inverter.
- Install the braking resistor in accordance with regulations.
- Monitor the temperature of the braking resistor.

Wiring diagram

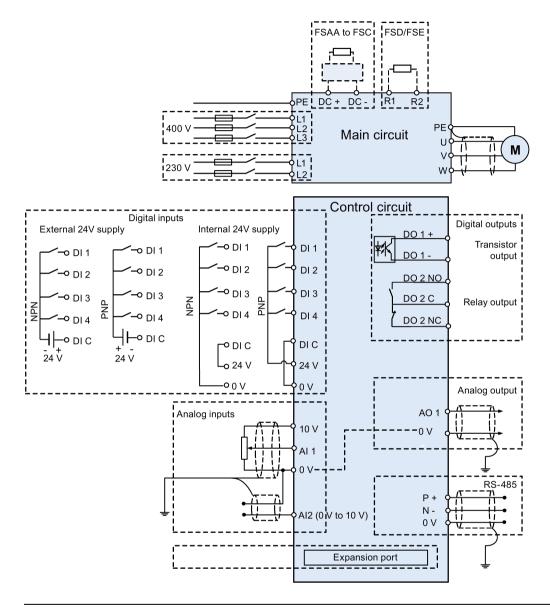


Note

The resistance of the potentiometer for each analog input must be $\geq 4.7 \text{ k}\Omega$.

4.1 Typical system connections

The optional I/O Extension Module can expand the number of V20 I/O terminals. See the following for the wiring diagram of the I/O Extension Module:

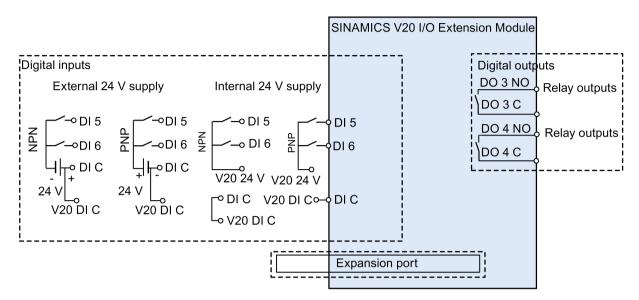





Electric shock and danger to life due to connection to an unsuitable power system

If DO3 and DO4 are used in a power supply system that exceeds overvoltage category II (OVC II), contact with live parts of the V20 inverter and its options including expansion ports, SELV (Safety Extra Low Voltage) terminals, and connected wires can result in death or severe injury.

• Use DO3 and DO4 only in the power system whose voltage does not exceed OVC II.


Note


- To use the DIs on both the V20 and the I/O Extension Module as a single group of DIs, connect the V20 DI C to the DI C on the I/O Extension Module (see the previous figure).
- To use the DIs on both the V20 and the I/O Extension Module as two separate groups of DIs, do not connect the V20 DI C to the DI C on the I/O Extension Module.

For more information about the wiring diagram, see Section "Setting connection macros (Page 65)".


4.2 Terminal description

Terminal layout

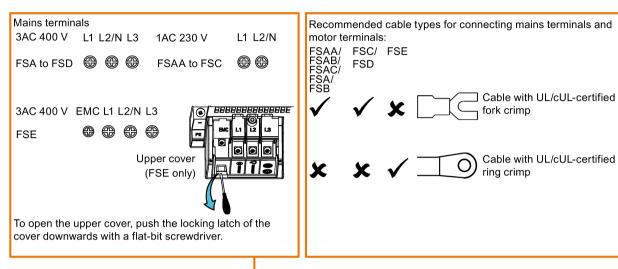

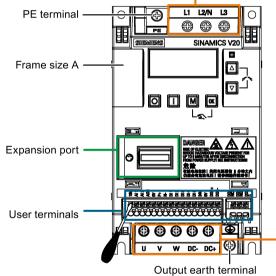


Align a flat-bit screwdriver (bit size: 0.4 x 2.5 mm) with the terminal. Push it downwards on the release lever with a maximum force of 12 N and insert the control wire from below.

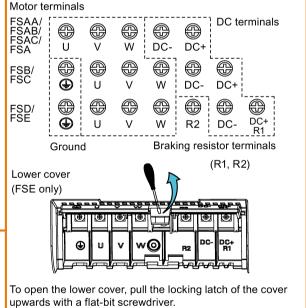


4.2 Terminal description

User terminals for FSAA/FSAB:

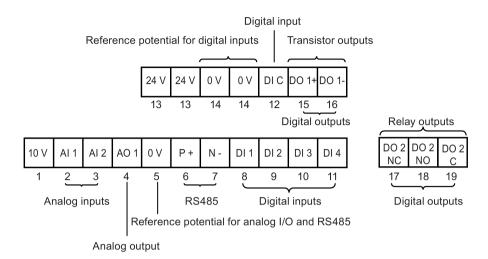

User terminals for FSA to FSE:

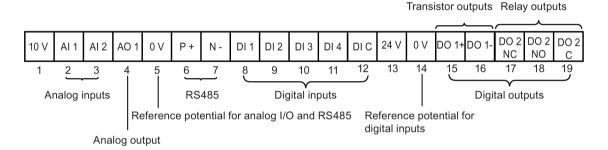

NOTICE

Inverter damage due to overvoltage


Using signal cables of more than 30 m at the digital inputs and 24 V power supply can lead to overvoltage during switching operations. This can result in damage to the inverter.

 Make sure that you use signal cables of equal to or smaller than 30 m at the digital inputs and 24 V power supply.

Note

To disconnect the integrated EMC filter on FSE from the ground, you can use a Pozidriv or flat-bit screwdriver to remove the EMC screw.

User terminals for I/O Extension Module (option):



Recommended cable cross-sections, crimp types and screw tightening torques


Material


Crimp body: copper Insulation: nylon

Plating: tin

Fork crimp







Frame size	Rated output	Cri mp	Mains and P	E term	inals			Motor/DC/b	Motor/DC/braking resistor/output earth terminals		t earth termi-	
	power (kW)	typ e	Cable cross- section 1)	d (m m)	W (mm)	L (mm)	Screw tight- ening torque (Nm/lbf.in) ²⁾	Cable cross-section 1)	d (mm)	W (mm)	L (mm)	Screw tight- ening torque (Nm/lbf.in) ²⁾
400 V												
Α	0.37 0.75	U	1.0 mm ² (14)	≥ 3.7	< 8	> 22	1.0/8.9	1.0 mm ² (14)	≥ 3.7	< 8	> 22	1.0/8.9
	1.1 2.2		1.5 mm ² (14)					1.5 mm ² (14)				
В	3.0 4.0		4 mm ² (10)	≥ 3.7	< 8	> 25		2.5 mm ² (12)	≥ 4.2	< 8	> 22	1.5/13.3
С	5.5		4 mm ² (10)	≥ 5.2	< 12	> 25	2.4/21.2	4 mm ² (10)	≥ 5.2	< 12	> 25	2.4/21.2
D	7.5		6 mm ² (10)	≥	< 12	> 28		6 mm ² (10)	≥ 5.2	< 12	> 28	
	11 15		10 mm ² (6)	5.2								
E	18.5	0	10 mm ² (6)	≥	< 13	> 30		10 mm ² (6)	≥ 5.2	< 13	> 30	
	22		16 mm ² (4)	5.2				6 mm ² (8)				
	30		25 mm ² (3)					10 mm ² (6)				
230 V												
AA/AB	0.12 0.25	U	1.0 mm ² (14)	≥ 4.2	< 7	> 22	1.0/8.9	1.0 mm ²	≥ 3.2	< 7	> 22	1.0/8.9
	0.37 0.55		1.5 mm ² (14)					(14)				
	0.75		2.0 mm ² (14)						_			
AC	1.1 1.5		4.0 mm ² (12)					2.5 mm ²				
В	1.1 1.5		6.0 mm ² (10)	≥ 3.7	< 8	> 25		(12)	≥ 4.2	< 8	> 22	1.5/13.3
С	2.2 3.0		10 mm ² (6)	≥ 5.2	12	> 25	2.4/21.2	4.0 mm ² (10)	≥ 5.2	< 12	> 25	2.4/21.2

¹⁾ Data in brackets indicates the corresponding AWG values.

²⁾ Tolerance: ± 10%

4.2 Terminal description

NOTICE

Damage to the mains terminals

During electrical installation of the inverter frame sizes AA to D, only cables with UL/cUL-certified fork crimps can be used for the mains terminal connections; for frame size E, only cables with UL/cUL-certified ring crimps can be used for the mains terminal connections.


Maximum motor cable lengths

Inverter variant	Maximum cable length							
	EMC compliant		Without outpu	Without output reactor		With output reactor		
400 V	With integrated EMC filter 1)	With external line filter 2)	Unshielded	Shielded	Unshielded	Shielded		
FSA	10 m	25 m	50 m	25 m	150 m	150 m		
FSB to FSD	25 m	25 m	50 m	25 m	150 m	150 m		
FSE	50 m	25 m	100 m	50 m	300 m	200 m		
230 V	With integrated EMC filter	With external line filter	Unshielded	Shielded	Unshielded	Shielded		
FSAA/FSAB	5 m ³⁾	5 m ³⁾	50 m	25 m	200 m	200 m		
FSAC	10 m ³⁾	10 m ²⁾	50 m	25 m	200 m	200 m		
FSB to FSC	25 m ²⁾	5 m ³⁾	50 m	25 m	200 m	200 m		

- 1) EMC (RE/CE C3) compliant, second environment (industrial area). RE/CE C3 refers to EMC compliance to EN61800-3 Category C3 (level equivalent to EN55011, Class A2) for Radiated and Conducted Emissions.
- EMC (RE/CE C2) compliant, first environment (residential area). RE/CE C2 refers to EMC compliance to EN61800-3 Category C2 (level equivalent to EN55011, Class A1) for Radiated and Conducted Emissions. See Section B.1.7 for the specifications of external line filters.
- EMC (RE/CE C1) compliant, first environment (residential area). RE/CE C1 refers to EMC compliance to EN61800-3 Category C1 (level equivalent to EN55011, Class B) for Radiated and Conducted Emissions.


Star-delta connection of the motor

Select delta connection if either a 230/400 V motor on a 400 V inverter or a 120/230 V motor on a 230 V inverter is supposed to operate at 87 Hz instead of 50 Hz.

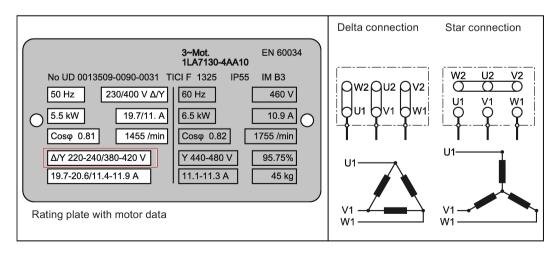

User terminals

The illustration below takes the user terminal layout for FSA to FSE for example.



	No.	Terminal marking	Description			
	1	10V	10 V output (tolerance ± 1% for the temperature range of 20 °C to 30 °C) referred to 0V, maximum 11 mA, short circuit protected			
Analog inputs	2	Al1	Mode:	Al1: Single-ended, bipolar current and voltage		
	3	AI2		mode Al2: Single-ended, unipolar current and voltage mode		
			Isolation to control circuit:	None		
			Voltage range:	AI1: -10 V to 10 V; AI2: 0 V to 10 V		
			Current range:	0 mA to 20 mA (4 mA to 20 mA - software selectable)		
			Voltage mode accuracy:	± 1% full scale for the temperature range of 20 °C to 30 °C		
			Current mode accuracy:	± 1% full scale for the temperature range of 20 °C to 30 °C		
			Input impedance:	Voltage mode: > 30 K		
				Current mode: 235 R		
			Resolution:	12-bit		
			Wire break detect:	Yes		
			Threshold $0 \Rightarrow 1$ (used as DIN):	4.0 V		
			Threshold 1 ⇒ 0 (used as DIN):	1.6 V		
			Response time (digital input mode):	4 ms ± 4 ms		
Analog output	4	AO1	Mode:	Single-ended, unipolar current mode		
			Isolation to control circuit:	None		
			Current range:	0 mA to 20 mA (4 mA to 20 mA - software selectable)		
			Accuracy (0 mA to 20 mA):	\pm 0.5 mA for the temperature range of -10 $^{\circ}\text{C}$ to 60 $^{\circ}\text{C}$		
			Output capability:	20 mA into 500 R		
	5	0V	Overall reference potential for RS48	5 communication and analog inputs/output		
	6	P+	RS485 P +			
	7	N-	RS485 N -			

4.2 Terminal description

	No.	Terminal marking	Description	
Digital inputs	8	DI1	Mode:	PNP (reference terminal low)
	9	DI2		NPN (reference terminal high)
	10	DI3		Characteristics values are inverted for NPN mode.
	11	DI4	location to control circuit	
	12	DI C	Isolation to control circuit:	Electrically isolated
			Absolute maximum voltage:	± 35 V for 500 ms every 50 seconds
			Operating voltage:	
			Threshold 0 ⇒ 1 (maximum):	11 V
			Threshold 1 ⇒ 0 (minimum):	5 V
			Input current (guaranteed off):	0.6 mA to 2 mA
			Input current (maximum on):	15 mA
			2-wire Bero compatibility:	No
			Response time:	4 ms ± 4 ms
			Pulse train input:	No
	13	24V	24 V output (tolerance: - 15 % to + isolated	- 20 %) referred to 0 V, maximum 50 mA, non-
	14	0V	Overall reference potential for digi	tal inputs
Digital out-	15	DO1 +	Mode:	Normally open voltage-free terminals, polarised
puts (transis-	16	DO1 -	Isolation to control circuit:	500 VDC (functional low voltage)
tor)			Maximum voltage across terminals:	± 35 V
			Maximum load current:	100 mA
			Response time:	4 ms ± 4 ms
Digital out-	17	DO2 NC	Mode:	Change-over voltage-free terminals, unpolarised
puts (relay) *	18	DO2 NO	Isolation to control circuit:	4 kV (230 V mains)
	19	DO2 C	Maximum voltage across terminals:	240 VAC/30 VDC + 10 %
			Maximum load current:	0.5 A @ 250 VAC, resistive
				0.5 A @ 30 VDC, resistive
			Response time:	Open: 7 ms ± 7 ms
				Close: 10 ms ± 9 ms

^{*} The optional I/O Extension Module provides additional DIs and DOs which share the same technical specifications as those on the SINAMICS V20 inverter.



Risk of electric shock

The input and output terminals, numbered 1 to 16, are safety extra low voltage (SELV) terminals and must only be connected to low voltage supplies.

Recommended I/O terminal cable cross-section

Cable type	Recommended cable cross-section *
Solid or stranded cable	0.5 mm ² to 1 mm ² (20 to 18)
Ferrule with insulating sleeve	0.25 mm ² (24)

^{*} Data in brackets indicates the corresponding AWG values.

Expansion port

The expansion port is designed for connecting the inverter to the external option module - BOP Interface Module, Parameter Loader, SINAMICS V20 Smart Access, or I/O Extension Module, in order to realize the following functions:

- Operating the inverter from the external BOP that is connected to the BOP Interface Module
- Cloning parameters between the inverter and a standard SD card through the Parameter Loader
- Powering the inverter from the Parameter Loader, when mains power is not available
- Accessing the inverter from a connected device (conventional PC with wireless network adapter installed, tablet, or smart phone) with the aid of SINAMICS V20 Smart Access
- Providing additional DIs and DOs to realize more inverter control functions through the I/O Extension Module

For more information about these option modules, see Sections "Parameter Loader (Page 345)", "External BOP and BOP Interface Module (Page 350)", "Commissioning using SINAMICS V20 Smart Access (Page 135)", and "I/O Extension Module (Page 389)".


4.3 EMC-compliant installation

EMC-compliant installation of the inverter

The shield connection kit is supplied as an option for each frame size. For more information about this option, see Appendix "Shield connection kits (Page 377)". It allows easy and efficient connection of the necessary shield to achieve EMC-compliant installation of the inverter. If no shield connection kit is used, you can alternatively mount the device and additional components on a metal mounting plate with excellent electrical conductivity and a large contact area. This mounting plate must be connected to the cabinet panel and the PE or EMC bus bar.

The following diagram shows an example of EMC-compliant installation of the inverter frame size B/C.

4.3 EMC-compliant installation

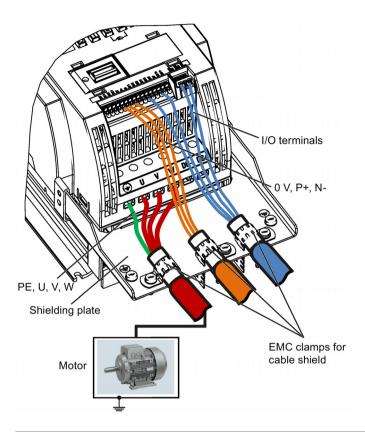

NOTICE

Inverter damage due to improper mains disconnection

Improper mains disconnection can cause inverter damage.

Do not perform mains diconnection on the motor-side of the system if the inverter is in operation and the output current is not zero.

Note

Cable connection

Separate the control cables from the power cables as much as possible.

Keep the connecting cables away from rotating mechanical parts.

EMC-compliant installation of external line filter options

All 400 V inverters must be mounted in a cabinet with a special EMC gasket around the door. All the following ferrite cores are recommended in accordance with EN 55011.

For 400 V unfiltered frame size B inverters fitted with the filters specified in Section B.1.7:

To meet the radiated and conducted emissions Class A, attach 1 x ferrite core of Type "WeiAiPu V18004", or equivalent in the vicinity of the motor output terminals (U, V, and W, excluding the PE terminal) of the inverter.

For 400 V unfiltered frame size C inverters fitted with the filters specified in Section B.1.7:

To meet the radiated and conducted emissions Class A, attach 1 x ferrite core of Type "Wurth 742-715-4", or equivalent in the vicinity of the inverter mains terminals.

For 400 V unfiltered frame size D inverters fitted with the filters specified in Section B.1.7:


To meet the radiated and conducted emissions Class A, attach 2 x ferrite cores of Type "Wurth 742-715-5" or equivalent in the vicinity of the inverter mains terminals; attach 1x ferrite core of Type "Wurth 742-712-21" or equivalent in the vicinity of the external line filter mains terminals.

For 400 V unfiltered frame size E inverters fitted with the filters specified in Section B.1.7:

To meet the radiated and conducted emissions Class A, attach 1 x ferrite core of Type "Seiwa E04SRM563218" or equivalent in the vicinity of the inverter mains terminals; attach 2 x ferrite cores of Type "Seiwa E04SRM563218" or equivalent in the vicinity of the motor terminals of the inverter.

For 230 V filtered frame size AA/AB inverters:

To meet the radiated and conducted emissions Class B, attach 1 x ferrite core of Type "K3 NF-110-A(N)GY0", or equivalent in the vicinity of the motor output terminals (U, V, and W, excluding the PE terminal) of the inverter; attach 1x ferrite core of Type "K3 NF-110-A(N)GY0" or equivalent on the motor cable outside the threaded hole of the cabinet; attach 2 x ferrite cores of Type "K3 NF-110-A(N)GY0" or equivalent on the motor cable in the vicinity of the motor.

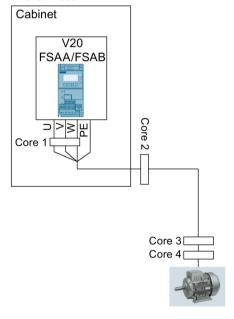

For 230 V filtered and unfiltered frame size AC inverters with the maximum motor cable length of 10 $\,\mathrm{m}$:


To meet the radiated and conducted emissions Class B, attach 1 x ferrite core of Type "BRH A2 RC 16*28*9 MB", or equivalent in the vicinity of the motor output terminals (U, V, and W, excluding the PE terminal) of the inverter.

For 230 V filtered frame size C inverters:

To meet the radiated and conducted emissions Class A, attach 1 x ferrite core of Type "TDG TPW33", or equivalent in the vicinity of the inverter mains terminals.

Shielding method

The following illustration shows an example with and without the shielding plate.

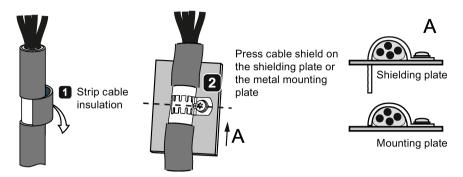


4.4 EMC-compliant cabinet design

The most cost-effective method of implementing interference suppression measures within the control cabinet is to ensure that interference sources and potentially susceptible equipment are installed separately from each other.

The control cabinet has to be divided into EMC zones and the devices within the control cabinet have to be assigned to these zones following the rules below.

- The different zones must be electromagnetically decoupled by using separate metallic housings or grounded separation plates.
- If necessary, filters and/or coupling modules should be used at the interfaces of the zones.
- Cables connecting different zones must be separated and must not be routed within the same cable harness or cable channel.
- All communication (e.g. RS485) and signal cables leaving the cabinet must be shielded.

4.4 EMC-compliant cabinet design

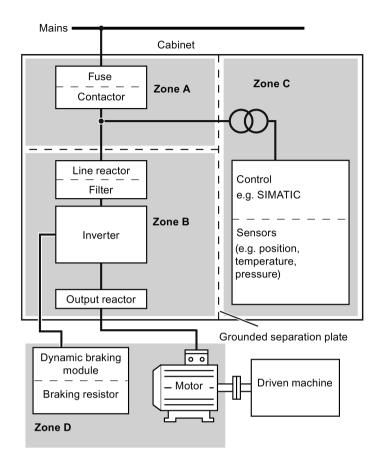

4.4 EMC-compliant cabinet design

Note

For a detailed description of parameter settings for the quick commissioning, refer to the topic "Quick commissioning (Page 62)".




AWARNING

Hot surface

During operation and for a short time after switching-off the inverter, the marked surfaces of the inverter can reach a high temperature. Avoid coming into direct contact with these surfaces.

5.1 The built-in Basic Operator Panel (BOP)

5.1.1 Introduction to the built-in BOP

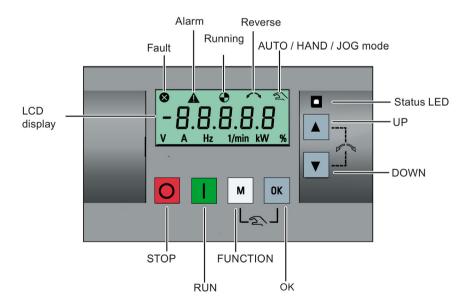

Button functions

	Otomo the important				
	Stops the inverter	T			
	Single press	OFF1 stop reaction: the inverter brings the motor to a standstill in the ramp- down time set in parameter P1121.			
		Exception:			
		The button is inactive if the inverter is configured for control from terminals or USS/MODBUS on RS485 (P0700=2 or P0700=5) in AUTO mode.			
	Double press (< 2 s) or long press (> 3 s)	OFF2 stop reaction: the inverter allows the motor to coast to a standstill without using any ramp-down times.			
	Starts the inverter	,			
	If the inverter is started in F	HAND/JOG/AUTO mode, the inverter running icon () appears.			
	Exception:				
	This button is inactive when RS485 (P0700=2 or P0700	n the inverter is configured for control from terminals or USS/MODBUS on 0=5) in AUTO mode.			
	Multi-function button				
M	Short press (< 2 s)	Enters the parameter setting menu or moves to the next screen in the setup menu			
		Restarts the digit by digit editing on the selected item			
		Returns to the fault code display			
		If pressed twice in digit by digit editing, returns to the previous screen			
		without changing the item being edited			
	Long press (> 2 s)	Returns to the status screen			
		Enters the setup menu			
	Short press (< 2 s)	·			
ОК	Short press (< 2 s)	Switches between status values			
		Enters edit value mode or change to the next digit			
		Clears faults			
		Returns to the fault code display			
	Long press (> 2 s)	Quick parameter number or value edit			
		Accesses fault information data			
	Hand/Jog/Auto	1			
M + OK	Press to switch between di	fferent modes:			
		M + 0K			
	M + 0K M + 0K				
	Auto mode	Hand mode M			
	/ Mile mode	oog mode			
	(No icon)	(With hand icon) (With flashing hand icon)			
	(,	(Will hashing hand both)			
	Note:	·			
	Jog mode is only available	if the motor is stopped.			
L	Took mode to any aramable if the motor to dropped.				

	When navigating through a menu, it moves the selection up through the screens available.
	When editing a parameter value, it increases the displayed value.
	When the inverter is in RUN mode, it increases the speed.
	• Long press (> 2 s) of the key quickly scrolls up through parameter numbers, indices, or values.
	When navigating through a menu, it moves the selection down through the screens available.
	When editing a parameter value, it decreases the displayed value.
	When the inverter is in RUN mode, it decreases the speed.
	• Long press (> 2 s) of the key quickly scrolls down through parameter numbers, indices, or values.
A +	Reverses the direction of rotation of the motor. Pressing the two keys once activates reverse motor rotation. Pressing the two keys once again deactivates reverse rotation of the motor. The reserve icon ($\nearrow \nearrow$) on the display indicates that the output speed is opposite to the setpoint.

Note

Unless otherwise specified, operations of the above keys always indicate short press (< 2 s).


Inverter status icons

8	Inverter has at least or	Inverter has at least one pending fault.				
A	Inverter has at least or	Inverter has at least one pending alarm.				
•	• : Inverter is running (motor speed may be 0 rpm).					
	• (flashing):	Inverter may be energized unexpectedly (for example, in frost protection mode).				
\(\)	Motor rotates in the reversed direction.					
2	হ :	Inverter is in HAND mode.				
	হ্ম (flashing):	Inverter is in JOG mode.				

5.1.2 Inverter menu structure


Menu	Description
50/60 Hz selection menu	This menu is visible only on first power-up or after a factory reset.
Main menu	
Display menu (default display)	Basic monitoring view of key parameters such as frequency, voltage, current, DC-link voltage, and so on.
Setup menu	Access to parameters for quick commissioning of the inverter system.
Parameter menu	Access to all available inverter parameters.

5.1 The built-in Basic Operator Panel (BOP)

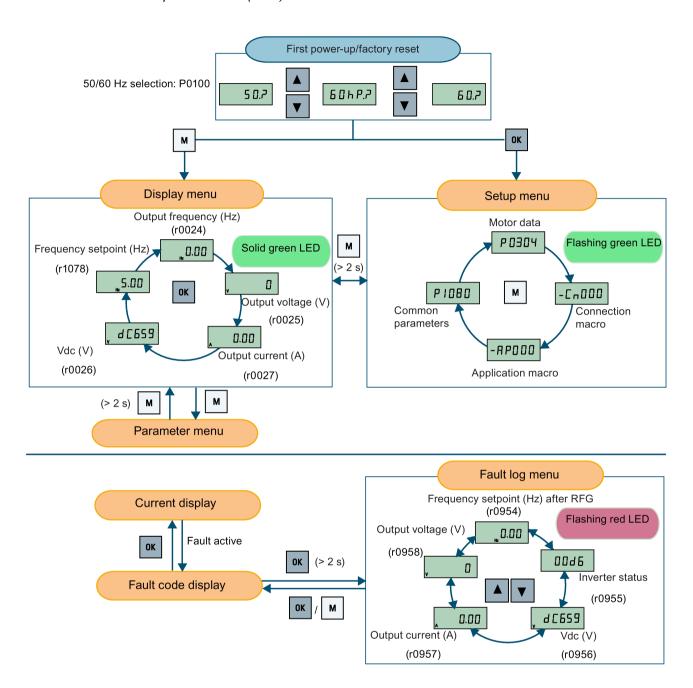

5.1.3 Viewing inverter status

The display menu provides a basic monitoring view of some key parameters such as frequency, voltage, current, and so on.

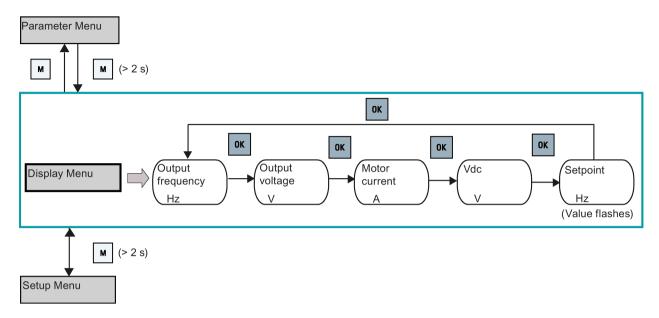

Note

- If you have set P0005 to a non-zero value which represents the parameter number selected in P0005, then the inverter displays the value of the selected parameter in the display menu by default. For more information about normal editing of parameters, see Section "Editing parameters (Page 56)".
- For more information about the display menu structure with active faults, see Section "Faults (Page 323)".

5.1.4 Editing parameters

This section describes how to edit the parameters.

Parameter types

Parameter type		Description
CDS-dependent pa	rameters	Dependent on Command Data Set (CDS)
		Always indexed with [02] *
		Available for CDS switching via P0810 and P0811
DDS-dependent pa	rameters	Dependent on Inverter Data Set (DDS)
		Always indexed with [02]
		Available for DDS switching via P0820 and P0821
Other parameters	Multi-indexed parameters	These parameters are indexed with the range of indices dependent on the individual parameter.
	Index-free parameters	These parameters are not indexed.

^{*} Each CDS-dependent parameter has only one default value, despite of their three indices. Exception: By default, P1076[0] and P1076[2] are set to 1 while P1076[1] is set to 0.

Normal editing of parameters

Note


Pressing or for longer than two seconds to quickly increase or decrease the parameter numbers or indexes is only possible in the parameter menu.

This editing method is best suited when small changes are required to parameter numbers, indexes, or values.

- To increase or decrease the parameter number, index, or value, press ▲ or ▼ for less than two seconds.
- To quickly increase or decrease the parameter number, index, or value, press ▲ or ▼
 for longer than two seconds.
- To confirm the setting, press ok.
- To cancel the setting, press .

Example:

Editing parameter values

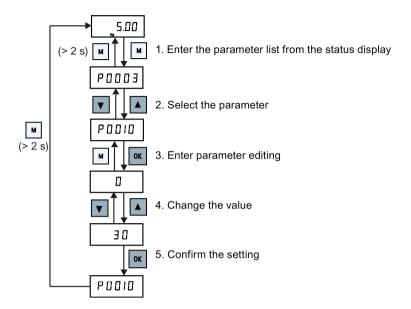


Digit-by-digit editing

Note

Digit-by-digit editing of parameter numbers or indexes is only possible in the parameter menu.

Digit-by-digit editing can be performed on parameter numbers, parameter indexes, or parameter values. This editing method is best suited when large changes are required to parameter numbers, indexes, or values. For information about the inverter menu structure, refer to Section "Inverter menu structure (Page 53)".

- In any edit or scroll mode, digit-by-digit editing is entered by a long press (> 2 s) on
- The digit-by-digit editing always starts with the rightmost digit.
- Each digit is selected in turn by pressing
- Pressing once moves the cursor to the rightmost digit of the current item.
- Pressing
 <u>M</u> twice in succession exits the digit-by-digit mode without changing the item being edited.
- Pressing or on a digit when there are no further digits to the left saves the value.
- If more digits are required to the left, then these must be added by scrolling the existing leftmost digit above 9 to add more digits to the left.
- Pressing or for over two seconds enters fast digit scrolling.

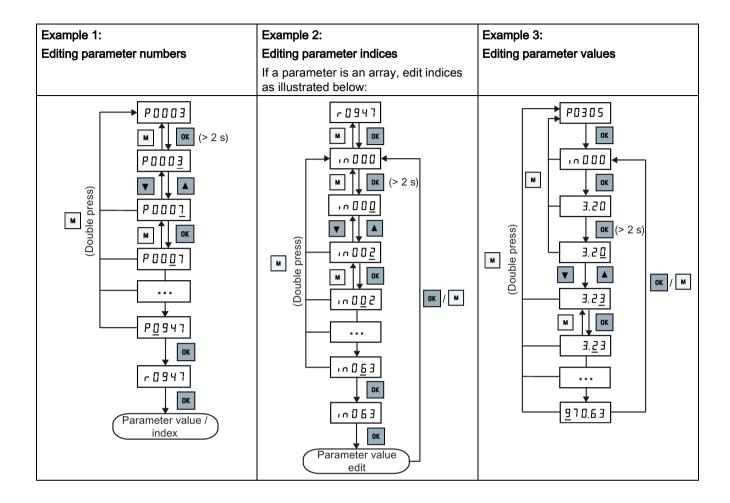

5.1.5 Screen displays

The following two tables show you basic screen displays:

Screen infor- mation	Display	Meaning
"8 8 8 8 8"	88888	Inverter is busy with internal data processing.
""		Action not completed or not possible
"Pxxxx"	P0304	Writable parameter
"rxxxx"	r0026	Read-only parameter
"inxxx"	10001	Indexed parameter
Hexadecimal number	E 6 3 1	Parameter value in hex format

Screen infor- mation	Display	Meaning
"bxx x"	bit number signal state: 0: Low 1: High	Parameter value in bit format
"Fxxx"	F 3 9 5	Fault code
"Axxx"	R 9 3 0	Alarm code
"Cnxxx"	E ~ 0 0 1	Settable connection macro
"-Cnxxx"	-[0 0 1 1	Current selected connection macro
"APxxx"	AP030	Settable application macro
"-APxxx"	-APO 10	Current selected application macro

"A"	R	"G"	9	"N"	П	"T"	Ł
"B"	Ь	"H"	h	"O"	٥	"U"	П
"C"	Ε	" "	1	"P"	P	"V"	П
"D"	Ь	"J"	J	"Q"	9	"X"	H
"E"	Ε	"L"	L	"R"		"Y"	4
"F"	F	"M"	П	"S"	5	"Z"	2
0 to 9	0123456789					"?"	٦.

5.1.6 LED states

The SINAMICS V20 has only one LED for status indications. The LED can display orange, green, or red.

5.2 Checking before power-on

If more than one inverter state exists, the LED displays in the following order of priority:

- Parameter cloning
- · Commissioning mode
- All faults
- Ready (no fault)

For example, if there is an active fault when the inverter is in the commissioning mode, the LED flashes green at 0.5 Hz.

Inverter state	LED color		
Power up	Orange		
Ready (no fault)	Green		
Commissioning mode	Slow flashing green at 0.5 Hz		
All faults	Fast flashing red at 2 Hz		
Parameter cloning	Flashing orange at 1 Hz		

5.2 Checking before power-on

Perform the following checks before you power on the inverter system:

- Check that all cables have been connected correctly and that all relevant product and plant/location safety precautions have been observed.
- Ensure that the motor and the inverter are configured for the correct supply voltage.
- Tighten all screws to the specified tightening torque.

5.3 Setting the 50/60 Hz selection menu

Note


The 50/60 Hz selection menu is visible only on first power-up or after a factory reset (P0970). You can make a selection using the BOP or exit the menu without making a selection, and the menu will not be displayed unless a factory reset is performed.

The motor base frequency also can be selected by changing P0100 to the desired value.

Functionality

This menu is used to set the motor base frequency according to which region of the world that the motor is used in. The menu determines whether power settings (for example, rated motor power P0307) are expressed in [kW] or [hp].

Parameter	Value	Description
P0100	0	Motor base frequency is 50 Hz (default) → Europe [kW]
	1	Motor base frequency is 60 Hz → United States/Canada [hp]
	2	Motor base frequency is 60 Hz → United States/Canada [kW]

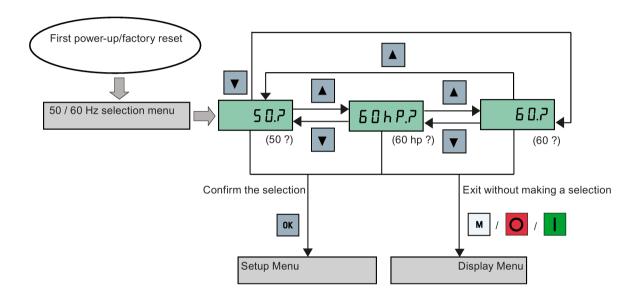

5.4 Starting the motor for test run

This section describes how to start the motor for a test run to check that the motor speed and rotation direction are correct.

Note

To run the motor, the inverter must be in the display menu (default display) and power-on default state with P0700 (selection of command source) = 1.

If you are now in the setup menu (the inverter displays "P0304"), press for over two seconds to exit the setup menu and enter the display menu.

You can start the motor in HAND or JOG mode.

5.5 Quick commissioning

Starting the motor in HAND mode

- 1. Press I to start the motor.
- 2. Press o to stop the motor.

Starting the motor in JOG mode

- 1. Press

 +

 to switch from HAND to JOG mode (the

 icon flashes).
- 2. Press I to start the motor. Release I to stop the motor.

5.5 Quick commissioning

5.5.1 Quick commissioning through the setup menu


5.5.1.1 Structure of the setup menu

Functionality of the setup menu

The setup menu guides you through the steps required for quick commissioning of the inverter system. It consists of the following four sub-menus:

	Sub-menu	Functionality
1	Motor data	Sets nominal motor parameters for quick commissioning
2	Connection macro selection	Sets macros required for standard wiring arrangements
3	Application macro selection	Sets macros required for certain common applications
4	Common parameter selection	Sets parameters required for inverter performance optimization

Menu structure

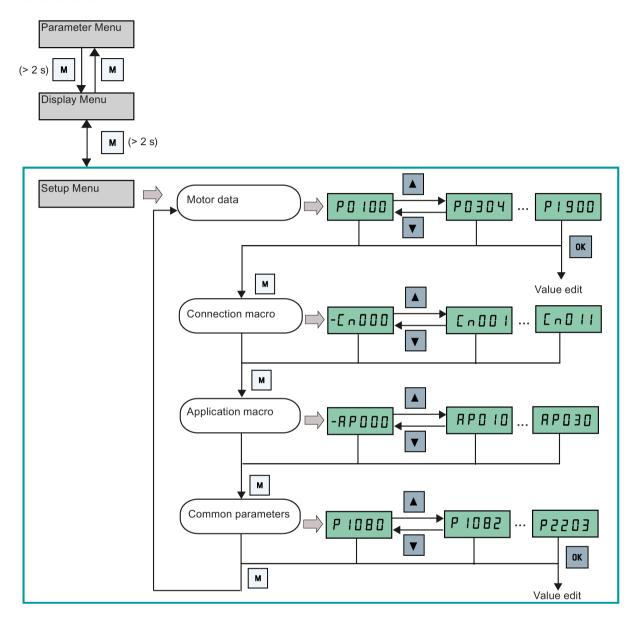

5.5.1.2 Setting motor data

Functionality

This menu is designed for easy setup of nominal motor nameplate data.

Text menu

If you set P8553 to 1, parameter numbers in this menu are replaced with short text.

Setting parameters

Note

In the table below, "•" indicates that the value of this parameter must be entered according to the rating plate of the motor.

Parameter	Access level	Function	Text menu
			(if P8553 = 1)
P0100	1	50/60 Hz selection	E U - U 5
		=0: Europe [kW], 50 Hz (factory default)	
		=1: North America [hp], 60 Hz	(EU - US)
		=2: North America [kW], 60 Hz	
P0304[0] •	1	Rated motor voltage [V]	
		Note that the input of rating plate data must correspond with the wiring of the motor (star/delta)	(MOT V)
P0305[0] •	1	Rated motor current [A]	
		Note that the input of rating plate data must correspond with the wiring of the motor (star/delta)	(MOT A)
P0307[0] •	1	Rated motor power [kW/hp]	P0100 = 0 or 2:
		If P0100 = 0 or 2, motor power unit = [kW]	Not P
		If P0100 = 1, motor power unit = [hp]	/ C C /
			(MOT P)
			P0100 =1:
			NothP
			(MOT HP)
P0308[0] •	1	Rated motor power factor (cosφ)	ПСОБ
		Visible only when P0100 = 0 or 2	
			(M COS)
P0309[0] •	1	Rated motor efficiency [%]	N EFF
		Visible only when P0100 = 1	
		Setting 0 causes internal calculation of value.	(M EFF)
P0310[0] •	1	Rated motor frequency [Hz]	ПЕСЕЯ
			(M FREQ)
P0311[0] •	1	Rated motor speed [RPM]	П-РП
			(M RPM)
P1900	2	Select motor data identification	UOF 19
		= 0: Disabled	
		= 2: Identification of all parameters in standstill	(MOT ID)

5.5.1.3 Setting connection macros

NOTICE

Connection macro settings

When commissioning the inverter, the connection macro setting is a one-off setting. Make sure that you proceed as follows before you change the connection macro setting to a value different from your last setting:

- 1. Do a factory reset (P0010 = 30, P0970 = 1)
- 2. Repeat the quick commissioning and change the connection macro

Failure to observe may cause the inverter to accept the parameter settings from both the currently and the previously selected macros, which may lead to undefined and unexplainable inverter operation.

However, communication parameters P2010, P2011, P2021 and P2023 for connection macros Cn010 and Cn011 are not reset automatically after a factory reset. If necessary, reset them manually.

After changing P2023 setting for Cn010 or Cn011, power-cycle the inverter. During the power-cycle, wait until LED has gone off or the display has gone blank (may take a few seconds) before re-applying power.

Note

The wiring diagrams later in this section use PNP control mode as examples.


Functionality

This menu selects which macro is required for standard wiring arrangements. The default one is "Cn000" for connection macro 0.


All connection macros only change the CDS0 (command data set 0) parameters. The CDS1 parameters are used for the BOP control.

Connection macro	Description	Display example
Cn000	Factory default setting. Makes no parameter changes.	0 0 0 0
Cn001	BOP as the only control source	
Cn002	Control from terminals (PNP/NPN)	[0001
Cn003	Fixed speeds	
Cn004	Fixed speed in binary mode	The minus sign indicates that this macro is the cur-
Cn005	Analog input and fixed frequency	rently selected macro.
Cn006	External push button control	
Cn007	External push button with analog setpoint	
Cn008	PID control with analog input reference	
Cn009	PID control with the fixed value reference	
Cn010	USS control	
Cn011	MODBUS RTU control	

Setting connection macros

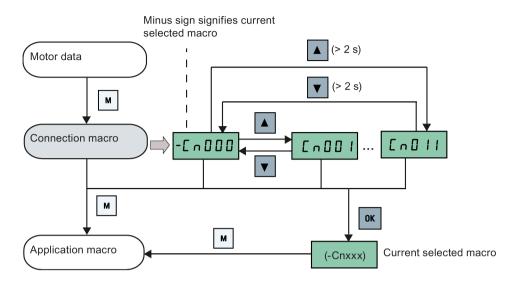

Connection macro Cn001 - BOP as the only control source

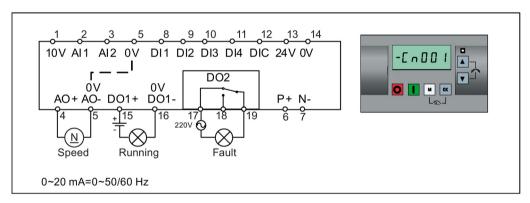



Parameter	Description	Factory default	Default for Cn001	Remarks
P0700[0]	Selection of command source	1	1	ВОР
P1000[0]	Selection of frequency	1	1	BOP MOP
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active
P0771[0]	CI: Analog output	21	21	Actual frequency
P0810[0]	BI: CDS bit 0 (Hand/Auto)	0	0	Hand mode

Connection macro Cn002 - Control from terminals (PNP/NPN)

External control - Potentiometer with setpoint

Both NPN and PNP can be realized with the same parameters. You can change the connection of the digital input common terminal to 24 V or 0 V to decide the mode.

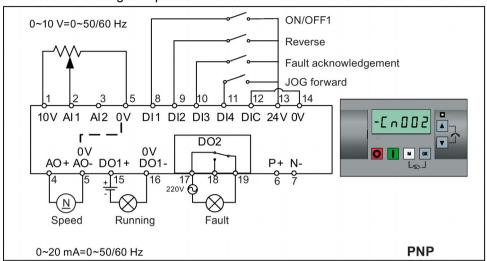

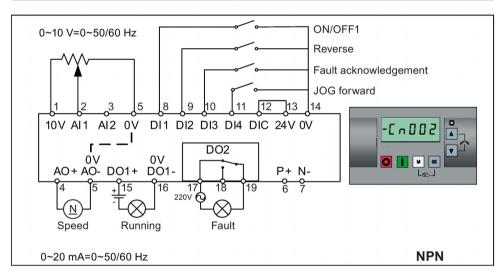


Parameter	Description	Factory default	Default for Cn002	Remarks
P0700[0]	Selection of command source	1	2	Terminal as command source
P1000[0]	Selection of frequency	1	2	Analog as speed setpoint
P0701[0]	Function of digital input 1	0	1	ON/OFF
P0702[0]	Function of digital input 2	0	12	Reverse
P0703[0]	Function of digital input 3	9	9	Fault acknowledgement
P0704[0]	Function of digital input 4	15	10	JOG forward
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active

Connection macro Cn003 - Fixed speeds

Three fixed speeds with ON/OFF1

If more than one fixed frequency is selected at the same time, the selected frequencies are summed, that is, FF1 + FF2 + FF3.

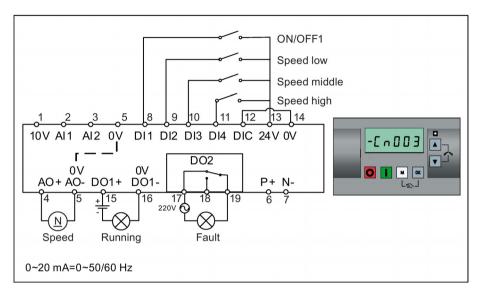


Parameter	Description	Factory default	Default for Cn003	Remarks
P0700[0]	Selection of command source	1	2	Terminal as command source
P1000[0]	Selection of frequency	1	3	Fixed frequency
P0701[0]	Function of digital input 1	0	1	ON/OFF
P0702[0]	Function of digital input 2	0	15	Fixed speed bit 0
P0703[0]	Function of digital input 3	9	16	Fixed speed bit 1
P0704[0]	Function of digital input 4	15	17	Fixed speed bit 2
P1016[0]	Fixed frequency mode	1	1	Direct selection mode
P1020[0]	BI: Fixed frequency selection bit 0	722.3	722.1	DI2
P1021[0]	BI: Fixed frequency selection bit 1	722.4	722.2	DI3
P1022[0]	BI: Fixed frequency selection bit 2	722.5	722.3	DI4
P1001[0]	Fixed frequency 1	10	10	Speed low
P1002[0]	Fixed frequency 2	15	15	Speed middle
P1003[0]	Fixed frequency 3	25	25	Speed high
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active

Connection macro Cn004 - Fixed speeds in binary mode

Fixed speeds with ON command in binary mode

Up to 16 different fixed frequency values (0 Hz, P1001 to P1015) can be selected by the fixed frequency selectors (P1020 to P1023). For more information about the fixed frequencies in binary mode, see the parameter descriptions of P1001 to P1016 in Section "Parameter list (Page 187)".

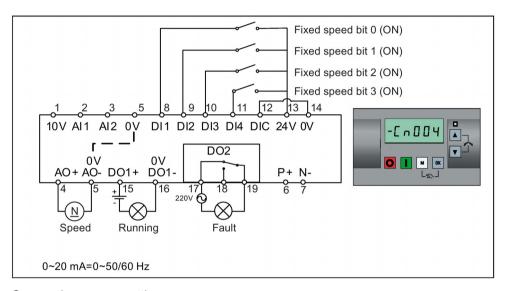


Parameter	Description	Factory default	Default for Cn004	Remarks
P0700[0]	Selection of command source	1	2	Terminals as command source
P1000[0]	Selection of frequency	1	3	Fixed frequency
P0701[0]	Function of digital input 1	0	15	Fixed speed bit 0
P0702[0]	Function of digital input 2	0	16	Fixed speed bit 1
P0703[0]	Function of digital input 3	9	17	Fixed speed bit 2
P0704[0]	Function of digital input 4	15	18	Fixed speed bit 3
P1001[0]	Fixed frequency 1	10	10	Fixed speed 1
P1002[0]	Fixed frequency 2	15	15	Fixed speed 2
P1003[0]	Fixed frequency 3	25	25	Fixed speed 3
P1004[0]	Fixed frequency 4	50	50	Fixed speed 4
P1016[0]	Fixed frequency mode	1	2	Binary mode
P0840[0]	BI: ON/OFF1	19.0	1025.0	Inverter starts at the fixed speed selected
P1020[0]	BI: Fixed frequency selection bit 0	722.3	722.0	DI1
P1021[0]	BI: Fixed frequency selection bit 1	722.4	722.1	DI2
P1022[0]	BI: Fixed frequency selection bit 2	722.5	722.2	DI3
P1023[0]	BI: Fixed frequency selection bit 3	722.6	722.3	DI4
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active

Connection macro Cn005 - Analog input and fixed frequency


The analog input works as an additional setpoint.

If digital input 2 and digital input 3 are active together, the selected frequencies are summed, that is, FF1 + FF2.

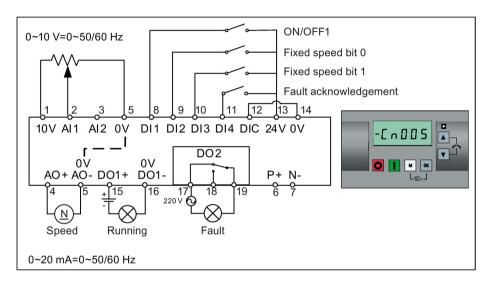

Function diagram

When the fixed speed is selected, the additional setpoint channel from the analog is disabled. If there is no fixed speed setpoint, the setpoint channel connects to the analog input.

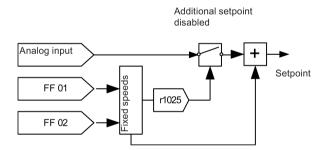


Parameter	Description	Factory default	Default for Cn005	Remarks
P0700[0]	Selection of command source	1	2	Terminals as command source
P1000[0]	Selection of frequency	1	23	Fixed frequency + analog setpoint
P0701[0]	Function of digital input 1	0	1	ON/OFF
P0702[0]	Function of digital input 2	0	15	Fixed speed bit 0
P0703[0]	Function of digital input 3	9	16	Fixed speed bit 1
P0704[0]	Function of digital input 4	15	9	Fault acknowledgement
P1016[0]	Fixed frequency mode	1	1	Direct selection mode
P1020[0]	BI: Fixed frequency selection bit 0	722.3	722.1	DI2
P1021[0]	BI: Fixed frequency selection bit 1	722.4	722.2	DI3
P1001[0]	Fixed frequency 1	10	10	Fixed speed 1

Parameter	Description	Factory default	Default for Cn005	Remarks
P1002[0]	Fixed frequency 2	15	15	Fixed speed 2
P1074[0]	BI: Disable additional setpoint	0	1025.0	FF disables the additional setpoint
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active

Connection macro Cn006 - External push button control


Note that the command sources are pulse signals.

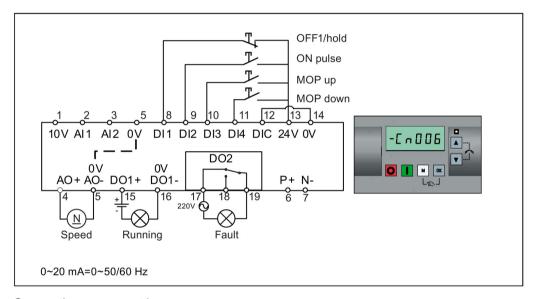


Parameter	Description	Factory default	Default for Cn006	Remarks
P0700[0]	Selection of command source	1	2	Terminals as command source
P1000[0]	Selection of frequency	1	1	MOP as setpoint
P0701[0]	Function of digital input 1	0	2	OFF1/hold
P0702[0]	Function of digital input 2	0	1	ON pulse
P0703[0]	Function of digital input 3	9	13	MOP up pulse
P0704[0]	Function of digital input 4	15	14	MOP down pulse
P0727[0]	Selection of 2/3-wire method	0	3	3-wire
				ON pulse + OFF1/hold + Reverse
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active
P1040[0]	Setpoint of the MOP	5	0	Initial frequency
P1047[0]	MOP ramp-up time of the RFG	10	10	Ramp-up time from zero to max- imum frequency
P1048[0]	MOP ramp-down time of the RFG	10	10	Ramp-down time from maximum frequency to zero

Connection macro Cn007 - External push buttons with analog control

Note that the command sources are pulse signals.

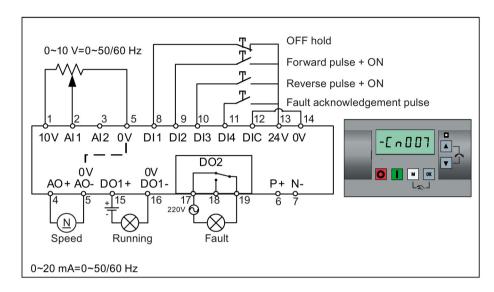


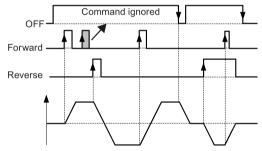

Connection macro settings:

Parameter	Description	Factory default	Default for Cn007	Remarks
P0700[0]	Selection of command source	1	2	Terminals as command source
P1000[0]	Selection of frequency	1	2	Analog
P0701[0]	Function of digital input 1	0	1	OFF hold
P0702[0]	Function of digital input 2	0	2	Forward pulse + ON
P0703[0]	Function of digital input 3	9	12	Reverse pulse + ON
P0704[0]	Function of digital input 4	15	9	Fault acknowledgement
P0727[0]	Selection of 2/3-wire method	0	2	3-wire
				STOP + Forward pulse + Reverse pulse
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active

Connection macro Cn008 - PID control with analog reference

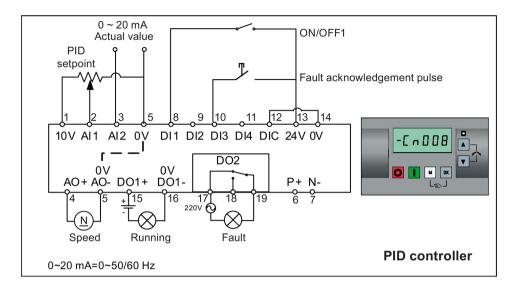


Note

If a negative setpoint for the PID control is desired, change the setpoint and feedback wiring as needed.

When you switch to Hand mode from PID control mode, P2200 becomes 0 to disable the PID control. When you switch it back to Auto mode, P2200 becomes 1 to enable the PID control again.


Parameter	Description	Factory default	Default for Cn008	Remarks
P0700[0]	Selection of command source	1	2	Terminals as command source
P0701[0]	Function of digital input 1	0	1	ON/OFF
P0703[0]	Function of digital input 3	9	9	Fault acknowledgement
P2200[0]	BI: Enable PID controller	0	1	Enable PID
P2253[0]	CI: PID setpoint	0	755.0	PID setpoint = AI1
P2264[0]	CI: PID feedback	755.0	755.1	PID feedback = Al2
P0756[1]	Type of analog input	0	2	AI2, 0 mA to 20 mA
P0771[0]	CI: Analog output	21	21	Actual frequency
P0731[0]	BI: Function of digital output 1	52.3	52.2	Inverter running
P0732[0]	BI: Function of digital output 2	52.7	52.3	Inverter fault active

Connection macro Cn009 - PID control with the fixed value reference

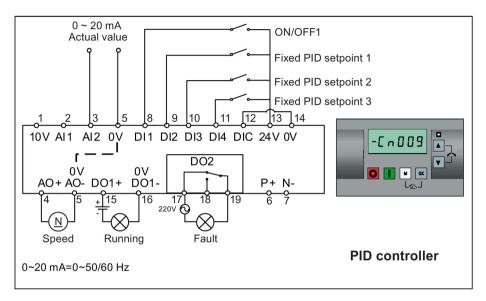

Parameter	Description	Factory default	Default for Cn009	Remarks
P0700[0]	Selection of command source	1	2	Terminals as command source
P0701[0]	Function of digital input 1	0	1	ON/OFF
P0702[0]	Function of digital input 2	0	15	DI2 = PID fixed value 1
P0703[0]	Function of digital input 3	9	16	DI3 = PID fixed value 2
P0704[0]	Function of digital input 4	15	17	DI4 = PID fixed value 3
P2200[0]	BI: Enable PID controller	0	1	Enable PID
P2201[0]	Fixed PID setpoint 1 [%]	10	10	-
P2202[0]	Fixed PID setpoint 2 [%]	20	20	-
P2203[0]	Fixed PID setpoint 3 [%]	50	50	-
P2216[0]	Fixed PID setpoint mode	1	1	Direct selection
P2220[0]	BI: Fixed PID setpoint select bit 0	722.3	722.1	BICO connection DI2
P2221[0]	BI: Fixed PID setpoint select bit 1	722.4	722.2	BICO connection DI3
P2222[0]	BI: Fixed PID setpoint select bit 2	722.5	722.3	BICO connection DI4
P2253[0]	CI: PID setpoint	0	2224	PID setpoint = fixed value
P2264[0]	CI: PID feedback	755.0	755.1	PID feedback = AI2


Connection macro Cn010 - USS control

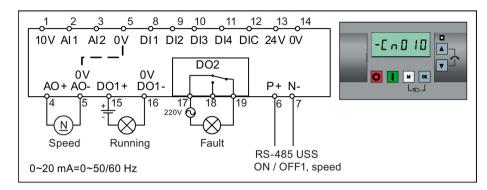

Connection macro settings:

Parameter	Description	Factory default	Default for Cn010	Remarks
P0700[0]	Selection of command source	1	5	RS485 as the command source
P1000[0]	Selection of frequency	1	5	RS485 as the speed setpoint
P2023[0]	RS485 protocol selection	1	1	USS protocol
P2010[0]	USS/MODBUS baudrate	6	8	Baudrate 38400 bps
P2011[0]	USS address	0	1	USS address for inverter
P2012[0]	USS PZD length	2	2	Number of PZD words
P2013[0]	USS PKW length	127	127	Variable PKW words
P2014[0]	USS/MODBUS telegram off time	2000	500	Time to receive data

Connection macro Cn011 - MODBUS RTU control

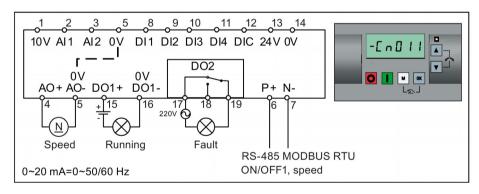

Parameter	Description	Factory default	Default for Cn011	Remarks
P0700[0]	Selection of command source	1	5	RS485 as the command source
P1000[0]	Selection of frequency	1	5	RS485 as the speed setpoint
P2023[0]	RS485 protocol selection	1	2	MODBUS RTU protocol
P2010[0]	USS/MODBUS baudrate	6	6	Baudrate 9600 bps
P2021[0]	MODBUS address	1	1	MODBUS address for inverter

5.5 Quick commissioning

Parameter	Description	Factory default	Default for Cn011	Remarks
P2022[0]	MODBUS reply timeout	1000	1000	Maximum time to send reply back to the master
P2014[0]	USS/MODBUS telegram off time	2000	100	Time to receive data
P2034	MODBUS parity on RS485	2	2	Parity of MODBUS telegrams on RS485
P2035	MODBUS stop bits on RS485	1	1	Number of stop bits in MODBUS telegrams on RS485

5.5.1.4 Setting application macros

NOTICE

Application macro settings

When commissioning the inverter, the application macro setting is a one-off setting. Make sure that you proceed as follows before you change the application macro setting to a value different from your last setting:

- 1. Do a factory reset (P0010 = 30, P0970 = 1)
- 2. Repeat the quick commissioning and change the application macro

Failure to observe may cause the inverter to accept the parameter settings from both the currently and the previously selected macros, which may lead to undefined and unexplainable operation.


Functionality

This menu defines certain common applications. Each application macro provides a set of parameter settings for a specific application. After you select an application macro, the corresponding settings are applied to the inverter to simplify the commissioning process.

The default application macro is "AP000" for application macro 0. If none of the application macros fits your application, select the one that is the closest to your application and make further parameter changes as desired.

Application macro	Description	Display example
AP000	Factory default setting. Makes no parameter changes.	
AP010	Simple pump applications	-RP000
AP020	Simple fan applications	
AP021	Compressor applications	RPO 10
AP030	Conveyor applications	
		The minus sign indicates that this macro is the currently selected macro.

Setting application macros

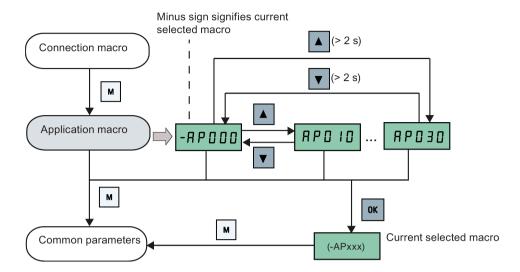

Application macro AP010 - Simple pump applications

Parameter	Description	Factory default	Default for AP010	Remarks
P1080[0]	Minimum frequency	0	15	Inverter running at a lower speed inhibited
P1300[0]	Control mode	0	7	Quadratic V/f
P1110[0]	BI: Inhibit negative frequency setpoint	0	1	Reverse pump rotation inhibited
P1210[0]	Automatic restart	1	2	Restart after mains blackout
P1120[0]	Ramp-up time	10	10	Ramp-up time from zero to maximum frequency
P1121[0]	Ramp-down time	10	10	Ramp-down time from maximum frequency to zero

Application macro AP020 - Simple fan applications

Parameter	Description	Factory default	Default for AP020	Remarks
P1110[0]	BI: Inhibit negative frequency setpoint	0	1	Reverse fan rotation inhibited
P1300[0]	Control mode	0	7	Quadratic V/f
P1200[0]	Flying start	0	2	Search for the speed of the running motor with a heavy inertia load so that the motor runs up to the setpoint
P1210[0]	Automatic restart	1	2	Restart after mains blackout
P1080[0]	Minimum frequency	0	20	Inverter running at a lower speed inhibited
P1120[0]	Ramp-up time	10	10	Ramp-up time from zero to maximum frequency
P1121[0]	Ramp-down time	10	20	Ramp-down time from maximum frequency to zero

Application macro AP021 - Compressor applications

Parameter	Description	Factory default	Default for AP021	Remarks
P1300[0]	Control mode	0	0	Linear V/f
P1080[0]	Minimum frequency	0	10	Inverter running at a lower speed inhibited
P1312[0]	Starting boost	0	30	Boost only effective when accelerating for the first time (standstill)
P1311[0]	Acceleration boost	0	0	Boost only effective when accelerating or braking
P1310[0]	Continuous boost	50	50	Additional boost over the complete frequency range
P1120[0]	Ramp-up time	10	10	Ramp-up time from zero to maximum frequency
P1121[0]	Ramp-down time	10	10	Ramp-down time from maximum frequency to zero

Application macro AP030 - Conveyor applications

Parameter	Description	Factory default	Default for AP030	Remarks
P1300[0]	Control mode	0	1	V/f with FCC
P1312[0]	Starting boost	0	30	Boost only effective when accelerating for the first time (standstill)
P1120[0]	Ramp-up time	10	5	Ramp-up time from zero to maximum frequency
P1121[0]	Ramp-down time	10	5	Ramp-down time from maximum frequency to zero

5.5.1.5 Setting common parameters

Functionality

This menu provides some common parameters for inverter performance optimization.

Text menu

If you set P8553 to 1, parameter numbers in this menu are replaced with short text.

Setting parameters

Parameter	Access level	Function	Text menu (if P8553 = 1)	Parameter	Access level	Function	Text menu (if P8553 =1)
P1080[0]	1	Minimum motor frequency	MIN F)	P1001[0]	2	Fixed frequency set- point 1	F , H F I (FIX F1)
P1082[0]	1	Maximum motor frequency	MAX F)	P1002[0]	2	Fixed frequency set- point 2	F : H F 2 (FIX F2)

Parameter	Access level	Function	Text menu (if P8553 = 1)	Parameter	Access level	Function	Text menu (if P8553 =1)
P1120[0]	1	Ramp-up time	r II P U P (RMP UP)	P1003[0]	2	Fixed frequency set- point 3	F , H F 3 (FIX F3)
P1121[0]	1	Ramp-down time	r II P d n (RMP DN)	P2201[0]	2	Fixed PID frequency setpoint 1	P . d F 1 (PID F1)
P1058[0]	2	JOG frequency	J 9 P (JOG P)	P2202[0]	2	Fixed PID frequency setpoint 2	(PID F2)
P1060[0]	2	JOG ramp-up time	Jog UP)	P2203[0]	2	Fixed PID frequency setpoint 3	(PID F3)
P1061[0]	2	JOG ramp-down time	(JOG DN)				

5.5.2 Quick commissioning through the parameter menu

As an alternative to quick commissioning through the setup menu, commissioning using the parameter menu provides the other solution for quick commissioning. This would be helpful for those who are used to commissioning the inverter in this way.

Quick commissioning methods

Conventional quick commissioning

This method requires you to complete quick commissioning with all the motor data given in the parameter setting table below.

• Estimated quick commissioning

This method provides an easier way to complete quick commissioning with limited motor data. Instead of entering all the motor data, you enter the rated motor power (P0301, in kW) and then the inverter estimates and then sets the values of the rest of the motor data including P0304, P0305, P0307, P0308, P0310 and P0311.

5.5 Quick commissioning

Restrictions on the estimated quick commissioning:

- This functionality is recommended at the rated supply voltage.
- This functionality is designed around the data for Siemens motors 1LE0001, 1TL0001, 1LE1 and 1LA7 although it may make reasonable approximations for other motor types.
- This functionality gives an estimate of the motor data values; however, if the motor is
 to operatre near the limits of its capability (rated power and current), then you must
 carry out the conventional quick commissioning.
- The value calculations only work with motors connected in star configuration and assume the supply frequency is 50 Hz.
- The calculations use the DC link voltage measurement and thus only work if mains is connected.
- The calculations are accurate only for 4-pole motors.
- The 87 Hz characteristic is not supported.

Setting parameters

Note

In the table below, "•" indicates that you must enter the value of this parameter according to the rating plate of the motor when you carry out the conventional quick commissioning.

Parameters for conventional quick commissioning	Parameters for estimated quick commissioning	Function	Setting
P0003 = 3	P0003 = 3	User access level	= 3 (Expert access level)
P0010 = 1	P0010 = 1	Commissioning parameter	= 1 (quick commissioning)
P0100	P0100 = 0	50/60 Hz selection	Set a value, if necessary:
			=0: Europe [kW], 50 Hz (factory default)
			=1: North America [hp], 60 Hz
			=2: North America [kW], 60 Hz
			Note:
			Set this parameter to 0 if you want to carry out the estimated quick commissioning.
P0301 = 0	P0301 > 0	Rated motor power [kW]	Range: 0 to 2000
			= 0: Conventional quick commissioning (factory default)
			> 0: Estimated quick commissioning
			Once you set this parameter to a non-zero value, you only need to enter the rated motor power and then the inverter calculates and sets the values of the rest of the motor data (P0304, P0305, P0307, P0308, P0310 and P0311).

Parameters for conventional quick commissioning	Parameters for estimated quick commissioning	Function	Setting
P0304[0] •	-	Rated motor voltage [V]	Range: 10 to 2000 Note:
			The input of rating plate data must correspond with the wiring of the motor (star/delta).
P0305[0] •	-	Rated motor current [A]	Range: 0.01 to 10000 Note:
			The input of rating plate data must correspond with the wiring of the motor (star/delta).
P0307[0] •	-	Rated motor power [kW/hp]	Range: 0.01 to 2000.0 Note:
			If P0100 = 0 or 2, motor power unit = [kW] If P0100 = 1, motor power unit = [hp]
P0308[0] •	-	Rated motor power factor	Range: 0.000 to 1.000
		(cosφ)	Note:
			This parameter is visible only when P0100 = 0 or 2.
P0309[0] •	-	Rated motor efficiency [%]	Range: 0.0 to 99.9
			Note:
			Visible only when P0100 = 1
			Setting 0 causes internal calculation of value.
P0310[0] •	-	Rated motor frequency [Hz]	Range: 12.00 to 550.00
P0311[0] •	-	Rated motor speed [RPM]	Range: 0 to 40000
P0335[0]	P0335[0]	Motor cooling	Set according to the actual motor cooling method
			= 0: Self-cooled (factory default)
			= 1: Force-cooled
			= 2: Self-cooled and internal fan
			= 3: Force-cooled and internal fan
P0640[0]	P0640[0]	Motor overload factor [%]	Range: 10.0 to 400.0 (factory default: 150.0)
			Note:
			The parameter defines motor overload current limit relative to P0305 (rated motor current).
P0700[0]	P0700[0]	Selection of command	= 0: Factory default setting
		source	= 1: Operator panel (factory default)
			= 2: Terminal
			= 5: USS/MODBUS on RS485
P1000[0]	P1000[0]	Selection of frequency set-	Range: 0 to 77 (factory default: 1)
		point	= 0: No main setpoint
			= 1: MOP setpoint
			= 2: Analog setpoint
			= 3: Fixed frequency
			= 5: USS/MODBUS on RS485
			= 7: Analog setpoint 2
			For additional settings, see Chapter "Parameter list (Page 183)".

5.5 Quick commissioning

Parameters for conventional quick commissioning	Parameters for estimated quick commissioning	Function	Setting
P1080[0]	P1080[0]	Minimum frequency [Hz]	Range: 0.00 to 550.00 (factory default: 0.00) Note: The value set here is valid for both clockwise and
			counter-clockwise rotation.
P1082[0]	P1082[0]	Maximum frequency [Hz]	Range: 0.00 to 550.00 (factory default: 50.00) Note:
			The value set here is valid for both clockwise and counter-clockwise rotation
P1120[0]	P1120[0]	Ramp-up time [s]	Range: 0.00 to 650.00 (factory default: 10.00) Note:
			The value set here means the time taken for motor to accelerate from standstill up to the maximum motor frequency (P1082) when no rounding is used.
P1121[0]	P1121[0]	Ramp-down time [s]	Range: 0.00 to 650.00 (factory default: 10.00) Note:
			The value set here means the time taken for motor to decelerate from the maximum motor frequency (P1082) down to standstill when no rounding is used.
P1300[0]	P1300[0]	Control mode	= 0: V/f with linear characteristic (factory default)
			= 1: V/f with FCC
			= 2: V/f with quadratic characteristic
			= 3: V/f with programmable characteristic
			= 4: V/f with linear eco
			= 5: V/f for textile applications
			= 6: V/f with FCC for textile applications
			= 7: V/f with quadratic eco
			= 19: V/f control with independent voltage setpoint
P3900 = 3	P3900 = 3	End of quick commissioning	= 0: No quick commissioning (factory default)
			= 1: End quick commissioning with factory reset
			= 2: End quick commissioning
			= 3: End quick commissioning only for motor data
			Note:
			After completion of calculation, P3900 and P0010 are automatically reset to their original value 0.
			The inverter displays "8.8.8.8.8" which indicates that it is busy with internal data processing.
P1900 = 2	P1900 = 2	Select motor data identification	= 0: Disabled (factory default)
			= 2: Identification of all parameters in standstill

5.6.1 Overview of inverter functions

The list below provides an overview of the main functions that the SINAMICS V20 supports. For detailed description of individual parameters, see Chapter "Parameter list (Page 183)".

- 2/3 wire control (P0727)
- 50/60 Hz customization (Page 60) (P0100)
- Adjustable PWM modulation (P1800 to P1803)
- Analog input terminal function control (P0712, P0713, r0750 to P0762)
- Analog output terminal function control (P0773 to r0785)
- Automatic restart (Page 117) (P1210, P1211)
- BICO function (r3978)
- Blockage clearing mode (Page 111) (P3350 to P3353, P3361 to P3364)
- Cavitation protection (Page 126) (P2360 to P2362)
- Command and setpoint source selection (P0700, P0719, P1000 to r1025, P1070 to r1084)
- Command data set (CDS) and inverter data set (DDS) (r0050, r0051, P0809 to P0821)
- Condensation protection (Page 119) (P3854)
- Continuous boost, acceleration boost and starting boost level control (Page 89) (P1310 to P1316)
- DC coupling function (Page 129)
- DC-link voltage control (Page 105) (P0210, P1240 to P1257)
- Digital input terminal function control (P0701 to P0713, r0722, r0724)
- Digital output terminal function control (P0731, P0732, P0747, P0748)
- Dual ramp operation (Page 128) (r1119 to r1199, P2150 to P2166)
- Economy mode (Page 113) (P1300, r1348)
- Energy consumption monitoring (r0039, P0040, P0042, P0043)
- Fault and warning reaction setting (r0944 to P0952, P2100 to P2120, r3113, P3981)
- Flying start (Page 116) (P1200 to r1204)
- Free function blocks (FFBs) (Page 115) (P2800 to P2890)
- Frost protection (Page 118) (P3852, P3853)
- Hammer start mode (Page 109) (P3350 to P3354, P3357 to P3360)
- High/low overload (HO/LO) modes (Page 132) (P0205)
 - A new parameter P0205 is added to enable the HO/LO selection for heavy/low load applications.
- Imax control (Page 104) (P1340 to P1346)

- Inverter keep-running operation (P0503)
- Inverter status at fault (Page 323) (r0954, r0955, r0956, r0957 and r0958)

This function enables you to read the relevant fault information through parameters concerned.

- JOG mode operation (Page 87) (P1055 to P1061)
- List of modified parameters (P0004)

A new value is added to parameter P0004 to enable the parameter filter which allows you to view the modified parameters.

MODBUS parity/stop bit selection (P2034, P2035)

New parameters P2034 and P2035 are added to enable MODBUS parity/stop bit selection.

- Motor blocking, load missing, belt failure detection (Page 106) (P2177 to r2198)
- Motor brake controls (Page 93) (holding brake, DC brake, compound brake and dynamic brake) (P1215 to P1237)
- Motor frequency display scaling (P0511, r0512)
- Motor staging (Page 123) (P2370 to P2380)
- Motorized potentiometer (MOP) mode selection (P1031 to r1050)
- ON/OFF2 function for digital inputs (P0701)

A new value is added to parameter P0701 to run the motor with the ON command or cancel the inverter pulses with the OFF2 command.

- Parameter cloning (Page 345) (P0802 to P0804, P8458)
- PID controller (Page 91) (P2200 to P2355)
- Pre-configured connection macros and application macros (P0507, P0717) (see also "Setting connection macros (Page 65)" and "Setting application macros (Page 76)".)
- Programmable V/f coordinates (P1320 to P1333)
- Protection of user-defined parameters (P0011, P0012, P0013)
- Skip frequency and resonance damping (P1091 to P1101, P1338)
- Sleep (hibernation) mode (Page 120) (P2365 to P2367)
- Slip compensation (P1334 to P1338)
- Super torque mode (Page 108) (P3350 to P3356)
- Text menu display (P8553) (see also "Setting motor data (Page 63)" and "Setting common parameters (Page 78)".)
- User access level control (P0003)
- USS/MODBUS communication on RS485 (P2010 to P2037) (Page 169)
- Various stop mode selection (Page 85) (P0840 to P0886)
- Wobble function (Page 122) (P2940 to r2955)

5.6.2 Commissioning basic functions


5.6.2.1 Selecting the stop mode

Functionality

Both the inverter and the user have to respond to a wide range of situations and stop the inverter if necessary. Thus operating requirements as well as inverter protective functions (e.g. electrical or thermal overload), or rather man-machine protective functions, have to be taken into account. Due to the different OFF functions (OFF1, OFF2, OFF3) the inverter can flexibly respond to the mentioned requirements. Note that after an OFF2/OFF3 command, the inverter is in the state "ON inhibit". To switch the motor on again, you need a signal low \rightarrow high of the ON command.

OFF1

The OFF1 command is closely coupled to the ON command. When the ON command is withdrawn, OFF1 is directly activated. The inverter is braked by OFF1 with the ramp-down time P1121. If the output frequency falls below the parameter value P2167 and if the time in P2168 has expired, then the inverter pulses are cancelled.

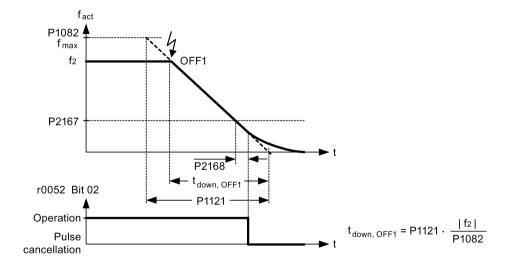


Note

- OFF1 can be entered using a wide range of command sources via BICO parameter P0840 (BI: ON/OFF1) and P0842 (BI: ON/OFF1 with reversing).
- BICO parameter P0840 is pre-assigned by defining the command source using P0700.
- The ON and the following OFF1 command must have the same source.
- If the ON/OFF1 command is set for more than one digital input, then only the digital input, that was last set, is valid.
- OFF1 is active low.
- When various OFF commands are selected simultaneously, the following priority applies:
 OFF2 (highest priority) OFF3 OFF1.
- OFF1 can be combined with DC current braking or compound braking.
- When the motor holding brake MHB (P1215) is activated, for an OFF1, P2167 and P2168 are not taken into account.

OFF2

The inverter pulses are immediately cancelled by the OFF2 command. Thus the motor coasts down and it is not possible to stop in a controlled way.

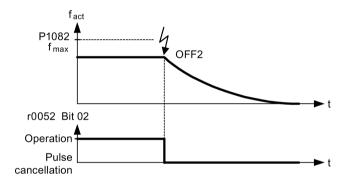


Note

- The OFF2 command can have one or several sources. The command sources are defined using BICO parameters P0844 (BI: 1. OFF2) and P0845 (BI: 2. OFF2).
- As a result of the pre-assignment (default setting), the OFF2 command is set to the BOP. This source is still available even if another command source is defined (e.g. terminal as command source → P0700 = 2 and OFF2 is selected using digital input 2 → P0702 = 3).
- OFF2 is active low.
- When various OFF commands are selected simultaneously, the following priority applies:
 OFF2 (highest priority) OFF3 OFF1.

OFF3

The braking characteristics of OFF3 are identical with those of OFF1 with the exception of the independent OFF3 ramp-down time P1135. If the output frequency falls below parameter value P2167 and if the time in P2168 has expired, then the inverter pulses are cancelled as for the OFF1 command.

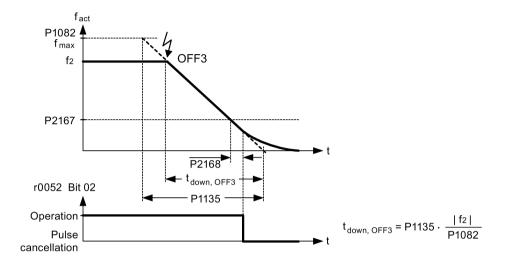

Note

- OFF3 can be entered using a wide range of command sources via BICO parameters P0848 (BI: 1. OFF3) and P0849 (BI: 2. OFF3).
- · OFF3 is active low.
- When various OFF commands are selected simultaneously, the following priority applies:
 OFF2 (highest priority) OFF3 OFF1

5.6.2.2 Running the inverter in JOG mode


Functionality

The JOG function can be controlled by either the (built-in) BOP or the digital inputs. When controlled by the BOP, pressing the RUN button will cause the motor to start and rotate at the pre-set JOG frequency (P1058). The motor stops when the RUN button is released.

When using the digital inputs as the JOG command source, the JOG frequency is set by P1058 for JOG right and P1059 for JOG left.

The JOG function allows:

- to check the functionality of the motor and inverter after commissioning has been completed (first traversing motion, checking the direction of rotation, etc.)
- to bring a motor or a motor load into a specific position
- to traverse a motor, e.g. after a program has been interrupted

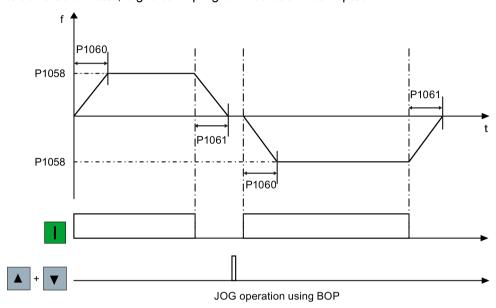

Setting parameters

Parameter	Function	Setting
P1055[02]	BI: Enable JOG right	This parameter defines source of JOG right when P0719 = 0 (Auto selection of command/setpoint source).
		Factory default: 19.8
P1056[02]	BI: Enable JOG left	This parameter defines source of JOG left when P0719 = 0 (Auto selection of command/setpoint source).
		Factory default: 0
P1057	JOG enable	= 1: Jogging is enabled (default)
P1058[02]	JOG frequency [Hz]	This parameter determines the frequency at which the inverter will run while jogging is active.
		Range: 0.00 to 550.00 (factory default: 5.00)
P1059[02]	JOG frequency left [Hz]	This parameter determines the frequency at which the inverter will run while JOG left is selected.
		Range: 0.00 to 550.00 (factory default: 5.00)
P1060[02]	JOG ramp-up time [s]	This parameter sets jog ramp-up time which is used while jogging is active.
		Range: 0.00 to 650.00 (factory default: 10.00)
P1061[02]	JOG ramp-down time [s]	This parameter sets jog ramp-down time which is used while jogging is active.
		Range: 0.00 to 650.00 (factory default: 10.00)

5.6.2.3 Setting the voltage boost

Functionality

For low output frequencies, the V/f characteristics only give a low output voltage. The ohmic resistances of the stator winding play a role at low frequencies, which are neglected when determining the motor flux in V/f control. This means that the output voltage can be too low in order to:

- implement the magnetization of the asynchronous motor
- hold the load
- overcome losses in the system.

The output voltage can be increased (boosted) in the inverter using the parameters as shown in the table below.


Boost type	Description
Continuous boost [%]	This parameter defines boost level relative to P0305 (rated motor current) applicable to both linear and quadratic V/f curves.
	Range: 0.0 to 250.0 (factory default: 50.0)
	The voltage boost is effective over the complete frequency range whereby the value continually decreases at high frequencies.
	V (P0304) Vn (P0304) Vn (P0304) Vn (P0304) Vn (P0304) Vn (P0304) Vn (P1082)
	•

Parameter	Boost type	Description
P1311	Acceleration boost [%]	This parameter applies boost relative to P0305 (rated motor current) following a positive setpoint change and drops back out once the setpoint is reached.
		Range: 0.0 to 250.0 (factory default: 0.0)
		The voltage boost is only effective when accelerating or braking.
		V ♠
		V _{max} +
		(P0304)
		Quida Wi
		V _{AccBoost}
		RFG active
		0 f _{set} f _n f _{max} f (P0310) (P1082)
P1312	Starting boost [%]	This parameter applies a constant linear offset relative to P0305 (rated motor current) to active V/f curve (either linear or quadratic) after an ON command and is active until:
		ramp output reaches setpoint for the first time respectively
		setpoint is reduced to less than present ramp output
		Range: 0.0 to 250.0 (factory default: 0.0)
		The voltage boost is only effective when accelerating for the first time (standstill).
		V A
		V _{max}
		Vn
		(P0304)
		Output
		MorralVII
		Kodi
		V _{StartBoost}
		RFG
		active
		f_{set} f_{n} f_{max} f
		(P0310) (P1082)

5.6.2.4 Setting the PID controller

Functionality

The integrated PID controller (technology controller) supports all kinds of simple process control tasks, e.g. controlling pressures, levels, or flowrates. The PID controller specifies the speed setpoint of the motor in such a way that the process variable to be controlled corresponds to its setpoint.

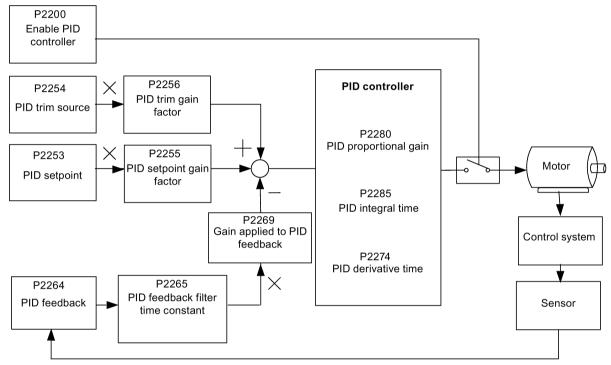

Related parameters for PID controller

Setting parameters

Parameter	Function	Setting
Main function	parameters	
P2200[02]	Bl: Enable PID controller	This parameter allows user to enable/disable the PID controller. Setting to 1 enables the PID closed-loop controller.
		Setting 1 automatically disables normal ramp times set in P1120 and P1121 and the normal frequency setpoints.
		Factory default: 0
P2235[02]	BI: Enable PID-MOP (UP-cmd)	This parameter defines source of UP command.
		Possible sources: 19.13 (BOP), 722.x (Digital Input), 2036.13 (USS on RS485)
P2236[02]	BI: Enable PID-MOP (DOWN-cmd)	This parameter defines source of DOWN command.
		Possible sources: 19.14 (BOP), 722.x (Digital Input), 2036.14 (USS on RS485)

Parameter	Function	Setting
	mmissioning parameters	·
P2251	PID mode	= 0: PID as setpoint (factory default)
		= 1: PID as trim source
P2253[02]	CI: PID setpoint	This parameter defines setpoint source for PID setpoint input.
	·	Possible sources: 755[0] (Analog input 1), 2018.1 (USS PZD 2), 2224 (Actual fixed PID setpoint), 2250 (Output setpoint of PID-MOP)
P2254[02]	CI: PID trim source	This parameter selects trim source for PID setpoint.
		Possible sources: 755[0] (Analog input 1), 2018.1 (USS PZD 2), 2224 (Actual fixed PID setpoint), 2250 (Output setpoint of PID-MOP)
P2255	PID setpoint gain factor	Range: 0.00 to 100.00 (factory default: 100.00)
P2256	PID trim gain factor	Range: 0.00 to 100.00 (factory default: 100.00)
P2257	Ramp-up time for PID setpoint [s]	Range: 0.00 to 650.00 (factory default: 1.00)
P2258	Ramp-down time for PID setpoint [s]	Range: 0.00 to 650.00 (factory default: 1.00)
P2263	PID controller type	= 0: D component on feedback signal (factory default)
		= 1: D component on error signal
P2264[02]	CI: PID feedback	Possible sources: 755[0] (Analog input 1), 2224 (Actual fixed PID setpoint), 2250 (Output setpoint of PID-MOP)
		Factory default: 755[0]
P2265	PID feedback filter time constant [s]	Range: 0.00 to 60.00 (factory default: 0.00)
P2267	Maximum value for PID feedback [%]	Range: -200.00 to 200.00 (factory default: 100.00)
P2268	Minimum value for PID feedback [%]	Range: -200.00 to 200.00 (factory default: 0.00)
P2269	Gain applied to PID feedback	Range: 0.00 to 500.00 (factory default: 100.00)
P2270	PID feedback function selector	= 0: Disabled (factory default)
		= 1: Square root (root(x))
		= 2: Square (x*x)
		= 3: Cube (x*x*x)
P2271	PID transducer type	= 0 : Disabled (factory default)
		= 1: Inversion of PID feedback signal
P2274	PID derivative time [s]	Range: 0.000 to 60.000
		Factory default: 0.000 (the derivative time does not have any effect)
P2280	PID proportional gain	Range: 0.000 to 65.000 (factory default: 3.000)
P2285	PID integral time [s]	Range: 0.000 to 60.000 (factory default: 0.000)
P2291	PID output upper limit [%]	Range: -200.00 to 200.00 (factory default: 100.00)
P2292	PID output lower limit [%]	Range: -200.00 to 200.00 (factory default: 0.00)
P2293	Ramp-up/-down time of PID limit [s]	Range: 0.00 to 100.00 (factory default: 1.00)
P2295	Gain applied to PID output	Range: -100.00 to 100.00 (factory default: 100.00)
P2350	PID autotune enable	= 0: PID autotuning disabled (factory default)
		= 1: PID autotuning via Ziegler Nichols (ZN) standard
		= 2: PID autotuning as 1 plus some overshoot (O/S)
		= 3: PID autotuning as 2 little or no overshoot (O/S)
		= 4: PID autotuning PI only, quarter damped response
P2354	PID tuning timeout length [s]	Range: 60 to 65000 (factory default: 240)
P2355	PID tuning offset [%]	Range: 0.00 to 20.00 (factory default: 5.00)

Parameter	Function	Setting				
Output value	Dutput values					
r2224	CO: Actual fixed PID setpoint [%]					
r2225.0	BO: PID fixed frequency status					
r2245	CO: PID-MOP input frequency of the F	RFG [%]				
r2250	CO: Output setpoint of PID-MOP [%]	CO: Output setpoint of PID-MOP [%]				
r2260	CO: PID setpoint after PID-RFG [%]	CO: PID setpoint after PID-RFG [%]				
P2261	PID setpoint filter time constant [s]					
r2262	CO: Filtered PID setpoint after RFG [%]					
r2266	CO: PID filtered feedback [%]					
r2272	CO: PID scaled feedback [%]					
r2273	CO: PID error [%]					
r2294	CO: Actual PID output [%]					

5.6.2.5 Setting the braking function

Functionality

The motor can be electrically or mechanically braked by the inverter via the following brakes:

- Electrical brakes
 - DC brake
 - Compound brake
 - Dynamic brake
- Mechanical brake
 - Motor holding brake

DC braking


DC braking causes the motor to stop rapidly by applying a DC braking current (current applied also holds shaft stationary). For DC braking, a DC current is impressed in the stator winding which results in a significant braking torque for an asynchronous motor.

DC braking is selected as follows:

- Sequence 1: selected after OFF1 or OFF3 (the DC brake is released via P1233)
- Sequence 2: selected directly with the BICO parameter P1230

Sequence 1


- 1. Enabled using P1233
- 2. DC braking is activated with the OFF1 or OFF3 command (see figure below)
- 3. The inverter frequency is ramped down along the parameterized OFF1 or OFF3 ramp down to the frequency at which DC braking is to start P1234.
- 4. The inverter pulses are inhibited for the duration of the de-magnetizing time P0347.
- 5. The required braking current P1232 is then impressed for the selected braking time P1233. The status is displayed using signal r0053 bit 00.

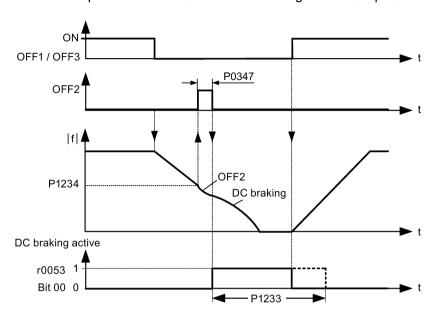

The inverter pulses are inhibited after the braking time has expired.

Sequence 2

- 1. Enabled and selected with the BICO parameter P1230 (see figure below).
- 2. The inverter pulses are inhibited for the duration of the de-magnetizing time P0347.
- 3. The requested braking current P1232 is impressed for the time selected and the motor is braked. This state is displayed using signal r0053 bit 00.
- 4. After DC braking has been cancelled, the inverter accelerates back to the setpoint frequency until the motor speed matches the inverter output frequency.

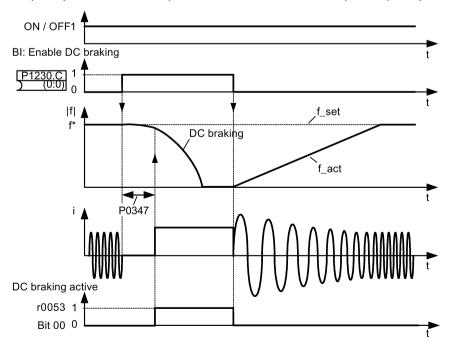

Setting parameters

Parameter	Function	Setting
P1230[02]	BI: Enable DC braking	This parameter enables DC braking via a signal applied from an external source. The function remains active while external input signal is active.
		Factory default: 0
P1232[02]	DC braking current [%]	This parameter defines level of DC current relative to rated motor current (P0305).
		Range: 0 to 250 (factory default: 100)
P1233[02]	Duration of DC braking [s]	This parameter defines duration for which DC braking is active following an OFF1 or OFF3 command.
		Range: 0.00 to 250.00 (factory default: 0.00)
P1234[02]	DC braking start frequency [Hz]	This parameter sets the start frequency for DC braking.
		Range: 0.00 to 550.00 (factory default: 550.00)
P0347[02]	Demagnetization time [s]	This parameter changes time allowed after OFF2/fault condition, before pulses can be re-enabled.
		Range: 0.000 to 20.000 (factory default: 1.000)



Motor overheat

For DC current braking, the motor kinetic energy is converted into thermal energy in the motor. If braking lasts too long, then the motor can overheat.

Note


The "DC braking" function is only practical for induction motors.

DC braking is not suitable to hold suspended loads.

While DC braking, there is no other way of influencing the inverter speed using an external control. When parameterizing and setting the inverter system, it should be tested using real loads as far as possible.

Compound braking

For compound braking (enabled using P1236), DC braking is superimposed with regenerative braking (where the inverter regenerates into the DC-link supply as it brakes along a ramp). Effective braking is obtained without having to use additional components by optimizing the ramp-down time (P1121 for OFF1 or when braking from f1 to f2, P1135 for OFF3) and using compound braking P1236.

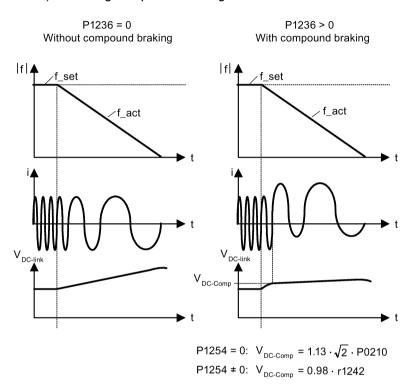

Setting parameters

Parameter	Function	Setting
P1236[02]	Compound braking current [%]	This parameter defines DC level superimposed on AC waveform after exceeding DC-link voltage threshold of compound braking. The value is entered in [%] relative to rated motor current (P0305).
		Range: 0 to 250 (factory default: 0)
P1254	Auto detect Vdc switch-on levels	This parameter enables/disables auto-detection of switch-on levels for Vdc_max controller.
		= 0: Disabled
		= 1: Enabled (factory default)
		It is recommended to set P1254 = 1 (auto detection of Vdc switch-on levels enabled). Note that auto detection only works when the inverter has been in standby for over 20s.



Motor overheat

For compound braking, regenerative braking is superimposed on the DC braking (braking along a ramp). This means that components of the kinetic energy of the motor and motor load are converted into thermal energy in the motor. This can cause the motor to overheat if this power loss is too high or if the brake operation takes too long!

Note


The compound braking depends on the DC link voltage only (see threshold in the above diagram). This will happen on OFF1, OFF3 and any regenerative condition. Compound braking is deactivated, if:

- · flying start is active
- DC braking is active.

Dynamic braking


Dynamic braking converts the regenerative energy, which is released when the motor decelerates, into heat. An internal braking chopper or an external dynamic braking module, which can control an external braking resistor, is required for dynamic braking. The inverter or the external dynamic braking module controls the dynamic braking depending on the DC link voltage. Contrary to DC and compound braking, this technique requires that an external braking resistor is installed.

Frame size A / B / C

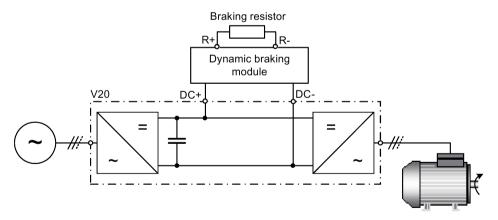

For more information about the dynamic braking module, see Appendix "Dynamic braking module (Page 355)".

Frame size D

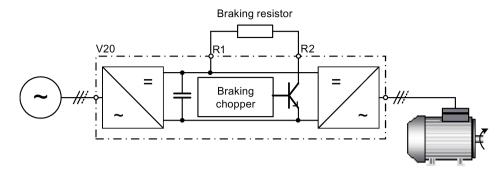


The continuous power P_{DB} and the duty cycle for the braking resistor can be modified using the dynamic braking module (for frame size A/B/C) or parameter P1237 (for frame size D).

NOTICE

Damage to the braking resistor

The average power of the dynamic braking module (braking chopper) cannot exceed the power rating of the braking resistor.

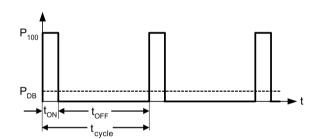

Dynamic braking switch-on level:

P1254 = 0:
$$V_{DC-Chopper} = 1.13 \cdot \sqrt{2} \cdot P0210$$

P1254 \neq 0: $V_{DC-Chopper} = 0.98 \cdot r1242$

Duty cycle	ton (s)	toff (s)	t _{cycle} (s)	P _{DB}
5%	12.0	228.0	240.0	0.05
10%	12.6	114.0	126.6	0.10
20%	14.2	57.0	71.2	0.20
50%	22.8	22.8	45.6	0.50
100%	Infinite	0	Infinite	1.00

Setting parameters

Parameter	Function	Setting
P1237	Dynamic braking	This parameter defines the rated duty cycle of the braking resistor (chopper resistor). Dynamic braking is active when the function is enabled and DC-link voltage exceeds the dynamic braking switch-on level.
		= 0: Disabled (factory default)
		= 1: 5% duty cycle
		= 2: 10% duty cycle
		= 3: 20% duty cycle
		= 4: 50% duty cycle
		= 5: 100% duty cycle
		Note: This parameter is only applicable for inverters of frame size D. For frame sizes A to C, the duty cycle of the braking resistor can be selected with the dynamic braking module.
P1240[02]	Configuration of Vdc controller	This parameter enables/disables Vdc controller.
		= 0: Vdc controller disabled
		Note: This parameter must be set to 0 (Vdc controller disabled) to activate the dynamic braking.
P1254	Auto detect Vdc switch-on levels	This parameter enables/disables auto-detection of switch-on levels for Vdc_max controller.
		= 0: Disabled
		= 1: Enabled (factory default)
		It is recommended to set P1254 = 1 (auto detection of Vdc switch-on levels enabled). Note that auto detection only works when the inverter has been in standby for over 20s. When P1240 = 0, P1254 is only applicable for frame size D inverters.




Risks with the use of inappropriate braking resistors

Braking resistors, which are to be mounted on the inverter, must be designed so that they can tolerate the power dissipated. If an unsuitable braking resistor is used, there is a danger of fire and the associated inverter will be significantly damaged.

Motor holding brake

The motor holding brake prevents the motor from undesirable turning when the inverter is switched-off. The inverter has internal logic to control a motor holding brake.

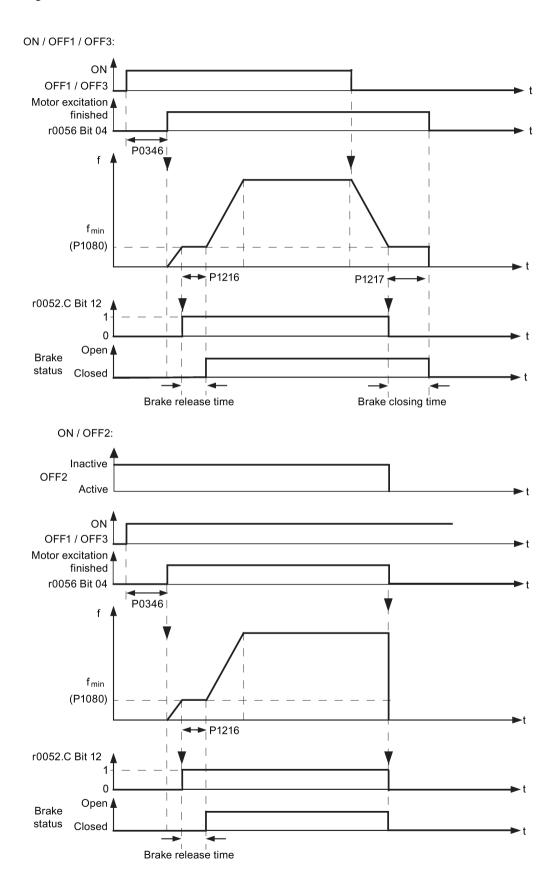


Setting parameters

Parameter	Function	Setting
P1215	Holding brake enable	This parameter enables/disables holding brake function. The motor holding brake (MHB) is controlled via status word 1 r0052 bit 12.
		= 0: Motor holding brake disabled (factory default)
		= 1: Motor holding brake enabled
P1216	Holding brake release delay[s]	This parameter defines period during which inverter runs at minimum frequency P1080 before ramping up.
		Range: 0.0 to 20.0 (factory default: 1.0)
P1217	Holding time after ramp down [s]	This parameter defines time for which inverter runs at minimum frequency (P1080) after ramping down.
		Range: 0.0 to 20.0 (factory default: 1.0)

Connecting the motor holding brake

The motor holding brake can be connected to the inverter via digital outputs (DO1/DO2). An additional relay is also required to allow the digital output to enable or disable the motor holding brake.

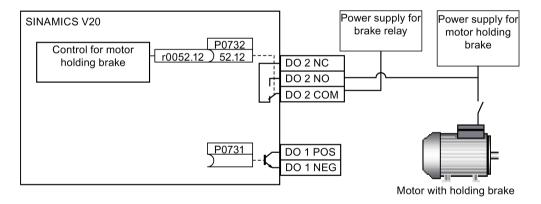

MARNING

Potentially hazardous load

If the inverter controls the motor holding brake, then a commissioning may not be carried out for potentially hazardous loads (e.g. suspended loads for crane applications) unless the load has been secured.

It is not permissible to use the motor holding brake as operating brake. The reason for this is that generally it is only designed for a limited number of emergency braking operations.


5.6.2.6 Setting the ramp time

Functionality

The ramp-function generator in the setpoint channel limits the speed of setpoint changes. This causes the motor to accelerate and decelerate more smoothly, thereby protecting the mechanical components of the driven machine.

Setting ramp-up/down time

- The ramp-up and ramp-down time can be set respectively in P1120 and P1121.
- When the required ramp-up or ramp-down time exceeds the maximum value of P1120 or P1121, you can expand the maximum value by using a scaling factor specified in P1138 or P1139. In this case, calculate the ramp-up or ramp-down time as follows:
 - Ramp-up time = P1120 * P1138
 - Ramp-down time = P1121 * P1139

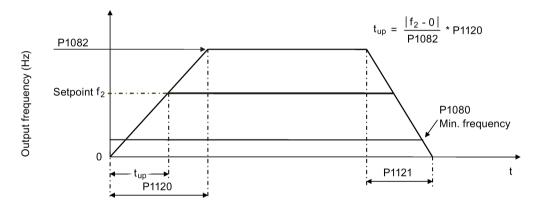


Setting parameters

Parameter	Function	Setting
P1082[02]	Maximum frequency [Hz]	This parameter sets maximum motor frequency at which motor will run irrespective of the frequency setpoint.
		Range: 0.00 to 550.00 (factory default: 50.00)
P1120[02]	Ramp-up time [s]	This parameter sets the time taken for motor to accelerate from standstill up to maximum motor frequency (P1082) when no rounding is used.
		Range: 0.00 to 650.00 (factory default: 10.00)
P1121[02]	Ramp-down time [s]	This parameter sets the time taken for motor to decelerate from maximum motor frequency (P1082) down to standstill when no rounding is used.
		Range: 0.00 to 650.00 (factory default: 10.00)
P1138	Ramp-up time scaling factor	This parameter sets the scaling factor for the ramp-up time.
		Range: 1.00 to 10.00 (factory default: 1.00)
P1139	Ramp-down time scaling factor	This parameter sets the scaling factor for the ramp-down time.
		Range: 1.00 to 10.00 (factory default: 1.00)

Setting ramp-up/down rounding time

Rounding times are recommended, since they prevent an abrupt response, thus avoiding detrimental effects on the mechanics.

Rounding times are not recommended when analog inputs are used, since they would result in overshoot/undershoot in the inverter response.

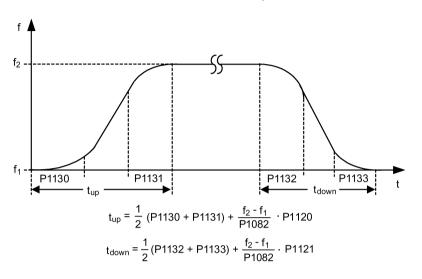


Setting parameters

Parameter	Function	Setting
P1130[02]	Ramp-up initial rounding time [s]	This parameter defines rounding time at start of ramp-up.
		Range: 0.00 to 40.00 (factory default: 0.00)
P1131[02]	Ramp-up final rounding time [s]	This parameter defines rounding time at end of ramp-up.
		Range: 0.00 to 40.00 (factory default: 0.00)
P1132[02]	Ramp-down initial rounding time [s]	This parameter defines rounding time at start of ramp-down.
		Range: 0.00 to 40.00 (factory default: 0.00)
P1133[02]	Ramp-down final rounding time [s]	This parameter defines rounding time at end of ramp-down.
		Range: 0.00 to 40.00 (factory default: 0.00)

5.6.2.7 Setting the Imax controller

Functionality

If ramp-up time is too short, the inverter may display the alarm A501 which means the output current is too high. The Imax controller reduces inverter current if the output current exceeds the maximum output current limit (r0067). This is achieved by reducing the inverter's output frequency or output voltage.

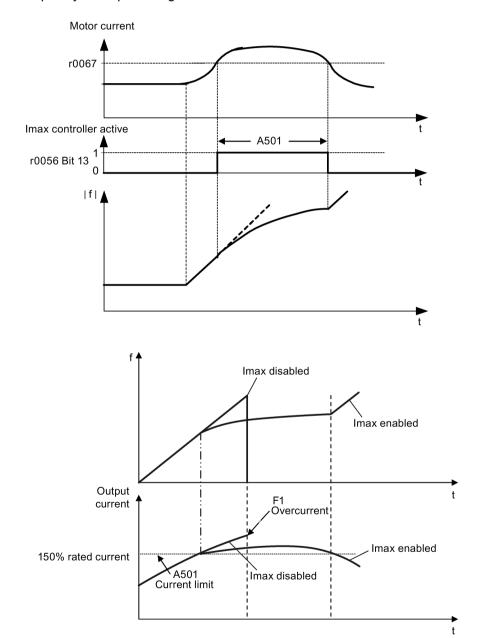

Setting parameters


You only have to change the factory default settings of the Imax controller if the inverter tends to oscillate when it reaches the current limit or it is shut down due to overcurrent.


Parameter	Function	Setting
P0305[02]	Rated motor current [A]	This parameter defines the nominal motor current from rating plate.
P0640[02]	Motor overload factor [%]	This parameter defines motor overload current limit relative to P0305 (rated motor current).
P1340[02]	Imax controller proportional gain	This parameter defines the proportional gain of the Imax controller. Range: 0.000 to 0.499 (factory default: 0.030)
P1341[02]	Imax controller integral time [s]	This parameter defines the integral time constant of the Imax controller. Setting P1341 to 0 disables the Imax controller.
		Range: 0.000 to 50.000 (factory default: 0.300)
P1345[02]	Imax voltage controller proportional gain	This parameter sets the proportional gain of Imax voltage controller. If the output current (r0068) exceeds the maximum current (r0067), the inverter is dynamically controlled by reducing the output voltage.
		Range: 0.000 to 5.499 (factory default: 0.250)
	Imax voltage controller integral time [s]	This parameter defines the integral time constant of the Imax voltage controller.
		Range: 0.000 to 50.000 (factory default: 0.300)
r0056.13	Status of motor control: Imax controller active	

5.6.2.8 Setting the Vdc controller

Functionality

If ramp-down time is too short, the inverter may display the alarm A911 which means the DC link voltage is too high. The Vdc controller dynamically controls the DC link voltage to prevent overvoltage trips on high inertia systems.

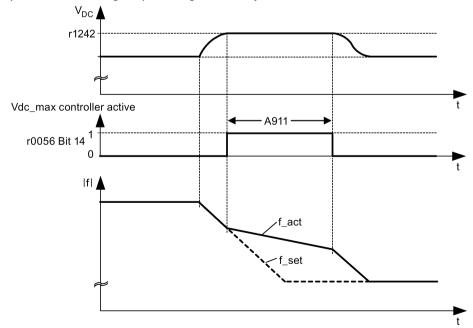

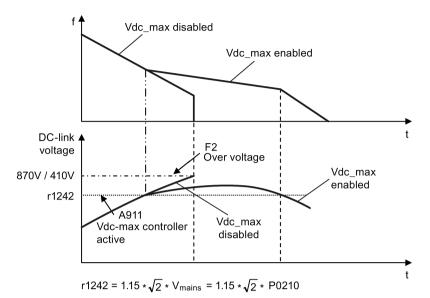

Setting parameters

Parameter	Function	Setting
P1240[02]	Configuration of Vdc control-	This parameter enables/disables Vdc controller.
	ler	= 0: Vdc controller disabled
		= 1: Vdc_max controller enabled (factory default)
		= 2: Kinetic buffering (Vdc_min controller) enabled
		= 3: Vdc_max controller and kinetic buffering (KIB) enabled
		Note: This parameter must be set to 0 (Vdc controller disabled) if a braking resistor is used.
P0210	Supply voltage [V]	This parameter defines the supply voltage. Its default value depends upon the type of inverter.
		Range:
		380 to 480 (for three phase AC 400 V inverters)
		200 to 240 (for single phase AC 230 V inverters)

5.6.2.9 Setting the load torque monitoring function

Functionality

The load torque monitoring function allows the mechanical force transmission between the motor and driven load to be monitored. This function can detect whether the driven load is blocked, or the force transmission has been interrupted.

The inverter monitors the load torque of the motor in different ways:

- Motor blocking detection
- No-load monitoring
- Speed-dependent load torque monitoring

Parameter	Function	Setting
P2177[02]	Delay time for motor is blocked [ms]	Defines the delay time for identifying that the motor is blocked.
		Range: 0 to 10000 (factory default: 10)
P2179	Current limit for no load identified [%]	This parameter defines the threshold current for A922 (no load applied to inverter) relative to P0305 (rated motor current).
		Range: 0.0 to 10.0 (factory default: 3.0)
P2180	Delay time for no-load identification [ms]	Defines the delay time for detecting a missing output load.
		Range: 0 to 10000 (factory default: 2000)
P2181[02]	Load monitoring mode	The load monitoring is achieved by comparing the actual frequency/torque curve with a programmed envelope (defined by parameters P2182 to P2190). If the curve falls outside the envelope, a warning or trip is generated.
		= 0: Load monitoring disabled (factory default)
		= 1: Warning: Low torque/frequency
		= 2: Warning: High torque/frequency
		= 3: Warning: High/low torque/frequency
		= 4: Trip: Low torque/frequency
		= 5: Trip: High torque/frequency
		= 6: Trip: High/low torque/frequency
P2182[02]	Load monitoring threshold frequency 1 [Hz]	Range: 0.00 to 550.00 (factory default: 5.00)
P2183[02]	Load monitoring threshold frequency 2 [Hz]	Range: 0.00 to 550.00 (factory default: 30.00)
P2184[02]	Load monitoring threshold frequency 3 [Hz]	Range: 0.00 to 550.00 (factory default: 30.00)
P2185[02]	Upper torque threshold 1 [Nm]	Range: 0.0 to 99999.0 (factory default: value in r0333)
P2186[02]	Lower torque threshold 1 [Nm]	Range: 0.0 to 99999.0 (factory default: 0.0)
P2187[02]	Upper torque threshold 2 [Nm]	Range: 0.0 to 99999.0 (factory default: value in r0333)
P2188[02]	Lower torque threshold 2 [Nm]	Range: 0.0 to 99999.0 (factory default: 0.0)
P2189[02]	Upper torque threshold 3 [Nm]	Range: 0.0 to 99999.0 (factory default: value in r0333)
P2190[02]	Lower torque threshold 3 [Nm]	Range: 0.0 to 99999.0 (factory default: 0.0)
P2192[02]	Load monitoring delay time [s]	Range: 0 to 65 (factory default: 10)

5.6.3 Commissioning advanced functions

5.6.3.1 Starting the motor in super torque mode

Functionality

This startup mode applies a torque pulse for a given time to help start the motor.

Typical application field

Sticky pumps


Parameter	Function	Setting
P3350[02]	Super torque modes	= 1: Enable super torque mode
		Note: When the value of P3350 is changed, the value of P3353 is changed as follows:
		• P3350 = 2: P3353 = 0.0s
		P3350 ≠ 2: P3353 = default
		The ramp time of 0s gives an additional 'kicking' effect when hammer start is in use.
P3351[02]	BI: Super torque enable	This parameter defines the source of the super torque enable. The setting is effective when P3352 = 2.
		Factory default: 0 (never enabled)
P3352[02]	Super torque startup mode	This parameter defines when the super torque function becomes active.
		= 0: Enabled on first run after power-up
		= 1: Enabled on every run
		= 2: Enabled by digital input (enable source is defined by P3351; 0 = never enabled, 1 = enabled on every run)
P3353[02]	Super torque ramp time [s]	This parameter defines the ramp time to be used when ramping up to the super torque frequency.
		Range: 0.0 to 650.0 (factory default: 5.0)
P3354[02]	Super torque frequency [Hz]	This parameter defines the frequency at which the additional boost is applied for super torque mode.
		Range: 0.0 to 550.0 (factory default: 5.0)
P3355[02]	Super torque boost level [%]	This parameter sets the temporary boost level for super torque mode.
		It applies boost in [%] relative to P0305 (rated motor current) once the super torque frequency has been reached for the time specified in P3356.
		Range: 0.0 to 200.0 (factory default: 150.0)
P3356[02]	Super torque boost time [s]	This parameter sets the time for which the additional boost is applied, when the output frequency is held at P3354.
		Range: 0.0 to 20.0 (factory default: 5.0)

Function diagram

Description:

The Super Torque mode is enabled when an ON command is issued, and the following sequence is performed:

- Ramps up to P3354 Hz with the boost level specified by P1310, P1311, and P1312
- Maintains for P3356 s with the boost level specified by P3355
- Reverts boost level to that specified by P1310, P1311, and P1312
- Reverts to "normal" setpoint and allows output to ramp using P1120

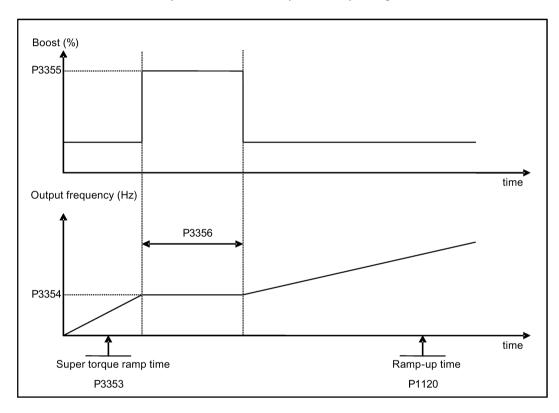

5.6.3.2 Starting the motor in hammer start mode

Functionality

This startup mode applies a sequence of torque pulses to start the motor.

Typical application field

Very sticky pumps

Setting parameters


Parameter	Function	Setting
P3350[02]	Super torque modes	= 2: Enable hammer start mode
		Note: When the value of P3350 is changed, the value of P3353 is changed as follows:
		• P3350 = 2: P3353 = 0.0s
		• P3350 ± 2: P3353 = default
		The ramp time of 0s gives an additional 'kicking' effect when hammer start is in use.
P3351[02]	BI: Super torque enable	This parameter defines the source of the super torque enable. The setting is effective when P3352 = 2.
		Factory default: 0 (never enabled)
P3352[02]	Super torque startup mode	This parameter defines when the super torque function becomes active.
		= 0: Enabled on first run after power-up
		= 1: Enabled on every run
		= 2: Enabled by digital input (enable source is defined by P3351; 0 = never enabled, 1 = enabled on every run)
P3353[02]	Super torque ramp time [s]	This parameter defines the ramp time to be used when ramping up to the super torque frequency.
		Range: 0.0 to 650.0 (factory default: 5.0)
P3354[02]	Super torque frequency [Hz]	This parameter defines the frequency at which the additional boost is applied for super torque mode.
		Range: 0.0 to 550.0 (factory default: 5.0)
P3357[02]	Hammer start boost level [%]	This parameter sets the temporary boost level for hammer start mode.
		It applies boost in [%] relative to P0305 (rated motor current) once the super torque frequency has been reached for the time specified in P3356.
		Range: 0.0 to 200.0 (factory default: 150.0)
P3358[02]	Number of hammer cycles	This parameter defines the number of times the hammer start boost level is applied.
		Range: 1 to 10 (factory default: 5)
P3359[02]	Hammer on time [ms]	This parameter sets the time for which the additional boost is applied for each repetition (must be at least 3 x motor magnetization time).
		Range: 0 to 1000 (factory default: 300)
P3360[02]	Hammer off Time [ms]	This parameter sets the time for which the additional boost is removed for each repetition (must be at least 3 x motor magnetization time).
		Range: 0 to 1000 (factory default: 100)

Function diagram

Description:

The hammer start mode is enabled when an ON command is issued, and the following sequence is performed:

- Ramp up to P3354 Hz with the boost level specified by P1310, P1311, and P1312
- Revert boost level to that specified by P1310, P1311, and P1312
- Revert to "normal" setpoint and allow output to ramp using P1120

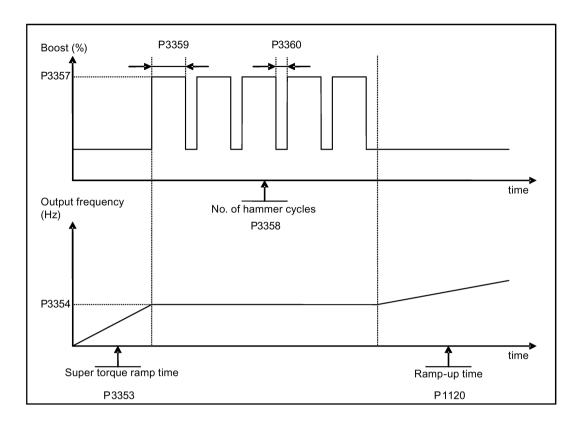

5.6.3.3 Starting the motor in blockage clearing mode

Functionality

This startup mode momentarily reverses the motor rotation to clear a pump blockage.

Typical application field

Pump clearing

Parameter	Function	Setting
P3350[02]	Super torque modes	= 3: Enable blockage clearing mode
		Note: When the value of P3350 is changed, the value of P3353 is changed as follows:
		• P3350 = 2: P3353 = 0.0s
		• P3350 ± 2: P3353 = default
		The ramp time of 0s gives an additional 'kicking' effect when hammer start is in use.
		If blockage clearing mode is enabled (P3350 = 3), make sure that reverse direction is not inhibited, i.e. P1032 = P1110 = 0.

5.6 Function commissioning


Parameter	Function	Setting
P3351[02]	BI: Super torque enable	This parameter defines the source of the super torque enable. The setting is effective when P3352 = 2.
		Factory default: 0 (never enabled)
P3352[02]	Super torque startup mode	This parameter defines when the super torque function becomes active.
		= 0: Enabled on first run after power-up
		= 1: Enabled on every run
		= 2: Enabled by digital input (enable source is defined by P3351; 0 = never enabled, 1 = enabled on every run)
P3353[02]	Super torque ramp time [s]	This parameter defines the ramp time to be used when ramping up to the super torque frequency.
		Range: 0.0 to 650.0 (factory default: 5.0)
P3361[02]	Blockage clearing frequency [Hz]	This parameter defines the frequency at which the inverter runs in the opposite direction to the setpoint during the blockage clearing reverse sequence.
		Range: 0.0 to 550.0 (factory default: 5.0)
P3362[02]	Blockage clearing reverse time [s]	This parameter sets the time for which the inverter runs in the opposite direction to the setpoint during the reverse sequence.
		Range: 0.0 to 20.0 (factory default: 5.0)
P3363[02]	Enable rapid ramp	This parameter selects whether the inverter ramps to, or starts directly from, the blockage clearing frequency
		= 0: Disable rapid ramp for blockage clearing (use ramp time specified in P3353)
		= 1: Enable rapid ramp for blockage clearing (jump to the reverse frequency - this introduces a "kicking" effect which helps to clear the blockage)
		Range: 0 to 1 (factory default: 0)
P3364[02]	Number of blockage clearing cycles	This parameter sets the number of times the blockage clearing reversing cycle is repeated.
		Range: 1 to 10 (factory default: 1)

Function diagram

Description:

The blockage clearing mode is enabled when an ON command is issued, and the following sequence is performed:

- Ramp or step (depending on P3363) to P3361 Hz in opposite direction to the setpoint
- For P3364 repetitions:
 - Ramp down to 0 Hz using normal ramp time as specified in P1121
 - Ramp or step (depending on P3363) to P3361 Hz in opposite direction to the setpoint
- Revert to "normal" setpoint and allow output to ramp using P1120.

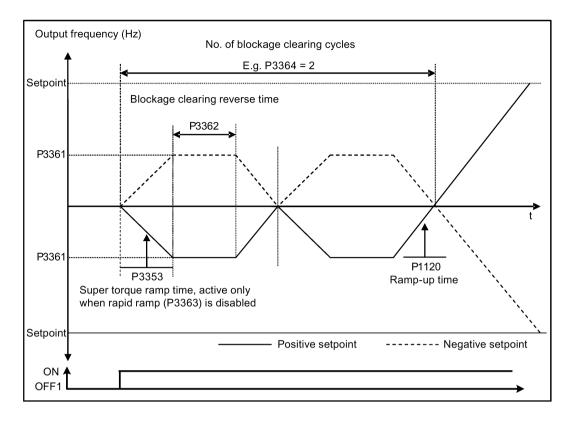

5.6.3.4 Running the inverter in economy mode

Functionality

Economy mode works by slightly changing the output voltage either up or down in order to find the minimum input power.

Note

The economy mode optimization is only active when operating at the requested frequency setpoint. The optimization algorithm becomes active 5 seconds after the setpoint has been reached, and is disabled on a setpoint change or if the I_{max} or V_{max} controller is active.


Typical applications

Motors with stable or slowly changing loads

Parameter	Function	Setting
P1300[02]	Control mode	= 4: V/f Eco Mode with linear characteristic
		= 7: V/f Eco Mode with quadratic characteristic
r1348	Economy mode factor [%]	This parameter displays the calculated economy mode factor (range: 80% to 120%) applied to the demanded output voltage.
		If this value is too low, the system may become unstable.

5.6 Function commissioning

Function diagram

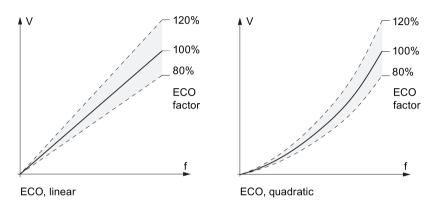

5.6.3.5 Setting the UL508C/UL61800-5-1-compliant motor overtemperature protection

Functionality

The function protects the motor from overtemperature. The function defines the reaction of the inverter when motor temperature reaches warning threshold. The inverter can remember the current motor temperature on power-down and reacts on the next power-up based on the setting in P0610. Setting any value in P0610 other than 0 or 4 will cause the inverter to trip (F11) if the motor temperature is 10% above the warning threshold P0604.

Note

In order to comply with UL508C/UL61800-5-1, parameter P0610 must not be changed from its factory setting of 6.


Parameter	Function	Setting
P0610[02]	Motor I ² t temperature reaction	This parameter defines reaction when motor temperature reaches warning threshold.
		Settings 0 to 2 do not recall the motors temperature (stored at power-down) on power-up:
		= 0: Warning only
		= 1: Warning with Imax control (motor current reduced) and trip (F11)
		= 2: Warning and trip (F11)
		Settings 4 to 6 recall the motors temperature (stored at power-down) on power-up:
		= 4: Warning only
		= 5: Warning with Imax control (motor current reduced) and trip (F11)
		= 6: Warning and trip (F11)

5.6.3.6 Setting the free function blocks (FFBs)

Functionality

Additional signal interconnections in the inverter can be established by means of the free function blocks (FFBs). Every digital and analog signal available via BICO technology can be routed to the appropriate inputs of the free function blocks. The outputs of the free function blocks are also interconnected to other functions using BICO technology.

Example

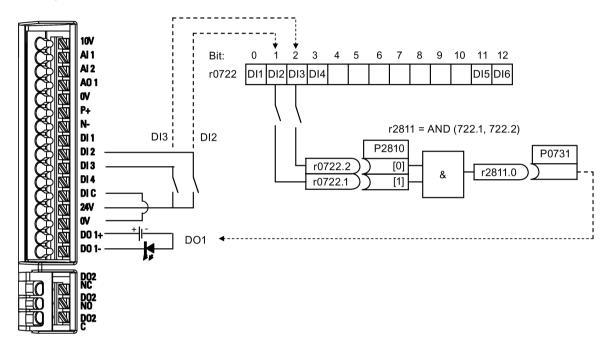

Setting parameters

Parameter	Function	Setting	Setting	
P0702	Function of digital input 2	= 99: Ena	= 99: Enable BICO parameterization for digital input 2	
P0703	Function of digital input 3	= 99: Ena	ble BICO parameterization for digital input 3	
P2800	Enable FFBs	= 1: Enab	= 1: Enable (general enable for all free function blocks)	
P2801[0]	Activate FFBs	= 1: Enable AND 1		
P2810[0]	BI: AND 1	= 722.1	P2810[0] and P2810[1] define inputs of AND 1 element, and	
P2810[1]		= 722.2	output is r2811.0.	
P0731	BI: Function of digital output 1	This parameter defines source of digital output 1.		
		= r2811.0	: Use the AND (DI2, DI3) to switch on LED	


For more information about FFBs and additional settings of individual parameter, see Chapter "Parameter list (Page 183)".

5.6.3.7 Setting the flying start function

Functionality

The flying start function (enabled using P1200) allows the inverter to be switched onto a motor which is still spinning by rapidly changing the output frequency of the inverter until the actual motor speed has been found. Then, the motor runs up to setpoint using the normal ramp time.

Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load. Otherwise, overcurrent trips will occur.

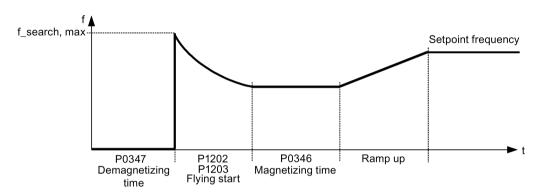

Parameter	Function	Setting
P1200	Flying start	Settings 1 to 3 search in both directions:
		= 0: Flying start disabled
		= 1: Flying start always active
		= 2: Flying start active after power on, fault, OFF2
		= 3: Flying start active after fault, OFF2
		Settings 4 to 6 search only in the direction of the setpoint:
		= 4: Flying start always active
		= 5: Flying start active after power on, fault, OFF2
		= 6: Flying start active after fault, OFF2
P1202[02]	Motor-current: flying start [%]	This parameter defines search current used for flying start.
		Range: 10 to 200 (factory default: 100)
		Note: Search current settings in P1202 that are below 30% (and sometimes other settings in P1202 and P1203) may cause motor speed to be found prematurely or too late, which can result in F1 or F2 trips.
P1203[02]	Search rate: flying start [%]	This parameter sets factor (in V/f mode only) by which the output frequency changes during flying start to synchronize with turning motor.
		Range: 10 to 500 (factory default: 100)
		Note: A higher value produces a flatter gradient and thus a longer search time. A lower value has the opposite effect.

5.6.3.8 Setting the automatic restart function

Functionality

After a power failure (F3 "Undervoltage"), the automatic restart function (enabled using P1210) automatically switches on the motor if an ON command is active. Any faults are automatically acknowledged by the inverter.

When it comes to power failures (line supply failure), then a differentiation is made between the following conditions:


- "Line undervoltage (mains brownout)" is a situation where the line supply is interrupted
 and returns before the built-in BOP display has gone dark (this is an extremely short line
 supply interruption where the DC link hasn't completely collapsed).
- "Line failure (mains blackout)" is a situation where the built-in BOP display has gone dark (this represents a longer line supply interruption where the DC link has completely collapsed) before the line supply returns.

Parameter	Function	Setting
P1210	Automatic restart	This parameter configures automatic restart function.
		= 0: Disabled
		= 1: Trip reset after power on, P1211 disabled
		= 2: Restart after mains blackout, P1211 disabled
		= 3: Restart after mains brownout or fault, P1211 enabled
		= 4: Restart after mains brownout, P1211 enabled
		= 5: Restart after mains blackout and fault, P1211 disabled
		= 6: Restart after mains brown- /blackout or fault, P1211 enabled
		= 7: Restart after mains brown- /blackout or fault, trip when P1211 expires
		= 8: Restart after mains brown- /blackout with F3 and leave an interval in seconds determined by P1214, P1211 disabled
		= 9: Restart after mains brown- /blackout with F3 during the attempt time determined by P1214, P1211 disabled
		= 10: Restart after mains brown-/blackout with F3 during the attempt time determined by P1214 or manual fault acknowledgement, P1211 disabled
P1211	Number of restart attempts	This parameter specifies number of times inverter will attempt to restart if automatic restart P1210 is activated.
		Range: 0 to 10 (factory default: 3)
P1214	Restart time interval	This parameter has either of the following functions:
		Specifying the restart interval when P1210 = 8
		Specifying the total restart attempt time when P1210 = 9 or P1210 = 10
		Range: 0 to 1000 (factory default: 30)

5.6.3.9 Running the inverter in frost protection mode

Functionality

If the surrounding temperature falls below a given threshold, motor turns automatically to prevent freezing.

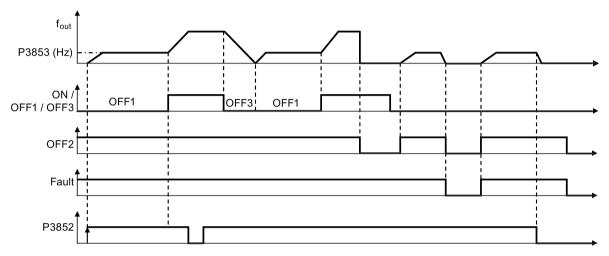


- OFF1/OFF3: The frost protection function is disabled when OFF3 is activated and enabled again when OFF1 is activated.
- OFF2/fault: The motor stops and the frost protection is deactivated.

Parameter	Function	Setting
P3852[02]	BI: Enable frost protection	This parameter defines command source of protection enable command. If binary input is equal to one, then protection will be initiated (factory default: 0).
		If P3853 ≠ 0, frost protection is applied by applying the given frequency to the motor.
		Note that the protection function may be overridden under the following circumstances:
		If inverter is running and protection signal becomes active, signal is ignored
		If inverter is turning motor due to active protection signal and a RUN command is received, RUN command overrides frost signal
		Issuing an OFF command while protection is active will stop the motor
P3853[02]	Frost protection frequency [Hz]	This parameter specifies the frequency applied to the motor when frost protection is active.
		Range: 0.00 to 550.00 (factory default: 5.00)

5.6.3.10 Running the inverter in condensation protection mode

Functionality

If an external condensation sensor detects excessive condensation, the inverter applies a DC current to keep the motor warm to prevent condensation.

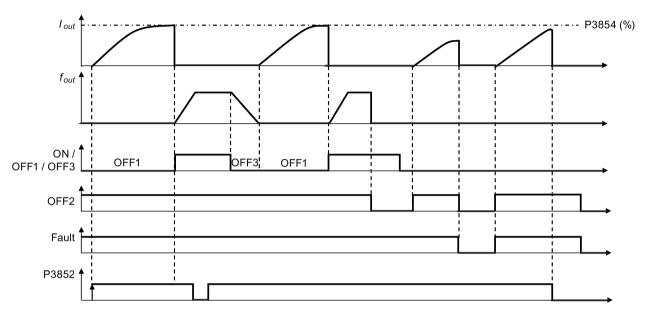

- OFF1/OFF3: The condensation protection function is disabled when OFF3 is activated and enabled again when OFF1 is activated.
- OFF2/fault: The motor stops and the condensation protection is deactivated.

Parameter	Function	Setting	
P3852[02]	BI: Enable frost protection	This parameter defines command source of protection enable command. If binary input is equal to one, then protection will be initiated (factory default: 0).	
		If P3853 = 0 and P3854 \neq 0, condensation protection is applied by applying the given current to the motor.	
		Note that the protection function may be overridden under the following circumstances:	
		If inverter is running and protection signal becomes active, signal is ignored	
		If inverter is turning motor due to active protection signal and a RUN command is received, RUN command overrides frost signal	
		Issuing an OFF command while protection is active will stop the motor	
P3854[02]	Condensation protection current [%]	This parameter specifies the DC current (as a percentage of nominal current) which is applied to the motor when condensation protection is active.	
		Range: 0 to 250 (factory default: 100)	


5.6.3.11 Running the inverter in sleep mode

Functionality


To achieve energy-saving operation, you can enable the inverter to run in either frequency sleep mode (P2365 = 1) or PID sleep mode(P2365 = 2).

Frequency sleep mode (hibernation): When the demand frequency falls below the
minimum frequency (P1080), the OFF delay (P2366) is started. When the OFF delay
expires, the inverter is ramped down to stop and enters the sleep mode. The inverter has
to go through the ON delay (P2367) before restarting.

P2365 = 1

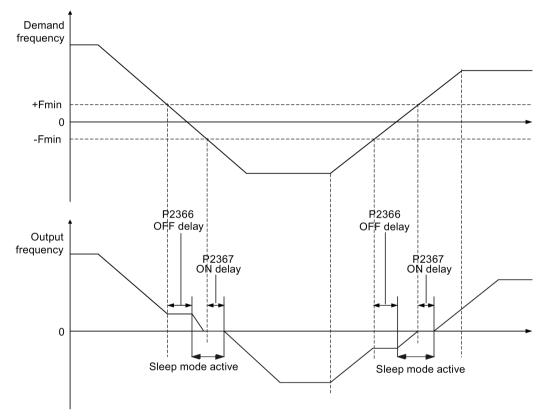

PID sleep mode (hibernation): When the inverter under PID control drops below the PID hibernation setpoint (P2390), the PID hibernation timer (P2391) is started. When the timer expires, the inverter is ramped down to stop and enters sleep mode. The inverter restarts when it reaches the PID hibernation restart point (P2392).

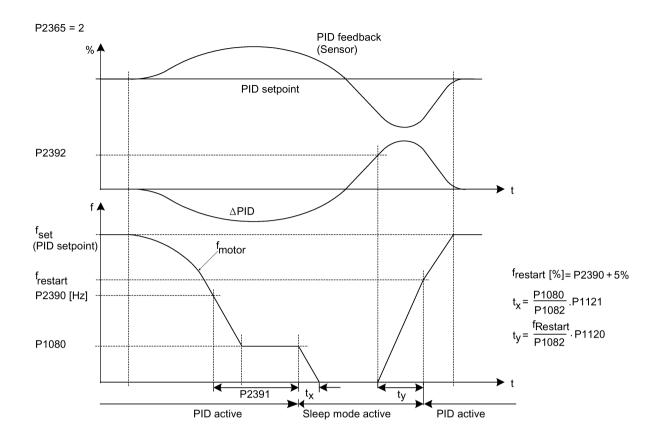

Parameter	Function	Setting	
P2365[02]	Hibernation enable/disable	Select or disable the hibernation functionality.	
		= 0: Disabled	
		= 1: Frequency hibernation (the frequency setpoint as the wakeup trigger)	
		= 2: PID hibernation (the PID error as the wakeup trigger)	
		Range: 0 to 2 (factory default: 0)	
P2366[02]	Delay before stopping motor [s]	With hibernation enabled, this parameter defines the delay before activating the sleep mode of the inverter.	
		Range: 0 to 254 (factory default: 5)	
P2367[02]	Delay before starting motor [s]	With hibernation enabled, this parameter defines the delay before "waking up" (disabling) the sleep mode of the inverter.	
		Range: 0 to 254 (factory default: 2)	
P2390	PID hibernation setpoint [%]	When the value of P2365 is set to 2 and the inverter under PID control drops below the PID hibernation setpoint, the PID hibernation timer P2391 is started. When the PID hibernation timer has expired, the inverter is ramped down to stop and enters the PID hibernation mode.	
		Range: -200.00 to 200.00 (factory default: 0)	
P2391	PID hibernation timer [s]	When the PID hibernation timer P2391 has expired, the inverter is ramped down to stop and enters the PID hibernation mode.	
		Range: 0 to 254 (factory default: 0)	


5.6 Function commissioning

Parameter	Function	Setting	
P2392	PID hibernation restart setpoint [%]	While in PID hibernation mode, the PID controller continues to generate the error r2273. Once this reaches the restart point P2392, the inverter immediately ramps to the setpoint calculated by the PID controller.	
		Range: -200.00 to 200.00 (factory default: 0)	
r2399	CO/BO: PID hibernation	Displays PID hibernation status word.	
	status word	Bit 00: Not used	
		Bit 01: PID hibernation enabled (PID hibernation is enabled and the inverter is not in PID hibernation.)	
		Bit 02: Hibernation active (PID hibernation is enabled and the inverter is in PID hibernation.)	
		Factory default: 0	
P1080[02]	Minimum frequency [Hz]	Sets minimum motor frequency at which motor will run irrespective of frequency setpoint. Value set here is valid both for clockwise and for counterclockwise rotation.	
		Range: 0.00 to 550.00 (factory default: 0.00)	

5.6.3.12 Setting the wobble generator

Functionality

The wobble generator executes predefined periodical disruptions superimposed on the main setpoint for technological usage in the fiber industry. The wobble function can be activated via P2940. It is independent of the setpoint direction, thus only the absolute value of the setpoint is relevant. The wobble signal is added to the main setpoint as an additional setpoint. During the change of the setpoint the wobble function is inactive. The wobble signal is also limited by the maximum frequency (P1082).

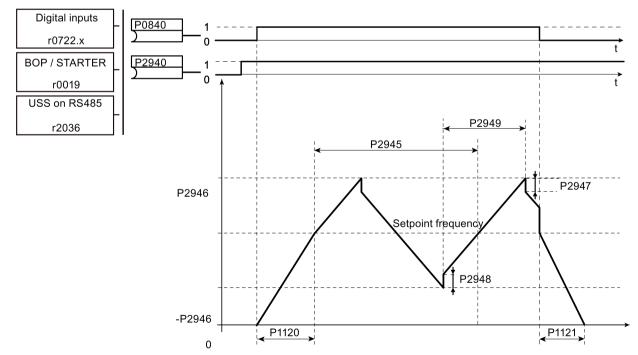

Wobble function disturb signal

Setting parameters


Parameter	Function	Setting	
P2940	BI: Release wobble function	This parameter defines the source to release the wobble function.	
		Factory default: 0.0	
P2945	Wobble signal frequency [Hz]	This parameter sets the frequency of the wobble signal.	
		Range: 0.001 to 10.000 (factory default: 1.000)	
P2946	Wobble signal amplitude [%]	This parameter sets the value for the amplitude of the wobble-signal as a proportion of the present ramp function generator (RFG) output.	
		Range: 0.000 to 0.200 (factory default: 0.000)	
P2947	Wobble signal decrement step	This parameter sets the value for decrement step at the end of the positive signal period.	
		Range: 0.000 to 1.000 (factory default: 0.000)	
P2948	Wobble signal increment step	This parameter sets the value for the increment step at the end of the negative signal period.	
		Range: 0.000 to 1.000 (factory default: 0.000)	
P2949	Wobble signal pulse width [%]	This parameter sets the relative widths of the rising and falling pulses.	
		Range: 0 to 100 (factory default: 50)	

5.6.3.13 Running the inverter in motor staging mode


Functionality

Motor staging allows the control of up to 2 additional staged pumps or fans, based on a PID control system. The complete system consists of one pump controlled by the inverter and up to 2 further pumps/fans controlled from contactors or motor starters. The contactors or motor starter are controlled by digital outputs from the inverter.

The diagram below shows a typical pumping system.

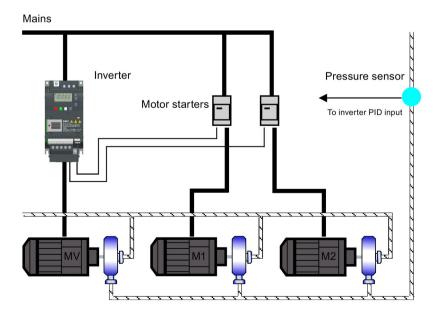



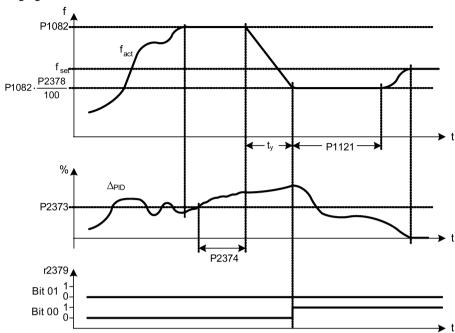


Condition for staging:

(a)
$$f_{act} \ge P1082$$

(b) $\Delta_{PID} \ge P2373$
(c) $f_{ab} > P2374$

$$t_y = \left(1 - \frac{P2378}{100}\right) \cdot P17$$

Destaging:

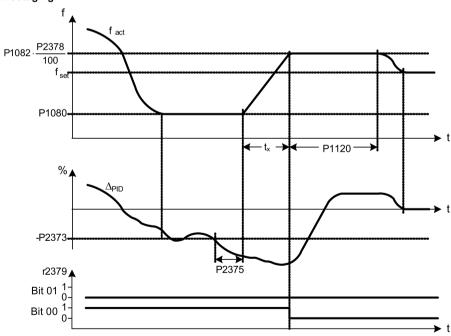

Condition for destaging:

(a)
$$f_{act} \le P1080$$

(b) $\Delta_{PID} \le -P2373$
(c) $t_{ab} > P2375$


$$tx = \left(\frac{P2378}{100} - \frac{P1080}{P1082}\right) \cdot P1120$$

Parameter	Function	Setting	
P2370[02]	Motor staging stop mode	This parameter selects stop mode for external motors when motor staging is in use.	
		= 0: Normal stop (factory default)	
		= 1: Sequence stop	
P2371[02]	Motor staging configuration	This parameter selects configuration of external motors (M1, M2) used for motor staging feature.	
		= 0: Motor staging disabled	
		= 1: M1 = 1 x MV, M2 = Not fitted	
		= 2: M1 = 1 x MV, M2 = 1 x MV	
		= 3: M1 = 1 x MV, M2 = 2 x MV	
P2372[02]	Motor staging cycling	This parameter enables motor cycling for the motor staging feature.	
		= 0: Disabled (factory default)	
		= 1: Enabled	
P2373[02]	Motor staging hysteresis [%]	P2373 as a percentage of PID setpoint that PID error r2273 must be exceeded before staging delay starts.	
		Range: 0.0 to 200.0 (factory default: 20.0)	
P2374[02]	Motor staging delay [s]	This parameter defines the time that PID error r2273 must exceed motor staging hysteresis P2373 before staging occurs.	
		Range: 0 to 650 (factory default: 30)	
P2375[02]	Motor destaging delay [s]	This parameter defines the time that PID error r2273 must exceed motor staging hysteresis P2373 before destaging occurs.	
		Range: 0 to 650 (factory default: 30)	
P2376[02]	Motor staging delay over- ride [%]	P2376 as a percentage of PID setpoint. When the PID error r2273 exceeds this value, a motor is staged/destaged irrespective of the delay timers.	
		Range: 0.0 to 200.0 (factory default: 25.0)	
		Note: The value of this parameter must always be larger than staging hysteresis P2373.	
P2377[02]	Motor staging lockout timer [s]	This parameter defines the time for which delay override is prevented after a motor has been staged or destaged.	
		Range: 0 to 650 (factory default: 30)	
P2378[02]	Motor staging frequency f_st [%]	This parameter sets the frequency at which the digital output is switched during a (de) staging event, as the inverter ramps from maximum to minimum frequency (or vice versa).	
		Range: 0.0 to 120.0 (factory default: 50.0)	
r2379.01	CO/BO: Motor staging status word	This parameter displays output word from the motor staging feature that allows external connections to be made.	
		Bit 00: Start motor 1 (yes for 1, no for 0)	
		Bit 01: Start motor 2 (yes for 1, no for 0)	
P2380[02]	Motor staging hours run [h]	This parameter displays hours run for external motors.	
		Index:	
		[0]: Motor 1 hrs run	
		[1]: Motor 2 hrs run	
		[2]: Not used	
		Range: 0.0 to 4294967295 (factory default: 0.0)	

5.6.3.14 Running the inverter in cavitation protection mode

Functionality

The cavitation protection will generate a fault/warning when cavitation conditions are deemed to be present. If the inverter gets no feedback from the pump transducer, it will trip to stop cavitation damage.

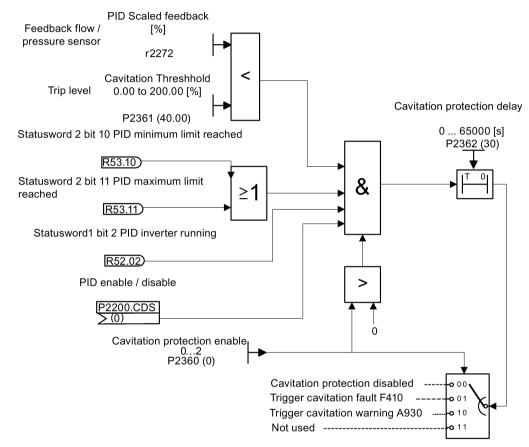

Cavitation Protection Logic Diagram

Parameter	Function	Setting	
P2360[02]	Enable cavitation protection	This parameter enables the cavitation protection function.	
		= 1: Fault	
		= 2: Warn	
P2361[02]	Cavitation threshold [%]	This parameter defines the feedback threshold over which a fault/warning is triggered, as a percentage (%).	
		Range: 0.00 to 200.00 (factory default: 40.00)	
P2362[02]	Cavitation protection time [s]	This parameter sets the time for which cavitation conditions have to be present before a fault/warning is triggered.	
		Range: 0 to 65000 (factory default: 30)	

5.6.3.15 Setting the user default parameter set

Functionality

The user default parameter set allows a modified set of defaults, different to the factory defaults, to be stored. Following a parameter reset these modified default values would be used. An additional factory reset mode would be required to erase the user default values and restore the inverter to factory default parameter set.

Creating the user default parameter set

- 1. Parameterize the inverter as required.
- 2. Set P0971 = 21, and the current inverter state is now stored as the user default.

Modifying the user default parameter set

- 1. Return the inverter to the default state by setting P0010 = 30 and P0970 = 1. The inverter is now in the user default state if configured, else factory default state.
- 2. Parameterize the inverter as required.
- 3. Set P0971 = 21 to store current state as the user default.

Setting parameters

Parameter	Function	Setting	
P0010	Commissioning parameter	This parameter filters parameters so that only those related to a particular functional group are selected. It must be set to 30 in order to store or delete user defaults.	
		= 30: Factory setting	
P0970	Factory reset	This parameter resets all parameters to their user default/factory default values.	
		= 1: Parameter reset to user defaults if stored else factory defaults	
		= 21: Parameter reset to factory defaults deleting user defaults if stored	
P0971	Transfer data from RAM to This parameter transfers values from RAM to EEPROM.		
	EEPROM	= 1: Start transfer	
		= 21: Start transfer and store parameter changes as user default values	

For information about restoring the inverter to factory defaults, refer to Section "Restoring to defaults (Page 133)".

5.6.3.16 Setting the dual ramp function

Functionality


The dual ramp function allows the user to parameterize the inverter so that it can switch from one ramp rate to another when ramping up or down to a setpoint. This may be useful for delicate loads, where starting to ramp with a fast ramp-up or ramp-down time may cause damage. The function works as follows:

Ramp up:

- Inverter starts ramp-up using ramp time from P1120
- When f_act > P2157, switch to ramp time from P1060

Ramp down:

- Inverter starts ramp-down using ramp time from P1061
- When f act < P2159, switch to ramp time from P1121

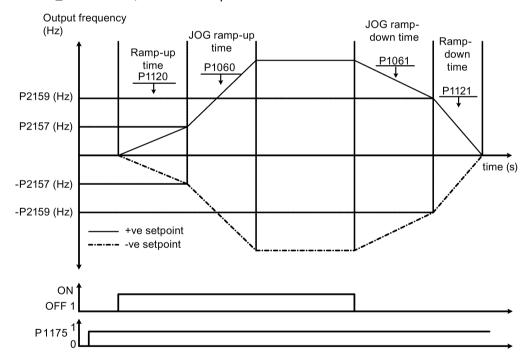

Note that the dual ramp algorithm uses r2198 bits 1 and 2 to determine ($f_act > P2157$) and ($f_act < P2159$).

Setting parameters

Parameter	Function	Setting	
P1175[02]	BI: Dual ramp enable	This parameter defines command source of dual ramp enable command. If binary input is equal to one, then the dual ramp will be applied. The factory default value is 0.	
P1060[02]	JOG ramp-up time [s]	This parameter sets the JOG ramp-up time. Range: 0.00 to 650.00 (factory default: 10.00)	
P1061[02]	JOG ramp-down time [s]	This parameter sets the JOG ramp-down time. Range: 0.00 to 650.00 (factory default: 10.00)	
P1120[02]	Ramp-up time [s]	This parameter sets the time taken for motor to accelerate from standstill up to maximum frequency (P1082) when no rounding is used. Range: 0.00 to 650.00 (factory default: 10.00)	
P1121[02]	Ramp-down time [s]	This parameter sets the time taken for motor to decelerate from maximum frequency (P1082) down to standstill when no rounding is used. Range: 0.00 to 650.00 (factory default: 10.00)	
P2157[02]	Threshold frequency f_2 [Hz]	This parameter defines threshold_2 for comparing speed or frequency to thresholds.	
		Range: 0.00 to 550.00 (factory default: 30.00)	
P2159[02]	Threshold frequency f_3 [Hz]	This parameter defines threshold_3 for comparing speed or frequency to thresholds.	
		Range: 0.00 to 550.00 (factory default: 30.00)	

5.6.3.17 Setting the DC coupling function

Functionality


The SINAMICS V20 inverter provides the facility to electrically couple two equal-size inverters together by using the DC link connections. The key benefits of this connection are:

- Reducing energy costs by using regenerative energy from one inverter as driving energy in the second inverter.
- Reducing installation costs by allowing the inverters to share one common dynamic braking module when needed.
- In some applications, eliminating the need for the dynamic braking module.

In the most common application, shown in the following figure, linking two SINAMICS V20 inverters of equal size and rating allows the energy from one inverter, presently decelerating a load, to be fed into the second inverter across the DC link. This requires less energy to be sourced from the mains supply. In this scenario, the total electricity consumption is reduced.

Connection for DC coupling

The following figure illustrates the system connection using DC coupling.

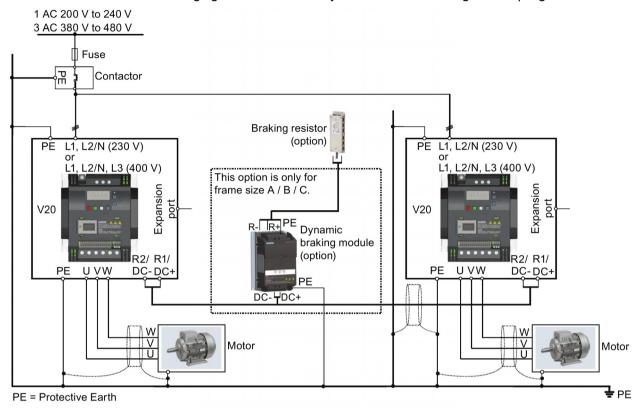

See Section "Terminal description (Page 39)" for the recommended cable cross-sections and screw tightening torques.

See the Product Information of Protective Devices for SINAMICS V20 Inverter (https://support.industry.siemens.com/cs/ww/en/ps/13208/man) for the recommended fuse types.



WARNING

Destruction of inverter

It is extremely important to ensure that the polarity of the DC link connections between the inverters is correct. If the polarity of the DC terminals' connections is reversed, it could result in the destruction of the inverter.



CAUTION

Safety awareness

The coupled SINAMICS V20 inverters must both be of equal power and supply voltage rating.

The coupled inverters must be connected to the mains supply through a single contactor and fuse arrangement rated for a single inverter of the type in use.

A maximum of two SINAMICS V20 inverters can be linked using the DC coupling methodology.

NOTICE

Integrated braking chopper

The integrated braking chopper within the frame size D inverter is only active if the inverter receives an ON command and is actually running. When the inverter is powered down, the regenerative energy cannot be pulsed to the external braking resistor.

Limitations and restrictions

- The maximum length of the coupling cable is 3 metres.
- For the inverters of frame sizes A to C, if a dynamic braking module is to be used, an
 additional connector with a current rating the same as the supply cable to one inverter
 must be used to connect the dynamic braking module wires to DC+ and DC- since the
 Inverter terminals may not support an additional connection.
- The cable rating to the dynamic braking module needs to be at least 9.5 A for a 5.5 kW full power rating (as measured using a minimum resistor value of 56 Ω). Screened cable should be used.
- For the inverters of frame size D for three phase, the dynamic braking circuit is selfcontained and only one external braking resistor has to be attached to one of the inverters. Refer to Appendix "Braking resistor (Page 358)" for the selection of an appropriate braking resistor.
- The compound braking must never be activated.

Note

Performance and potential energy savings

The performance and potential energy savings using the DC coupling function is highly dependent on the specific application. Therefore, Siemens makes no claim regarding the performance and energy saving potential of the DC coupling methodology.

Note

Standards and EMC disclaimers

The DC coupling configuration with the SINAMICS V20 inverters is not certified for use in UL/cUL applications.

No claims are made regarding the EMC performance of this configuration.


See also

Typical system connections (Page 34)

5.6.3.18 Setting high/low overload (HO/LO) mode

Functionality

Setting HO/LO overload enables you to select the low-overload mode for pumps and fans, the most important target applications of SINAMICS V20 inverters. Low-overload mode can improve the rated output current of the inverter and therefore allows the inverter to drive motors of higher power.

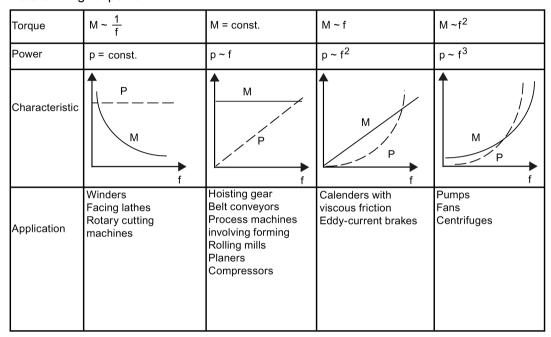

Typical application fields

- High overload: conveyors, agitators and centrifuges
- · Low overload: pumps and fans

Power ratings

Rated power rating (HO mode)	18.5 kW	22 kW
Rated power rating (LO mode)	22 kW	30 kW

Taking the 22 kW SINAMICS inverter as an example, when HO mode is selected, it means the rated power rating is 22 kW; when LO mode is selected, the rated power rating is changed to 30 kW.

HO mode

Overload capability: 150% of the rated output current for 60 s

Cycle time: 300 s

• LO mode:


Overload capability: 110% of the rated output current for 60 s

Cycle time: 300 s

Setting parameter

Parameter	Function	Setting
P0205	Select inverter applications	This parameter selects the inverter applications on high overload and low overload:
		=0: high overload
		=1: low overload

Function diagram

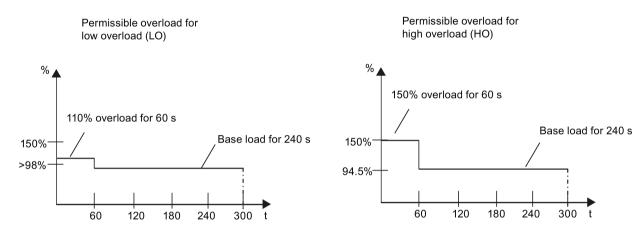

5.7 Restoring to defaults

Restoring to factory defaults

Parameter	Function	Setting	
P0003	User access level	= 1 (standard user access level)	
P0010	Commissioning parameter	= 30 (factory setting)	
P0970	Factory reset	= 21: parameter reset to factory defaults deleting user defaults if stored	

Restoring to user defaults

Parameter	Function	Setting	
P0003	User access level	= 1 (standard user access level)	
P0010	Commissioning parameter	= 30 (factory setting)	
P0970	Factory reset	= 1: parameter reset to user defaults if stored, else factory defaults	

After setting the parameter P0970, the inverter displays "8 8 8 8" and then the screen shows "P0970". P0970 and P0010 are automatically reset to their original value 0.

5.7 Restoring to defaults


Commissioning using SINAMICS V20 Smart Access

Using the optional SINAMICS V20 Smart Access (Page 386) to commission the inverter provides you with a smart commissioning solution.

SINAMICS V20 Smart Access is a Web server module with integrated Wi-Fi connectivity. It allows Web-based access to the inverter from a connected device (conventional PC with wireless network adapter installed, tablet or smart phone).

Note

To avoid any unauthorized Web access, use the SINAMICS V20 Smart Access with the inverter only when you perform the Web-based inverter commissioning.

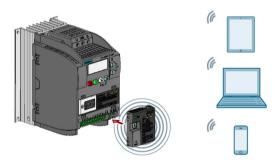

Note

To use SINAMICS V20 Smart Access to control the inverter, the supported inverter firmware version must be 3.92 or later.

With SINAMICS V20 Smart Access, you can easily perform the following operations via Web access to the inverter:

- Quick inverter commissioning (Page 145)
- Inverter parameterization (Page 150)
- Motor operation in JOG/HAND mode (Page 155)
- Inverter status monitoring (Page 157)
- Fault/alarm diagnostics (Page 157)
- Data backup and restore (Page 160)
- Wi-Fi configuration (Page 142)
- User interface language selection (Page 144)
- Web application and SINAMICS V20 Smart Access firmware upgrade (Page 164)
- Inverter time synchronization with the connected device (Page 144)

6.1 System requirements

Device with wireless net- work adapter installed	Operating system	Recommended Web browser
PC	Windows 7	 Google Chrome version 56.0 or later Firefox version 53.0 or later Internet Explorer version 11.0.9600 or later
Smart phone/tablet	Apple iOS 10.2 or later	Google Chrome version 55.0 or laterFirefox version 6.1 or laterSafari
	Android 7.0 or later	Google Chrome version 58.0 or laterFirefox version 53.0 or later

Supported minimum resolution

SINAMICS V20 Smart Access displays the pages in a format and size compatible with the device you use to access the Web pages. It supports a minimum resolution of 320 x 480 pixels.

6.2 Accessing the SINAMICS V20 Web pages

You can access the SINAMICS V20 Web pages from a PC or a mobile device that connects to the SINAMICS V20 Smart Access.

Note

Fitting SINAMICS V20 Smart Access to the inverter is required only when you desire to make Web-based access to the inverter from your PC or mobile device.

6.2.1 Overview of the steps


Note

Prerequisite

Before fitting SINAMICS V20 Smart Access to V20, if RS485 communication is present, then you must set P2010[1] = 12 via the BOP.

- 1. Fitting SINAMICS V20 Smart Access to the inverter (Page 137)
- 2. Establishing the wireless network connection (Page 137)
- 3. Accessing the Web pages (Page 139)

6.2.2 Fitting SINAMICS V20 Smart Access to the inverter

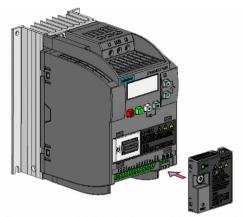

Recommended tightening torque: 0.8 Nm ± 10%

NOTICE

Damage to module due to improper installing or removing

Installing or removing SINAMICS V20 Smart Access when its power switch is in the "ON" position can cause damage to the module.

Make sure that you slide the power switch to "OFF" before installing/removing the module.

NOTICE

Equipment malfunctions due to improper installing or removing

Installing or removing the SINAMICS V20 Smart Access when the V20 inverter is in power-on state can cause malfunctions of the SINAMICS V20 Smart Access.

 Make sure that the V20 inverter is powered off before installing or removing the SINAMICS V20 Smart Access.

Note

To reduce human exposure to radio frequency electromagnetic fields, maintain a minimum distance of 2.5 cm between your body and the SINAMICS V20 Smart Access when it is operational.

6.2.3 Establishing the wireless network connection

NOTICE

Equipment malfunctions as a result of unauthorized access to the inverter

Hacker attack can result in unauthorized access to the inverter through the SINAMICS V20 Smart Access. This can cause equipment malfunctions.

- Before logging on to the V20 Web pages, make sure that there is no network security risk.
 - If the status LED lights up green or flashes green, make sure that no unauthorized access to the inverter exists.
 - If an unauthorized access to the inverter does exist, switch off the power switch on SINAMICS V20 Smart Access and then switch it on again to restart the wireless network connection.

Establishing initial wireless network connection


- 1. After you have fitted the SINAMICS V20 Smart Access (Page 386) to the inverter, power on the SINAMICS V20 Smart Access by sliding its switch to the "ON" position.
- 2. Activate the Wi-Fi interface inside your PC or mobile device. If you desire to establish the wireless network connection on your PC, make sure that you have previously activated the automatic IP settings.
- Search the wireless network SSID of SINAMICS V20 Smart Access: V20 smart access_xxxxxx ("xxxxxx" stands for the last six characters of the MAC address of SINAMICS V20 Smart Access)
- Enter the wireless network password to launch the connection (default password: 12345678).

You can configure your own Wi-Fi name and channel. For more information, see Section "Configuring Wi-Fi (Page 142)".

- 5. Enter the IP address of the connected inverter (http://192.168.1.1) in the supported browser.
- 6. After the Web page for password change opens, enter a new password.

To achieve better network access security, enter a new password of 8 to 12 characters that consists all of the following three categories of password characters: ① letters: A-Z, a-z; ② numbers: 0-9; ③ special characters: _, -, ~, !, @, #, \$, %, ^, &, and *, and the space character is not allowed.

Note that this password change page includes a security level indicator. This indicator uses different colors to indicate the security strength of your current password. For more information, see the table below:

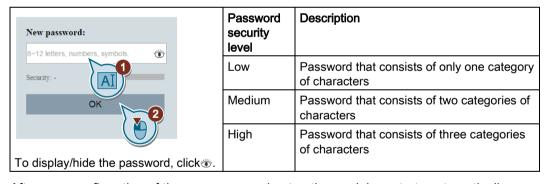

After your confirmation of the new password entry, the module restarts automatically.


- 7. Select the wireless network SSID of the SINAMICS V20 Smart Access and then enter the new Wi-Fi password to launch the connection.
- 8. Enter the IP address (http://192.168.1.1) to open the home page.

Wireless network connection examples

Note

Prerequisite

Make sure that your device is wireless-enabled.

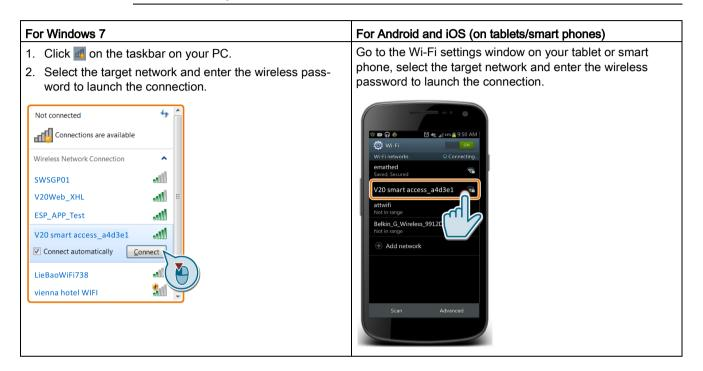

6.2.4 Accessing the Web pages


If you have previously established the wireless network connection (Page 137) between your PC or mobile device and the inverter via the SINAMICS V20 Smart Access, open a supported Web browser (Page 136) from your PC or mobile device and then enter the IP address (http://192.168.1.1) to open the SINAMICS V20 Web page (home page).

Constraint

Some features of SINAMICS V20 Smart Access are restricted if you do not observe the following:

- The standard Web pages use JavaScript. If your Web browser settings have disabled JavaScript, enable it first.
- When accessing the V20 Web pages from a mobile device, do not use landscape mode.

6.3 Overview of the Web pages

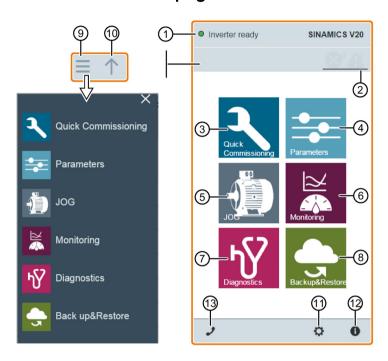

- (1) Connection status indication (Page 141)
- (2) Fault/alarm indication (Page 157)
- (3) Quick commissioning wizard (Page 145)
- (4) Parameter settings (Page 150)
- (5) Motor test run in JOG/HAND mode (Page 155)
- (6) Inverter status monitoring (Page 157)
- (7) Diagnostics (Page 157) (faults, alarms, I/O status)
- (8) Data backup & restore (Page 160)
- (9) Navigation sidebar (visible only on lower-level pages)
- Advancing backward (visible only on lower-level pages)
- ① Optional Web access settings (Page 142) (Wi-Fi configuration, user interface language settings, time synchronization, and upgrade)
- ② Inverter identification data (Page 141)
- Support information (Page 167)

Note

The Web page illustrations from this chapter forward represent only the standard PC Web page appearance.


6.4 View connection status

You can view the connection status in the upper-left corner of the V20 Web pages. The connection status is updated every five seconds.

Icon	Status	Description
	Connected	Communication between the PC/mobile device and the inverter is established.
		Note that the green status icon indicates one of the following actual inverter statuses (see r0002):
		Commissioning mode
		Inverter ready
		Inverter fault active
		Inverter starting
		Inverter running
		Inverter stopping
		Inverter inhibited
0	Disconnected	Communication between the PC/mobile device and the inverter is not established.

6.5 Viewing inverter information

The inverter identification Web page displays detailed information of the currently connected inverter:

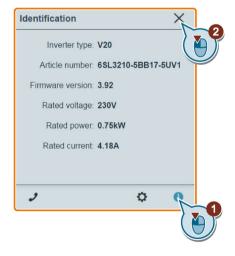

6.6 Making optional Web access settings


You can make the following optional Web access settings:

- Wi-Fi configuration (Page 142)
- User interface language selection (Page 144)
- Inverter time synchronization with the connected device (Page 144)
- Web application and firmware version upgrade (Page 144)
- Viewing the additional information of the module (Page 145)



6.6.1 Configuring Wi-Fi

If you do not want to use the default Wi-Fi settings, you can make Wi-Fi configuration in the following dialog box:

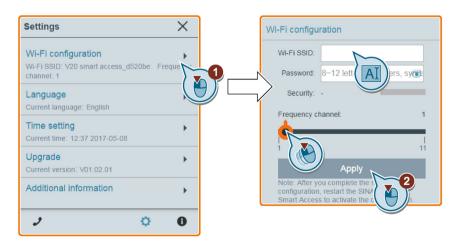

Note that the new Wi-Fi configuration can be effective only after SINAMICS V20 Smart Access restarts.

Wi-Fi SSID (Service Set Identifier)

Default SSID: V20 smart access_xxxxxx ("xxxxxx" stands for the last six characters of the MAC address of SINAMICS V20 Smart Access)

Example SSID: V20 smart access_a4d3e1

Wi-Fi password

Default password: 12345678

Password restrictions: 8 to 12 characters which are limited to A-Z, a-z, 0-9, _, -, ~, !, @, #, \$, %, ^, & and *. Note that the space character is not allowed.

Note that this password setting page includes a password security level indicator. Three security levels are indicated as follows depending on the complexity of the new password:

Password security level	Meaning
Low	Password that consists of only one category of characters
Medium	Password that consists of two categories of characters
High	Password that consists of three categories of characters

To display/hide the password, click.

Frequency channel

Default channel: channel 1.

Total channels: 11. Each channel stands for a transmitting frequency. The frequency difference between two adjacent channels is 5 MHz. You can select a desired channel with the slider.

Resetting Wi-Fi configuration

When the inverter is in power-on state, pressing the reset button on SINAMICS V20 Smart Access resets the Wi-Fi configuration to defaults.

Note

Check and make sure the status LED lights up solid green/solid yellow or flashes green before pressing the reset button to reset the Wi-Fi configuration. After you press the reset button, make sure you keep the button pressed until the status LED flashes yellow. Only then can the Wi-Fi configuration be reset successfully with the reset button.


6.6.2 Changing the display language

The SINAMICS V20 Web pages support the following user interface languages: English (default), Chinese, German, Italian, and French. Select the desired one from the following list:



6.6.3 Synchronizing the time

When the connection between the inverter and the PC/mobile device is established, the Web page can display the current time and date information of the connected PC/mobile device (see below). You can enable time synchronization between the inverter and the connected PC/mobile device to record the occurrence time of inverter faults/alarms. When you enable synchronization, the inverter receives the time of day from the connected PC/mobile device.

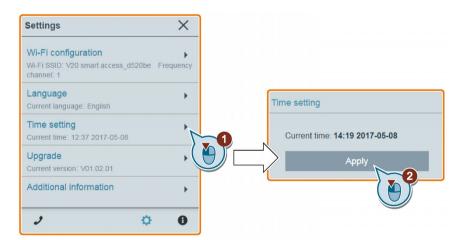


6.6.4 Upgrading

Upgrading includes conventional upgrading and basic upgrading. For more information, see Section "Upgrading Web application and SINAMICS V20 Smart Access firmware versions (Page 164)".

6.6.5 Viewing additional information

The following window provides additional information about the SINAMICS V20 Smart Access:

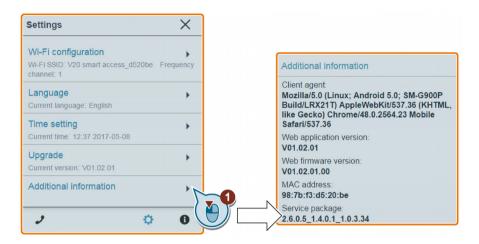


6.7 Quick commissioning

The quick commissioning function enables you to set motor parameters, connection macros, and application macros of the SINAMICS V20 inverter.


Operating sequence

- 1. Open the quick commissioning Web page by selecting the quick commissioning wizard icon from either the home page or the navigation sidebar.
- 2. Proceed as follows. Quick commissioning will change the following three groups of parameters at a time.

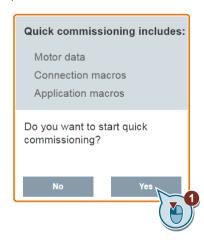

6.7 Quick commissioning


3. Perform a factory reset of the inverter if the current settings of the inverter are unknown.

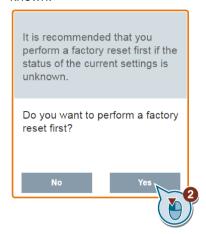


4. Change motor parameters (Page 63) settings, if desired.

Note that there are three methods to edit parameter values (see example below for changing the P0100 and P0304 values):


- Directly select the desired option (example: P0100).
- Move the slider to select the desired value (example: P0304).
- Use the on-screen numeric keypad (example: P0304). Be aware that continuous clicking on the Delete key (the "x" sign key) on the numeric keypad deletes the current parameter value.

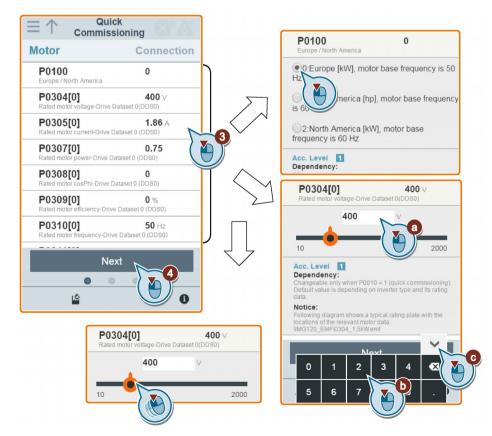



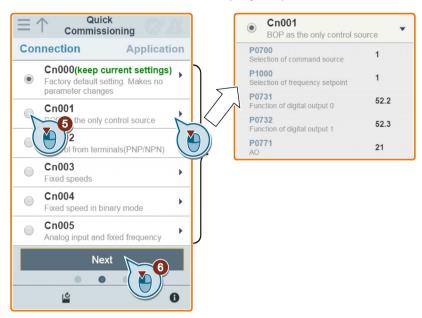


6. Select the desired application macro (Page 76).

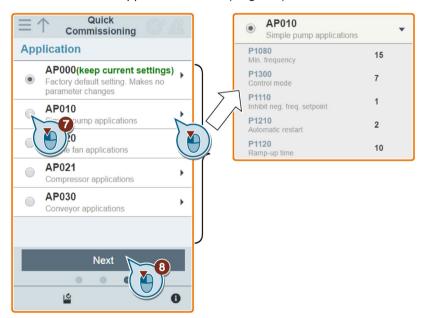

6.7 Quick commissioning


7. Confirm to start writing parameter settings to the inverter. SINAMICS V20 Smart Access then starts the automatic optimization process.

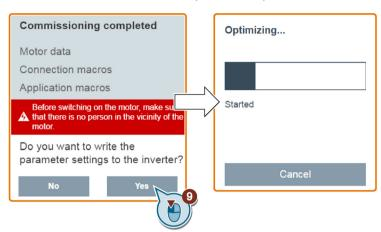

8. Confirm completion of the quick commissioning when the following window appears. If the Web page indicates that the optimization fails, you can select to try optimization again.




9. After the quick commissioning finishes successfully, the Web page switches to the following page where you can change the settings of the user-defined parameters, if desired. If you have not defined any parameter as a user-defined parameter, the common parameters (Page 78) are added to this parameter group automatically.

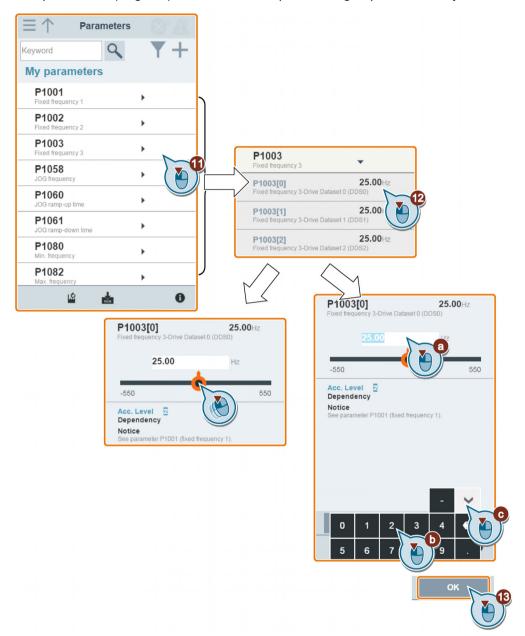

6.8 Setting parameters


You can open the parameters Web page by selecting the parameters icon from either the home page or the navigation sidebar.

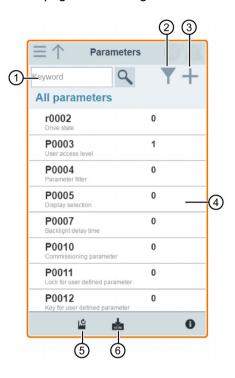

- (1) Searching parameters
- ② Filtering parameters by group
- ③ Specifying user-defined parameters
- 4 Editing parameters
- ⑤ Resetting parameters
- Saving parameters

Editing parameters

The figure below shows different methods for editing parameters. Note that when editing a BICO parameter (example: P0810), if you do not want to quickly navigate to a value by entering the first number(s), skip step 2.

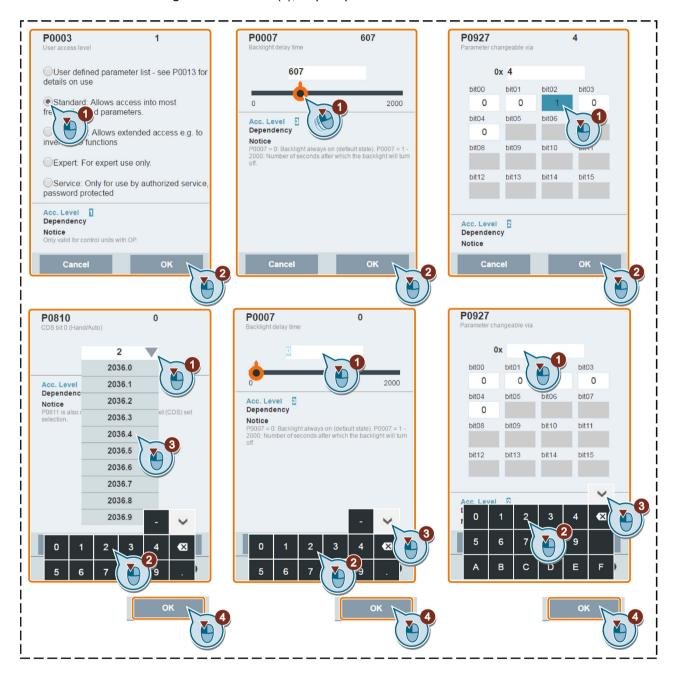


Searching parameters

You can search parameters by entering a key word, that is, either a complete parameter number or part of it. If you do not enter any key word and then select the magnifying glass icon, the page shows the list of all parameters visible on the Web page.



Filtering parameters


You can view and set parameters in the target parameter group.

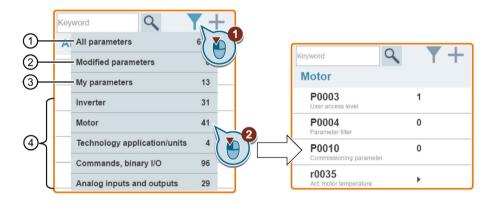

- (1) Complete list of all visible parameters
- 2) List of all modified parameters
- ③ User-defined parameters
- (4) Other parameter groups

Specifying user-defined parameters

If you desire to define certain parameters (including any specific indexed parameters) in a target group to be user-defined parameters, proceed as the example given below:

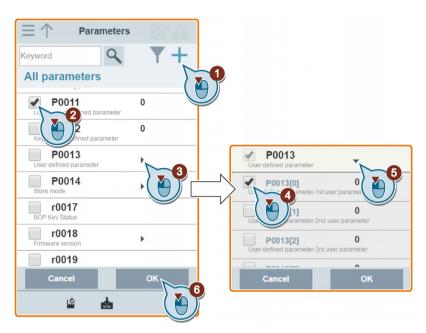


Note that all successfully defined parameters will go to the following parameter group:




Resetting parameters to defaults

You can select to reset all parameters to either user defaults or factory defaults.

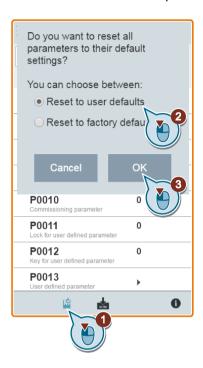

Saving parameters to EEPROM

You can select to save all parameter settings to EEPROM only or save to EEPROM as new user defaults.

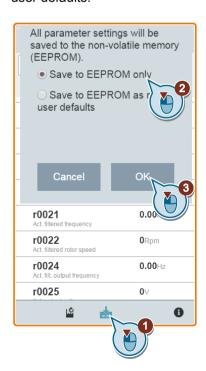


6.9 Starting motor test run (JOG/HAND)


You use this Web page to start the motor test run in JOG or HAND mode.

Operating sequence


- 1. Open the JOG Web page by selecting the JOG icon from either the home page or the navigation sidebar.
- 2. Proceed as follows to get the control of the motor.

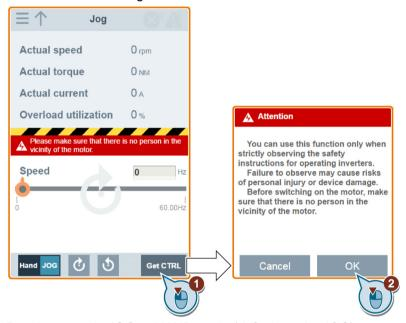


- 3. Run the motor in JOG or HAND mode (default mode: JOG). Note that if desired, you can also test the motor rotation direction with the corresponding button ("①"). The page shows the currently selected rotation direction ("②").
 - Press the desired button ("1)") to run the motor in JOG mode:

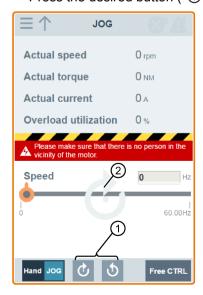

Proceed as follows to run the motor in HAND mode:

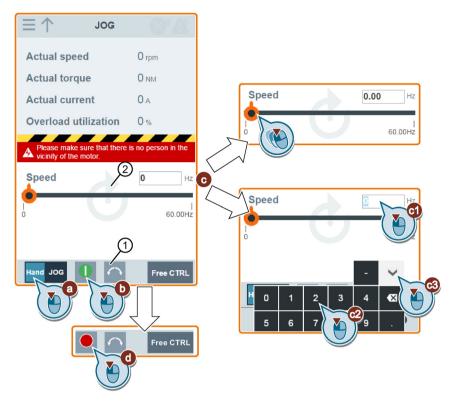

4. After you finish the motor test run, proceed as follows to return the control of the motor:

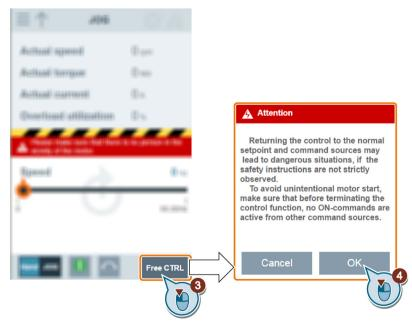

Note that before returning the control, make sure there is no inverter output and the motor stops running.

6.10 Monitoring

You can open the inverter status monitoring Web page by selecting the monitoring icon from either the home page or the navigation sidebar.




6.11 Diagnosing

You can open the diagnostics Web page by selecting the diagnostics icon from either the home page or the navigation sidebar. On this page, you can view faults/alarms, acknowledge all faults or send all faults by e-mail; you can also view I/O status and status bit information.

Meaning of fault/alarm icons


Fault and alarm icons are shown on the upper-right corner of the V20 Web page. See the following example for possible icon display:

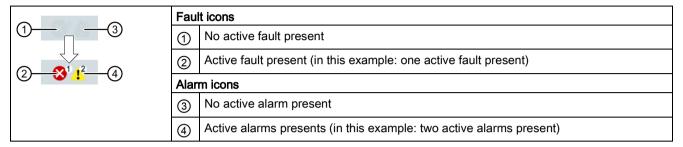

If the fault/alarm icon indicates presence of active faults/alarms, always go to the diagnostics page to view the detailed information.

Fault/alarm diagnostics

On this subpage, you can view detailed fault/alarm information, acknowledge all faults, or send all faults by e-mail (recommended on PC).

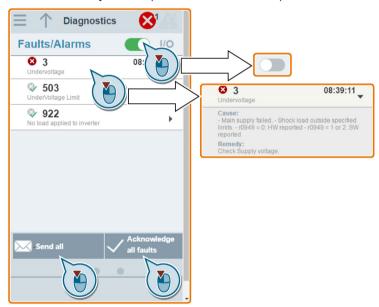

You can use the filter button to display all faults and alarms or the active ones only.


Button status Description	
	Displays the active faults and alarms only
	Displays all faults and alarms

Note: The module does not read the updates of active faults or alarms from the inverter until you collapse all faults and alarms.

For more information about the maximum number of faults/alarms that can be recorded, see parameters r0947/r2110 in Section "Parameter list (Page 187)".

I/O status diagnostics

This subpage displays the detailed I/O status information.

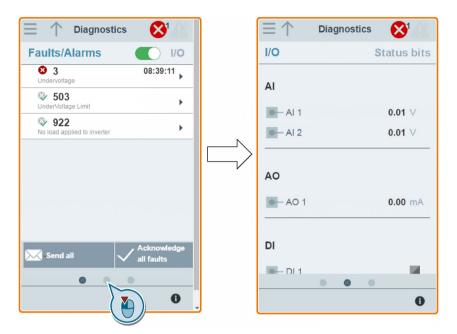


Relevant parameters

Parameter	Function	
r0722.012	CO/BO: Digital input values	
r0747.01	CO/BO: State of digital outputs	
r0752[01]	Actual analog input [V] or [mA]	
P0756[01]	Type of analog input	
P0771[0]	CI: Analog output	
r0774[0]	Actual analog output value [V] or [mA]	

Status bit diagnostics

This subpage displays the detailed status bit information.

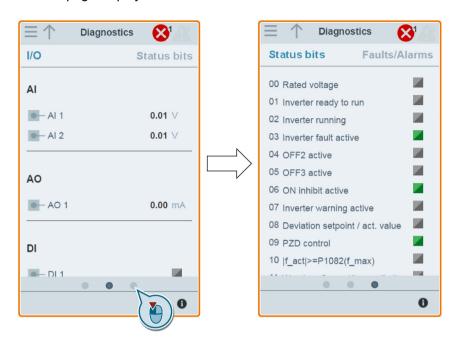

Relevant parameters

Parameter	Function
r0052.015	CO/BO: Active status word 1
r0053.011	CO/BO: Active status word 2

6.12 Backing up and restoring

You can open the backup & restore Web page by selecting the backup & restore icon from either the home page or the navigation sidebar.


6.12.1 Backing up

You can use the backup page to back up the desired parameters to SINAMICS V20 Smart Access and download it (*.xml file) to your local drive (recommended on PC).

Note

The backup process backs up all parameters of access levels ≤ 4 and allows you to back up a maximum of 20 files to SINAMICS V20 Smart Access. In case of any further backup attempt, a message appears prompting you to delete some of the existing backup files.

- 1. Open the backup & restore Web page by selecting the backup & restore icon from either the home page or the navigation sidebar.
- 2. Proceed as follows to back up the selected parameter file to SINAMICS V20 Smart Access.

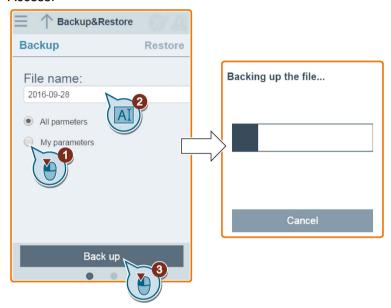

Character restrictions for the file name: maximum 30 characters which are limited to A-Z, a-z, 0-9, _, -, (,), dot, or space. If an existing backup file has the same name as the new file you desire to back up, a message prompts asking you if you want to overwrite the existing file.

Note:

When you perform the backup operation on a mobile device, if the menus and buttons on the Web page disappear after you finish editing the backup file name, then you can click in the blank area of the Web page to restore them.

3. When the following window appears, proceed as follows to complete the backup process. If the Web page indicates that the backup fails, you can select to back up again.

Note that download to your local drive (recommended on PC) is only an optional step. If you attempt to download from the V20 Web page via the supported Internet Explorer Web browser, the V20 Web page then opens the file. You must save the backed-up file to your local drive manually.



6.12 Backing up and restoring


6.12.2 Restoring

You can use the restore page to upload, download, delete, and/or restore the selected file (*.xml file).


Note

The restore process restores all parameters of access levels ≤ 4 .

Uploading an existing file (recommended on PC)

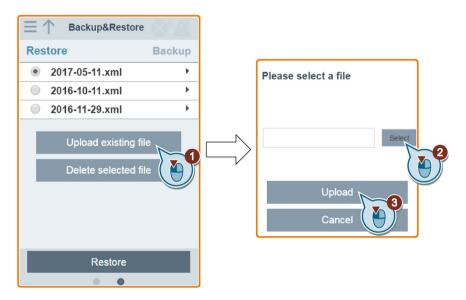

Downloading an existing file (recommended on PC)

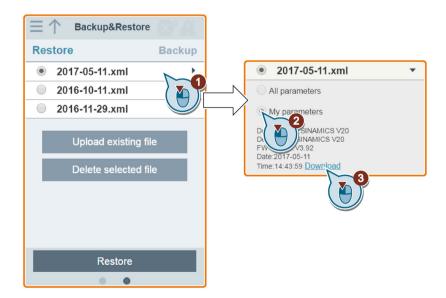

If you attempt to download from the V20 Web page via the supported Internet Explorer Web browser, the V20 Web page then opens the file. You must save the backed-up file to your local drive manually.

Deleting a selected file



Restoring the selected file


1. Proceed as follows to start restoring.



6.13 Upgrading Web application and SINAMICS V20 Smart Access firmware versions

2. The restore process completes when the following window appears. If the Web page indicates that the restoring fails, you can select to try restoring again.

Then you can choose to save the parameter settings to the non-volatile memory in the following window:

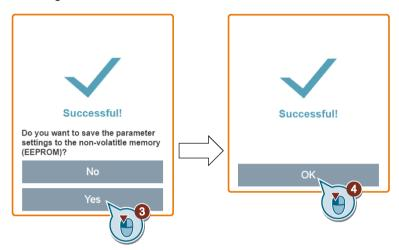

6.13 Upgrading Web application and SINAMICS V20 Smart Access firmware versions

Upgrading on the V20 Web page always upgrades both the V20 Web application version and the SINAMICS V20 Smart Access firmware version at the same time. In addition to the Web application version upgrade and the firmware version upgrade, you can also upgrade the service package version to enhance the network security level of SINAMICS V20 Smart Access.

Note

Before upgrading the service package version, make sure that the Smart Access firmware version is V01.02.05 or later.

There are two upgrading methods for selection:

- Conventional upgrading
- Basic upgrading (applicable when conventional upgrading cannot be performed)

Conventional upgrading

- 1. Download the target upgrade file (*.bin file) from the following Web site to your local drive (recommended on PC):
 - https://support.industry.siemens.com/cs/ww/en/ps/13208
- 2. Access the V20 Web page: http://192.168.1.1. Proceed as follows to perform the upgrade. Note that you must select the upgrade file downloaded to your local drive.



3. Confirm completion of the upgrading process when the following window appears. If the Web page indicates that the upgrading fails, you can select to try upgrading again.




- 4. Restart SINAMICS V20 Smart Access.
- 5. Clear the Web browser cache.
- 6. Refresh your Web application.

6.13 Upgrading Web application and SINAMICS V20 Smart Access firmware versions

Basic upgrading

- 1. Download the target upgrade file (*.bin file) from the following Web site to your local drive (recommended on PC):
 - https://support.industry.siemens.com/cs/ww/en/ps/13208
- 2. Power off SINAMICS V20 Smart Access by sliding its power switch to "OFF". Keep the reset button pressed and then slide the power switch to "ON".
- 3. Open the following Web site specific for basic upgrading: http://192.168.1.1/factory/basicupgrade.html
- 4. Proceed as follows:

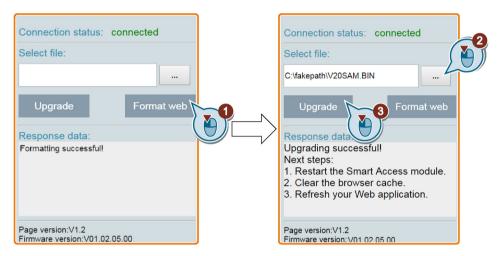


- 5. Restart SINAMICS V20 Smart Access.
- 6. Clear the Web browser cache.
- 7. Refresh your Web application.

Note

Refresh the basic upgrading page if the connection status unexpectedly becomes "disconnected" during upgrading.


6.14 Viewing the support information

Proceed as follows to view the support information in case of any service need:

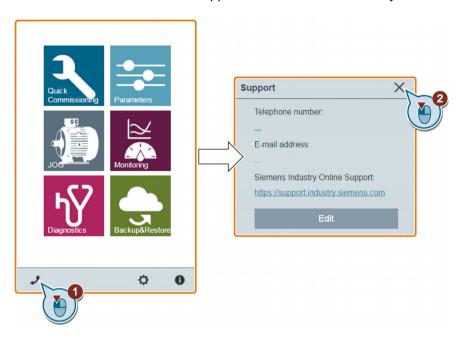

Editing the support information

You can also edit the telephone number and E-mail address of the service support by proceeding as follows:

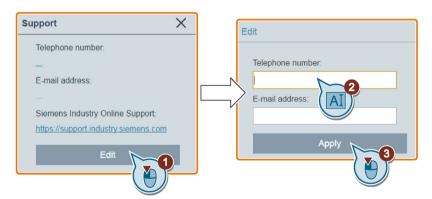

Make sure you observe the following rules when entering the telephone number and E-mail address to pass the validity check:


- For telephone number: up to 22 characters starting with "+" and limited to numbers, space, and "-";
- For E-mail address: up to 48 characters starting with numbers or letters.

6.14 Viewing the support information

Communicating with the PLC

The SINAMICS V20 supports communication with Siemens PLCs over USS on RS485. You can parameterize whether the RS485 interface shall apply USS or MODBUS RTU protocol. USS is the default bus setting. A screened twisted pair cable is recommended for the RS485 communication.

Make sure that you terminate the bus correctly by fitting a 120 R bus termination resistor between the bus terminals (P+, N-) of the device at one end of the bus and a termination network between the bus terminals of the device at the other end of the bus. The termination network should be a 1.5 k resistor from 10 V to P+, 120 R from P+ to N- and 470 R from N-to 0 V. A suitable termination network is available from your Siemens dealer.

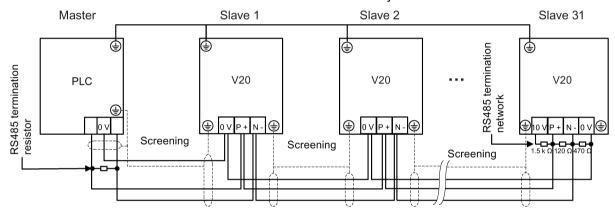


7.1 USS communication

Overview


One PLC (master) can connect a maximum of 31 inverters (slaves) through the serial link and control them with the USS serial bus protocol. A slave can never transmit without first being initiated by the master so that direct information transfer between individual slaves is not possible.

Data exchanging:

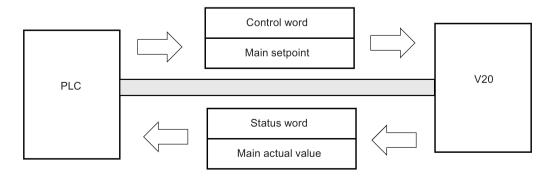

7.1 USS communication

The messages are always sent in the following format (half-duplex communication):

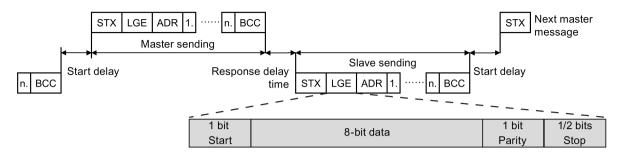

- Response delay time: 20 ms
- Start delay time: depends on baud rate (minimum operation time for 2-character string: 0.12 to 2.3 ms)
- Message transfer sequence:
 - master polls slave 1, then slave 1 responds
 - master polls slave 2, then slave 2 responds
- Fixed framing characters that cannot be altered:
 - 8 data bits
 - 1 parity bit
 - 1 or 2 stop bits

Abbreviation	Significance	Length	Explanation
STX	Start of text	ASCII characters	02 hex
LGE	Telegram length	1 byte	Contains the telegram length
ADR	Address	1 byte	Contains the slave address and the telegram type (binary coded)
1 n.	Net characters	Each 1 byte	Net data, contents are dependent on the request
BCC	Block check character	1 byte	Data security characters

Request and response IDs

Request and response IDs are written in bits 12 to 15 of the PKW (parameter ID value) part of USS telegram.

Request IDs (master → slave)

Request ID	Description Response ID		
		positive	negative
0	No request	0	7/8
1	Request parameter value	1/2	7/8
2	Modify parameter value (word)	1	7/8
3	Modify parameter value (double word)	2	7/8

Request ID	Description	Response ID	Response ID	
		positive	negative	
4	Request descriptive element	3	7/8	
6	Request parameter value (array)	4/5	7/8	
7	Modify parameter value (array, word)	4	7/8	
8	Modify parameter value (array, double word)	5	7/8	
9	Request number of array elements	6	7/8	
11	Modify parameter value (array, double word) and store in EEPROM 5		7/8	
12	Modify parameter value (array, word) and store in EEPROM 4 7/8		7/8	
13	Modify parameter value (double word) and store in EEPROM 2 7/8		7/8	
14	Modify parameter value (word) and store in EEPROM 1 7/8		7/8	

Response IDs (slave → master)

Response ID	Description	
0	No response	
1	Transfer parameter value (word)	
2	Transfer parameter value (double word)	
3	Transfer descriptive element	
4	Transfer parameter value (array, word)	
5	Transfer parameter value (array, double word)	
6	Transfer number of array elements	
7	Request cannot be processed, task cannot be executed (with error number)	
8	No master controller status/no parameter change rights for PKW interface	

Error numbers in response ID 7 (request cannot be processed)

No.	Description		
0	Illegal PNU (illegal parameter number; parameter number not available)		
1	Parameter value cannot be changed (parameter is read-only)		
2	Lower or upper limit violated (limit exceeded)		
3	Wrong sub-index		
4	No array		
5	Wrong parameter type/incorrect data type		
6	Setting is not allowed (parameter value can only be reset to zero)		
7	The descriptive element is not changeable and can only be read		
9	Descriptive data not available		
10	Access group incorrect		
11	No parameter change rights. See parameter P0927. Must have status as master control.		
12	Incorrect password		
17	The current inverter operating status does not permit the request processing		
18	Other error		
20	Illegal value. Change request for a value which is within the limits, but it is not allowed for other reasons (parameter with defined single values)		

7.1 USS communication

No.	Description	
101	Parameter is currently deactivated; parameter has no function in the present inverter status	
102	Communication channel width is insufficient for response; dependent on the number of PKW and the maximum net data length of the inverter	
104	Illegal parameter value	
105	Parameter is indexed	
106	Request is not included/task is not supported	
109	PKW request access timeout/number of retries is exceeded/wait for response from CPU side	
110	Parameter value cannot be changed (parameter is locked)	
200/201	Changed lower/upper limits exceeded	
202/203	No display on the BOP	
204	The available access authorization does not cover parameter changes	
300	Array elements differ	

Basic inverter settings

Parameter	Function	Setting	
P0010	Commissioning parameter	= 30: restores to factory settings	
P0970	Factory reset	Possible settings:	
		= 1: resets all parameters (not user defaults) to their default	
		values	
		= 21: resets all parameters and all user defaults to factory	
		reset state	
		Note: Parameters P2010, P2011, P2023 retain their values after a factory reset.	
P0003	User access level	= 3	
P0700	Selection of command source	= 5: USS/MODBUS on RS485	
		Factory default: 1 (operator panel)	
P1000	Selection of frequency set- point	= 5: USS/MODBUS on RS485	
		Factory default: 1 (MOP setpoint)	
P2023	RS485 protocol selection	= 1: USS (factory default)	
		Note: After changing P2023, powercycle the inverter. During the powercycle, wait until LED has gone off or the display has gone blank (may take a few seconds) before re-applying power. If P2023 has been changed via a PLC, make sure the change has been saved to EEPROM via P0971.	
P2010[0]	USS/MODBUS baudrate	Possible settings:	
		= 6: 9600 bps (factory default)	
		= 7: 19200 bps	
		= 8: 38400 bps	
		= 12: 115200 bps	
P2011[0]	USS address	Sets the unique address for the inverter.	
		Range: 0 to 31 (factory default: 0)	

Parameter	Function	Setting
P2012[0]	USS PZD (process data)	Defines the number of 16-bit words in PZD part of USS telegram.
	length	Range: 0 to 8 (factory default: 2)
P2013[0]	USS PKW (parameter ID	Defines the number of 16-bit words in PKW part of USS telegram.
	value) length	Possible settings:
		= 0, 3, 4: 0, 3 or 4 words
		= 127: variable length (factory default)
P2014[0]	USS/MODBUS telegram off time [ms]	If time set to 0, no fault is generated (i.e. watchdog disabled).
r2024[0]	USS/MODBUS error statistics	The state of the telegram information on RS485 is reported regardless of the
		protocol set in P2023.
r2031[0]		
r2018[07]	CO: PZD from USS/MODBUS on RS485	Displays process data received via USS/MODBUS on RS485.
P2019[07]	CI: PZD to USS/MODBUS on RS485	Displays process data transmitted via USS/MODBUS on RS485.
P2034	MODBUS parity on RS485	Sets the parity of MODBUS telegrams on RS485.
		Possible settings:
		= 0: no parity
		= 1: odd parity
		= 2: even parity
P2035	MODBUS stop bits on RS485	Sets the number of stop bits in MODBUS telegrams on RS485.
		Possible settings:
		= 1: 1 stop bit
		= 2: 2 stop bits

7.2 MODBUS communication

Overview

In MODBUS, only the master can start a communication and the slave will answer it. There are two ways of sending a message to a slave. One is unicast mode (address 1 to 247), where the master addresses the slave directly; the other is broadcast mode (address 0), where the master addresses all slaves.

When a slave has received a message, which was addressed at it, the Function Code tells it what to do. For the task defined by the Function Code, the slave may receive some data. And for error checking a CRC code is also included.

After receiving and processing a unicast message, the MODBUS slave will send a reply, but only if no error was detected in the received message. If a processing error occurs, the slave will reply with an error message. The following fixed framing characters in a message cannot be altered: 8 data bits, 1 parity bit, and 1 or 2 stop bits.

5	Start pause
CI	>= 3.5 haracter run time

Application Data Unit						
Slave	Pro	CF	RC			
Address	Function Code	Data	2 by	/tes		
1 byte	1 byte	0 252 bytes	CRC low	CRC high		

End pause					
>= 3.5					
Character run					
time					

Supported Function Codes

The SINAMICS V20 supports only three Function Codes. If a request with an unknown Function Code is received, an error message will be returned.

FC3 - Read Holding Registers

When a message with FC = 0x03 is received, then 4 bytes of data are expected, that is, FC3 has 4 bytes of data:

- 2 bytes for the starting address of register
- 2 bytes for the number of registers

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Address	FC (0x03)	Start address		Number of registers		CRC	
		High	Low	High	Low	High	Low

Inverter response

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	 Byte N*2 - 1	Byte N*2	Byte N*2 + 1	Byte N*2 + 2
Address	FC (0x03)	Number	Register 1 value		 Register N va	alue	CRC	
		of bytes	High	Low	High	Low	High	Low

FC6 - Write Single Register

When a message with FC = 0x06 is received, then 4 bytes of data are expected, that is, FC6 has 4 bytes of data:

- 2 bytes for the starting address of register
- 2 bytes for the register value

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Address	FC (0x06)	Start address		New register value		CRC	
		High	Low	High	Low	High	Low

Inverter response

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Address	FC (0x06)	Start address		New register value		CRC	
		High	Low	High	Low	High	Low

FC16 - Write Multiple Registers

When a message with FC = 0x10 is received, then 5 + N bytes of data are expected, that is, FC16 has 5 + N bytes of data:

- · 2 bytes for the starting address of register
- 2 bytes for the number of registers
- 1 byte for the byte count
- N bytes for the register values

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	 Byte N - 1	Byte N	Byte N + 1	Byte N + 2
Address	FC (0x10)	Start add	ress			Number of bytes	 Register N	l value	CRC	
		High	Low	High	Low		High	Low	High	Low

Inverter response

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Address	FC (0x10)	Start address		Number of registers		CRC	
		High	Low	High	Low	High	Low

Exception Responses

If an error is detected through the MODBUS processing, the slave will respond with the FC of the request, but with most significant bit of the FC high and with the Exception Code in the data field. However, any error detected on the global address 0 does not result in a response since all slaves cannot respond at once.

If an error is detected within the received message (for example, parity error, incorrect CRC and so on), then NO response is sent to the master.

Note that if a request with FC16 is received which contains a write that the inverter cannot perform (including write to a zero entry), other valid writes will still be performed even though an exception response is returned.

The following MODBUS Exception Codes are supported by SINAMICS V20:

Exception Code	MODBUS name	Meaning
01	Illegal function code	The function code is not supported – only FC3, FC6 and FC16 are supported.
02	Illegal data address	An invalid address was queried.
03	Illegal data value	An invalid data value was recognized.
04	Slave device failure	An unrecoverable error occurred while the device was processing the action.

7.2 MODBUS communication

The table below shows the cases in which an Exception Code is returned:

Error description	Exception Code
Unknown Function Code	01
Read registers, which are out of boundary	02
Write register, which is out of boundary	02
Read request of too many registers (>125)	03
Write request of too many registers (>123)	03
Incorrect message length	03
Write to a read-only register	04
Write register, error in parameter access	04
Read register, error in Parameter Manager	04
Write to a zero entry	04
Unknown error	04

Basic inverter settings

Parameter	Function	Setting
P0010	Commissioning parameter	= 30: restores to factory settings
P0970	Factory reset	Possible settings:
		= 1: resets all parameters (not user defaults) to their default
		values
		= 21: resets all parameters and all user defaults to factory
		reset state
		Note: Parameters P2010, P2021, P2023 retain their values after a factory reset.
P0003	User access level	= 3
P0700	Selection of command source	= 5: USS/MODBUS on RS485
		Factory default: 1 (operator panel)
P2010[0]	USS/MODBUS baudrate	Possible settings:
		= 6: 9600 bps (factory default)
		= 7: 19200 bps
		= 8: 38400 bps
		=12: 115200 bps
P2014[0]	USS/MODBUS telegram off time [ms]	If time set to 0, no fault is generated (i.e. watchdog disabled).
P2021	Modbus address	Sets the unique address for the inverter.
		Range: 1 to 247 (factory default: 1)
P2022	Modbus reply timeout [ms]	Range: 0 to 10000 (factory default: 1000)

Parameter	Function	Setting
P2023	RS485 protocol selection	= 2: Modbus
		Factory default: 1 (USS)
		Note: After changing P2023, powercycle the inverter. During the powercycle, wait until LED has gone off or the display has gone blank (may take a few seconds) before re-applying power. If P2023 has been changed via a PLC, make sure the change has been saved to EEPROM via P0971.
r2024[0] r2031[0]	USS/MODBUS error statistics	The state of the telegram information on RS485 is reported regardless of the protocol set in P2023.
	CO: PZD from USS/ MODBUS on RS485	Diaplaya praeses data reseived via LICC/MODDIIC on DC495
r2018[07]		Displays process data received via USS/MODBUS on RS485.
P2019[07]		Displays process data transmitted via USS/MODBUS on RS485.
P2034	MODBUS parity on RS485	Sets the parity of MODBUS telegrams on RS485.
		Possible settings:
		= 0: no parity
		= 1: odd parity
		= 2: even parity
P2035	MODBUS stop bits on RS485	Sets the number of stop bits in MODBUS telegrams on RS485.
		Possible settings:
		= 1: 1 stop bit
		= 2: 2 stop bits

Mapping table

The table below shows registers that the SINAMICS V20 inverter supports. "R", "W", and "R/W" in the "Access" column stand for read, write, and read/write respectively. Registers with * are available only when the optional I/O Extension Module is connected.

HSW (speed setpoint), HIW (actual speed), STW (control word), and ZSW (status word) refer to control data. For more information, see parameters r2018 and P2019 in Chapter "Parameter list (Page 183)".

Register No.		Description	Ac-	Unit	Scaling	Range or On/Off	Read	Write
Inverter	MODBUS		cess		factor	text		
0	40001	Watchdog time	R/W	ms	1	0 - 65535	-	-
1	40002	Watchdog action	R/W	-	1	-	-	-
2	40003	Frequency setpoint	R/W	%	100	0.00 - 100.00	HSW	HSW
3	40004	Run enable	R/W	-	1	0 - 1	STW:3	STW:3
4	40005	Forward/reverse command	R/W	-	1	0 - 1	STW:11	STW:11
5	40006	Start command	R/W	-	1	0 - 1	STW:0	STW:0
6	40007	Fault acknowledge- ment	R/W	-	1	0 - 1	STW:7	STW:7
7	40008	PID setpoint reference	R/W	%	100	-200.0 - 200.0	P2240	P2240
8	40009	PID enable	R/W	-	1	0 - 1	r0055.8	(BICO) P2200

7.2 MODBUS communication

Register No.		Description	Ac-	Unit	Scaling	Range or On/Off		Read	Write
Inverter	MODBUS	- 	cess		factor	text			
9	40010	Current limit	R/W	%	10	10.0 - 40	10.0 - 400.0		P0640
10	40011	Acceleration time	R/W	s	100	0.00 - 650.0		P1120	P1120
11	40012	Deceleration time	R/W	s	100	0.00 - 650.0		P1121	P1121
12	40013	(Reserved)						-	.
13	40014	Digital output 1	R/W	-	1	HIGH	LOW	r0747.0	(BICO) P0731
14	40015	Digital output 2	R/W	-	1	HIGH	LOW	r0747.1	(BICO) P0732
15	40016	Reference frequency	R/W	Hz	100	1.00 - 550.00		P2000	P2000
16	40017	PID upper limit	R/W	%	100	-200.0 - 200.0		P2291	P2291
17	40018	PID lower limit	R/W	%	100	-200.0 - 2	-200.0 - 200.0		P2292
18	40019	Proportional gain	R/W	-	1000	0.000 - 65.000		P2280	P2280
19	40020	Integral gain	R/W	s	1	0 - 60		P2285	P2285
20	40021	Differential gain	R/W	-	1	0 - 60	+		P2274
21	40022	Feedback gain	R/W	%	100	0.00 - 50	0.00 - 500.00		P2269
22	40023	Low pass	R/W	-	100	0.00 - 60.00		P2265	P2265
23	40024	Frequency output	R	Hz	100	-327.68 -	-327.68 - 327.67		r0024
24	40025	Speed	R	RPM	1		-16250 - 16250		r0022
25	40026	Current filtered	R	Α	100	0 - 163.8	0 - 163.83		r0027
26	40027	Torque	R	Nm	100	-325.00 -	-325.00 - 325.00		r0031
27	40028	Actual power	R	kW	100	0 - 327.67		r0032	r0032
28	40029	Total kWh	R	kWh	1	0 - 32767		r0039	r0039
29	40030	DC bus voltage	R	V	1	0 - 32767		r0026	r0026
30	40031	Reference	R	Hz	100	-327.68 - 327.67		r0020	r0020
31	40032	Rated power	R	kW	100	0 - 327.67		r0206	r0206
32	40033	Voltage output	R	V	1	0 - 32767		r0025	r0025
33	40034	Forward/reverse	R	_	1	FWD			ZSW:14
34	40035	Stop/run	R	-	1	STOP	RUN	ZSW:2	ZSW:2
35	40036	Run at maximum frequency	R	-	1	MAX	NO	ZSW:10	ZSW:10
36	40037	Control mode	R	-	1	SERIAL	LOCAL	ZSW:9	ZSW:9
37	40038	Enabled	R	-	1	ON	OFF	ZSW:0	ZSW:0
38	40039	Ready to run	R	-	1	READY	OFF	ZSW:1	ZSW:1
39	40040	Analog input 1	R	%	100	-300.0 - 300.0		r0754[0]	r0754[0]
40	40041	Analog input 2	R	%	100	-300.0 - 300.0		r0754[1]	r0754[1]
41	40042	Analog output 1	R	%	100	-100.0 - 100.0		r0774[0]	r0774[0]
43	40044	Actual frequency	R	%	100	-100.0 - 100.0		HIW	HIW
44	40045	PID setpoint output	R	%	100	-100.0 - 100.0		r2250	r2250
45	40046	PID output	R	%	100	-100.0 - 100.0		r2294	r2294
46	40047	PID feedback	R	%	100	-100.0 - 100.0		r2266	r2266
47	40048	Digital input 1	R	_	1	HIGH	LOW	r0722.0	r0722.0
48	40049	Digital input 2	R	-	1	HIGH	LOW	r0722.1	r0722.1
49	40050	Digital input 3	R	_	1	HIGH			r0722.2

Register No.		Description	Ac-	Unit	Scaling	Range or	Range or On/Off		Write
Inverter	MODBUS		cess		factor	text		Read	
50	40051	Digital input 4	R	_	1	HIGH	LOW	r0722.3	r0722.3
53	40054	Fault	R	-	1	FAULT	OFF	ZSW:3	ZSW:3
54	40055	Last fault	R	-	1	0 - 32767	7	r0947[0]	r0947[0]
55	40056	Fault 1	R	-	1	0 - 32767	7	r0947[1]	r0947[1]
56	40057	Fault 2	R	-	1	0 - 32767	7	r0947[2]	r0947[2]
57	40058	Fault 3	R	-	1	0 - 32767	7	r0947[3]	r0947[3]
58	40059	Warning	R	-	1	WARN	OK	ZSW:7	ZSW:7
59	40060	Last warning	R	-	1	0 - 32767	7	r2110	r2110
60	40061	Inverter version	R	-	100	0.00 - 32	7.67	r0018	r0018
61	40062	Inverter model	R	-	1	0 - 32767	7	r0201	r0201
99	40100	STW	R/W	-	1			PZD 1	PZD 1
100	40101	HSW	R/W	-	1			PZD 2	PZD 2
109	40110	ZSW	R	-	1			PZD 1	PZD 1
110	40111	HIW	R	-	1			PZD 2	PZD 2
199	40200	Digital output 1	R/W	-	1	HIGH	LOW	r0747.0	(BICO) P0731
200	40201	Digital output 2	R/W	-	1	HIGH	LOW	r0747.1	(BICO) P0732
201	40202	Digital output 3*	R/W	-	1	HIGH	LOW	r0747.2	(BICO) P0733
202	40203	Digital output 4*	R/W	-	1	HIGH	LOW	r0747.3	(BICO) P0734
219	40220	Analog output 1	R	%	100	-100.0 - 1	-100.0 - 100.0		r0774[0]
239	40240	Digital input 1	R	-	1	HIGH	LOW	r0722.0	r0722.0
240	40241	Digital input 2	R	-	1	HIGH	LOW	r0722.1	r0722.1
241	40242	Digital input 3	R	-	1	HIGH	LOW	r0722.2	r0722.2
242	40243	Digital input 4	R	-	1	HIGH	LOW	r0722.3	r0722.3
243	40244	Digital input 5*	R	-	1	HIGH	LOW	r0722.4	r0722.4
244	40245	Digital input 6*	R	-	1	HIGH	LOW	r0722.5	r0722.5
259	40260	Analog input 1	R	%	100	-300.0 - 3	300.0	r0754[0]	r0754[0]
260	40261	Analog input 2	R	%	100	-300.0 - 3	300.0	r0754[1]	r0754[1]
299	40300	Inverter model	R	-	1	0 - 32767	7	r0201	r0201
300	40301	Inverter version	R	-	100	0.00 - 32	7.67	r0018	r0018
319	40320	Rated power	R	kW	100	0 - 327.6	7	r0206	r0206
320	40321	Current limit	R/W	%	10	10.0 - 40	0.0	P0640	P0640
321	40322	Acceleration time	R/W	s	100	0.00 - 65	0.0	P1120	P1120
322	40323	Deceleration time	R/W	s	100	0.00 - 65	0.0	P1121	P1121
323	40324	Reference frequency	R/W	Hz	100	1.00 - 65	0.0	P2000	P2000
324	40325	Fixed frequency 1	R/W	Hz	100	-327.68 -	327.67	P1001	P1001
325	40326	Fixed frequency 2	R/W	Hz	100	-327.68 -	-327.68 - 327.67		P1002
326	40327	Fixed frequency 3	R/W	Hz	100	-327.68 -	-327.68 - 327.67		P1003
327	40328	Fixed frequency 4	R/W	Hz	100	-327.68 -	-327.68 - 327.67		P1004
329	40330	Fixed setpoint 1	R/W	%	100	-200 - 20	0	P2889	P2889
330	40331	Fixed setpoint 2	R/W	%	100	-200 - 20	0	P2890	P2890
339	40340	Reference	R	Hz	100	-327.68 -	327.67	r0020	r0020

7.2 MODBUS communication

Register No.		Description	Ac-	Unit Scaling		Range or On/Off		Read	Write	
Inverter	MODBUS	- -	cess		factor	text				
340	40341	Speed	R	RPM	1	-16250 - 10	6250	r0022	r0022	
341	40342	Frequency output	R	Hz	100	-327.68 - 3	27.67	r0024	r0024	
342	40343	Voltage output	R	V	1	0 - 32767		r0025	r0025	
343	40344	DC bus voltage	R	V	1	0 - 32767		r0026	r0026	
344	40345	Current filtered	R	Α	100	0 - 163.83		r0027	r0027	
345	40346	Torque	R	Nm	100	-325.00 - 3	25.00	r0031	r0031	
346	40347	Actual power	R	kW	100	0 - 327.67		r0032	r0032	
347	40348	Total kWh	R	kWh	1	0 - 32767		r0039	r0039	
348	40349	Hand/auto	R	-	1	HAND	AUTO	r0807	r0807	
349	40350	Current unfiltered	R	Α	100	0 - 163.83		r0068	r0068	
399	40400	Fault 1	R	-	1	0 - 32767		r0947[0]	r0947[0]	
400	40401	Fault 2	R	-	1	0 - 32767		r0947[1]	r0947[1]	
401	40402	Fault 3	R	-	1	0 - 32767		r0947[2]	r0947[2]	
402	40403	Fault 4	R	-	1	0 - 32767		r0947[3]	r0947[3]	
403	40404	Fault 5	R	-	1	0 - 32767		r0947[4]	r0947[4]	
404	40405	Fault 6	R	-	1	0 - 32767		r0947[5]	r0947[5]	
405	40406	Fault 7	R	-	1	0 - 32767		r0947[6]	r0947[6]	
406	40407	Fault 8	R	-	1	0 - 32767			r0947[7]	
407	40408	Warning	R	-	1	0 - 32767	0 - 32767		r2110[0]	
498	40499	Parameter error code	R	-	1	0 - 254		-	-	
499	40500	PID enable	R/W	-	1	0 - 1	0 - 1		(BICO) P2200	
500	40501	PID setpoint reference	R/W	%	100	-200.0 - 20	-200.0 - 200.0		P2240	
509	40510	Low pass	R/W	-	100	0.00 - 60.0	0.00 - 60.0		P2265	
510	40511	Feedback gain	R/W	%	100	0.00 - 500.	0.00 - 500.00		P2269	
511	40512	Proportional gain	R/W	-	1000	0.000 - 65.	.000	P2280	P2280	
512	40513	Integral gain	R/W	s	1	0 - 60		P2285	P2285	
513	40514	Differential gain	R/W	-	1	0 - 60		P2274	P2274	
514	40515	PID upper limit	R/W	%	100	-200.0 - 20	0.0	P2291	P2291	
515	40516	PID lower limit	R/W	%	100	-200.0 - 20	0.0	P2292	P2292	
519	40520	PID setpoint output	R	%	100	-100.0 - 10	0.0	r2250	r2250	
520	40521	PID feedback	R	%	100	-100.0 - 10	0.0	r2266	r2266	
521	40522	PID output	R	%	100	-100.0 - 10	0.0	r2294	r2294	
549	40550	Parameter number	RW	-	1	0 - 65535		-	-	
550	40551	Parameter index	RW	-	1	0 - 65535		-	-	
551	40552	Reserved	RO	-	-	-		-	-	
553	40554	Parameter upper word	RW	-	1	0 - 65535		-	-	
554	40555	Parameter lower word	RW	-	1	0 - 65535		-	-	
557	40558	Parameter upper word	RO	_	1	0 - 65535		-	-	
558	40559	Parameter lower word	RO	-	1	0 - 65535		_	1_	

Program example

The program below gives an example of calculating the CRC for MODBUS RTU.
unsigned int crc_16 (unsigned char *buffer, unsigned int length)
{
 unsigned int i, j, temp_bit, temp_int, crc;
 crc = 0xFFFF;
 for (i = 0; i < length; i++)
 {
 temp_int = (unsigned char) *buffer++;
 crc ^= temp_int;
 for (j = 0; j < 8; j++)
 {
 temp_bit = crc & 0x0001;
 crc >>= 1;
 if (temp_bit != 0)
 crc ^= 0xA001;
 }
}

Parameter scaling

}

Due to the limits of the integer data in the MODBUS protocol, it is necessary to convert the inverter parameters before transmitting them. This is done by scaling, so that a parameter, which has a position after decimal point, is multiplied by a factor, to get rid of the fractional part. The scaling factor is as defined in the above table.

BICO parameters

The updating of BICO parameters will also be done in the parameter processing in the background. Because of the limitations of the register value, it is only possible to write a '0' or a '1' to a BICO parameter. This will set BICO input to a static value of either '0' or '1'. The previous connection to another parameter is lost. Reading the BICO parameter will return the current value of the BICO output.

For example: MODBUS register number 40200. Writing a value 0 or 1 to that register will set the BICO input P0731 statically to that value. Reading will return the BICO output, which is stored in r0747.0.

Fault

The inverter displays the fault F72 when the following three conditions are met:

- The parameter P2014 (USS/MODBUS telegram off time) is not equal to 0.
- Process data has been received from the master since the inverter's start-up.
- The time between receipts of two consecutive process data telegrams exceeds the value of P2014.

7.2 MODBUS communication

8.1 Introduction to parameters

Parameter number

Numbers prefixed with an "r" indicate that the parameter is a "read-only" parameter.

Numbers prefixed with a "P" indicate that the parameter is a "writable" parameter.

[index] indicates that the parameter is an indexed parameter and specifies the range of indices available. If the index is [0...2] and the meaning is not listed, then see "Data set".

.0...15 indicates that the parameter has several bits, which can be evaluated or connected individually.

Data set

Note

The "Index" chapter at the end of this manual provides complete lists of CDS/DDS parameters.

In the inverter, the parameters which are used to define the sources for commands and setpoints are combined in the **Command Data Set** (CDS), while the parameters for the open and closed-loop control of the motor are combined in the **Inverter Data Set** (DDS).

The inverter can be operated from different signal sources by switching over the command data sets. When switching over the inverter data sets, it is possible to switch between different inverter configurations (control type, motor).

Three independent settings are possible for each data set. These settings can be made using the index [0...2] of the particular parameter.

Index	CDS	DDS
[0]	Command data set 0	Inverter data set 0
[1]	Command data set 1	Inverter data set 1
[2]	Command data set 2	Inverter data set 2

8.1 Introduction to parameters

SINAMICS V20 has an integrated copy function which is used to transfer data sets. This can be used to copy CDS/DDS parameters corresponding to the particular application.

Copy CDS	Copy DDS	Remarks
P0809[0]	P0819[0]	The data set which is to be copied (source)
P0809[1]	P0819[1]	The data set into which data is to be copied (target)
P0809[2]	P0819[2]	= 1: Start copying
		= 0: Copying completed

For example, copying of all values from CDS0 to CDS2 can be accomplished by the following procedure:

1. Set P0809[0] = 0: copy from CDS0

2. Set P0809[1] = 2: copy to CDS2

3. Set P0809[2] = 1: start copy

Command data set

The command data sets are changed over using the BICO parameters P0810 and P0811, whereby the active command data set is displayed in parameter r0050. Changeover is possible in both the "Ready" and the "Run" states.

P0810 = 0	CDS0
P0811 = 0	
P0810 = 1	CDS1
P0811 = 0	
P0810 = 0 or 1	CDS2
P0811 = 1	

Inverter data set

The inverter data sets are changed over using the BICO parameters P0820 and P0821, whereby the active inverter data set is displayed in parameter r0051. Inverter data sets can only be changed over in the "Ready" state.

P0820 = 0	DDS0
P0821 = 0	
P0820 = 1	DDS1
P0821 = 0	
P0820 = 0 or 1	DDS2
P0821 = 1	

BI, BO, CI, CO, CO/BO in parameter names


Note

The "Index" chapter at the end of this manual provides groups of the BICO parameters.

Certain parameter names include the following abbreviated prefixes: BI, BO, CI, CO and CO/BO followed by a colon. These abbreviations have the following meanings:

BI	=	P9999 (0)	Binector input: Parameter selects the source of a binary signal Each BI parameter can connect as the input to any BO or CO/BO parameter.
ВО	=	r9999	Binector output: Parameter connects as a binary signal Each BO parameter can connect as the output to any BI parameter.
CI	=	r9999 (999:9)	Connector input: Parameter selects the source of an analog signal Each CI parameter can connect as the input to any CO or CO/BO parameter.
СО	=	r9999 [99]>	Connector output: Parameter connects as an analog signal Each CO parameter can connect as the output to any CI parameter.
CO/BO	=	r9999 r9999	Connector/binector output: Parameter connects as an analog signal and/or as a binary signal Each CO/BO parameter can connect as the output to any BI or CI parameter.

BICO example

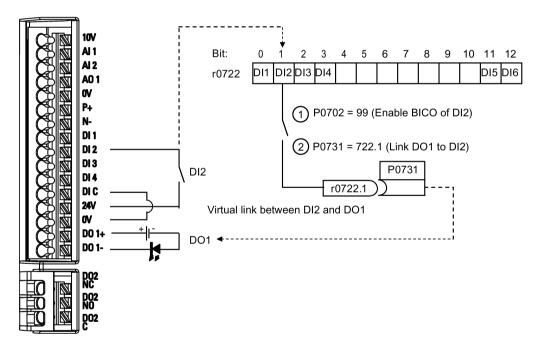

BICO or the binary interconnection technology can help the user to connect internal function and values to realize more customized features.

BICO functionality is a different, more flexible way of setting and combining input and output functions. It can be used in most cases in conjunction with the simple, access level 2 settings.

The BICO system allows complex functions to be programmed. Boolean and mathematical relationships can be set up between inputs (digital, analog, serial etc.) and outputs (inverter current, frequency, analog output, digital outputs, etc.).

The default parameter that a BI or CI parameter is connected to is shown in the Factory default column of the parameter list.

Access level (P0003)

Defines the level of user access to parameter sets.

Access level	Description	Remarks
0	User-defined parameter list	Defines a limited set of parameters to which the end user has access. See P0013 for details on use.
1	Standard	Allows access into most frequently used parameters.
2	Extended	Allows extended access to more parameters.
3	Expert	For expert use only.
4	Service	Only for use by authorized service personnel, password protected.

Data type

The data types available are shown in the table below.

U8	8-bit unsigned
U16	16-bit unsigned
U32	32-bit unsigned
I16	16-bit integer
132	32-bit integer
Float	32-bit floating point number

Depending on the data type of the BICO input parameter (signal sink) and BICO output parameter (signal source) the following combinations are possible when creating BICO interconnections:

	BICO input param	eter		
	CI parameter			BI parameter
BICO output parameter	U32/I16	U32/I32	U32/Float	U32/Bin
CO: U8	\checkmark	√	-	-
CO: U16	\checkmark	\checkmark	-	-
CO: U32	\checkmark	\checkmark	-	-
CO: I16	\checkmark	\checkmark	-	-
CO: I32	\checkmark	\checkmark	-	-
CO: Float	\checkmark	√	√	-
BO: U8	-	-	-	√
BO: U16	-	-	-	\checkmark
BO: U32	-	-	-	\checkmark
BO: I16	-	-	-	\checkmark
BO: I32	-	-	-	\checkmark
BO: Float	-	-	-	-

Legend:

 $\sqrt{\cdot}$: BICO interconnection permitted

-: BICO interconnection not permitted

Scaling

Specification of the reference quantity with which the signal value will be converted automatically.

Reference quantities, corresponding to 100 %, are required for the statement of physical units as percentages. These reference quantities are entered in P2000 to P2004.

In addition to P2000 to P2004 the following normalizations are used:

TEMP: 100 °C = 100 %
PERCENT: 1.0 = 100 %
4000H: 4000 hex = 100 %

Can be changed

Inverter state in which the parameter is changeable. Three states are possible:

• Commissioning: C, C(1) or C(30)

Run: U

Ready to run: T

This indicates when the parameter can be changed. One, two or all three states may be specified. If all three states are specified, this means that it is possible to change this parameter setting in all three inverter states. C shows the parameter is changeable whatever P0010 equals; C(1) shows that the parameter is changeable only when P0010 = 1; C(30) shows that the parameter is changeable only when P0010 = 30.

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r0002	Inverter state	-	-	-	-	-	U16	2			
	Displays actual inverter state.										
	0	Commissioning mode (P0010 ≠ 0)									
	1	Inverter ready									
	2	Inverter fault active									
	3	Inverter starting (visible only while pre-charging DC link)									
	4	Inverter running									
	5	Stopping (ramping down)									
	6	Inverter inhibit	Inverter inhibited								
P0003	User access level	0 - 4	1	U, T	-	-	U16	1			
	Defines user access level to parameter sets.										
	0	User defined parameter list - see P0013 for details on use									
	1	Standard: Allo	Standard: Allows access into most frequently used parameters								
	2	Extended: Allows extended access, for example, to inverter I/O functions									
	3	Expert: For expert use only									
	4	Service: Only	for use by a	authorized sen	vice, password	protected	d				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0004	Parameter filter	0 - 24	0	U, T	-	-	U16	1			
	Filters parameters according to functionality to enable a more focused approach to commissioning.										
	0	All parameters									
	2	Inverter									
	3 Motor										
	5 Technology application/units										
	7	Commands, binary I/O									
	8	Analog input a	nd analog	output							
	10	Setpoint channel/RFG									
	12	Inverter features									
	13	Motor control									
	19 Motor identification										
	20 Communication										
	21 Warnings/faults/monitoring										
	22										
	24	List of modified parameters									
P0005	Parameter display selection	0 - 9580	0	C, U, T	-	-	U16	2			
	Selects default display parameter (inverter display).										
Example:	The inverter displays the	ne value of the pa	arameter se	elected here by	default.						
Notice:	If you have set P0005 displays the value of the non-zero value which cunchanged.	e selected parar	meter as the	e default display	value; if you h	nave set	P0005	to 0 or a			
P0007	Backlight delay time	0 - 2000	0	U, T	-	-	U16	3			
	Defines time period after which the backlight of the operator panel display turns off if no buttons have been pressed.										
	0	Backlight alwa	ys on								
	1 - 2000	Number of sec	onds after	which the backli	ght turns off.						
P0010	Commissioning parameter	0 - 30	0	Т	-	-	U16	1			
	Filters parameters so t	hat only those re	lated to a p	articular function	nal group are s	selected	l.				
	0	Ready									
	1	Quick commiss	sioning								
	2 Inverter										
	29 Download										
	30	Factory setting									
Dependency:	Reset to 0 for inverter P0003 (user access le		nes access	to parameters.							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
Note:	 P0010 = 1 The inverter can be portant parameters tered one after the done by setting P39 P0010 = 2 For service purpose P0010 = 30 When resetting the Resetting of the par cally reset all its par lems during parameters during parameters during of the use automatically reset about 60 seconds. 	(e.g.: P0304, P0 other. The end of the end o	305, etc.) a f quick com wards parai ser default v started by s default sett sh to start a will be start	re visible. The visible and the meter P0010 and values of inverter etting parameter ings. This can progain.	alue of these he start of into the start of into the P3900 will be reported by P0910 must reported by P0970 = 1. To the population of the P0970 reported by	parame ernal ca e reset to be set t he inve I if you 0 = 21.	ters mu lculation o zero au to 30. rter will experier	st be en- n will be tomatically. automati- nce prob-		
P0011	Lock for user-defined parameter	0 - 65535	0	U, T	-	-	U16	3		
	See P0013									
P0012	Key for user-defined parameter	0 - 65535	0	U, T	-	-	U16	3		
	See P0013									
P0013[019]	User-defined parameter	0 - 65535	[016] 0 [17] 3 [18] 10 [19] 12	U, T	-	-	U16	3		
	Defines a limited set of parameters to which the end user has access. Instructions for use: 1. Set P0003 = 3 (expert user). 2. Go to P0013 indices 0 to 16 (user list) 3. Enter into P0013 index 0 to 16 the parameters required to be visible in the user-defined list. The following values are fixed and cannot be changed: - P0013 index 17 = 3 (user access level) - P0013 index 18 = 10 (commissioning parameter filter) - P0013 index 19 = 12 (key for user defined parameter) 4. Set P0003 = 0 to activate the user defined parameter.									
Index:	[0]	1st user param 2nd user param								
	ניז	Ziiu usei palai	10101							
	[19] 20th user parameter									
Dependency:	First, set P0011 ("lock") to a different value then P0012 ("key") to prevent changes to user-defined parameter. Then, set P0003 to 0 to activate the user-defined list. When locked and the user-defined parameter is activated, the only way to exit the user-defined parameter (and view other parameters) is to set P0012 ("key") to the value in P0011 ("lock").									

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
P0014[02]	Store mode		0 - 1	0	U, T	-	-	U16	3	
<u> </u>		e mode for	parameters. Th	e store mo	1	ured for all in	terfaces	under "	Index".	
	0		Volatile (RAM)		_					
	1		Non-volatile (E							
Index:	[0]		USS/Modbus of							
muox.	[1]		USS on RS232		.					
	[2]		Reserved	- (10001400)	<u> </u>					
Note:	An independ		equest may be p				mple, Pl	KE bits	15-12 of	
	Value of P00		Store request v		5 0.11 ti 10 00ti 11 go	011 0011.	Resul	ŀ		
	RAM	711 [7]	EEPROM	, ia 000			EEPR			
	EEPROM		EEPROM				EEPR			
	RAM		RAM				RAM	Olvi		
	EEPROM		RAM				EEPR	OM		
	<u> </u>	- If!!! -!	1	45 - FEDD	201		ICCPR	OIVI		
			ays be stored in nanged by perfor							
	When transferring particles of these calculations.				•	-				
r0017	CO/BO: BOF		-	-	-	-	-	U16	3	
	Shows the immediate status of the BOP buttons.									
	Bit	Signal na	ame			1 signal		0 sign	al	
	00	Run butte				Yes		No		
	01	Stop butt		Yes				No		
	02	OK butto		bination (OK + M) Yes				No		
	03 05	Up butto				Yes Yes		No No		
-	06	Down bu				Yes		No		
	07	Run/stop				Yes		No		
Note:		DFF), will re	main high if the		has been presse	l .	ed. It wil	l only be	e reset	
r0018	Firmware ve	rsion	-	-	-	-	-	Float	1	
			er of installed firr	nware.						
r0019.014	CO/BO: Ope	erator	-	-	-	-	-	U16	3	
			ator panel commecting to BICO in			re used as the	e "sourc	e" code	s for key-	
	Bit	Signal na	ame			1 signal		0 sign	al	
	00	ON/OFF	1			Yes		No		
	01	OFF2: El	ectrical stop			No		Yes		
	08	JOG righ				Yes		No		
	11	1	(setpoint inversi	on)		Yes		No		
	13	T .	tentiometer MOF			Yes		No		
	14		otentiometer MOP down					No		
Note:		technology	is used to alloc		s to panel butto	•	neter dis		e actual	

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0020	CO: Frequency set- point before RFG [Hz]	-	-	-	-	-	Float	3				
	Displays actual frequen (r0020) and unfiltered (r							ered				
r0021	CO: Actual filtered frequency [Hz]	-	-	-	-	-	Float	2				
	Displays actual inverter frequency limitation in \		cy (r0024) e	excluding slip cor	mpensation (a	ınd reso	nance c	lamping,				
r0022	Actual filtered rotor speed [RPM]	-	-	-	-	-	Float	3				
	Displays calculated rotor speed based on r0021 (filtered output frequency [Hz] x 120/number of poles). To value is updated every 128 ms.											
Note:	This calculation makes	no allowance fo	r load-depe	endent slip.								
r0024	CO: Actual filtered output frequency [Hz]	-	-	-	-	-	Float	3				
	Displays actual filtered output frequency (slip compensation, resonance damping and frequency limitation are included). See also r0021. This value is available filtered (r0024) and unfiltered (r0066).											
r0025	CO: Actual output voltage [V]	-	-	-	-	-	Float	2				
	Displays filtered [rms] v (r0072).											
r0026[0]	CO: Actual filtered DC-link voltage [V]	-	-	-	-	-	Float	2				
	Displays filtered DC-link	k voltage. This v	alue is ava	ilable filtered (r00	026) and unfil	tered (r0	070).					
Index:	[0]	Compensation	DC voltage	e channel								
Note:	r0026[0] = Main DC-link	voltage										
r0027	CO: Actual output current [A]	-	-	-	P2002	-	Float	2				
	Displays rms value of m	notor current. Th	nis value is	available filtered	(r0027) and ι	unfiltered	d (r0068	3).				
r0028	CO: Motor current modulus	-	-	-	P2002	-	Float	3				
	Displays estimated rms	value of motor	current cald	culated from dclir	nk current.							
r0031	CO: Actual filtered torque [Nm]	-	-	-	-	-	Float	2				
	Displays electrical torqu	ıe. This value is	available fi	ltered (r0031) ar	nd unfiltered (ı	0080).						
Note:	The electrical torque is to windage and friction					easured	on the	shaft. Due				
r0032	CO: Actual filtered power	-	-	-	r2004	-	Float	2				
	eration for Europe/Nortl	Displays (mechanical) shaft power. Value is displayed in [kW] or [hp] depending on setting for P0100 (operation for Europe/North America).										
	P_mech = 2 * Pi * f * M>											
		r0032[kW] = (2 * Pi/1000) * (r0022/60)[1/min] * r0031[Nm] r0032[hp] = r0032[kW]/0.75										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0035[02]	CO: Actual motor temperature [°C]	-	-	-	-	DDS	Float	2				
	Displays calculated mot	tor temperature.										
r0036	CO: Inverter overload utilization [%]	-	-	-	PERCENT	-	Float	3				
	Displays inverter overload utilization calculated via the I ² t model.											
	The actual I²t value relative to the maximum possible I²t value supplies utilization in [%].											
	If the current exceeds the generated and the outp							erter l ² t) is				
	If 100 % utilization is ex	ceeded, fault F5	(inverter l	t) is tripped.								
r0037[01]	CO: Inverter temperature [°C]	-	-	-	-	-	Float	3				
	Displays measured heat sink temperature and calculated junction temperature of IGBTs based on thermal model.											
Index:	[0] Measured heat sink temperature											
	[1] Total Chip Junction Temperature											
Note:	The values are updated	values are updated every 128 ms.										
r0038	CO: Filtered power factor	-	-	-	-	-	Float	3				
	Displays the filtered pov	ver factor.										
r0039	CO: Energy consumpt. meter [kWh]	-	-	-	-	-	Float	2				
	Displays electrical energy used by inverter since display was last reset (see P0040 - reset energy consumption meter).											
Dependency:	Value is reset when P0	040 = 1 (reset ei	nergy cons	umption meter).								
P0040	Reset energy con- sumpt. and energy saved meter	0 - 1	0	Т	-	-	U16	2				
	Resets value of r0039 (energy consump	otion meter) and r0043 (en	ergy saved me	ter) to z	ero.					
	0	No reset										
	1	Reset r0039 to	0									
P0042[01]	Energy saving scaling	0.000 - 100.00	0.000	Т	-	-	Float	2				
	Scales the calculated e	cales the calculated energy saved value										
Index:	[0]	Factor for kWh	to currenc	y conversion								
	[1]	Factor for kWh	to CO2 co	nversion								
r0043[02]	Energy saved [kWh]	-	-	-	-		Float	2				
	Displays calculated energy saved											
Index:	[0] Energy saving in kWh											
	[1]	Energy saving in currency										
	[2]	Energy saving in CO2										

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
r0050	CO/BO: Activ		-	-	-	-	-	U16	2
	Displays curr	rently active	e command data	a set.					
	0		Command data	a set 0 (CD	S)				
	1		Command data	a set 1 (CD	S)				
	2		Command data	a set 2 (CD	S)				
Note:	See P0810								
r0051[01]	CO: Active in data set (DD		-	-	-	-	-	U16	2
	Displays curr	rently selec	ted and active i	nverter data	a set (DDS).				
	0	Inverter data set 0 (DDS0)							
	1		Inverter data s	et 1 (DDS1)				
	2		Inverter data set 2 (DDS2)						
Index:	[0]	0] Selected inverter data set							
	[1]								
Note:	See P0820								
r0052.015	CO/BO: Activ	ve status	-	-	-	-	-	U16	2
	Displays first	active stat	us word of inve	rter (bit forn	nat) and can be	used to diagno	ose inve	rter sta	tus.
	Bit	Signal na		1 signal		0 sign	al		
	00	Inverter r	eady			Yes		No	
	01	Inverter r	eady to run			Yes		No	
	02	Inverter r	unning	Yes		No			
	03	Inverter f	ault active		Yes		No		
	04	OFF2 act	tive			No		Yes	
	05	OFF3 act	tive			No		Yes	
	06	ON inhibi	t active			Yes	es N		
	07	Inverter v	varning active			Yes		No	
	08	Deviation	setpoint/act. va	alue		No		Yes	
	09	PZD cont	trol			Yes		No	
	10	f_act >=	P1082 (f_max)			Yes		No	
	11	Warning:	Motor current/to	orque limit		No		Yes	
	12	Brake op	en			Yes		No	
	13	Motor ove				No		Yes	
	14		otor runs right Yes		Yes		No		
	15	Inverter of				No		Yes	
Dependency:	High = No Fa	ault);	-		Fault) will be inv	_			
Note:	See r2197 ar	nd r2198.							

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r0053.011	CO/BO: A word 2	Active status	-	-	-	-	-	U16	2			
	Displays	second status	word of inverte	er (in bit forn	nat).							
	Bit	Signal na	ame			1 signal		0 signal				
	00	DC brake	e active			Yes	Yes					
	01	f_act >	P2167 (f_off)			Yes		No				
	02	f_act >	P1080 (f_min)			Yes		No				
	03	Act. curre	ent r0068 >= F	2170		Yes		No				
	04	f_act >	P2155 (f_1)			Yes		No				
	05	f_act <=	P2155 (f_1)			Yes		No				
	06	f_act >=	setpoint (f_set)	Yes		No						
	07	Act. unfil	t. Vdc < P2172			Yes		No				
	08	Act. unfil	t. Vdc > P2172			Yes		No				
	09	Ramping	Ramping finished Yes					No				
	10	PID outp	ut r2294 == P2	292 (PID_m	in)	Yes						
	11	PID outp	D output r2294 == P2291 (PID_max) Yes 1					No				
Notice:	r0053 bit	00 "DC brake	active" ==> see	e P1233								
Note:	See r219	7 and r2198.										
r0054.015	CO/BO: A word 1	Active control	-	-	-	-	-	U16	3			
	Displays first control word of inverter (in bit format) and can be used to diagnose which commands are active.											
	Bit	Signal na	ame			1 signal		0 signal				
	00	ON/OFF	1			Yes		No				
	01	OFF2: el	ectrical stop			No		Yes				
	02	OFF3: fa	st stop			No		Yes				
	03	Pulse en	able			Yes		No				
	04	RFG ena	ıble			Yes		No				
	05	RFG star	rt			Yes		No				
	06	06 Setpoint enable Yes		Yes			No					
	07	Fault ack	nowledge			Yes	No					
	08	JOG righ	t			Yes		No				
	09	JOG left				Yes		No				
	10	Control f	rom PLC			Yes		No				
	11	Reverse	(setpoint invers	sion)		Yes		No				
	13	Motor po	tentiometer MC)P up		Yes		No				
	14	Motor po	tentiometer MC	Yes		No						
	15	CDS Bit 0 (Hand/Auto)				Yes		No				
Notice:	r∩054 is i	dentical to r20	36 if USS is se	e via P0700 or	D0710							

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
r0055.015	CO/BO: Active c	ontrol	-	-	-	-	-	U16	3	
	Displays addition are active.	nal cont	trol word of in	erter (in bit f	ormat) and car	an be used to diagnose which command				
	Bit Si	gnal na	me			1 signal		0 signal		
	00 Fix	xed free	quency Bit 0			Yes		No		
	01 Fix	xed free	quency Bit 1			Yes		No		
	02 Fix	xed free	quency Bit 2			Yes		No		
	03 Fix	xed free	quency Bit 3			Yes		No		
	04 Inv	verter d	lata set (DDS)	Bit 0		Yes		No		
	05 Inv	nverter data set (DDS) Bit 1			Yes		No			
	06 Quick stop		p disable			Yes		No		
	08 Er	Enable PID		Yes		No				
	09 Er	nable D	C brake			Yes		No		
	13 Ex	External fault 1 No		Yes						
	15 Co	omman	d data set (CI	OS) Bit 1		Yes		No		
Notice:	r0055 is identica	I to r20	37 if USS is se	elected as co	mmand source	e via P0700 or	P0719.			
r0056.015	CO/BO: Status of motor control	of	-	-	-	-	-	U16	3	
	Displays status of	of moto	r control (in bi	t format), whi	ch can be use	d to diagnose	inverter s	tatus.		
	Bit Si	Bit Signal name						0 sign	al	
	00 Ini	it. contr	ol finished			Yes		No		
	01 Mo	otor de	magnetizing fi	nished		Yes		No		
	02 Pu	ulses er	nabled			Yes		No		
	03 Vo	oltage s	oft start selec	t		Yes		No		
	04 Mo	otor exc	citation finishe	d		Yes		No		
	05 St	arting b	oost active			Yes		No		
	06 Ac	ccelerat	tion boost acti	ve		Yes		No		
	07 Fr	equenc	y is negative			Yes		No		
	08 Fie	eld wea	akening active			Yes		No		
	09 Vo	olts setp	point limited			Yes		No		
	10 Sli	ip frequ	ency limited			Yes		No		
	11 f_c	out > f_	max Freq. lim	ited		Yes		No		
	12 Pr	nase re	versal selecte	d		Yes		No		
	13 Im	nax con	troller active/to	orque limit re	ached	Yes		No		
	14 Vo	dc_max	controller act	ive		Yes		No		
	15 KI	B (Vdc	_min control) a	active		Yes		No		
Notice:	The I-max contro		056 bit 13) wil	l be activated	d when the act	ual output curr	ent (r002	7) exce	eds the	

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0066	CO: Actual output frequency [Hz]	-	-	-	-	-	Float	3				
	Displays actual output frequency in Hz. This value is available filtered (r0024) and unfiltered (r0066).											
Note:	The output frequency is mum frequency).	limited by the v	alues enter	ed in P1080 (mir	nimum freque	ncy) and	d P1082	? (maxi-				
r0067	CO: Actual output current limit [A]	-	-	-	P2002	-	Float	3				
	Displays valid maximum output current of inverter.											
	r0067 is influenced/determined by the following factors:											
	Inverter application P0205											
	Rated motor current P0305											
	Motor overload factor P0640											
	Motor protection in dependency of P0610											
	 r0067 is less than or equal to maximum inverter current r0209 											
	Inverter protection in dependency of P0290											
Note:	A reduction of r0067 ma	ay indicate an in	verter overl	oad or a motor o	verload.							
r0068	CO: Output current [A]	-	_	-	P2002	_	Float	3				
	Displays unfiltered [rms] value of motor current. This value is available filtered (r0027) and unfilte (r0068).											
Note:	Used for process contro through USS).	Jsed for process control purposes (in contrast to r0027, which is filtered and is used to display the value hrough USS).										
r0069[05]	CO: Actual phase currents [A]	-	-	-	P2002	-	Float	4				
	Displays measured phase currents.											
Index:	[0] U_Phase/ Emitter1/											
	[1] Dclink/Emitter2											
	[2] Dclink											
	[3] Offset U_phase/Emitter											
	[4] Offset dclink											
	[5]	Not used										
r0070	CO: Actual DC-link voltage [V]	-	-	-	-	-	Float	3				
	Displays DC-link voltage. This value is available filtered (r0026) and unfiltered (r0070).											
Note:	Used for process contro	ol purposes (in c	ontrast to r	0026 (actual DC-	link voltage),	which is	filtered	l).				
r0071	CO: Maximum output voltage [V]	-	-	-	-	-	Float	3				
	Displays maximum out	out voltage.										
Dependency:	Actual maximum output	t voltage depend	ls on the ac	tual input supply	voltage.							
r0072	CO: Actual output voltage [V]	-	-	-	-	-	Float	3				
	Displays output voltage	. This value is a	vailable filte	red (r0025) and	unfiltered (r00)72).	•	•				
r0074	CO: Actual modulation	-	-	-	PERCENT	-	Float	4				
	Displays actual modula fundamental componer							de of th				


Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0078	CO: Actual current Isq [A]	-	-	-	P2002	-	Float	3				
	Displays component of (r0078).	torque generatir	ng current.	This value is ava	ilable filtered	(r0030)	and unf	iltered				
r0080	CO: Actual torque [Nm]	-	-	-	-	-	Float	4				
	Displays actual torque.	This value is ava	ailable filter	ed (r0031) and u	infiltered (r008	30).						
r0084	CO: Actual air gap flux [%]	-	-	-	PERCENT	-	Float	4				
	Displays air gap flux rel	ative to the rated	d motor flux									
r0085	CO: Actual re-active current [A]	-	-	-	P2002	-	Float	3				
	Displays re-active (imaginary part) of motor current.											
Dependency:	Applies when V/f contro	l is selected in F	21300 (cont	rol mode); other	wise, the disp	lay sho	ws the v	alue zero.				
r0086	CO: Actual active current [A]	-	-	-	P2002	-	Float	3				
	Displays active (real part) of motor current.											
Dependency:	See r0085											
r0087	CO: Actual power factor	-	-	-	-	-	Float	3				
	Displays the actual power factor.											
r0094	CO: Transformation angle [°]	-	0.0	-	4000H	-	Float	3				
	Displays the transforma	Displays the transformation angle (flux angle in VC mode or angle from frequency in Vf mode).										
P0095[09]	CI: Display PZD signals	0 - 4294967295	0	Т	4000H	-	U32	3				
	Selects source of display for PZD signals.											
Index:	[0] 1st PZD signal											
	[1] 2nd PZD signal											
	[9]	10th PZD signa	al									
r0096[09]	PZD signals [%]	-	-	-	-	-	Float	3				
	Displays PZD signals.											
Index:	[0]	1st PZD signal										
	[1]	2nd PZD signa	l									
	[9]	10th PZD signa	al									
Note:	r0096 = 100 % correspo	onds to 4000 he	K .					•				
P0100	Europe/North America	0 - 2	0	C(1)	-	-	U16	1				
	Determines whether the The default settings for ically here, in addition to	the rated motor	frequency I	P0310 and maxir				· ·				
	0 Europe [kW], motor base frequency is 50 Hz											
	1 North America [hp], motor base frequency is 60 Hz											
	2	North America	[kW], moto	base frequency	is 60 Hz							

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
Dependency:	Where:		•									
	Stop inve	rter first (i.	e. disable all pul	ses) before	you change this	parameter.						
	P0100 ca example,	-	changed with P0	0010 = 1 (Co	ommissioning mo	ode) via the re	espectiv	e interf	ace (for			
	Changing P0100 resets all rated motor parameters as well as other parameters that depend on the rated motor parameters (see P0340 - calculation of motor parameters).											
r0191[02]	Configuration inverter - 0 U32 4											
	Displays the	Displays the actual hardware configuration (SZL vector) of the inverter.										
Index:	[0]		SZL vector of i	nverter and	power module							
	[1]		SZL vector of i	nverter	-							
	[2]		SZL vector of p	ower modu	ıle							
P0199	Equipment sy number	ystem	0 - 65535	0	U, T	-	-	U16	2			
	Specifies the unique equipment system number for the inverter.											
P0201[02]	Actual power code number		0 - 65535	0	Т	-	-	U16	3			
	Identifies har	dware vari	ant.									
Index:	[0]		Inverter code									
	[1]		Functionality v	ersion - last	digit of the artic	le number						
	[2]		Last used inve	rter ID								
Notice:	Parameter Po	0201 = 0 ir	ndicates that no	power mod	ule has been ide	ntified.						
r0204	Power modul tures	le fea-	-	0	-	-	-	U32	3			
	Displays hard	dware feat	ures of power m	odule.								
	Bit	Signal na	ame			1 signal		0 sign	al			
	00	DC input	voltage			Yes		No				
	01	RFI filter				Yes		No				
	02	Active lin	e module			Yes		No				
	03	SLM				Yes		No				
	04	BLM with	thryistor			Yes		No				
	05	BLM with	diode			Yes		No				
	06	Water co	oled			Yes		No				
	07	F3E inve	rter			Yes		No				
	12	Safe bral	ке			Yes		No				
	13	Safety er	nabled			Yes		No				
	14	Integrate	d output filter			Yes		No				
Note:	Parameter r0	204 = 0 in	dicates that no p	ower modu	lle has been ider	ntified.						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P0205	Inverter application	0 - 1	0	C1		-	U16	3

Selects inverter application.

The inverter and motor requirements are determined by the speed range and torque requirements of the load. The relationship between speed and torque for different loads (high overloads or low overloads) is shown in the following figure:

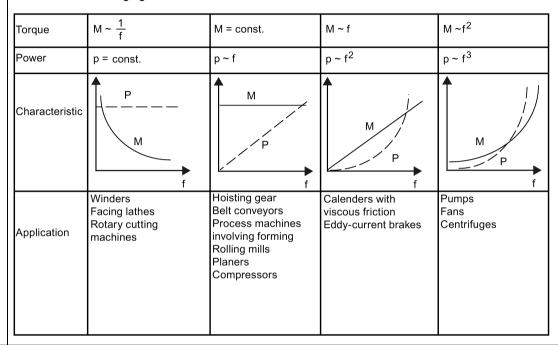

High overload (HO):

HO mode is used if the application needs a high overload on the whole frequency range. Many loads can be considered to be high overloads. Typical high overloads are conveyors, compressors and positive displacement pumps.

Low overload (LO):

LO mode is used if the application has a parabolic frequency/torque characteristic like many fans and pumps. Low overload offers the following possibilities with the same inverter:

- Higher rated inverter current r0207
- Higher rated inverter power r0206
- Higher threshold for I2t protection

If P0205 is modified in quick commissioning it immediately calculates various motor parameters:

- P0305 Rated motor current
- P0307 Rated motor power
- P0640 Motor overload factor

It is recommended to modify P0205 first. Afterwards motor parameter may be adapted.

Motor parameter will be overridden by changing this sequence.

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
Values:	0	High overload								
	1	Low overload								
Notice:	Use setting 1 (low over If it is used for high-own motor.					-		ating in the		
Note:	This parameter select setting (see P0970).	ts inverter applicat	ion for FSE	only. The paran	neter value is	not rese	et by the	e factory		
r0206	Rated inverter power [kW]/[hp]	-	-	-	-	-	Float	2		
	Displays nominal rate	d motor power fro	m inverter.							
Dependency:	Value is displayed in	[kW] or [hp] deper	iding on set	ting for P0100 (d	peration for I	Europe/I	North Ar	merica).		
r0207[02]	Rated inverter current [A]	t -	-	-	-	-	Float	2		
	Displays rated inverte	er current.	_							
Index:	[0]	Rated inverter	current							
	[1]	Rated LO curre	ent							
	[2]	Rated HO curr	ent							
Note:	The rated high overload (HO) current r0207[2] values correspond to suitable 4-pole Siemens standard motors (IEC) for the selected load cycle (see diagram). r0207[2] is the default value of P0305 in association with the HO application (load cycle).									
	Inverter current / powe % r0209 150%	r 	Short-time current							
l	r0207[0] 100%	Rated inve	erter current	(continuous)						
	94.5%	Base load	current (with	ı overload capabili	ty)					
1	-	60 s ◀	240 s		-	→ t				
r0208	Rated inverter voltage [V]	-	-	-	-	-	U32	2		
	Displays nominal AC	supply voltage of	inverter.							
Note:	r0208 = 230: 200 V to r0208 = 400: 380 V to	•		,						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
r0209	Maximum inverter current [A]	-	-	-	-	-	Float	2		
	Displays maximum output curre	ent of inverter.								
Dependency:	r0209 depends on the derating altitude. The data of deration is				300, surrou	ınding te	mperatu	ire and		
P0210	Supply voltage [V]	380 - 480	400	Т	-	-	U16	3		
	P0210 defines the supply voltacorrespond to the supply voltage	-	•	upon the ty	pe of inver	ter. If P0	210 doe	s not		
Dependency:	Optimizes Vdc controller, which extends the ramp-down time if regenerative energy from motor would otherwise cause DC-link overvoltage trips.									
	Reducing the value enables controller to cut in earlier and reduce the risk of overvoltage.									
	Set P1254 ("Auto detect Vdc stare then derived directly from F			els for Vdo	controller	and com	pound l	braking		
	Vdc_min switch-on level (r1)	Vdc_min switch-on level (r1246) = P1245 * sqrt(2) * P0210								
	Vdc_max switch-on level (r2)	Vdc_max switch-on level (r1242) = 1.15 * sqrt(2) * P0210								
	Dynamic braking switch-on	Dynamic braking switch-on level = 1.13 * sqrt(2) * P0210								
	Compound braking switch-order	Compound braking switch-on level = 1.13 * sqrt(2) * P0210								
	Set P1254 ("Auto detect Vdc switch-on levels") = 1. Cut-in levels for Vdc controller and compound braking are then derived from r0070 (DC-link voltage):									
	• Vdc_min switch-on level (r1246) = P1245 * r0070									
	• Vdc_max switch-on level (r1242) = 1.15 * r0070									
	Dynamic braking switch-on level = 0.98 * r1242									
	Compound braking switch-order	on level = 0.98 *	r1242							
	Auto-detection calculations are pulses are enabled, the calculations					dby for o	ver 20s.	When		
Note:	For best results, it is recommer ting P1254 = 0 is only recommendator is being driven. In this ca	ended when the	re is a high de	gree of fluc	tuation of t					
	If mains voltage is higher than avoid acceleration of the motor					ntroller m	nay occu	ır to		
	Default value is depending on i	nverter type and	l its rating data	1.	T	ı	1	Т		
r0231[01]	Maximum cable length [m]	-	-	-	-	-	U16	3		
	Indexed parameter to display n					nd motor.				
Index:	[0]	Maximum allow								
	[1] Maximum allowed screened cable length									
Notice:	For full EMC compliance, the s			d 25 m in le	ength wher	n an EM0				
P0290	Inverter overload reaction	0 - 3	2	Т	-	-	U16	3		
	Selects reaction of inverter to an internal thermal overload condition.									
	0	Reduce output	· · · · · ·	<u> </u>						
	1	No reduction, t								
	2	Reduce pulse		-			-			
	Reduce pulse frequency only and trip (F6) when overload too high									

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
Dependency:	Following physical	values influe	nce the inverter	overload prote	ection (see	diagram):				
	Heat sink temp	erature (r003	7[0]); causes A	504 and F4.						
	IGBT Junction	temperature ((r0037[1]); caus	es F4 or F6.						
	Delta temperat	ure between l	heat sink and ju	nction tempera	ature; caus	es A504 a	nd F6.			
	Inverter I ² t (r00)	36); causes <i>A</i>	\505 and F5.							
	r0036 Inverte	r monitoring	Inverter	P0290 i_max control	on i	→ A504				
	r0037 Heat	P0294 sink temperatu			<u> -</u>	→ A505				
		P0292 temperature P0292		f_pulse control		F4 F5 F6				
Notice:	P0290 = 0, 2:									
	 Reduction of output frequency is only effective if the load is also reduced. 									
	 This is for example valid for light overload applications with a quadratic torque characteristic as pumps or fans. For settings P0290 = 0 or 2, the I-max controller will act upon the output current limit (r0067) in case of overtemperature. P0290 = 0: 									
	 With pulse frequencies above nominal, pulse frequency will be reduced to nominal immediately in the event of r0027 greater than r0067 (current limit). P0290 = 2, 3: 									
	The pulse frequency Hz.	uency P1800	is reduced only	if higher than	2 kHz and	if the oper	ating frec	uency	is below	
	The actual puls displayed in r1		s displayed in r	1801[0] and th	e minimal	pulse frequ	ency for	reducti	on is	
	Inverter I ² t acts	s upon output	current and out	put frequency,	but not or	pulse freq	uency.			
	A trip will always re	esult, if the ac	tion taken does	not sufficiently	y reduce in	ternal tem	peratures	5.		
P0291[02]	Inverter protection		0 - 7	1	Т	-	DDS	U16	4	
	Bit 00 for enabling benefit is to reduce				tion at outp	out frequen	cies belo	w 2 Hz	. The	
	Bit Sign	al name	·			1 signal		0 sign	al	
	00 Pulse frequency reduced below 2 Hz Yes No									
						Yes		No		
	02 Pha	se loss detect	ion enable			Yes		No		
Note:	See P0290							1		

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P0292	Inverter temperature warning [°C]	0 - 25	5	U, T	-	-	U16	3		
	Defines the temperature differeing threshold (A504) of the invectanged by the user.	` '		•	•	. ,				
P0294	Inverter I2t warning [%]	10.0 - 100.0	95.0	U, T	-	-	Float	3		
	Defines the [%] value at which Inverter I2t calculation is used to The I2t calculation value is deep	o determine a m	naximum tolera	able period						
Dependency:	·	The output current of the inverter has been reduced. The value of I ² t does not exceed 100 %.								
Note:	P0294 = 100 % corresponds to	14 = 100 % corresponds to stationary nominal load.								
P0295	Inverter fan off delay time [s]	0 - 3600	0	U, T	-	-	U16	3		
	Defines inverter fan switch off o	delay time in sec	conds after inv	erter has st	topped.	•				
Note:	Defines inverter fan switch off delay time in seconds after inverter has stopped. Setting to 0, inverter fan will switch off when the inverter stops, that means no delay.									
P0301[02]	Easy motor data, rated motor power [kW]	0 - 2000	0	C(1)	-	DDS	Float	1		
	Rated motor power from the rating plate. No other data is necessary. If this parameter is used, the rest of the motor data are then estimated by the firmware.									
Dependency:	Changeable only when P0010	= 1 (quick comn	nissioning).							
Caution:	This functionality is only valid w parameter to zero if you desire			ration on 4-	pole motor	rs. You n	nust set	this		
P0304[02]	Rated motor voltage [V]	10 - 2000	400	C(1)	-	DDS	U16	1		
	Nominal motor voltage from rating plate.									
Dependency:	Changeable only when P0010 = 1 (quick commissioning).									
	Default value is depending on i	nverter type and	d its rating data	Э.						
Caution:	The input of rating plate data m wiring is used for the motor, de IEC Motor W2 QU2 QV2 W2 U1 QU1 U1 U1 QU1 QV1 QV1 QV1 QV1 QV1 QV1 QV1 QV1 QV1 QV	•	_		or (star/de	lta). This	means	, if delta		
	V1 V1 V1 V1 V1 Star	connection								

Parameter	Function	Range	Factory	Can be	Scaling	Data	Data	Acc.		
Note:	Following diagram shows	a typical rating plate	default	changed	elevant m	set	type	Level		
		P0310 P03 SIE MEI D-9105(Erlang(50 Hz 230) 1,5 kW 5,9	3-Mot. E0107/4711 16kg IM B: 400 V \(\(\sum \) / \(\cdot \) 3.4 A \(\sum \) / \(\sum \) / \(\cdot \)	1LA70964-4AA10 01 01 001 IEC/EN 6 3 090L IP55 Th 60 Hz 4 1,75 kW cosφ 0,81	0034 C.I.F 60 V ∆ 3,4 A 1720/min	H : E				
P0305[02]	Rated motor current [A]	0.01 - 10000.00	1.86	C(1)	-	DDS	Float	1		
	Nominal motor current fro									
Dependency:	Changeable only when P0010 = 1 (quick commissioning).									
Note:	Depends also on P0320 (motor magnetization current). The maximum value of P0305 depends on the maximum inverter current r0209 and the motor type:									
D0207[0_0]	Asynchronous motor: P0: It is recommended that the not be lower than: (1/8) <= When the relation of the nexceeds 1.5 an additional monic current waves. Imax,Inv r0209 0.7 · r0209 1.5 Default value is depending	e ratio of P0305 (rate (P0305/r0207)) ominal motor currer current derating is a 2.5 2.P030 r0209 g on inverter type ar	nt P0305 and applied. This in the state of t	half of the m is necessary	aximal inve	erter curr the inver	ent (r02 ter from	09) har-		
P0307[02]	Rated motor power Nominal motor power [kW	0.01 - 2000.00	0.75	C(1)	-	DDS	Float	1		
Dependency:	If P0100 = 1, values will b Changeable only when P0	e in [hp].								
Note:	Default value is depending	g on inverter type ar	nd its rating da	ata.	1	1	1	1		
P0308[02]	Rated motor cosφ	0.000 - 1.000	0.000	C(1)	-	DDS	Float	1		
Dependency:	Nominal motor power fact Changeable only when P0 Visible only when P0100 = Setting 0 causes internal	0010 = 1 (quick com = 0 or 2, (motor pow	missioning). er entered in							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P0309[02]	Rated motor efficiency [%]	0.0 - 99.9	0.0	C(1)	-	DDS	Float	1		
	Nominal motor efficiency from	ating plate.								
Dependency:	Changeable only when P0010	= 1 (quick comn	nissioning).							
	Visible only when P0100 = 1, (i	.e. motor power	entered in [hp	o]).						
	Setting 0 causes internal calcul	ation of value. ٦	The value is di	splayed in r	0332.					
P0310[02]	Rated motor frequency [Hz]	12.00 - 550.00	50.00	C(1)	-	DDS	Float	1		
	Nominal motor frequency from	rating plate.								
Dependency:	Changeable only when P0010	= 1 (quick comn	nissioning).							
	Pole pair number recalculated	automatically if p	parameter is c	hanged.						
Note:	Changes to P0310 can influence	anges to P0310 can influence the maximum motor frequency. For further information see P1082.								
P0311[02]	Rated motor speed [RPM]	0 - 40000	1395	C(1)	-	DDS	U16	1		
	Nominal motor speed from ratir	ng plate.	•		•	•				
Dependency:	hangeable only when P0010 = 1 (quick commissioning).									
	Setting 0 causes internal calculation of value.									
	Slip compensation in V/f control requires rated motor speed for correct operation.									
	Pole pair number recalculated automatically if parameter is changed.									
Note:	Default value is depending on i									
r0313[02]	Motor pole pairs	-	-	_	_	DDS	U16	3		
	Displays number of motor pole	pairs that the in	verter is curre	ntly usina fa	or internal	calculation	ons.			
Dependency:	Recalculated automatically who r0313 = 1: 2-pole motor	en P0310 (rated	motor frequer	ncy) or P03	11 (rated r	notor spe	eed) is c	hanged.		
	r0313 = 2: 4-pole motor	I	T	1	T		T			
P0314[02]	Motor pole pair number	0 - 99	0	C(1)	-	DDS	U16	3		
	Specifies number of pole pairs	of motor.								
Dependency:	Changeable only when P0010 = 1 (quick commissioning). Setting 0 causes r0313 (calculated motor pole pairs) to be used during operation. Setting to > 0 overrides r0313. P0314 = 1: 2-pole motor									
	r0313.	* *		ed during c	operation.	Setting to	o > 0 ove	errides		
P0320[02]	r0313. P0314 = 1: 2-pole motor P0314 = 2: 4-pole motor	ated motor pole		ed during o	operation. S	Setting to				
P0320[02]	r0313. P0314 = 1: 2-pole motor P0314 = 2: 4-pole motor Motor magnetizing current [%]	ated motor pole 0.0 - 99.0	pairs) to be us	С, Т	-	_	> 0 ove			
P0320[02] Dependency:	r0313. P0314 = 1: 2-pole motor P0314 = 2: 4-pole motor Motor magnetizing current [%] Defines motor magnetization collisions Setting 0 causes calculation by	0.0 - 99.0 urrent relative to P0340 = 1 (dat	0.0 P0305 (rated a entered from	C, T motor current rating plat	- ent).	DDS	Float	3		
	r0313. P0314 = 1: 2-pole motor P0314 = 2: 4-pole motor Motor magnetizing current [%] Defines motor magnetization current	0.0 - 99.0 urrent relative to P0340 = 1 (dat	0.0 P0305 (rated a entered from	C, T motor current rating plat	- ent).	DDS	Float	3 of		
Dependency:	r0313. P0314 = 1: 2-pole motor P0314 = 2: 4-pole motor Motor magnetizing current [%] Defines motor magnetization of Setting 0 causes calculation by quick commissioning). The calculation	0.0 - 99.0 urrent relative to P0340 = 1 (dat culated value is ative to P0310 (0.0 P0305 (rated a entered from displayed in r0	C, T motor current rating plate 1331.	ent). e) or by P3 PERCE NT	DDS 3900 = 1 DDS	Float - 3 (enc	3 of 3		
Dependency:	r0313. P0314 = 1: 2-pole motor P0314 = 2: 4-pole motor Motor magnetizing current [%] Defines motor magnetization control of the second se	0.0 - 99.0 urrent relative to P0340 = 1 (dat culated value is ative to P0310 (0.0 P0305 (rated a entered from displayed in r0	C, T motor current rating plate 1331.	ent). e) or by P3 PERCE NT	DDS 3900 = 1 DDS	Float - 3 (enc	3 of 3 ed).		

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
r0332[02]	Rated power factor	-	-	-	-	DDS	Float	3
	Displays power factor for motor	r.						
Dependency:	Value is calculated internally if displayed.	P0308 (rated m	otor cosφ) set	to 0; other	vise, value	entered	in P030)8 is
r0333[02]	Rated motor torque [Nm]	-	-	-	-	DDS	Float	3
	Displays rated motor torque.							
Dependency:	Value is calculated from P0307 (P0307[kW] * 1000)/((P0311[1/			11 (rated m	otor speed	d). r0333	[Nm] =	
P0335[02]	Motor cooling	0 - 3	0	C, T	-	DDS	U16	2
	Selects motor cooling system u	ısed.						
	0	Self-cooled: SI	haft mounted f	an attached	l motor			
	1	Force-cooled:	Separately po	wered cooli	ng fan			
	2	Self-cooled an	d internal fan					
	3	Force-cooled and internal fan						
P0340[02]	Calculation of motor parameters	0 - 4	0	Т	-	DDS	U16	2
	Calculates various motor parar	neters.						
			P0340 = 1	P0340 = 2	P0340	0 = 3	P0340) = 4
	P0341[02] Motor inertia [kg*n	n^2]	Х					
	P0342[02] Total/motor inertia ratio		Х					
	P0344[02] Motor weight		Х					
	P0346[02] Magnetization time		Х			Х		
	P0347[02] Demagnetization t	ime	х			x		
	P0350[02] Stator resistance ((line-to-line)	х	х				
	P0352[02] Cable resistance		х	х				
	P0354[02] Rotor resistance		х	х				
	P0356[02] Stator leakage ind	uctance	х	х				
	P0358[02] Rotor leakage inde	uctance	Х	х				
	P0360[02] Main inductance		Х	х				
	P0625[02] Surrounding moto	r temperature	Х	Х				
	P1253[02] Controller output I		Х			X		
	P1316[02] Boost end frequer	псу	Х			х		
	P1338[02] Resonance dampi	ng gain V/f	Х			X		Х
	P1341[02] Imax controller int	egral time	Х			X		Х
	P1345[02] Imax voltage ctrl.	prop. gain	Х			X		Х
	P1346[02] Imax voltage ctrl. i		х			X		Х
	P2002[02] Reference current		х					
	P2003[02] Reference torque		Х					
	P2185[02] Upper torque three		х					
	P2187[02] Upper torque three		Х					
	P2189[02] Upper torque three	shold 3	x					

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
	0	No calculation	•		•			•		
	1	Complete para	meterization							
	2	Calculation of	equivalent circ	uit data						
	3	Calculation of	V/f control data	a						
	4	Calculation of	controller settir	ngs only						
Note:	This parameter is required duri match in Power ratings of Inver rectly. In these cases use P190	ter to Motor it is 00.	possible that i	r0384 and	r0386 may	not be c	alculate	d cor-		
	tions to the inverter may be inte	•								
	The faults can be acknowledged as soon as the calculations have been completed in the inverter. These calculations can take approximately 10s to complete.									
P0341[02]	Motor inertia [kg*m^2]	0.0001 - 1000.0	0.0018	U, T	-	DDS	Float	3		
	Together with P0342 (inertia ra the acceleration torque (r1518)	Sets no-load inertia of motor. Together with P0342 (inertia ratio total/motor) and P1496 (scaling factor acceleration), this value produte acceleration torque (r1518), which can be added to any additional torque produced from a BICO source (P1511), and incorporated in the torque control function.								
Dependency:	This parameter is influenced by	automatic calc	ulations define	d by P0340	0.					
Note:	The result of P0341 * P0342 is P0341 * P0342 = total motor in P1496 = 100 % activates accel P0341 and P0342.	ertia				ulates the	e torque	e from		
P0342[02]	Total/motor inertia ratio	1.000 - 400.00	1.000	U, T	-	DDS	Float	3		
	Specifies ratio between total inc	ertia (load + mot	tor) and motor	inertia.						
Dependency:	See P0341									
P0344[02]	Motor weight [kg]	1.0 - 6500.0	9.4	U, T	-	DDS	Float	3		
	Specifies motor weight [kg].									
Dependency:	See P0341									
Note:	This value is used in the motor parameters) but can also be en									
r0345[02]	Motor start-up time [s]	-	-	-	-	DDS	Float	3		
	Displays motor start-up time. T the time taken to reach rated m									
P0346[02]	Magnetization time [s]	0.000 - 20.000	1.000	U, T	-	DDS	Float	3		
	Sets magnetization time [s], i.e. waiting time between pulse enable and start of ramp-up. Motor magnetization builds up during this time. Magnetization time is normally calculated automatically from the motor data and corresponds to the rotor time constant.									
Dependency:	See P0341									
Notice:	An excessive reduction of this t	ime can resu <mark>lt i</mark>	n insufficient m	notor magn	etization.					
Note:	If boost settings are higher than 100 %, magnetization time may be reduced. Default value is depending on inverter type and its rating data.									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0347[02]	Demagnetization time [s]	0.000 - 20.000	1.000	U, T	-	DDS	Float	3			
	Changes time allowed after OF	F2/fault condition	on, before puls	ses can be i	e-enabled						
Dependency:	See P0341										
Notice:	Not active following a normally will occur if the time is decreas		o-down, e.g. a	fter OFF1,	OFF3 or J	OG. Ove	rcurrent	trips			
Note:	The demagnetization time is aping on inverter type and its ratir	•	x rotor time c	onstant in s	econds. D	efault va	lue is de	epend-			
P0350[02]	Stator resistance (line) [Ω]	0.00001 - 2000.0	2.0000	U, T	-	DDS	Float	3			
	Stator resistance value for conresistance.	Stator resistance value for connected motor (line value). The parameter value doesn't include the cable resistance.									
Dependency:	See P0341										
Note:	There are three ways to determ	nine the value fo	r this paramet	ter:							
	Calculate using										
	_	Calculate using P0340 = 1 (data entered from rating plate) or									
	 P0340 = 1 (data entered from fatting plate) of P0010 = 1, P3900 = 1, 2 or 3 (end of quick commissioning). 										
	 Measure using P1900 = 2 (standard motor data identification - value for stator resistance is overwritten). 										
	Measure manually using an Ohmmeter.										
	Since the manually measured resistor is a line-to-line value, which includes the cable resistors, the meas-										
	ured value has to be divided by two and the cable resistor of a line has to be subtracted from that value.										
	The value entered in P0350 is the one obtained by the method last used. Default value is depending on inverter type and its rating data.										
P0352[02]	Cable resistance [Ω]	0.0 - 120.0	0.0	U, T	-	DDS	Float	3			
	Cable resistance value betwee	n inverter and m	notor for one p	hase.							
Dependency:	See P0341										
P0354[02]	Rotor resistance [Ω]	0.0 - 300.0	10.0	U, T	-	DDS	Float	3			
	Sets rotor resistance of motor e	equivalent circui	t (phase value) .		•	•				
Dependency:	Calculated automatically using parameter is influenced by auto			-	900 (moto	r identific	ation). T	his			
P0356[02]	Stator leakage inductance [mH]	0.00001 - 1000.0	10.000	U, T	-	DDS	Float	3			
	Sets stator leakage inductance of motor equivalent circuit (phase value).										
Dependency:	See P0354	-	*	·							
P0358[02]	Rotor leakage inductance [mH]	0.0 - 1000.0	10.0	U, T	-	DDS	Float	3			
	Sets rotor leakage inductance	of motor equival	ent circuit (ph	ase value).	•	•	•	•			
Dependency:	See P0354	·		· · · · · · · · · · · · · · · · · · ·							
P0360[02]	Main inductance [mH]	0.0 - 10000.0	10.0	U, T	-	DDS	Float	3			
<u> </u>	Sets main inductance of the mo	l .	l .		•	•	4				
Dependency:	See P0354	•	<u></u>								
Caution:	The data of equivalent circuit re available therefore must be train										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
r0370[02]	Stator resistance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays standardized stator re	esistance of mot	or equivalent o	circuit (phas	e value).					
r0372[02]	Cable resistance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays standardized cable re of the stator resistance.	esistance of moto	or equivalent c	ircuit (phas	e value). It	is estim	ated to l	be 20 %		
r0373[02]	Rated stator resistance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays rated stator resistance	e of the motor e	quivalent circu	it (phase va	alue).		•			
r0374[02]	Rotor resistance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays standardized rotor res	sistance of the m	notor equivaler	nt circuit (pl	nase value).				
r0376[02]	Rated rotor resistance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays rated rotor resistance	of the motor eq	uivalent circuit	(phase val	ue).					
r0377[02]	Total leakage reactance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays standardized total lea	kage reactance	of the motor e	quivalent c	ircuit (phas	se value)				
r0382[02]	Main reactance [%]	-	-	-	PERCE NT	DDS	Float	4		
	Displays standardized main re	actance of the m	notor equivaler	nt circuit (ph	nase value).				
r0384[02]	Rotor time constant [ms]	-	-	-	-	DDS	Float	3		
	Displays calculated rotor time	constant.								
r0386[02]	Total leakage time constant [ms]	-	-	-	-	DDS	Float	4		
	Displays total leakage time cor	nstant of motor.					•			
r0395	CO: Total stator resistance [%]	-	-	-	PERCE NT	-	Float	3		
	Displays stator resistance of m	otor of combine	d stator/cable	resistance.						
P0503[02]	Enable Keep-running Operation	0 - 1	0	Т	-	-	U16	3		
	Enables keep-running operation existing de-rating features, and ings disabled) to mask resulting	the automatic r	estart function							
	0	Keep-running	mode disabled	d						
	1	Keep-running								
Index:	[0]	Inverter data s	et 0 (DDS0)							
	[1]	Inverter data set 1 (DDS1)								
	[2]	Inverter data s								

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
Notice:	P0503 = 1									
	Sets the following parameter va	alues to minimiz	e likelihood of	a trip:						
	P0290 = 2 (inverter overload)	d reaction: redu	ce pulse frequ	ency, outpu	ut current a	ınd outpu	t freque	ency)		
	P1210 = 7 (automatic restar expires)	rt function: resta	rt after mains	brown- /bla	ckout or fa	ult, trip w	hen P1	211		
	• P1211 = 10 (number of time	es inverter will at	ttempt to resta	rt)						
	P1240 = 3 (configuration of	Vdc controller: \	Vdc_max conti	roller and k	inetic buffe	ering (KIB) enabl	ed)		
	P0503 = 0							•		
	Resets the parameters to their	default values:								
	P0290 = 2 (inverter overload)	d reaction: redu	ce pulse frequ	ency, outpu	ut current a	ınd outpu	t freque	ency)		
	P1210 = 1 (automatic restart function: trip reset after power on, P1211 disabled)									
	P1211 = 3 (number of times inverter will attempt to restart)									
	• P1240 = 1(configuration of	Vdc controller: V	dc max contr	oller enable	ed)					
Note:	See also P0290, P1210, P1211				,					
P0507	Application macro	0 - 255	0	C(1)	_	_	U16	1		
1 0007	Selects a given Application made				r a diven a	nnlication		l -		
	number of application macros covering a set of basic applications such as simple pump, conveyor, compressor etc.									
Note:	Please note that to guarantee of should only be changed during				ne Applicat	ion macro	o numb	er		
P0511[02]	Scaling for display	0.00 - 100.00	[0] 1.00 [1] 1.00 [2] 0.00	U, T	-	-	Float	3		
	Allows operator to enter the sca	aling factors for	the display of r	motor frequ	iency.	•	ı	·		
	Index 0 = value of multiplier (a)									
	Index 1 = value of divisor (b)									
	Index 2 = value of constant (c)									
	With the parameter set to a nor and external BOPs is scaled ac The formula used to scale the company to the scale the sca	cordingly. Note	- the units "Hz							
Index:		Multiplier for So		ay						
	[1]	Divider for Sca								
	[2]	Constant for So	caling for displ	ay						
r0512	CO: Scaled filtered frequency	-	-	-	-	-	Float	2		
	Displays actual inverter output frequency (r0024) excluding slip compensation (and resonance damping, frequency limitation in V/f mode).									
P0604[02]	Threshold motor temperature [°C]	0.0 - 200.0	130.0	U, T	-	DDS	Float	2		
	Enters warning threshold for motor temperature protection. The trip temperature defined is always 10 % higher than the warning threshold P0604. When actual motor temperature exceeds warning temperature then inverter reacts as defined in P0610.									
	higher than the warning thresho	old P0604. When								

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0610[02]	Motor I2t temperature reaction	0 - 6	6	Т	-	DDS	U16	3			
	Defines reaction when motor te	mperature reac	hes warning th	reshold.	•						
	0	Warning only.			temperatu	re (store	d at pov	ver			
		down) on powe			· 		•				
	1	Warning with In not recall the m									
	2	Warning and tr power down) o		not recall	the motor t	emperati	ure (sto	red at			
	4	Warning only. I power up	Recalls the mo	otor temper	ature (store	ed at pov	ver dow	n) on			
	5	Warning with Imax control (motor current reduced) and trip (F11). Recalls the motor temperature (stored at power down) on power up									
	6	ip (F11). Reca er up	lls the mot	or tempera	ture (sto	ed at p	ower				
Dependency:	Trip level = P0604 (motor temp	erature threshol	d) * 110 %								
Note:	P0610 = 0 (No reaction, warning only)										
	When temperature reaches warning level defined in P0604, the inverter displays warning A511, no reaction is done.										
	• P0610 = 1 (Warning, Imax)	eduction and Tr	gir)								
	When temperature reaches warning level defined in P0604, the inverter displays warning A511, reduce frequency and trips F11, when temperature exceeds the trip level.										
	P0610 = 2 (Warning and trip F11)										
	When temperature reaches warning level defined in P0604, the inverter displays warning A511 and trips F11, when temperature exceeds the trip level.										
	The purpose of motor I ² t is to c danger of overheating.	alculate the mot	or temperature	e and disab	le the inve	rter if the	motor i	s in			
	I ² t operation:										
	The measured motor current is	displayed in r00	27. The motor	r temperatu	ıre in °C is	displaye	d in r00	35.			
	This temperature is derived from	m a calculated v	alue using mo	tor thermal	model.						
	The reaction to the warning car	n be changed fro	om this default	using P06	10.						
	r0035 is particularly useful to m	onitor if the calc	culated motor t	emperature	e is rising e	excessive	ly.				
P0622[02]	Magnetizing time for temp id after start up [ms]	0.000 - 20000	0.000	U, T	-	DDS	Float	3			
	Specifies the magnetization time	e for stator resis	stance identific	ation.							
r0623[02]	CO: Display for the identified stator resistance $[\Omega]$	-	-	-	-	DDS	Float	4			
	Display of the actual identified	stator resistance	after tempera	ture identif	ication.						
P0625[02]	Surrounding motor temperature [°C]	-40.0 - 80.0	20.0	C, U, T	-	DDS	Float	3			
	Surrounding temperature of mo						nange tl	ne value			
Dependency:	This parameter is influenced by										


Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0626[02]	Overtemperature stator iron [°C]	20.0 - 200.0	50.0	U, T	-	DDS	Float	4			
	Overtemperature of stator	iron.									
Note:	Temperature rises are val due to inverter operation (. Temp	erature	rises			
P0627[02]	Overtemperature stator winding [°C]	20.0 - 200.0	80.0	U, T	-	DDS	Float	4			
			tor winding. It is only allowed to change the value when the motor is cold. A be made after changing the value.								
Note:	See P0626										
P0628[02]	Overtemperature rotor winding [°C]	20.0 - 200.0	100.0	U, T	-	DDS	Float	4			
	Overtemperature of the ro	perature of the rotor winding.									
Note:	See P0626										
r0630[02]	CO: Motor model sur- rounding temp. [°C]	-	-	-	-	DDS	Float	4			
	Displays the surrounding	emperature of t	he motor mass	model.							
0631[02]	CO: Stator iron temperature [°C]	-	-	-	-	DDS	Float	4			
	Displays the iron temperature of the motor mass model.										
0632[02]	CO: Stator winding temperature [°C]	-	-	-	-	DDS	Float	4			
	Displays the stator windin	g temperature o	f the motor mas	ss model.							
r0633[02]	CO: Rotor winding temperature [°C]	-	-	-	-	DDS	Float	4			
	Displays the rotor winding	temperature of	the motor mass	s model.							
P0640[02]	Motor overload factor [%]	10.0 - 400.0	150.0	C, U, T	-	DDS	Float	2			
	Defines motor overload cu	ırrent limit relati	ve to P0305 (ra	ted motor cu	ırrent).						
Dependency:	Limited to maximum inver P0640_max = (min(r0209)			motor curre	nt (P0305), wh	ichever	is the I	ower.			
Note:	Changes to P0640 will be	effective only a	fter the next off	state.							
P0700[02]	Selection of command source	0 - 5	1	C, T	-	CDS	U16	1			
	Selects digital command s	ource.									
	0	Factory defaul	t setting								
	1	Operator pane	l (keypad)								
	2	Terminal									
	5	USS/MODBUS	S on RS485								
Dependency:	Changing this parameter sets (to default) all settings on item selected. These are the following parameters: P0701, (function of digital input), P0840, P0842, P0844, P0845, P0848, P0849, P0852, P1020, P1021, P1022, P1023, P1035, P1036, P1055, P1056, P1074, P1110, P1113, P1124, P1140, P1141, P1142, P1230, P2103, P2104, P2106, P2200, P2220, P2221, P2222, P2223, P2235, P2236										
Caution:	Be aware, by changing of P0700 all BI parameters are reset to the default value.										

Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level		
Note:	RS485 also supports MODBUS protocol as well as USS. All USS options on RS485 are also applicable to MODBUS.									
	If P0700 = 0, the values of the following parameters relevant to the digital input function will be restricted to their defaults: P0701, P0702, P0703, P0704, P0712 and P0713.									
P0701[02]	Function of digital input 1	0 - 99	0	Т	-	CDS	U16	2		
	Selects function of digital input 1.									
	0	Digital input disabled								
	1	ON/OFF1								
	2	ON reverse/OFF1								
	3	OFF2 - coast to standstill								
	4	OFF3 - quick ramp-down								
	5	ON/OFF2								
	9	Fault acknowledge								
	10	JOG right								
	11	JOG left								
	12	Reverse								
	13	MOP up (increase frequency)								
	14	MOP down (decrease frequency)								
	15	Fixed frequency selector bit0								
	16	Fixed frequency selector bit1								
	17	Fixed frequency selector bit2								
	18	Fixed frequency selector bit3								
	22	QuickStop Source 1								
	23	QuickStop Source 2								
	24	QuickStop Override								
	25	DC brake enable								
	27 Enable PID									
	29 External trip									
	33	Disable additional freq setpoint								
	99	Enable BICO parameterization								
Dependency:	Resetting 99 (enable BICO parameterization) requires:									
	P0700 command source or									
	• P0010 = 1, P3900 = 1, 2 or 3 (quick commissioning) or									
	• P0010 = 30, P0970 = 1 factory reset in order to reset									
Note:	"ON/OFF1" can only be selected for one digital input (e.g. P0700 = 2 and P0701 = 1). Configuring DI2 with P0702 = 1 will disable digital input 1 by setting P0701 = 0. Only the last activated digital input serves as a command source. "ON/OFF1" on a digital input can be combined with "ON reverse/OFF1" on anothe digital input.									

Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0702[02]	Function of digital input 2	0 - 99	0	T	-	CDS	U16	2			
	Selects function of digital input 2.										
	See P0701.										
P0703[02]	Function of digital input 3	0 - 99	9	Т	-	CDS	U16	2			
	Selects function of digital input 3. See P0701.										
P0704[02]	Function of digital input 4	0 - 99	15	Т	-	CDS	U16	2			
	Selects function of digital input 4. See P0701.										
P0705[02]	Function of digital input 5	0 - 99	16	T	-	CDS	U16	2			
	Selects function of digital input 5. See P0701.										
Note:	This digital input is provided by the optional I/O Extension Module.										
P0706[02]	Function of digital input 6	0 - 99	17	T	-	CDS	U16	2			
	Selects function of digital input 6. See P0701.										
Note:	This digital input is provided by the optional I/O Extension Module.										
P0712[02]	Analog/digital input 1	0 - 99	0	T	-	CDS	U16	2			
	Selects function of digital input Al1 (via analog input). See P0701.										
Note:	See P0701. Signals above 4 V are active; signals below 1.6 V are inactive.										
P0713[02]	Analog/digital input 2	0 - 99	0	T	-	CDS	U16	2			
	Selects function of digital input AI2 (via analog input). See P0701.										
Note:	See P0701. Signals above 4 V are active; signals below 1.6 V are inactive.										
P0717	Connection macro	0 - 255	0	C(1)	-	-	U16	1			
	Selects a given connection macro, which is a set of parameter values for a given set of control connections. There are a number of connection macros which define basic control connection settings such as Terminals, BOP, PID with analog setpoint etc.										
Note:	Please note that to guarantee correct setting of the Connection macro, the Connection macro number should only be changed during Setup directly after a parameter reset.										

Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0719[02]	Selection of command & frequency setpoint	3 0 - 57	0	Т	-	CDS	U16	4			
	Central switch to select between freely program setpoint sources can be units digit chooses the s	mable BICO para changed indeper	meters and fixe	ed command	setpoint profile	es. Con	nmand a	and			
	0	Cmd = BICO	parameter, Setp	point = BICO	parameter						
	1	Cmd = BICO	parameter, Setp	point = MOP	setpoint						
	2	Cmd = BICO	parameter, Setp	ooint = Analo	g setpoint						
	3	Cmd = BICO	parameter, Setp	oint = Fixed	frequency						
	4	Cmd = BICO	parameter, Setp	ooint = USS	on RS232 (res	erved)					
	5	Cmd = BICO	parameter, Setp	ooint = USS/	MODBUS on F	RS485					
	7	Cmd = BICO	parameter, Setp	ooint = Analo	g setpoint 2						
	40	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = BICO para	ameter	 neter				
	41	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = MOP setp	oint					
	42	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = Analog se	tpoint					
	43	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = Fixed freq	uency	1				
	44	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = USS on R	S232 (r	eserved	(t			
	45	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = USS/MOD	BUS or	n RS48	5			
	47	Cmd = USS o	n RS232 (reser	ved), Setpoi	nt = Analog se	tpoint 2					
	50	Cmd = USS/M	ODBUS on RS	485, Setpoir	nt = BICO para	meter					
	51	Cmd = USS/MODBUS on RS485, Setpoint = MOP setpoint									
	52	Cmd = USS/M	ODBUS on RS	485, Setpoir	nt = Analog set	tpoint					
	53	Cmd = USS/M	Cmd = USS/MODBUS on RS485, Setpoint = Fixed frequency								
	54	Cmd = USS/M	Cmd = USS/MODBUS on RS485, Setpoint = USS on RS232 (reserved)								
	55	Cmd = USS/M	ODBUS on RS	485, Setpoir	nt = USS/MOD	BUS or	RS485	5			
	57	Cmd = USS/M	ODBUS on RS	485, Setpoir	nt = Analog set	tpoint 2					
Dependency:	57 Cmd = USS/MODBUS on RS485, Setpoint = Analog setpoint 2 P0719 has higher priority than P0700 and P1000. If set to a value other than 0 (i.e. BICO parameter is no the setpoint source), P0844/P0848 (first source of OFF2/OFF3) are not effective; instead, P0845/P0849 (second source of OFF2/OFF3) apply and the OFF commands are obtained via the particular source defined. BICO connections made previously remain unchanged.										
Notice:	Particularly useful when (contrary to P0700 setti					2. Settir	ngs in P	'0719			
r0720	Number of digital inputs	-	-	-	-	_	U16	3			
	Displays number of digi	tal inputs.									
r0722.012	CO/BO: Digital input values	-	-	-	-	-	U16	2			
	Displays status of digita										
	Bit Signal name				1 signal		0 signal				
	00 Digital inp	Yes		No							
	01 Digital inp					Yes					
		Digital input 3				Yes		No No			
	03 Digital inp				Yes No						

Parameter	Function		Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level				
	04	Digital input	5			Yes		No					
	05	Digital input	6			Yes		No					
	11	Analog input	t 1			Yes		No					
	12	Analog input	12			Yes		No					
Note:	Segment i	s lit when signal				•		I					
	The digital input 5 and 6 are provided by the optional I/O Extension Module.												
P0724	Debounce inputs	time for digital	0 - 3	3	Т	-	-	U16	3				
	Defines de	ebounce time (fil	Itering time) use	ed for digital inp	uts.								
	0		No debounce	No debounce time									
	1		2.5 ms debour	nce time									
	2		8.2 ms debour	nce time									
	3		12.3 ms debou	unce time									
P0727[02]	Selection method	of 2/3-wire	0 - 3	0	C, T	-	CDS	U16	2				
	2-wire using (C comm	f_out 0	mens standard EV as permane	ent signals	erter in one o	f the followin	g ways:						
	using (C comm	control with Sier DN/OFF1 and O ON / OFF1 ON_REV / OFF1 f_out 0	N_REV/OFF1 a	as permanent s	Command ign	ored OFF1							

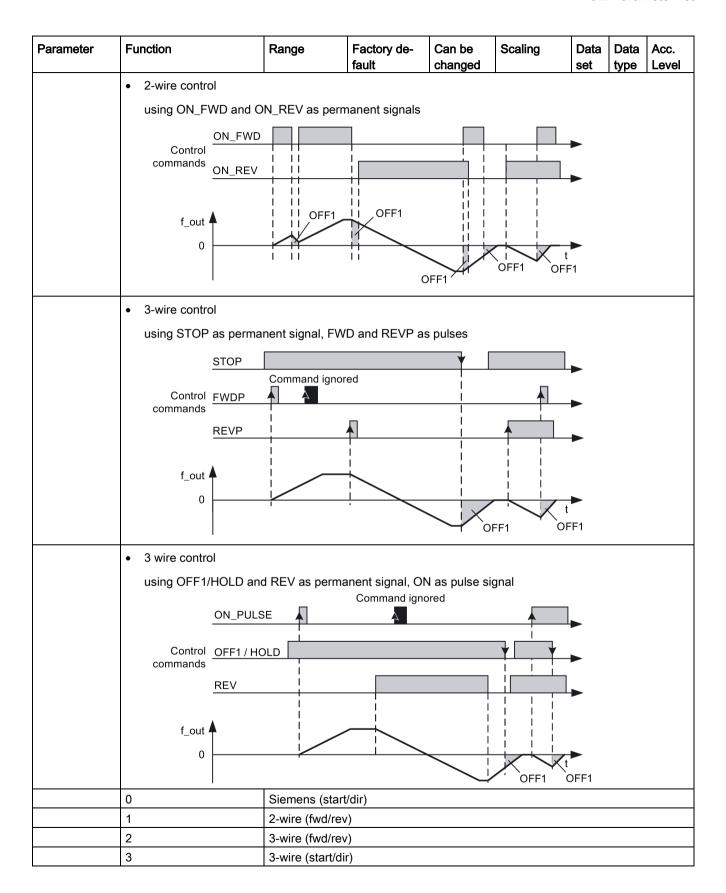

Parameter	Function	Range	Factory de-	Can be	Scaling	Data	Data	Acc.		
			fault	changed		set	type	Level		
Note:	Where:									
	P denotes Pulse									
	FWD denotes FO	RWARD								
	REV denotes REV	VERSE								
	When any of the cont P0704) are redefined		ected using P07	27, the settir	ng for the digita	al input	s (P070)1 -		
	Settings of P0701 F - P0706	P0727 = 0 (Siemens trol)	Standard Con-	P0727 = 1 (2-wire Control)	P0727 = 2 (3-wire Control)			7 = 3 (3- Control)		
	= 1 (P0840)	ON/OFF	⁻ 1	ON_FWD	STOP	ı	ON_	PULSE		
	= 2 (P0842)	ON_REV/C	FF1	ON_REV	FWDF)	OFF ²	1/HOLD		
	= 12 (P1113)	REV		REV	REVP	1	F	REV		
		To use the 2/3-wire control, the sources for ON/OFF1 (P0840), ON_REV/OFF1 (P0842) and REV (P111 corresponding to the redefined values have to be set accordingly.								
	The ON/OFF2 functionality is not supported in 2/3 wire modes. Do not select ON/OFF2 unless P0727									
	Regarding the use of	fixed frequencies se	e P1000 and P	1001.						
r0730	Number of digital out	puts -	-	-	-	-	U16	3		
	Displays number of d	ligital outputs.								
P0731[02]	BI: Function of digital output 1	0 - 4294967295	52.3	U, T	-	CDS	U32/ Bin	2		
	Defines source of dig	ital output 1.								
Notice:	An inverse logic can l	be realized by invert	ing the digital οι	utputs in P07	48.					
Note:	Output of fault bit 52 low when a fault is trig Monitor functions ==>	ggered, and when the see r0052, r0053				igital ou	ıtput is	set to		
	Motor holding brake =									
	DC-Brake ==> see P		T	1	Γ	1	1			
P0732[02]	BI: Function of digital output 2	0 - 4294967295	52.7	U, T	-	CDS	U32/ Bin	2		
	Defines source of dig		1	T	T		1			
P0733[02]	BI: Function of digital output 3	0 - 4294967295	0	U, T	-	CDS	U32/ Bin	2		
	Defines source of dig	ital output 3.								
Note:	This digital output is p	provided by the optic	nal I/O Extension	on Module.						
P0734[02]	BI: Function of digital output 4	0 - 4294967295	0	U, T	-	CDS	U32/ Bin	2		
	Defines source of dig	ital output 4.								
Note:	This digital output is p	provided by the optic	nal I/O Extension	on Module.	<u> </u>					

Parameter	Function		Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level		
r0747.01	CO/BO: Sta	te of digital	-	-	-	-	-	U16	3		
	Displays sta	atus of digital c	outputs (also inc	ludes inversion	of digital ou	tputs via P07	48).				
	Bit	Signal name)			1 signal		0 sign	al		
	00	Digital outpu	it 1 energized			Yes		No			
	01	Digital outpu	ıt 2 energized			Yes		No			
	02	Digital outpu	ıt 3 energized			Yes		No			
	03	Digital outpu	ıt 4 energized			Yes		No			
Dependency:	_	al: Contacts op al: Contacts cl									
Note:	The digital of	output 3 and 4	are provided by	the optional I/	O Extension	Module.					
P0748	Invert digita	l outputs	-	0000 bin	U, T	-	-	U16	3		
	Defines high	h and low state	es of digital outp	out for a given f	unction.	•		•	•		
	Bit	Signal name)			1 signal		0 sign	al		
	00	Invert digital	output 1			Yes	No				
	01	Invert digital	output 2			Yes	No				
	02	Invert digital	output 3			Yes		No			
	03	Invert digital	output 4			Yes		No			
Note:	The digital of	output 3 and 4	3 and 4 are provided by the optional I/O Extension Module.								
r0750	Number of analog inputs			-	-	U16	3				
	Displays nu	mber of analog	g inputs availab	le.							
r0751.09	CO/BO: Sta		-	-	-	-	-	U16	3		
	Displays status of analog input.										
	Bit	Signal name)			1 signal		0 signal			
	00	Signal lost o	n analog input	1		Yes		No			
	01	Signal lost o	n analog input 2	2		Yes		No			
	08	No signal los	st on analog inp	ut 1		Yes		No			
	09	No signal los	st on analog inp	ut 2		Yes		No			
r0752[01]	Actual analo	og input [V]	-	-	-	-	-	Float	2		
	Displays sm	noothed analog	g input value in	volts or milliam	ps before the	scaling bloc	k.				
Index:	[0]		Analog input 1 (AI1)								
	[1]		Analog input 2	(AI2)							
P0753[01]	Smooth time input [ms]	e analog	0 - 10000 3 U, T						3		
	Defines filte	r time (PT1 filt	er) for analog ir	put.							
Index:	See r0752										
Note:	Increasing t	his time (smoo	oth) reduces jitte	er but slows do	wn response	to the analog	j input.				
	P0753 = 0:	No filtering									

Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0754[01]	Actual analog input value after scaling [%]	-	-	-	-	-	Float	2				
	Shows smoothed value of	analog input af	ter scaling bloc	k.								
Index:	See r0752											
Dependency:	P0757 to P0760 define ra	nge (analog inp	ut scaling).									
r0755[01]	CO: Actual analog input after scaling [4000h]	-	-	-	4000H	-	I16	2				
	Displays analog input, scaled using ASPmin and ASPmax (ASP = analog setpoint).											
	Analog setpoint (ASP) from the analog scaling block can vary from minimum analog setpoint (ASPmin) to a maximum analog setpoint (ASPmax).											
	The largest magnitude (value without sign) of ASPmin and ASPmax defines the scaling of 16384.											
	By associating r0755 with an internal value (e.g. frequency setpoint), a scaled value is calculated internal ly by the inverter.											
	The frequency value is calculated using the following equation:											
	r0755 [Hz] = (r0755 [hex]/4000 [hex]) * P2000 * (max (ASP_max , ASP_min)/100%)											
Example:	Case a:											
	ASPmin = 300 %, ASPmax = 100 % then 16384 represents 300 %.											
	This parameter will vary from 5461 to 16384.											
	Case b:											
	ASPmin = -200 %, ASPmax = 100 % then 16384 represents 200 %.											
	This parameter will vary from -16384 to +8192.											
	4000 h = max (ASP _{max} , ASP _{min})											
	ASP _{max} 300% 4000 h ≘ 16384	dez	300%	6 								
	ASP _{min} 100% 0	10 V mA	ASP _{max} 100%		10 V	V mA						
	20 mA 200%											
Index:	See r0752	See r0752										
Note:	This value is used as an in point (this may be at 10 V P0757 to P0760 (analog in). ASPmin repre										
P0756[01]	Type of analog input	0 - 4	0	Т	-	-	U16	2				
	Defines type of analog inp	ut and also ena	bles analog inp	ut monitorin	g.							
	0	Unipolar voltaç	ge input (0 to 10) V)								
	1 Unipolar voltage input with monitoring (0 to 10 V)											
	2	Unipolar curre	nt input (0 to 20) mA)								
	3 Unipolar current input with monitoring (0 to 20 mA)											
	4	Bipolar voltage	input (-10 V to	10 V)								

Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level			
Index:	See r0752					•					
Dependency:	The monitoring function is (see P0757 to P0760).	disabled if the a	analog scaling b	olock is progr	ammed to out	put neg	ative se	etpoints			
Notice:	When monitoring is enable the analog input voltage for voltage for analog input 2. For P0756 = 4, you need frequency within the range tive ranges (examples: P0	alls below 50 % to ensure the an e of -50 Hz to 50	of the deadband alog input scali Hz, you can se	d voltage. It i	s not possible ple, if you desi	to selectore to ob	ct the botain an	ipolar			
Note:	See P0757 to P0760 (ana	log input scaling	j).								
	analog input 2. This will reings for the channel conce	n current mode, if the input exceeds 24mA, the inverter will trip F80/11 for analog input 1 and F80/12 for nalog input 2. This will result in channel switching back to voltage mode. Analog input parameter readings for the channel concerned will no longer be updated until the fault (F80) has been reset. Once the ault has been reset then the input will switch back to current mode and normal readings will resume.									
P0757[01]	Value x1 of analog input scaling	-20 - 20	0	U, T	-	-	Float	2			
	which determine the straig	P0757 - P0760 configure the input scaling. x1 is the first value of the two pairs of variants x1/y1 and x2/y2 which determine the straight line. The value x2 of analog input scaling P0759 must be greater than the value x1 of analog input scaling P0757.									
Index:	See r0752										
Notice:	 Analog setpoints repre Analog setpoints may ASPmax represents hi ASPmin represents low Default values provide 	be larger than 1 ghest analog se west analog set	00 %. etpoint (this may point (this may t	be at 10 V on 2	or 20 mA). 20 mA).	%.					
P0758[01]	Value y1 of analog input scaling [%]	-99999.9 - 99999.9	0.0	U, T	-	-	Float	2			
	Sets value of y1 as descri	bed in P0757 (a	nalog input sca	ling)	•	•	•				
Index:	See r0752										
Dependency:	Affects P2000 to P2003 (r to be generated.	eference freque	ncy, voltage, cu	irrent or torq	ue) depending	on whi	ch setp	oint is			
P0759[01]	Value x2 of analog input scaling	-20 - 20	10	U, T	-	-	Float	2			
	Sets value of x2 as descri	bed in P0757 (a	nalog input sca	ling).							
Index:	See r0752										
Notice:	The value x2 of analog inp P0757.	out scaling P075	9 must be grea	ter than the	value x1 of ana	alog inp	ut scali	ng			
P0760[01]	Value y2 of analog input scaling [%]	-99999.9 - 99999.9	100.0	U, T	-	-	Float	2			
	Sets value of y2 as descri	bed in P0757 (a	nalog input sca	ling).							
Index:	See r0752										
Dependency:	See P0758		<u> </u>	T	T			•			
P0761[01]	Width of analog input deadband	0 - 20	0	U, T	-	-	Float	2			
	Defines width of deadband	d on analog inpu	ıt.								

Parameter	Function	Range	Factory de- fault	Can be changed	Scaling	Data set	Data type	Acc. Level				
Example:	The following example pro 0 Hz to 50 Hz):	duces a 2 V to	10 V, 0 Hz to 50) Hz analog i	nput (analog i	nput va	lue 2 V	to 10 V,				
	• P2000 = 50 Hz											
	• P0759 = 8.75 V P0760	= 75 %										
	• P0757 = 1.25 V P0758	s = -75 %										
	• P0761 = 0.1 V											
	• P0756 = 0 or 1											
	The following example pro "holding point" 0.2 V wide											
	• P2000 = 50 Hz											
	• P0759 = 8 V P0760 =	75 %										
	• P0757 = 2 V P0758 = -	-75 %										
	• P0761 = 0.1 V											
	• P0756 = 0 or 1											
Index:	See r0752											
Notice:		to value of P07	61 if both value	of D0758	and P0760 (v. c	coording	ates of	analog				
Notice.	Deadband starts from 0 V to value of P0761, if both values of P0758 and P0760 (y coordinates of analog input scaling) are positive or negative respectively. However, deadband is active in both directions from point of intersection (x axis with analog input scaling curve), if sign of P0758 and P0760 are opposite.											
Note:	P0761[x] = 0: No deadban	d active.										
	Minimum frequency P1080 should be zero when using center zero setup.											
	There is no hysteresis at t	he end of the de	eadband.				1					
P0762[01]	Delay for loss of signal action [ms]	0 - 10000	10	U, T	-	-	U16	3				
	Defines time delay between	en loss of analog	g setpoint and a	ppearance c	f fault code F8	30.						
Index:	See r0752											
Note:	Expert users can choose t	he desired read	tion to F80 (def	ault is OFF2).							
r0770	Number of analog output	-	-	-	-	-	U16	3				
	Displays number of analog	g outputs availa	ble.									
P0771[0]	CI: Analog output	0 - 4294967295	21[0]	U, T	-	-	U32	2				
	Defines function of the ana	alog output.										
Index:	[0]	Analog output	1 (AO1)									
Setting:	21	CO: Actual free	quency (scaled	to P2000)								
	24	CO: Actual out	put frequency (scaled to P2	000)							
	25	CO: Actual out	put voltage (sca	aled to P200	1)							
	26	CO: Actual DC	-link voltage (so	caled to P200	01)							
	27	CO: Actual out	put current (sca	led to P2002	2)							
P0773[0]	Smooth time analog output [ms]	0 - 1000	2	U, T	-	-	U16	2				
	Defines smoothing time fo using a PT1 filter.	r analog output	signal. This par	ameter enab	les smoothing	for ana	alog out	tput				
Index:	See P0771											
Dependency:	P0773 = 0: Deactivates filt	er										

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
r0774[0]	Actual analog		-	-	-	-	-	Float	2		
	Shows value	of analog ou	tput after filtering a	ind scaling.							
Index:	See P0771										
Note:			a current output. En a range of 0 V to			Il resistor of	500 Ω to	the term	inals		
P0775[0]	Permit absolu	ute value	0 - 1	0	Т	-	-	U16	2		
		utputed. If th	llue of the analog of e value was origina								
Index:	See P0771										
P0777[0]	Value x1 of a put scaling [%		-99999 - 99999	0.0	U, T	-	-	Float	2		
	P0771 (analo	g output con	eristic. Scaling bloonector input). x1 is ght line. The two po	the first valu	ue of the two	pairs of va	ariants x1	/y1 and x	2/y2		
Note:	See P0771										
Dependency:	See P0758										
P0778[0]	Value y1 of a put scaling	nalog out-	0 - 20	0	U, T	-	-	Float	2		
	Defines y1 of	output chara	acteristic.								
Index:	See P0771										
P0779[0]	Value x2 of a put scaling [%		-99999 - 99999	100.0	U, T	-	-	Float	2		
	Defines x2 of output characteristic.										
Index:	See P0771										
Dependency:	See P0758										
P0780[0]	Value y2 of a put scaling	nalog out-	0 - 20	20	U, T	-	-	Float	2		
	Defines y2 of output characteristic.										
Index:	See P0771										
P0781[0]	Width of anal	og output	0 - 20	0	U, T	-	-	Float	2		
	Sets width of	dead-band f	or analog output.				•				
Index:	See P0771										
r0785.0	CO/BO: Statu		-	-	-	-	-	U16	2		
	Displays status of analog output. Bit 0 indicates that the value of analog output 1 is negative.										
	Bit	Bit Signal name 1 signal 0 signal									
	00		out 1 negative			Yes		No			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P0802	Transfer data from EEPROM	0 - 2	0	C(30)	-	-	U16	3				
	Transfers values from the be possible.	e inverter to externa	al device whe	en P0802 ≠	0. P0010 m	ust be se	t to 30 fo	r this to				
	0	Disabled										
	2	Start data transfe	r to the SD o	card								
Note:	Parameter is automatically reset to 0 (default) after transfer. P0010 will be reset to 0 on successful completion.											
	Ensure that enough spar	•		transferring	data (8 KB).						
P0803	Transfer data to EEPROM 0 - 3 0 C(30) - - U16 3											
	0 Disabled											
	2 Start data transfer from the SD card											
	3	Start data transfe	r from the S	D card (exce	ept the moto	or data)						
		Fers parameter values from the SD clone file to the inverter when P0803 ≠ 0. P0010 must be set to activate this parameter. See P0802 for parameter values.										
Note:	Parameter is automatically reset to 0 (default) after transfer.											
	P0010 will be reset to 0	on successful comp	letion.									
P0804	Select Clone file	0 - 99	0	C(30)	-	-	U16	3				
	if P0804 = 0, then the file name is clone00.bin if P0804 = 1, then the file name is clone01.bin etc.											
P0806	Bl: Inhibit panel access	0 - 4294967295	0	U, T	-	-	U32	3				
	Binector input to lock control panel access through external client.											
r0807.0	BO: Displays client access	-	-	-	-	-	U16	3				
	Binector output to displa	y whether command	d and setpoir	nt source is	connected	to an exte	rnal clier	nt.				
	Bit Signal nar	ne			1 signal		0 signa	al				
	00 Master co	ntrol active			Yes		No					
P0809[02]	Copy command data set (CDS)	0 - 2	[0] 0 [1] 1 [2] 0	Т	-	-	U16	2				
	Calls 'Copy command da shown in "Index" at the		on. The list o	of all comma	ınd data se	ts (CDS)	paramete	ers is				
Example:	Copying of all values fro P0809[0] = 0 Copy from P0809[1] = 2 Copy to CI P0809[2] = 1 Start copy	CDS0	an be accom	nplished by t	he following	g procedu	ire:					
Index:	[0]	Copy from CDS										
	[1] Copy to CDS											
	[2]	Start copy										
Note:		Start value in index 2 is automatically reset to '0' after execution of function.										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0810	BI: command data set bit 0 (Hand/Auto)	0 - 4294967295	0	U, T	-	-	U32	2			
	Selects command source selected CDS is displayed displayed in r0050.										
Setting:	722.0	Digital input 1 (req	uires P0701	to be set to	99, BICO)						
	722.1	Digital input 2 (req	uires P0702	to be set to	99, BICO)						
	722.2	Digital input 3 (req	uires P0703	to be set to	99, BICO)						
Note:	P0811 is also relevant for	command data set	(CDS) selec	tion.							
P0811	BI: command data set bit 1	0 - 4294967295	0	U, T	-	-	U32	2			
	Selects command source	from which to read	Bit 1 for sele	ecting a cor	nmand data	set (see	P0810).				
Setting:	Selects command source from which to read Bit 1 for selecting a command data set (see P0810). See P0810.										
Note:	P0810 is also relevant for	P0810 is also relevant for command data set (CDS) selection.									
P0819[02]	Copy inverter data set (DDS)	0 - 2	[0] 0 [1] 1 [2] 0	Т	-	-	U16	2			
	Calls 'Copy inverter data set (DDS)' function. The list of all inverter data set (DDS) parameters is shown i "Index" at the end of the manual.										
Example:	Copying of all values from DDS0 to DDS2 can be accomplished by the following procedure: P0819[0] = 0 Copy from DDS0 P0819[1] = 2 Copy to DDS2 P0819[2] = 1 Start copy										
Index:	[0]	Copy from DDS									
	[1]	Copy to DDS									
	[2]	Start copy									
Note:	See P0809										
P0820	BI: inverter data set bit 0	0 - 4294967295	0	Т	_	_	U32	3			
	Selects command source selected inverter data set (DDS) is displayed in para	(DDS) is displayed									
Setting:	See P0810										
Note:	P0821 is also relevant for	inverter data set (D	DS) selectio	n.							
P0821	BI: inverter data set bit 1	0 - 4294967295	0	Т	-	-	U32	3			
	Selects command source from which Bit 1 for selecting an inverter data set is to be read in (see P0820).										
Setting:	See P0810										
Note:	P0820 is also relevant for	inverter data set (D	DS) selectio	n.							
P0840[02]	BI: ON/OFF1	0 - 4294967295	19.0	Т	-	CDS	U32	3			
	Allows ON/OFF1 comman parameter number of the parameter.		_		-						
Setting:	See P0810										
Dependency:	For digital inputs as common (ON right) is digital input changed (via P0701) before	1 (722.0). Alternative	e source pos								

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P0842[02]	BI: ON reverse/OFF1	0 - 4294967295	0	Т	-	CDS	U32	3				
	Allows ON/OFF1 reverse setpoint is run up counter			I using BIC	O. In genera	l a positi	ve freque	ncy				
Setting:	See P0810											
P0843[02]	BI: ON/OFF2	0 - 4294967295	1	Т	-	CDS	U32/Bi n	3				
	Allows ON/OFF2 commar parameter.	lows ON/OFF2 command source to be selected using BICO. The default setting 1.0 will disable this arameter.										
Setting:	See P0810											
Dependency:	For digital inputs as comminputs is selected for ON/immediate pulse-disabling enabled. (As long as there	OFF2, the inverter vg; the motor is coast	vill not run ur ing. OFF2 is	nless the di low-active	gital input is	active. C	DFF2 mea	ans				
Note:	The ON/OFF2 functionality	y is not supported in	n 2/3 wire mo	odes. Do n	ot select ON	OFF2 ur	nless P07	27 = 0.				
P0844[02]	BI: 1. OFF2	0 - 4294967295	19.1	Т	-	CDS	U32	3				
	Defines first source of OF	F2 when P0719 = 0	(BICO).									
Setting:	See P0810											
Dependency:	If one of the digital inputs is selected for OFF2, the inverter will not run unless the digital input is active.											
Note:	OFF2 means immediate p 0 = Pulse disabling. 1 = Operating condition.	· ·										
P0845[02]	BI: 2. OFF2	0 - 4294967295	1	Т	-	CDS	U32	3				
	Defines second source of	OFF2.	l .	l	l		1					
Setting:	See P0810											
Dependency:	In contrast to P0844 (first tion of command and freq			r is always	active, indep	endent o	of P0719	(selec-				
Note:	See P0844											
P0848[02]	BI: 1. OFF3	0 - 4294967295	1	Т	-	CDS	U32	3				
	Defines first source of OF	F3 when P0719 = 0	(BICO).									
Setting:	See P0810											
Dependency:	If one of the digital inputs	is selected for OFF	3, the inverte	er will not ru	un unless the	digital in	nput is ac	tive.				
Note:	OFF3 means quick ramp-	down to 0.										
	OFF3 is low-active, i.e.											
	0 = Quick ramp-down.											
	1 = Operating condition.	,										
P0849[02]	BI: 2. OFF3	0 - 4294967295	1	Т	-	CDS	U32	3				
	Defines second source of	OFF3.										
Setting:	See P0810											
Dependency:	In contrast to P0848 (first tion of command and freq			r is always	active, indep	endent o	of P0719	(selec-				
	1											

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P0852[02]	BI: Pulse enabl	le	0 - 4294967295	1	Т	-	CDS	U32	3			
	Defines source	of pulse e	nable/disable signa	l.								
Setting:	See P0810											
Dependency:	Active only whe	en P0719 =	= 0 (Auto selection o	of command/	setpoint so	urce).						
P0881[02]	BI: Quick stop	source 1	0 - 4294967295	1	Т	-	CDS	U32	3			
	Allows quick st (default setting		e 1 command to be selected using BICO. The signal is expected to be active to 2).									
Setting:	See P0810											
P0882[02]	BI: Quick stop	source 2	0 - 4294967295	1	Т	-	CDS	U32	3			
	Allows quick st (default setting		2 command to be s	elected using	g BICO. Th	e signal is e	expected	to be acti	ive low			
Setting:	See P0810		T	1	1	1	1	1				
P0883[02]	BI: Quick stop	override	0 - 4294967295	0	Т	-	CDS	U32	3			
	Allows quick stop override command source to be selected using BICO. The signal is expected to be active high.											
Setting:	See P0810											
	Quick stop inpu	ıt type	0 - 4	2	Т	-	CDS	U16	3			
	Control Word for	or selecting	the quick stop inpo	ut type.								
	0		Quick stop not sel	ected								
	1		Quick stop input active high									
	2		Quick stop input active low									
	3		Quick stop input p	Quick stop input positive edge triggered								
	4		Quick stop input n	egative edge	triggered							
P0927	Parameter cha		0 - 31	31	U, T	-	-	U16	2			
	Specifies the interfaces which can be used to change parameters. This parameter allows the user to easily protect the inverter from unauthorized modification of parameters. Annotation: P0927 is not password protected.											
		Signal nam				1 signal		0 signa	 al			
	 	Not used				Yes		No				
	01 E	BOP (includ	ding built-in BOP ar	nd external B	OP)	Yes		No				
	1	JSS on RS				Yes		No				
	 	JSS on RS				Yes		No				
	1		nal on RS485			Yes		No				
Example:	Default: All bits					1		1,				
			parameters to be o	hanged via	any interfac	e.						
r0944	Total number of sages		-	-	-	-	-	U16	3			
	-	tal number	of messages availa	able.	1	ı	1	1	1			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level					
r0947[063]	CO: Last fault code	-	-	-	-	-	U16	2					
	Displays fault history.												
		Fault clear		Fault cle	ar								
	Immediate active faults Previous active faults												
	Trevious delive laults												
	r0947 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16												
	r0954 0 1 1 2)												
	<u>r0955</u> 0 1 1 2												
	r0956 0 1 2 Fau	It information record											
	r0957 0 1 2												
	r0958 0 1 2												
Index:	[0] Recent fault trip, fault 1												
	[7]	Recent fault trip											
	[8]	Recent fault trip -1	, fault 1										
		Describing A	fIt 0										
	[15]	Recent fault trip -1											
	[16]	Recent fault trip -2	, lault 1										
	[23]	Recent fault trip -2	fault 8										
	[20]	recent launt trip -z	, lault 0										
	[63]	Recent fault trip -7	. fault 8										
Notice:	It is possible that this parameter is empty but a fault is still indicated by the inverter. The reason for this is most likely due to a SAFE condition still existing in the system. In this situation the fault is cleared from this parameter and it makes no sense to go back to a READY state. First remove the reason for the SAFE condition and then the inverter will be able to change to a READY state (SAFE condition example is "safety function is activated").												
Note:	The function "inverter status at fault" (Page 323) serves as a snapshot record in time of the relative parameters being monitored at the point of a fault occurring. Some recorded parameters are filtered values. Therefore if a hardware trip occurs, (r0949 = 0), some filtered values may not appear to reflect those values which caused the trip.												
Example:	If a hardware overvoltage r0956 may appear to be u to rise to the trip level; ho to protect itself.	ınder the trip limit. I	n this case, t	he filtered l	DC link valu	e had no	t had end	ough time					

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0948[063]	Fault time	-	-	-	-	-	U32	3				
	Time stamp to indicate w	hen a fault has occu	rred.									
	P0969 (system run time o	counter) is the possil	ole source of	the time s	tamp.							
Index:	[0]	Recent fault trip,	fault time 1									
	[7]	Recent fault trip,	fault time 8									
	[8]	Recent fault trip -1	, fault time 1									
	[15]	Recent fault trip -1, fault time 8										
	[16]	Recent fault trip -2, fault time 1										
	[23]	Recent fault trip -2	, fault time 8									
	[63]	Recent fault trip -7	, fault time 8	1	ı		F					
r0949[063]	CO: Fault value	-	-	-	-	-	U32	3				
	Displays inverter fault values. It is for service purposes and indicates the type of fault reported.											
	The values are not documented. They are listed in the code where faults are reported.											
Index:	[0]	Recent fault trip,	fault value 1	1								
	[7] Recent fault trip, fault value 8											
	[8] Recent fault trip -1, fault value 1											
	[15] Recent fault trip -1, fault value 8											
	[16]	Recent fault trip -2, fault value 1										
	[23]	Recent fault trip -2, fault value 8										
	[63]	Recent fault trip -7	, fault value	8								
P0952	Total number of trips	0 - 65535	0	Т	-	-	U16	3				
	Displays number of trips	stored in r0947 (last	fault code).									
Dependency:	Setting 0 resets fault histo	ory (changing to 0 al	so resets r09	948 - fault t	ime).							
Note:	If the source of a non-mo source first and then plac has a non-zero value afte second factory reset or se	es the fault into the rether the factory reset. I	fault history	during a fac	ctory reset.	That mea	ns P095	2 still				
r0954[02]	CO: Freq. setpoint after RFG at fault [Hz]	-	-	-	-	-	Float	3				
	Displays the setpoint after RFG when the first instantaneous fault occurs (see r1170).											
Index:	[0]	Recent trip - Fault	information									
	[1]	Recent trip - 1 Fau	It information	n								
	[2]	Recent trip - 2 Fau	It information	n								
Note:	Only one set of fault information is stored per block of instantaneous faults. r0954[0] corresponds to r0947[07], r0954[1] corresponds to r0947[815] and r0954[2] corresponds to r0947[1623].											

Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
CO/BO: Status word 2 at fault	-	-	-	-	-	U16	3				
Displays status word 2 wh	en the first instanta	neous fault o	occurs (see	r0053).							
[0]	Recent trip - Fault	information									
[1]	Recent trip - 1 Fau	It information	n								
[2]	Recent trip - 2 Fau	It information	n								
							to				
CO: DC-link voltage at fault [V]	-	-	-	-	-	Float	3				
Displays the DC link voltage when the first instantaneous fault occurs (see r0026).											
[0]	Recent trip - Fault	information									
[1]	Recent trip - 1 Fault information										
[2]	Recent trip - 2 Fau	It information	n								
							to				
CO: Act. output current at fault [A]	1	-	-	-	-	Float	3				
Displays the output currer	nt RMS when the firs	st instantane	ous fault o	ccurs (see r	0027).						
[0] Recent trip - Fault information											
[1] Recent trip - 1 Fault information											
[2] Recent trip - 2 Fault information											
1 -	· · · · · · · · · · · · · · · · · · ·										
CO: Act. output voltage at fault [V]	1	-	-	-	-	Float	3				
Displays the output voltage	e when the first inst	antaneous fa	ault occurs	(see r0025)							
[0]	Recent trip - Fault	information									
[1]	Recent trip - 1 Fau	It informatio	n								
[2]	Recent trip - 2 Fau	It informatio	n								
							to				
Firmware version data	-	-	-	-	-	U16	3				
Firmware version data.											
[0]	Company (Siemen	s = 42)									
[1]	Product type (V20	= 8001)									
[2]	Firmware version										
[3]	Firmware date (yea	ar)									
[4] Firmware date (day/month)											
[4]	Firmware date (da	y/monun)									
[4] [5]	Firmware date (da Number of inverter										
	` '										
	CO/BO: Status word 2 at fault Displays status word 2 where [0] [1] [2] Only one set of fault information rogerous fault [N] Displays the DC link voltage at fault [N] Displays the DC link voltage [0] [1] [2] Only one set of fault information rogerous fault [N] Displays the output current at fault [A] Displays the output current at fault [N] [1] [2] Only one set of fault information rogerous fault information rogerous fault [N] CO: Act. output voltage at fault [N] Displays the output voltage at fault [N] Displays the output voltage at fault [N] Displays the output voltage at fault [N] Firmware version data Firmware version data [0] [1] [2]	CO/BO: Status word 2 at fault Displays status word 2 when the first instanta [0] Recent trip - Fault [1] Recent trip - 1 Fault [2] Recent trip - 2 Fault [2] Recent trip - 2 Fault [3] Recent trip - 2 Fault [4] Recent trip - 2 Fault [5] Recent trip - 2 Fault [6] Recent trip - 2 Fault [7] Recent trip - 2 Fault [8] Recent trip - 1 Fault [8] Recent trip - 1 Fault [8] Recent trip - 2 Fault [8] Recent trip - 2 Fault [8] Recent trip - 2 Fault [9] Recent trip - 2 Fault [1] Recent trip - 1 Fault [1] Recent trip - 1 Fault [1] Recent trip - 2 Fault [1] Recent trip - 2 Fault [2] Recent trip - 2 Fault [1] Recent trip - 2 Fault [1] Recent trip - 1 Fault [2] Recent trip - 2 Fault [1] Recent trip - 2 Fault [2] Recent trip - 1 Fault [2] Recent trip - 2 Fault [2] Recent trip - 2 Fault [2] Recent trip - 1 Fault [2] Recent trip - 2 Fault [2] Recent trip - 2 Fault [2] Recent trip - 1 Fault [2] Recent trip - 1 Fault [2] Recent trip - 2 Fault [2] Recent trip - 1 Fault [2] Recent trip - 2 Fault [2] Recent trip - 1 Fault [2] Recent trip - 2 Fault [2] Recent [2] Recent [2] Recent [2] Recent [2	CO/BO: Status word 2 at fault CO/BO: Status word 2 when the first instantaneous fault of the properties of the prope	CO/BO: Status word 2 at fault Co/BO: Status word 2 when the first instantaneous fault occurs (see [0] Recent trip - Fault information	CO/BO: Status word 2 at fault Co/BO: Status word 2 when the first instantaneous fault occurs (see r0053).	CO/BO: Status word 2 at - - - - - - - - -	CO/BO: Status word 2 at - - - - - - U16				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level					
r0968	Status word 1	_	-	-	_	-	U16	3					
	Displays active status wortive. See r0052 for the bit		ary) and can	be used to	diagnose w	hich com		<u> </u>					
P0969	Resettable system run time counter	0 - 4294967295	0	Т	-	-	U32	3					
	Resettable system run tin	ne counter.											
P0970	Factory reset 0 - 21 0 C(30) - - U16 1												
	P0970 = 1 resets all parameters (not user defaults) to their default values.												
	P0970 = 21 resets all parameters and all user defaults to Factory Reset state.												
	When resetting all parameters by setting P0970 = 1 or P0970 = 21, please note the following aspects:												
	When you reset parameters through the BOP, parameters in both RAM and EEPROM are reset.												
	 When you select USS/MODBUS communication on RS485 and the volatile storage mode (P0014[0] = 0), only parameters in RAM are reset. 												
	When you select USS/MODBUS communication on RS485 and the non-volatile storage mode (P0014[0] =1), parameters in both RAM and EEPROM are reset.												
	0	Disabled											
	1 Parameter reset												
	21 User Default Parameter Reset												
Dependency:	First set P0010 = 30 (fact	First set P0010 = 30 (factory settings).											
	Stop inverter (i.e. disable	all pulses) before ye	ou can reset	parameters	s to default v	/alues.							
Note:	The following parameters retain their values after a factory reset:												
Note.	r0039 CO: Energy consumption meter [kWh]												
	P0014 Store mode												
	P0100 Europe/North A	P01014 Store mode P0100 Europe/North America											
	P0205 Inverter application	ation											
	P2010 USS/MODBUS	baudrate											
	P2011 USS address												
	P2021 MODBUS address												
	P2023 RS485 protocol selection												
	P8458 Clone control												
	When transferring P0970, the inverter uses its processor to carry out internal calculations. Communications are interrupted for the time that it takes to make these calculations.												
	·				ons.	1	1	Τ_					
P0971	Transfer data from RAM to EEPROM	0 - 21	0	U, T	-	-	U16	3					
	Transfers values from RA	M to FEPROM whe	n set to 1	l.	<u> </u>	1	1	II.					
	Transfers new user defau			when set	to 21.								
	0	Disabled											
	1	Start transfer											
	21	Start User Default	s transfer										
Note:	All values in RAM are trar												
. 10101	Parameter is automaticall			ssful transf	er								
	The storage from RAM to	`	•			tions are	reset. if	the					
	transfer was successful. I												
	BOP displays 88888	·											
	After completion of the tra (BOP, USS or Modbus Ma				the inverte	r and exte	ernal per	ipherals					

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r0980[099]	List of available parameter numbers	0 - 65535	981	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 0 - 9	9.									
Index:	[0]	Parameter 1										
	[1]	Parameter 2										
	[98]	Parameter 99										
	[99]	Next parameter lis	t									
Note:	index 0 - 99, the individua	r list array has 2 elements to reduce memory consumption. On each access to an element he individual result is determined dynamically by the 'BeforeAccess' function. The last elethe number of the following parameter array, 0 indicates end of list.										
r0981[099]	List of available parameter numbers		982	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 100	- 199.									
Index:	See r0980											
Note:	See r0980											
r0982[099]	List of available parameter numbers	0 - 65535	983	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 200	- 299.									
Index:	See r0980											
Note:	See r0980											
r0983[099]	List of available parameter numbers	0 - 65535	984	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 300	- 399.									
Index:	See r0980											
Note:	See r0980											
r0984[099]	List of available parameter numbers	0 - 65535	985	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 400	- 499.									
Index:	See r0980											
Note:	See r0980											
r0985[099]	List of available parameter numbers	0 - 65535	986	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 500	- 599.									
Index:	See r0980											
Note:	See r0980											
r0986[099]	List of available parameter numbers	0 - 65535	987	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 600	- 699.									
Index:	See r0980											
Note:	See r0980											
r0987[099]	List of available parameter numbers	0 - 65535	988	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 700	- 799.									
Index:	See r0980											
Note:	See r0980				_		_					
r0988[099]	List of available parameter numbers	0 - 65535	989	-	-	-	U16	4				
	Contains 100 parameter r	numbers index 800	- 899.									
Index:	See r0980											
Note:	See r0980											

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
r0989[099]	List of available parameter numbers	0 - 65535	0	-	-	-	U16	4		
	Contains 100 parameter r	numbers index 900) - 999.							
Index:	See r0980									
Note:	See r0980									
P1000[02]	Selection of frequency	0 - 77	1	C, T	-	CDS	U16	1		
	setpoint									
	Selects frequency setpoir tion) and the additional se note main setpoints that h Output frequency	etpoint is given by	the most sigr							
		Additional setpoint Main setpoint	Actual of freque							
		V	▼				→ Time			
	Run command									
	0	No main setpoint								
	1	MOP setpoint								
	2	Analog setpoint								
	3	Fixed frequency								
	5	USS/MODBUS on RS485								
	7	Analog setpoint 2								
·	10	No main setpoint	+ MOP setp	oint						
	11	MOP setpoint + N								
	12	Analog setpoint +								
	13	Fixed frequency								
	15	USS/MODBUS o			t					
	17	Analog setpoint 2								
	20	No main setpoint + Analog setpoint								
	21	MOP setpoint + Analog setpoint								
	22	Analog setpoint + Analog setpoint								
	23	Fixed frequency + Analog setpoint								
	25	USS/MODBUS on RS485 + Analog setpoint								
	27	Analog setpoint 2 + Analog setpoint								
	30	No main setpoint + Fixed frequency								
	31	MOP setpoint + Fixed frequency								
	32	Analog setpoint +	Fixed frequ	ency						

Parameter	Function			Range		Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
	33			Fixed fre	quency +	Fixed freque	ency							
	35			USS/MO	DBUS on	RS485 + Fi	xed freque	псу						
	37			Analog s	etpoint 2	+ Fixed freq	uency	•						
	50					+ USS/MOD		485						
	51					SS/MODBU								
	52					USS/MODB								
	53				Fixed frequency + USS/MODBUS on RS485									
	55				USS/MODBUS on RS485 + USS/MODBUS on RS485									
	57				Analog setpoint 2 + USS/MODBUS on RS485									
	70				No main setpoint + Analog setpoint 2									
	71					nalog setpoi								
	72					Analog setp								
	73					Analog setp								
	75					1 RS485 + A		int 2						
	77					+ Analog se		1111, 2						
Donondonovi		orom	otor: D1				•							
Dependency:				074 (BI: Disa		•	·							
Caution:	P1070, P	changing this parameter sets (to default) all settings on item selected. These are the following parameters 1070, P1071, P1075, P1076 P1000 = 1 or 1X, and P1032 (inhibit reverse direction of MOP) = 1, then reverse motor direction will be shibited.												
Note:	MODBUS	RS485 also supports MODBUS protocol as well as USS. All USS options on RS485 are also applicable to MODBUS. To alter the setpoint using the BOP when the command source P0700 is not set to 1, you must check that P1035 is set to r0019 bit 13 and P1036 is set to r0019 bit 14.												
P1001[0 2]							1				1			
P1001[02]	Fixed freq	uenc	y 1 [Hz]	-550.00 -	550.00	10.00	U, T	-	DDS	Float	2			
P1001[02]				-550.00 -		10.00	U, T	-	DDS	Float	2			
P1001[02]	Defines fix	xed fr	equenc	setpoint 1.		10.00	U, T	-	DDS	Float	2			
P1001[02]	Defines fix • Direct	xed fr selec	equency tion (P1	/ setpoint 1. 016 = 1):	There are	10.00 2 types of f	U, T ixed freque	- ncies:		1	•			
P1001[02]	Defines fix Direct In the contract of the co	xed fr select this m	equency stion (P1 node of	setpoint 1.	There are	10.00 2 types of f	U, T ixed freque stor (P1020	- ncies: to P1023) se	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In the second se	xed fr selecthis made severa	equency etion (P1 node of call inputs	y setpoint 1. 016 = 1): operation 1 F are active to	There are fixed Fred gether, th	10.00 2 types of f	U, T ixed freque stor (P1020	- ncies: to P1023) se	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In 1 If s H F Binary	xed fr select this m severa F4.	equency etion (P1 node of al inputs	y setpoint 1. 016 = 1): operation 1 F are active to	There are ixed Frece segether, the early ixed Frece segether, the early ixed ixed ixed ixed ixed ixed ixed ixed	10.00 2 types of figurency selected figures are selected figures.	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In 1 If s H F Binary	xed fr select this m severa F4.	equency etion (P1 node of al inputs	y setpoint 1. 016 = 1): operation 1 F are active to	There are ixed Frece segether, the early ixed Frece segether, the early ixed ixed ixed ixed ixed ixed ixed ixed	10.00 2 types of figurency selected figures are selected figures.	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In 1 If s H F Binary	xed fr selecthis m severa F4. code	equency etion (P1 node of al inputs ed select	y setpoint 1. 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequ	There are investigation in the	10.00 2 types of figurency selected figures are selected figures.	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In the second of the se	xed fr selecthis m severa F4. code	equency etion (P1 node of al inputs ed select	y setpoint 1. 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequ	There are investigation in the control of the contr	10.00 2 types of f quency selected f ues can be s	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In the second of the se	xed fr select this m severa FF4. code to 16	equency etion (P1 node of al inputs ed select	y setpoint 1. O16 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0 1	There are ixed Free gether, the second process of the second proce	10.00 2 types of figurency selected figurency (Hz) 0 10.00	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In the second of the se	xed fr selection this massevera FF4. code to 16 ed bit	equency stion (P1 node of all inputs ed select 6 different Bina	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0 1 2	There are investigation in the control of the contr	10.00 2 types of figurency selected figurency (Hz) 0 10001 10002	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In 1 If s Fixed specific	xed fr select this m severa FF4. code to 16	equency tion (P1 node of	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0 1 2 3	There are investigation and investigation in the in	10.00 2 types of figuency selected figuency (Hz) 0 0001 0002 0003	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In a If s Fixed specific	xed fr selection this massevera FF4. code to 16 ed bit	equency stion (P1 node of all inputs ed select different Bina	y setpoint 1. On 16 = 1): operation 1 F are active to tion (P1016 = 1) of tion (P1016 = 1) of tive distribution (P1016 = 1) of tive	There are Fixed Frece	10.00 e 2 types of figuency selected figuency (Hz) 0 0001 0002 0003 0004	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In 1 If s Fixed specific	xed fr selection this massevera FF4. code to 16 ed bit	equency stion (P1 node of all inputs ed select 6 different Bina	y setpoint 1. On 16 = 1): operation 1 F are active to tion (P1016 = 1) of tion (P1016 = 1) of tive distribution (P1016 = 1) of tive	There are Fixed Frece gether, the second value Fixed frece P1 P1 P1 P1	10.00 2 types of figuency selected figuency (Hz) 0 0001 0002 0003	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix Direct In a Binary Up Fixed specification 2 2 2	xed fr selection this m severa F4. code to 16 ed bit	equency stion (P1 node of all inputs ed select different Bina	y setpoint 1. 7 on 16 = 1): operation 1 F are active to tion (P1016 = 1) nt fixed frequency code 0 1 2 3 4 5 6 7	There are Fixed Frece gether, the second of	10.00 2 2 types of figurency selected figurency (Hz) 0 1001 1002 1003 1004 1005 1006 1007	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection this massevera FF4. code to 16 ed bit	equency stion (P1 node of lal inputs ed select differer Bina 0 0 0	y setpoint 1. 7 on 16 = 1): operation 1 F are active to tion (P1016 = 1) of tion (P101	Fixed free P1 P1 P1 P1 P1 P1	10.00 2 2 types of figurency selected figurency (Hz) 0 1001 1002 1003 1004 1005 1006 1007 1008	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection several F4. code to to 16 ed bit	equency stion (P1 node of lal inputs ed select different Bina 0 0	y setpoint 1. 7 on 16 = 1): operation 1 F are active to tion (P1016 = 1): otion (P1016 =	Fixed frec	10.00 2 types of figurency selected figurency (Hz) 0 0001 0002 0003 0004 0005 0006 0007 0008 0009	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection severa F4. code to 16 ed bit	equency stion (P1 node of eal inputs ed select difference Bina 0 0 0 0	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0 1 2 3 4 5 6 7 8 9 10	Fixed frec	10.00 2 types of figurency selected figurency (Hz) 0 0001 0002 0003 0004 0005 0006 0007 0008 0009 1010	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection several F4. code to to 16 ed bit	equency stion (P1 node of lal inputs ed select differer Bina 0 0 0	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0	Fixed freces of the property o	10.00 2 types of figurency selected fine selected fines can be sigurency (Hz) 0 0001 0002 0003 0004 0005 0006 0007 0008 0009 0010 0011	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection severa F4. code to 16 ed bit	equency stion (P1 node of eal inputs ed select difference Bina 0 0 0 0	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0	Fixed frece are served	10.00 2 types of figurency selected figurency (Hz) 0 0001 0002 0003 0004 0005 0006 0007 0008 0009 1010	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection severa F4. code to 16 ed bit	equency equency etion (P1 node of eal inputs ed select different 0 0 0 0 0	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14	Fixed Fred P1 P	10.00 2 types of figurency selections selected figurency (Hz) 0 0001 0002 0003 0004 0005 0006 0007 0008 0009 0010 0011 0012 0013 0014	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			
P1001[02]	Defines fix	xed fr selection several F4. code to 16 ed bit	equency equency etion (P1 node of eal inputs ed select different 0 0 0 0 0	y setpoint 1. 7 016 = 1): operation 1 F are active to tion (P1016 = nt fixed frequency code 0	Fixed Fred P1 P	10.00 2 types of figurency selections selected figurency (Hz) 0 001 001 002 003 004 005 006 007 008 009 0010 0011 0012 0013	U, T ixed freque ctor (P1020 frequencies	- ncies: to P1023) se are summed	elects 1 f	ixed freq	uency.			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
Dependency:	Select fixed frequency op	eration (using P100	00).					
	Inverter requires ON com to P0840 to start.	mand to start in the	case of dire	ect selection	. Therefore	r1025 mւ	ust be coi	nnected
Note:	Fixed frequencies can be	selected using the	digital inputs	S.				
P1002[02]	Fixed frequency 2 [Hz]	-550.00 - 550.00	15.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 2.						
Note:	See P1001							
P1003[02]	Fixed frequency 3 [Hz]	-550.00 - 550.00	25.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 3.						
Note:	See P1001							
P1004[02]	Fixed frequency 4 [Hz]	-550.00 - 550.00	50.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 4.						
Note:	See P1001							
P1005[02]	Fixed frequency 5 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 5.						
Note:	See P1001							
P1006[02]	Fixed frequency 6 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 6.						
Note:	See P1001							
P1007[02]	Fixed frequency 7 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 7.						
Note:	See P1001							
P1008[02]	Fixed frequency 8 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 8.						
Note:	See P1001							
P1009[02]	Fixed frequency 9 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency s	etpoint 9.						
Note:	See P1001							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P1010[02]	Fixed frequency 10 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency se	etpoint 10.						
Note:	See P1001							
P1011[02]	Fixed frequency 11 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency se	etpoint 11.						
Note:	See P1001							
P1012[02]	Fixed frequency 12 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency se	etpoint 12.						
Note:	See P1001							
P1013[02]	Fixed frequency 13 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency se	etpoint 13.						
Note:	See P1001							
P1014[02]	Fixed frequency 14 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency se	etpoint 14.						
Note:	See P1001							
P1015[02]	Fixed frequency 15 [Hz]	-550.00 - 550.00	0.00	U, T	-	DDS	Float	2
	Defines fixed frequency se	etpoint 15.						
Note:	See P1001			_				
P1016[02]	Fixed frequency mode	1 - 2	1	Т	-	DDS	U16	2
	Fixed frequencies can be	selected in two diff	erent modes.	P1016 defi	nes the mod	e.		
	1	Direct selection						
	2	Binary selection						
Note:	See P1001 for description	of how to use fixe	d frequencies					
P1020[02]	BI: Fixed frequency selection Bit 0	0 - 4294967295	722.3	Т	-	CDS	U32	3
	Defines origin of fixed free	uency selection.						
Example:	= 722.0	Digital input 1 (re	quires P0701	to be set to	99, BICO)			
	= 722.1	Digital input 2 (re	quires P0702	to be set to	99, BICO)			
	= 722.2	Digital input 3 (re	quires P0703	to be set to	99, BICO)			
	= 722.3	Digital input 4 (re	quires P0704	to be set to	99, BICO)			
Dependency:	Accessible only if P0701 -	P070x = 99 (funct	ion of digital ir	puts = BIC	O)			
P1021[02]	BI: Fixed frequency selection Bit 1	0 - 4294967295	722.4	Т	-	CDS	U32	3
	See P1020							
P1022[02]	BI: Fixed frequency selection Bit 2	0 - 4294967295	722.5	Т	-	CDS	U32	3
	See P1020							

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P1023[02]	BI: Fixed fre selection Bi		0 - 4294967295	722.6	Т	-	CDS	U32	3		
	See P1020		•								
r1024	CO: Actual quency [Hz]		-	-	-	-	-	Float	3		
	Displays su	m total of sele	cted fixed frequenc	cies.			•	•			
r1025.0	BO: Fixed fi	requency	-	-	-	-	-	U16	3		
	Displays the	e status of fixe	d frequencies.	frequencies.							
	Bit	Signal name	•			1 signal		0 sign	al		
	00	Status of FF	:			Yes		No			
P1031[02]	MOP mode	'	0 - 3	1	U, T	-	DDS	U16	2		
	MOP mode	specification.			'	•		•			
	Bit	Signal name	•			1 signal		0 sign	al		
	00	Setpoint sto	re active			Yes		No			
	01	No On-state	for MOP necessar					No			
Note:	Defines the	Defines the operation mode of the motorized potentiometer. See P1040.									
P1032	Inhibit rever	se direction	0 - 1	1	Т	-	-	U16	2		
	Inhibits reverse setpoint selection of the MOP.										
	0 Reverse direction is allowed										
	1		Reverse direction	ninhibited							
Note:	quency).	_	otor direction using								
	frequency).		ge of motor directio		·		ooint (incr	ease/de	crease		
			1 or 1X, then reve			e inhibited.	1	1	1_		
P1035[02]	BI: Enable I command)	MOP (UP-	0 - 4294967295	19.13	T	-	CDS	U32	3		
		irce for motor	potentiometer setp								
Setting:	722.0		Digital input 1 (re								
	722.1		Digital input 2 (re								
	722.2		Digital input 3 (re								
Notice:			d by short pulses of abled longer than								
P1036[02]	BI: Enable I (DOWN-cor		0 - 4294967295	19.14	Т	-	CDS	U32	3		
	Defines sou	rce for motor	potentiometer setp	oint decreas	e frequency.						
Setting:	See P1035										
Notice:			d by short pulses of abled longer than				_	-			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level							
P1040[02]	Setpoint of the MOP [Hz]	-550.00 - 550.00	5.00	U, T	-	DDS	Float	2							
	Determines setpoint for m	otor potentiometer	control (P1000) = 1).											
Dependency:	Motor potentiometer (P104	40) must be chose	n as main setp	oint or add	itional setpo	int (using	P1000).							
Note:	If motor potentiometer setpoint is selected either as main setpoint or additional setpoint, the reverse direction will be inhibited by default of P1032 (inhibit reverse direction of MOP). To re-enable reverse direction set P1032 = 0.														
	A short press of the 'up' or 'down' keys (e.g.: operator panel) will change the frequency setpoint in steps of 0.1 Hz. A longer press will cause an accelerated frequency setpoint change.														
	The start value gets active (for the MOP output) only at the start of the MOP. P1031 influences the start value behavior as follows:														
	• P1031 = 0: Last MOP	setpoint not saved	in P1040												
	MOP UP/DOWN requi	res an ON comma	nd to become	active.											
	• P1031 = 1: Last MOP	setpoint saved in F	1040 on every	OFF											
	MOP UP/DOWN requi	res an ON comma	nd to become	active (defa	ault).										
	• P1031 = 2: Last MOP	setpoint not saved	in P1040												
	MOP UP/DOWN active without additional ON command.														
	P1031 = 3: Last MOP setpoint saved in P1040 on powering-up														
	MOP UP/DOWN active without additional ON command.														
P1041[02]	BI: MOP select setpoint automatically/manually	0 - 4294967295	0	Т	-	CDS	U32	3							
	Sets the signal source to change over from manual to automatic mode. If using the motorized potentiometer in the manual mode the setpoint is changed using two signals for up and down e.g. P1035 and P1036. If using the automatic mode the setpoint must be interconnected via the connector input (P1042). 0: manually 1: automatically														
Notice:	Refer to: P1035, P1036, F	21042													
P1042[02]	CI: MOP auto setpoint	0 - 4294967295	0	Т	-	CDS	U32	3							
	Sets the signal source for ed.	the setpoint of the	motorized pote	entiometer	if automatic	mode P1	041 is s	select-							
Notice:	Refer to: P1041														
P1043[02]	BI: MOP accept rampgenerator setpoint	0 - 4294967295	0	Т	-	CDS	U32	3							
	Sets the signal source for ter. The value becomes ef					motorized	d poten	tiome-							
Notice:	Refer to: P1044														
P1044[02]	CI: MOP rampgenerator setpoint	0 - 4294967295	0	Т	-	CDS	U32	3							
	Sets the signal source for the setting command.	the setpoint value	for the MOP. T	he value b	ecomes effe	ctive for	a 0/1 ed	dge of							
Notice:	Refer to: P1043						-								

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r1045	CO: MOP input frequen- cy of the RFG [Hz]	-	-	-	-	-	Float	3			
	Displays the motorized po	tentiometer setpoir	nt before it pas	sed the Mo	OP RFG.						
P1047[02]	MOP ramp-up time of the RFG [s]	0.00 - 1000.00	10.00	U, T	-	DDS	Float	2			
	Sets the ramp-up time for the internal MOP ramp-function generator. The setpoint is changed from zero up to limit defined in P1082 within this time.										
Notice:	Refer to: P1048, P1082										
P1048[02]	MOP ramp-down time of the RFG [s] 0.00 - 1000.0 10.00 U, T - DDS Float 2										
	Sets the ramp-down time for the internal MOP ramp-function generator. The setpoint is changed from lidefined in P1082 down to zero within this time.										
Notice:	Refer to: P1047, P1082										
r1050	CO: Actual output freq. of the MOP [Hz]	-	-	-	-	-	Float	2			
	Displays output frequency	of motor potention	neter setpoint.								
P1055[02]	BI: Enable JOG right	0 - 4294967295	19.8	Т	-	CDS	U32	3			
	Defines source of JOG rig	ht when P0719 = 0	(Auto selection	on of comm	and/setpoint	source)					
P1056[02]	BI: Enable JOG left	0 - 4294967295	0	Т	-	CDS	U32	3			
	Defines source of JOG left when P0719 = 0 (Auto selection of command/setpoint source).										
P1057	JOG enable	0 - 1	1	Т	-	-	U16	3			
	While JOG enable is '0' Jo	ogging (P1056 and	P1055) is disa	abled. Whe	n '1' Jogging	is enabl	ed.				
P1058[02]	JOG frequency [Hz]	0.00 - 550.00	5.00	U, T	-	DDS	Float	2			
	Jogging increases the mospecific number of revoluterator panel for jogging us While jogging, P1058 detecreased as long as 'JOG I reached.	ions and position theses a non-latching sermines the frequent	ne rotor manua switch on one ncy at which th	ally. In JOG of the digita ne inverter v	6 mode, the f al inputs to c will run. The	RUN butt ontrol the motor sp	on on the motor eed is in	ne op- speed. n-			
Dependency:	P1060 and P1061 set up a rounding type (P1134) and	d P2167 will also h				times (P					
P1059[02]	JOG frequency left [Hz]	0.00 - 550.00	5.00	U, T	-	DDS	Float	2			
	While JOG left is selected	, this parameter de	termines the f	requency a	t which the in	nverter w	ill run.				
Dependency:	P1060 and P1061 set up a	and down ramp tim	es respectivel	y for joggin	ıg.	•					
P1060[02]	JOG ramp-up time [s]	0.00 - 650.00	10.00	U, T	-	DDS	Float	2			
	Sets jog ramp-up time. Th	is is the time used	while jogging	is active.							
Dependency:	See also P3350, P3353.										
Notice:	Ramp times will be used a	as follows:									
	• P1060/P1061 : JOG m	ode is active									
	• P1120/P1121 : Norma	I mode (ON/OFF) i	s active								
	P1060/P1061 : Normal mode (ON/OFF) and P1124 is active										
	The rounding of P1130 - P1133 also applies to the JOG ramping.										
Note:	If the SuperTorque function	n is enabled, the ir	nverter will initi	ally ramp ι	ising the valu	ue in P33	53.				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P1061[02]	JOG ramp-down time [s]	0.00 - 650.00	10.00	U, T	-	DDS	Float	2
	Sets ramp-down time. Thi	s is the time used	while jogging	is active.	•	•	•	•
Dependency:	See also P3350, P3353.							
Note:	See P1060							
P1070[02]	CI: Main setpoint	0 - 4294967295	1050[0]	Т	-	CDS	U32	3
	Defines source of main se	tpoint.						
Setting:	755	Analog input 1 se	tpoint					
	1024	Fixed frequency s	setpoint					
	1050	Motor potentiome	eter (MOP) se	etpoint				
P1071[02]	CI: Main setpoint scaling	0 - 4294967295	1	Т	4000H	CDS	U32	3
	Defines source of the mai	n setpoint scaling.						
Setting: P1074[02] Setting:	See P1070							
P1074[02]	Bl: Disable additional setpoint	0 - 4294967295	0	U, T	-	CDS	U32	3
	Disables additional setpoi	nt.						
Setting:	See P1070							
P1075[02]	CI: Additional setpoint	0 - 4294967295	0	Т	-	CDS	U32	3
	Defines source of the add	itional setpoint (to	be added to r	main setpoin	t).			
Setting:	See P1070							
P1076[02]	CI: Additional setpoint scaling	0 - 4294967295	[0] 1 [1] 0 [2] 1	Т	4000H	CDS	U32	3
	Defines source of scaling	for additional setpo	oint (to be ad	ded to main	setpoint).			
Setting:	1	Scaling of 1.0 (10	00%)					
	755	Analog input 1 se	tpoint					
	1024	Fixed frequency s	setpoint					
	1050	MOP setpoint					_	
r1078	CO: Total frequency setpoint [Hz]	-	-	-	-	-	Float	3
	Displays sum of main and	additional setpoin	ts.					
r1079	CO: Selected frequency setpoint [Hz]	-	-	-	-	-	Float	3
	Displays selected frequen	cy setpoint. Follow	ing frequency	y setpoints a	re displaye	d:		
	r1078 Total frequency	setpoint						
	P1058 JOG frequency	right						
	P1059 JOG frequency	left						
Dependency:	P1055 (Bl: Enable JOG right left respectively.	ght) or P1056 (BI:	Enable JOG	left) define c	ommand so	ource of J	OG right	t or JOG
Note:	P1055 = 0 and P1056 = 0	==> Total frequen	cv setpoint is	selected.				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P1080[02]	Minimum frequency [Hz]	0.00 - 550.00	0.00	C, U, T	-	DDS	Float	1		
	Sets minimum motor frequency P1080 represer log input, MOP, FF, USS withe frequency band +/-P10 ramps. Dwelling in the frequency band the frequenc	nts a masking freq with the exception 080 is run through quency band is no	uency of 0 Hz to of the JOG targin optimum time to possible. Furt	for all frequiget value so be by mean hermore, a	ency target ource (analous of the accelling overshoot	value sou gous to le eleration/ of the ac	urces e. P1091). 'decelera	g. ana- Thus ation		
Note:	Value set here is valid bot					f				
P1082[02]	Under certain conditions (Maximum frequency [Hz]		50.00	C, T	n below minii	DDS	Float	4		
	Sets maximum motor frequent here is valid for both of Furthermore, the monitoring this parameter.	uency at which mo	otor will run irre nterclockwise ro	spective of	·	cy setpo	int. The	value		
Example: Dependency:	f_act P1082 P1082 - 3 Hz f_act ≥ P1082 (f_max) r0052									
	550.0 Hz). As consequence P1082 can be affected if P0310 is changed to a smaller value. The maximum frequency and the pulse frequency depending on each other. The maximum frequency affects the pulse frequency according to the following table.									
				P1800						
		2 kHz	4 kHz		6 kHz		8 - 16	kHz		
	f _{max} P1082	0 - 133.3 Hz	0 - 266.6	Hz	0 - 400 Hz		0 - 550.	0 Hz		
	Example: If P1082 is set to 350 Hz a pulse frequency from at least 6 kHz is necessary. If P1800 is smaller than 6 kHz the parameter is changed P1800 = 6 kHz. The maximum output frequency of inverter can be exceeded if one of the following is active: $ - P1335 \pm 0 \text{ (Slip compensation active):} $									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
Note:	When using the setpoint s	source	•		•			
	Analog Input							
	• USS							
	the setpoint frequency (in	Hz) is cyclically ca	lculated using					
	a percentage value(e.	g. for the analog in	put r0754)					
	a hexadecimal value (e.g. for the USS r2	018[1])					
	and the reference free	uency P2000.						
	If for example P1082 = 80 P0758 = 0 %, P0759 = 10 analog input. When Quick	V, P0760 = 100 %	, a setpoint fre	equency of	50 Hz will be	applied	at 10 V	of the
r1084	Resultant maximum frequency [Hz]	-	-	-	-	-	Float	1
	Displays resultant maxim	um frequency.	•	•	•	l	1	
P1091[02]	Skip frequency [Hz]	0.00 - 550.00	0.00	U, T	-	DDS	Float	3
	Defines skip frequency 1 in +/-P1101 (skip frequen		s of mechanic	al resonand	ce and suppr	esses fre	equenci	es with-
Notice:	Stationary operation is no through (on the ramp). Fo continuously between 10	r example, if P109	1 = 10 Hz and	P1101 = 2	range; the ra Hz, it is not	nge is me possible	erely pa to opera	issed ate
Note:	The function is disabled if	P1091 = 0.						
P1092[02]	Skip frequency 2 [Hz]	0.00 - 550.00	0.00	U, T	-	DDS	Float	3
	Defines skip frequency 2 in +/-P1101 (skip frequen		s of mechanic	al resonand	ce and suppr	esses fre	equenci	es with-
Note:	See P1091							
P1093[02]	Skip frequency 3 [Hz]	0.00 - 550.00	0.00	U, T	-	DDS	Float	3
	Defines skip frequency 3 in +/-P1101 (skip frequen		s of mechanic	al resonand	ce and suppr	esses fre	equenci	es with-
Note:	See P1091							
P1094[02]	Skip frequency 4 [Hz]	0.00 - 550.00	0.00	U, T	-	DDS	Float	3
	Defines skip frequency 4 in +/-P1101 (skip frequen		s of mechanic	al resonand	ce and suppr	esses fre	equenci	es with-
Note:	See P1091							
P1101[02]	Skip frequency band- width [Hz]	0.00 - 10.00	2.00	U, T	-	DDS	Float	3
	Delivers frequency bandy	vidth to be applied t	to skip frequen	cies.				
Note:	See P1091							
P1110[02]	BI: Inhibit negative frequency setpoint	0 - 4294967295	0	Т	-	CDS	U32	3
	This parameter suppresse to the set-point channel. I accelerated by a positive	f a minimum freque	ency (P1080) a	nd a negat	ive setpoint			
	0	Disabled				•		_
Setting:	0	Disabled						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P1113[02]	BI: Reverse	0 - 4294967295	19.11	Т	-	CDS	U32	3
• •	Defines source of reverse	command used w	hen P0719 = 0	(Auto sele	ection of com	mand/se	tpoint s	ource).
Setting:	722.0	Digital input 1 (re		•				
	722.1	Digital input 2 (re	<u> </u>					
	722.2	Digital input 3 (re	•					
r1114	CO: Freq. setpoint after direction control [Hz]	-	-	-	-	-	Float	3
	Displays setpoint frequence	cy after change of	direction.					
r1119	CO: Freq. setpoint be- fore RFG [Hz]	-	-	-	-	-	Float	3
	Displays frequency setpoitions, e.g.: P1110 Bl: Inhibit neg. P1091 - P1094 skip fre P1080 min. frequency P1082 max. frequency This value is available filte	freq. setpoint, equencies,			r after modif	ication by	y other t	unc-
P1120[02]	Ramp-up time [s]	0.00 - 650.00	10.00	C, U, T	-	DDS	Float	1
	Time taken for motor to acrounding is used. Setting							
Dependency:	Rounding times (P1130 - also have influence on the See also P3350, P3353.		ype (P1134), a	and ramp-u	p time scalin	g factor ((P1138)	will
Notice:	 Ramp times will be used a P1060/P1061: JOG m P1120/P1121: Norma P1060/P1061: Norma Set ramp-up time = ramp- 	node is active Il mode (ON/OFF) i Il mode (ON/OFF) a	and P1124 is a		ne (P1120).			
Note:	If an external frequency so optimum inverter performa PLC. Changes to P1120 will initially ramp using the	ance is to set ramp will be immediately	times in P112	0 and P112	21 slightly sh	orter tha	n those	of the
P1121[02]	Ramp-down time [s]	0.00 - 650.00	10.00	C, U, T	-	DDS	Float	1
	Time taken for motor to de rounding is used.	ecelerate from max	imum motor fr	equency (F	P1082) down	to stand	still whe	en no
Dependency:	Ramp-down time scaling to See also P3350, P3353.	factor (P1139) will a	also have influ	ence on the	e ramp.			
Notice:	Setting the ramp-down tim Ramp times will be used a • P1060/P1061 : JOG m • P1120/P1121 : Norma • P1060/P1061 : Norma Set ramp-down time = ram	as follows: node is active Il mode (ON/OFF) i Il mode (ON/OFF) a	s active and P1124 is a	active			tage F2).
Note:	Changes to P1121 will be See P1120	•		, - <u>r</u>	(,		

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P1124[02]	Bl: Enable JOG ramp times	0 - 4294967295	0	Т	-	CDS	U32	3
	Defines source for switchi P1121) as applied to the F						ies (P11	20,
Dependency:	See also P1175.							
Notice:	P1124 does not have any P1061) will be used all the between normal (P1120, F P2150, P2157 and P2159 as Dual Ramp.	e time. If the Dual F P1121) and JOG (F	Ramp function P1060, P1061)	is selected ramp time	using P1175 s, depending	ō, ramp ti g on the s	imes wi settings	Il switch of
P1130[02]	See P1120. Ramp-up initial rounding time [s]	0.00 - 40.00	0.00	U, T	-	DDS	Float	2
	Defines rounding time in s	econds at start of i	ramp-up.				1	I
Notice:	Rounding times are recomeffects on the mechanics.	nmended, since the	ey prevent an a	abrupt resp	onse, thus a	voiding d	letrimer	ıtal
	Rounding times are not re shoot/undershoot in the in		analog inputs	are used,	since they w	ould resu	ılt in ove	er-
Note:	If short or zero ramp times (t_up) or ramp down time				1133) are se	et, the tot	al ramp	up time
P1131[02]	Ramp-up final rounding time [s]	0.00 - 40.00	0.00	U, T	-	DDS	Float	2
	Defines rounding time at e	end of ramp-up.						
Notice:	See P1130	T	1	1	ı	1	1	Т
P1132[02]	Ramp-down initial round- ing time [s]	0.00 - 40.00	0.00	U, T	-	DDS	Float	2
	Defines rounding time at s	tart of ramp-down.						
Notice:	See P1130	T	1	•	1		1	T
P1133[02]	Ramp-down final round- ing time [s]	0.00 - 40.00	0.00	U, T	-	DDS	Float	2
	Defines rounding time at e	end of ramp-down.						
Notice:	See P1130	T	T	1	T	1	1	ı
P1134[02]	Rounding type	0 - 1	0	U, T	-	DDS	U16	2
	Defines the smoothing wh new setpoint, OFF1, OFF; and							
	• P1134 = 0,							
	• P1132 > 0, P1133 > 0	and						
	the setpoint is not yet it.	reached.						
	0	Continuous smoo	thing					
	1	Discontinuous sm	noothing					
Dependency:	Effect only when P1130 (F (Ramp-down initial rounding)						time) or	P1132

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
P1135[02]	OFF3 ramp-down time [s]	0.00 - 650.00	5.00	C, U, T	-	DDS	Float		
	Defines ramp-down time f P1134 will have no effect proximately 10% of P1135 f(P1134) = 1.1 * P1135 * (on OFF3 ramp-dov is however includ	vn characterist	ic. An initia	al ramp-dowr	rounding	g time c	of ap-	
Note:	This time may be exceeded	ed if the Vdc_max le	evel is reached	d.					
P1138[02]	Ramp-up time scaling factor	1.00 - 10.00	1.00	C, U, T	-	DDS	Float	1	
	Defines the scaling factor ramp-up time to 6500 s. S								
Note:	This time may be exceeded	ed if the Vdc_max le	evel is reached	d.					
P1139[02]	Ramp-down time scaling factor	1.00 - 10.00	1.00	C, U, T	-	DDS	Float	1	
	Defines the scaling factor imum ramp-down time to down time (P1121).								
Note:	This time may be exceeded if the VDC_max level is reached.								
P1140[02]	BI: RFG enable	0 - 4294967295	1	Т	-	CDS	U32	3	
	Defines command source equal to zero then the RF		•	•	ion generato	or). If bina	ry inpu	t is	
P1141[02]	BI: RFG start	0 - 4294967295	1	Т	-	CDS	U32	3	
	Defines command source to zero then the RFG outp			mp function	n generator).	If binary	input is	equal	
P1142[02]	BI: RFG enable setpoint	0 - 4294967295	1	Т	-	CDS	U32	3	
	Defines command source input is equal to zero, the								
r1170	CO: Frequency setpoint after RFG [Hz]	-	-	-	-	-	Float	3	
	Displays overall frequency	setpoint after ram	p generator.	•		•	•		
P1175[02]	BI: Dual ramp enable	0 - 4294967295	0	Т	-	CDS	U32	3	

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
	ramp will be a Ramp-up Inverte When Ramp-do Inverte When	applied. This : er starts ramp f_act > P215 wn: er starts ramp f_act < P215 requency Ram tir	of dual ramp enable works as follows: o-up using ramp tire, switch to ramp to the control of th	le command. I ne from P1120 ime from P100 time from P10 ime from P112	f binary inp 60 61 Joo do	G ramp- wn time	<u> </u>			
	P2157 (Hz)P2157 (Hz)P2159 (Hz) ON OFF 1 P1175 1		etpoint				tim	ne (s)		
Dependency:	See P2150, P2157, P2159, r2198.									
Note:	is used to ap	ply hysteresis dual ramp fun	ses r2198 bits 1 as to these settings, ction more respon OG ramp.	so the user m	ay wish to	change the v	alue of t	his para	meter	
r1199.712	CO/BO: RFG	status word	-	-	-	-	-	U16	3	
	Displays stat	us of ramp fu	nction generator (F	RFG).						
	Bit	Signal name				1 signal		0 sign	al	
	07	Ramp #0 act	ive			Yes		No		
	08	Ramp #1 act	tive			Yes		No		
	09	Ramping fini	shed			Yes		No		
	10	Direction right	nt/left			Yes		No		
	11	f_act > P215	7(f_2)			Yes		No		
	12	f_act < P215	9(f_3)			Yes		No		
Note:	See P2157 a	nd P2159								

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P1200	Flying start		0 - 6	0	U, T	-	-	U16	2
			ning motor by rapio een found. Then, th						
	0		Flying start disabl	ed					
	1		Flying start alway	s active; searc	hes in both	directions			
	2		Flying start active	after power or	n, fault, OF	F2; searche	s in both	directio	ns
	3		Flying start active	after fault, OF	F2; search	es in both di	rections		
	4		Flying start alway	s active; searc	hes in dire	ction of setp	oint only		
	5		Flying start active only	after power o	n, fault, OF	F2; searche	s in direc	tion of s	setpoint
	6		Flying start active	after fault, OF	F2; search	es in direction	on of setp	oint on	ly
Notice:			in cases where the Otherwise, overcu			g (e.g. after	a short m	ains br	eak) or
Note:	Useful for mo only in direction		n inertia loads. Set t.	tings 1 to 3 sea	arch in both	directions.	Settings	4 to 6 s	earch
P1202[02]	Motor-current [%]	: flying start	10 - 200	100	U, T	-	DDS	U16	3
	Defines searc	ch current us	ed for flying start. \	/alue is in [%]	based on r	ated motor c	urrent (P	0305).	
Note:	very high. Ho	wever, searc	ent may improve pe th current settings i cause motor spee	n P1202 that a	are below 3	0% (and sor	netimes	other se	ettings
P1203[02]	Search rate: f	lying start	10 - 500	100	U, T	-	DDS	U16	3
	with turning n	notor. This va	nly) by which the or alue is entered in [9 the time taken to s	%]. It defines th	ne reciproc	al initial grad			
Example:	For a motor w	/ith 50 Hz, 13	350 rpm, 100 % wo	uld produce a	maximum	search time	of 600 m	s.	
Note:	A higher value	e produces a	flatter gradient an	d thus a longe	r search tir	ne. A lower v	alue has	the op	posite
r1204	Status word:	flying start	-	-	-	-	-	U16	4
	Bit parameter	for checking	and monitoring st	ates during sea	arch.				
	Bit	Signal name				1 signal		0 sign	al
	00	Current appl	ied			Yes		No	
	01	Current coul	d not be applied			Yes		No	
	02	Voltage redu	ıced			Yes		No	
	03	Slope-filter s	tarted			Yes		No	
	04	Current less	threshold			Yes		No	
	05	Current-mini	mum			Yes		No	
	07	Speed could	not be found			Yes		No	

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P1210	Automatic restart	0 - 8	1	U, T	-	-	U16	2
	Configures automati	c restart function.				•	•	
	0	Disabled						
	1	Trip reset after power	on, P1211 o	disabled				
	2	Restart after mains b						
	3	Restart after mains b	rownout or fa	ault, P1211 e	enabled			
	4	Restart after mains b	rownout, P12	211 enabled				
	5	Restart after mains b	lackout and t	ault, P1211	disabled			
	6	Restart after mains b	rown-/black	out or fault, I	P1211 ena	bled		
	7	Restart after mains b	rown-/black	out or fault, t	rip when F	1211 expires	S	
	8	Restart after mains b termined by P1214, F			and leave a	n interval in	second	s de-
	9	Restart after mains b		out with F3 o	luring the a	attempt time	determi	ned by
	10	Restart after mains b					determi	ned by
Dependency:	Automatic restart re-	quires constant ON con	nmand via a	digital input	wire link.			
Caution:	P1210 > 2 can caus	e the motor to restart a	utomatically	without togg	ling the ON	l command!		
Notice:	A "mains brownout" er is reapplied.	nains brownout" is a very short mains break, where the DC link has not fully colla s reapplied.					efore th	ne pow-
	applied.	a long mains break, where the DC link has fully collapsed before the power is re-						
	then it will be double	time between attempts of ed every next attempt.			•			
	quit fault.	start Attempts" can be s						_
		and after 4 seconds of ime" will be reset to 1 s		dition, "Num	ber of Res	tart Attempts	" will be	reset to
	P1210 = 0:							
	Automatic restart is	disabled.						
	P1210 = 1:							
	The inverter will ack means the inverter r the ON command has P1210 = 2:	nowledge (reset) faults nust be fully powered d as been toggled.	i.e. it will res own, a brow	et a fault wh nout is not s	en the pov ufficed. Th	ver is re-app e inverter wil	lied. Thi I not rur	s n until
		nowledge the fault F3 a nmand is wired via a di			t and resta	rts the invert	er. It is	neces-
	the faults (F3, etc.).	is fundamental that the The inverter will acknow DN command is wired vi	vledge the fa	ult and resta	arts the inv			
	P1210 = 4:							
	the fault (F3). The in sary that the ON cor	is fundamental that the verter will acknowledge mmand is wired via a di	the fault an	d restarts the				
		nowledge the faults F3 DN command is wired vi				restarts the	inverter	. It is

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
		nowledge the faults (F3 ary that the ON comma nmediately.									
		nowledge the faults (F3 ary that the ON comma mmediately.									
	The difference between ber of restarts defined	en this mode and Mod d by P1211 have been	le 6 is that th exhausted.	e fault status	bit (r0052	.3) is not set	until th	e num-			
	can be driven by the	Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load (P1200). P1210 = 8:									
	The inverter will acknowledge essary that the ON co	nowledge the fault (F3) ommand is wired via a tween restarts is deter	digital input	(DI). Setting							
	essary that the ON or P1214 sets the total in P1214, the F3 will	The inverter will acknowledge the fault (F3) at power on after blackout or brownout and restarts. It is necessary that the ON command is wired via a digital input (DI). The interval between restarts is fixed at 0.5 s. P1214 sets the total restart attempt time. If an F3 occurs and cannot be acknowledged within the time set in P1214, the F3 will go permanent and must be acknowledged manually to restart the inverter.									
	 P1210 = 10: The inverter will acknowledge the fault (F3) at power on after blackout or brownout and restarts. It is necessary that the ON command is wired via a digital input (DI). The interval between restarts is fixed at 1.0 s. P1214 sets the total restart attempt time, but it must be equal to or less than 8 s. If an F3 occurs and cannot be acknowledged within the time set in P1214, the F3 will go permanent and must be acknowledged manually to restart the inverter. 										
	• If a fault (the inverter cannot recover from F6, F51, F52, F85, F100, and F101) occurs, the fault must be acknowledged manually at power on after blackout or brownout and the inverter restarts. It is necessary that the ON command is wired via a digital input (DI).										
	Flying start must be used in cases where the motor may still be turning (e.g. after a short mains break) or can be driven by the load (P1200).										
P1211	Number of restart attempts	0 - 10	3	U, T	-	-	U16	3			
	Specifies number of	times inverter will atten	npt to restart	if automatic	restart P12	210 is activat	ted.				
P1214	Restart time interval [s]	0 - 1000	30	-	-	-	U16	3			
	This parameter has e	either of the following fu	unctions:								
	Specifying the res	start interval when P12	10 = 8								
	Specifying the tot	al restart attempt time	when P1210	= 9 or P121	0 = 10						
P1215	Holding brake ena- ble	0 - 1	0	C, T	-	_	U16	2			
		ding brake function. The nal can be issued via:	ne motor hold	ding brake (M	1HB) is cor	ntrolled via st	atus wo	ord 1			
	status word of the	e serial interface (e.g. l	JSS)								
	digital outputs (e.	g. DO1: ==> P0731 =	52.C (r0052	bit 12))							
	0	Motor holding brake	disabled								
	1	Motor holding brake									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
Caution:		s the motor holding bra . suspended loads for						tentially
		o use the motor holding ergency braking opera		orking brake	, as it is ge	enerally only	designe	ed for a
P1216	Holding brake re- lease delay[s]	0.0 - 20.0	1.0	C, T	-	-	Float	2
	Defines period during	which inverter runs a	minimum fr	equency P10	080 before	ramping up.		_
P1217	Holding time after ramp down [s]	0.0 - 20.0	1.0	C, T	-	-	Float	2
	Defines time for whic	h inverter runs at minii	num frequer	ncy (P1080) a	after rampi	ng down.		
Note:	If P1217 > P1227, P1	227 will take preceder	nce.					
P1218[02]	BI: Motor holding brake override	0 - 4294967295	0	U, T	-	CDS	U32	3
	Enables the motor ho control.	olding brake output to b	e overridder	n, allowing th	e brake to	be opened ι	ınder se	eparate
P1227[02]	Zero speed detection monitoring time [s]	0.0 - 300.0	4.0	U, T	-	DDS	Float	2
Note:	speed has fallen beld and then the pulses a P1227 = 300.0: funct		e braking siç					
	If P1217 > P1227, P1	227 will take presented						
	11 12 17 - 1 1227,1 1	227 will take preceder	nce.					
P1230[02]	BI: Enable DC braking	· · · · · · · · · · · · · · · · · · ·	nce. 0	U, T	-	CDS	U32	3
P1230[02]	BI: Enable DC braking Enables DC braking	0 - 4294967295 via a signal applied fro DC braking causes th	0 m an externa	al source. Fu		ains active w	hile ext	ternal
P1230[02]	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay	0 - 4294967295 via a signal applied fro DC braking causes th	m an externa e motor to st inverter outp demagnetiz ent trips can	al source. Fu op rapidly by out pulses are ed. This dela occur. The I	applying a e blocked a ay time is s evel of DC	ains active was DC braking and the DC cet in P0347 braking is se	while ext current urrent is (demag	ternal t (cur- s not netiza-
P1230[02] Caution:	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relativish the DC braking,	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). g signal is applied, the or has been sufficiently y is too short, overcurr	m an externa e motor to st inverter outp demagnetiz ent trips can current) which ne motor is co	al source. Fu op rapidly by out pulses are ed. This dela occur. The I ch is set to 1	e blocked a by time is s evel of DC 00 % by de	ains active was DC braking and the DC cet in P0347 (braking is separate.	while ext current current is demag et in P12	ternal t (cur- s not netiza- 232 (DC
	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relativish the DC braking,	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). g signal is applied, the or has been sufficiently y is too short, overcurretive to the rated motor the kinetic energy of the in this status for an expension of the status for a expension of the status for a	m an externa e motor to st inverter outp demagnetiz ent trips can current) which ne motor is co	al source. Fu op rapidly by out pulses are ed. This dela occur. The I ch is set to 1	e blocked a by time is s evel of DC 00 % by de	ains active was DC braking and the DC cet in P0347 (braking is separate.	while ext current current is demag et in P12	ternal t (cur- s not netiza- 232 (DC
Caution:	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relativishing the DC braking, overheat if it remains DC braking current [%]	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). g signal is applied, the properties applied, the properties applied, the properties applied to the sufficiently of the state of th	m an externate motor to stee motor to stee inverter outpour demagnetizent trips can current) which me motor is concessive perions.	al source. Fu op rapidly by out pulses are ed. This dela occur. The I ch is set to 1 converted into od of time!	applying a blocked a ay time is sevel of DC 00 % by dependent on the control of t	ains active was DC braking and the DC cet in P0347 (braking is separate.	while ext	ternal t (cur- s not netiza- 232 (DC er could
Caution:	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relativisting the DC braking, overheat if it remains DC braking current [%] Defines level of DC comparison.	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). g signal is applied, the properties of the signal is applied, the properties to short, overcurrective to the rated motor the kinetic energy of the in this status for an expectation of the status for a status for a	m an externate motor to stee motor to stee inverter outpour demagnetizent trips can current) which me motor is concessive perions.	al source. Fu op rapidly by out pulses are ed. This dela occur. The I ch is set to 1 converted into od of time!	applying a blocked a ay time is sevel of DC 00 % by dependent on the control of t	ains active was DC braking and the DC cet in P0347 (braking is separate.	while ext	ternal t (cur- s not netiza- 232 (DC er could
Caution:	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the mote tion time). If this delay braking current - relative the DC braking, overheat if it remains DC braking current [%] Defines level of DC coing the following departs.	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). g signal is applied, the properties applied to the stationary of the kinetic energy of the tring to the status for an expectation of the properties applied to the properties applied t	m an externate motor to stee motor to stee inverter outpour demagnetizent trips can current) which me motor is concessive perions.	al source. Fu op rapidly by out pulses are ed. This dela occur. The I ch is set to 1 converted into od of time!	applying a blocked a ay time is sevel of DC 00 % by dependent on the control of t	ains active was DC braking and the DC cet in P0347 (braking is separate.	while ext	ternal t (cur- s not netiza- 232 (DC er could
Caution:	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relative the DC braking, overheat if it remains DC braking current [%] Defines level of DC coing the following dependents.	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). g signal is applied, the properties applied to the stationary of the kinetic energy of the tring to the status for an expectation of the properties applied to the properties applied t	m an externate motor to stee motor to stee inverter outpour demagnetizent trips can current) which me motor is concessive perions.	al source. Fu op rapidly by out pulses are ed. This dela occur. The I ch is set to 1 converted into od of time!	applying a blocked a ay time is sevel of DC 00 % by dependent on the control of t	ains active was DC braking and the DC cet in P0347 (braking is separate.	while ext	ternal t (cur- s not netiza- 232 (DC er could 2 observ-
Caution: P1232[02]	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relai With the DC braking, overheat if it remains DC braking current [%] Defines level of DC cing the following dependence of DC cing the fo	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). It is signal is applied, the properties to short, overcurrective to the rated motor the kinetic energy of the in this status for an expectation of the status for an expectation of th	m an externate motor to stee motor to stee motor to stee inverter output demagnetizent trips can current) which me motor is coessive period 100 motor current 0.00	out pulses are ed. This dela occur. The I converted into dof time! U, T To (P0305). T	applying a e blocked a ay time is sevel of DC 00 % by de to heat in the control of DC branch and the control of DC branch and the the DC branch and the	ains active was DC braking and the DC cet in P0347 (braking is selfault. DDS braking can be DDS	while ext current current is (demagnet in P12) e inverte U16 issued o	ternal t (cur- s not netiza- 232 (DC er could 2 observ-
Caution: P1232[02]	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relative the DC braking current if it remains DC braking current [%] Defines level of DC coing the following dependent of DC braking current [%] BICO ==> see P1 Duration of DC braking [s] Defines duration for very service of the properties of th	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). It is signal is applied, the property is a speed of the sufficiently of the state of the sta	m an externate motor to stee motor to stee motor to stee inverter output demagnetizent trips can current) which me motor is concessive period 100 motor current 0.00	al source. Full op rapidly by out pulses and ed. This dela occur. The light is set to 1 converted introd of time! U, T u, T u, T u, T u, T	r applying a set blocked a say time is sevel of DC 00 % by de to heat in the sevel of DC bracket a sevel of DC	ains active was DC braking and the DC cet in P0347 (braking is seefault. DDS braking can be DDS braking can be DDS	while exit of current is (demage) at in P1:	ternal t (cur- s not netiza- 232 (DC er could 2 observ-
Caution: P1232[02]	BI: Enable DC braking Enables DC braking input signal is active. rent applied also hold When the DC braking applied until the moto tion time). If this delay braking current - relative the DC braking, overheat if it remains DC braking current [%] Defines level of DC coing the following dependence of DC coing the following dependence of DC braking [s] Defines duration for with the DC braking [s]	0 - 4294967295 via a signal applied fro DC braking causes the shaft stationary). It is signal is applied, the property is a speen sufficiently by is too short, overcurred the kinetic energy of the in this status for an experience of the kinetic energy of the control of the control of the kinetic energy of the control of the control of the kinetic energy of the control of the	m an externate motor to stee motor to stee motor to stee inverter outpour demagnetizent trips can current) which me motor is coessive period 100 motor current 0.00	al source. Full op rapidly by out pulses are ed. This dela occur. The loch is set to 1 converted introd of time! U, T It (P0305). The loch is a converted introduced of time! U, T Output U, T	r applying a e blocked a ay time is sevel of DC 00 % by do be the at in the control of the DC brain of the	ains active was DC braking and the DC cet in P0347 (braking is sepfault. DDS king can be DDS DDS mmand. ency starts to	while exit current is (demagget in P12) e inverted U16 issued of the properties of t	ternal t (cur- s not netiza- 232 (DC er could 2 observ-

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
Notice:	When the DC braking	ion causes the motor g signal is applied, the las been sufficiently de	inverter outp	out pulses are	e blocked a	and the DC o	urrent r	
Note:	P1233 = 0 means tha	t DC braking is not ac	tivated.		_	_		
P1234[02]	DC braking start frequency [Hz]	0.00 - 550.00	550.00	U, T	-	DDS	Float	2
	Sets start frequency	or DC braking.						
	When an OFF1 or Of	F3 command is received	ved by the in	verter, the o	utput frequ	ency starts t	o ramp	to 0 Hz.
		uency reaches the val current P1232 for the t				ing P1234, t	he invei	ter
P1236[02]	Compound braking current [%]	0 - 250	0	U, T	-	DDS	U16	2
	braking. The value is level (V_DC,Comp): If P1254 = 0> V_D0 otherwise V_DC,Com The Compound Brak the ramp) after OFF1 energy returned to th	e is an overlay of the E or OFF3. This enable e motor. Through optir	to rated mo 2) * V_mains OC brake fun s braking wit mization of th	tor current (F = 1.13 * sqrt ction with rech controlled the ramp-dow	20305). Co (2) * P021 generative motor freq	mpound brain braking (effeuency and a	king swi ective bi minimu	tch-on aking at m of
		out additional HW com						
Dependency:					old above)	. This will ha	ppen or	i OFF1,
Notice:	overcurrent trip may If used with dynamic If used with the Vdc_	will generally improve result. braking enabled as we max controller enabled of compound braking.	ell compound	l braking will	take priori	ty.		
Note:		it compound braking is	not activate	nd.				
P1237	Dynamic braking	0 - 5	not activate	U. T			U16	2
F 1231		orbs the braking energ		- /	1-	-	1010	
	This parameter define	es the rated duty cycle ctive when the function	of the braking	ng resistor (d			namic b	oraking
	-	ch-on level (V_DC,Ch		no = 1 12 * o	art(2) * D0	240		
	otherwise V_DC,Cho	C,Chopper = 1.13 * sq	ıı(∠) v_mai	115 = 1.13 ° S	qι ι(<i>∠)</i> " P0	∠ I U		
	1	Disabled						
	2	5 % duty cycle						
	3	10 % duty cycle 20 % duty cycle						
	4							
	5	50 % duty cycle 100 % duty cycle						
Note:	This parameter is onl	y applicable for inverte be selected with the dy						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
Dependency:	pound braking will ta	used with DC braking ke priority. Compound braking P1236 > 0 yes Compound braking enabled	no by P1.	vnamic	no	ing, DC brak	ing and	com-
Notice:	approached. The dut to operate at this level VDC, act VDC, Chopper	operate at a high dut y cycle specified by the indefinitely without of the indefinitel	nis parameter overheating.	Alarm A53	imposed. The transfer of the	The resistor s $= \frac{x}{100} \cdot t_{Choppe}$ If for 380 - 480	should k	e able
P1240[02]	Configuration of Vdc controller	0 - 3	1	C, T	-	DDS	U16	3
	Enables/disables Vd overvoltage trips on 0 1	c controller. The Vdc nigh inertia systems. Vdc controller disab Vdc_max controller Kinetic buffering (Vd	led enabled	-		C link voltage	e to pre	vent
	3	Vdc_max controller	and kinetic b	uffering (KIB) enabled			
Caution:	If P1245 increased to	oo much, it may interf	ere with the in	nverter norm	al operatior	າ.		
Note:	in limits (r1242). Vdc_min controlled Vdc_min is activate motor is then use trips with F3 imm	er automatically incre	falls below the	ne switch on s causing de	level P124	5. The kinetion	c energy er. If the	y of the inverter

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
r1242	CO: Switch-on level of Vdc_max [V]	-	-	-	-	-	U16 Float U16	3
	Displays switch-on le	vel of Vdc_max contro	ller.					
	Following equation is	only valid, if P1254 =	0:					
	r1242 = 1.15 * sqrt(2)	* V_mains = 1.15 * so	ırt(2) * P021	0			U16 U16 Float Float drops beeduced trips with	
	otherwise r1242 is int	ernally calculated.		_				
P1243[02]	Dynamic factor of Vdc_max [%]	10 - 200	100	U, T	-	DDS	U16	3
	Defines dynamic fact	or for DC link controlle	r.					
Dependency:		ns P1250, P1251 and lare multiplied by P12				ifferential tim	ne) are u	sed as
Note:	Vdc controller adjustr	nent is calculated auto	matically fro	m motor and	d inverter d	ata.		•
P1245[02]	Switch on level kinetic buffering [%]	65 - 95	76	U, T	-	DDS	U16	3
		for kinetic buffering (K]/100) * sqrt(2) * P0210	,	lative to supp	oly voltage	(P0210).		
Warning:	Increasing the value t	too much, may interfer	e with the in	verter norma	al operation	١.	Float	
Note:	P1254 has no effect of	on the switch-on-level	for kinetic bu	uffering.				
	P1245 default for the	single phase variants	is 74%.				U16 Float U16 Float Float U16 U16 U16 Float U16 Float U16 Float U16 Float U16 Float U16	
r1246[02]	CO: Switch-on level kinetic buffering [V]	-	-	-	-	DDS	Float	3
	value in r1246, kinetic	vel of kinetic buffering c buffering will be activ e valid range. If there i	ated. That n	neans the mo	otor freque	ncy will be re	Float U16 Hoat U16 Float Float Float Float Float Float Float Float	in order
P1247[02]	Dynamic factor of kinetic buffering [%]	10 - 200	100	U, T	-	DDS		3
		r for kinetic buffering (legration time and differ or of Vdc_min).						
Note:	Vdc controller adjustr	nent is calculated auto	matically fro	m motor and	d inverter d	ata.		
P1250[02]	Gain of Vdc control- ler	0.00 - 10.00	1.00	U, T	-	DDS	Float	3
	Enters gain for Vdc c	ontroller.					Float Float Float Float Float Float Float Float	
P1251[02]	Integration time Vdc controller [ms]	0.1 - 1000.0	40.0	U, T	-	DDS	Float	3
	Enters integral time c	onstant for Vdc contro	ller.					
P1252[02]	Differential time Vdc controller [ms]	0.0 - 1000.0	1.0	U, T	-	DDS	Float	3
	Enters differential tim	e constant for Vdc cor	troller.					
P1253[02]	Vdc controller output limitation [Hz]	0.00 - 550.00	10.00	U, T	-	DDS	Float	3
	1		~-					
	Limits maximum effect	ct of vac_max controlle	∄ 1.					
Dependency:	+	ct of vdc_max controlle uenced by automatic c		defined by P	0340.			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level					
P1254	Auto detect Vdc switch-on levels	0 - 1	1	C, T	-	-	U16	3					
	mended to set P125- ommended when the	to-detection of switch-c 4 = 1 (auto-detection o ere is a high degree of on only works when the	f Vdc switch fluctuation c	on levels en of the DC-link	abled). Set when the	tting P1254 = motor is bein	= 0 is or	nly rec-					
	0	Disabled											
	1	Enabled											
Dependency:	See P0210												
P1256[02]	Reaction of kinetic buffering	0 - 2	0	C, T	-	DDS	U16	3					
	Enters reaction for kinetic buffering controller (Vdc_min controller). Depending on the setting selected, the frequency limit defined in P1257 is used to either hold the speed or disable pulses. If not enough regeneration is produced, inverter may trip with undervoltage.												
	0	Maintain DC-link unti	l trip										
	1	Maintain DC-link unti	l trip/stop										
	2	Control stop											
Note:	kept above the frequency P1256 = 1: Maintain DC-link voltabled when frequency P1256 = 2: This option ramps do lf mains do not return	tage until mains is returency limit provided in Fage until mains is retured falls below the limit in the pwn the frequency to stand frequency brought deabled or undervoltage halses are disabled.	P1257. rned or inve P1257. randstill ever	rter is tripped n when main: he control of	with unde s return. Vdc_min c	rvoltage or p	ulses ai I P1257 ctive un	re disa- limit. til					
P1257[02]	kinetic buffering [Hz]	0.00 - 550.00	2.50	0, 1	-	סטט	Float	3					
	Frequency which kin	etic buffering (KIB) eith	er hold spe	ed or disable	pulses de	pending on F	type U16	1					
P1300[02]	Control mode	0 - 19	0	C, T	-	DDS	U16	2					
	Parameter to select plied by inverter.	the control method. Co	ntrols relation	onship betwe	en speed c	of motor and	voltage	sup-					
	0	V/f with linear charac	teristic										
	1	V/f with FCC											
	2	V/f with quadratic cha	aracteristic										
	3	V/f with programmab	le character	istic									
	4	V/f with linear eco											
	5	V/f for textile applicat	ions										
	6	V/f with FCC for texti	le applicatio	nc									
	0	V/I WILLI I OO IOI LOXLI	ie applicatio	115									
	7	V/f with quadratic eco		115									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
	V ₁ V ₁ P1300 = 0 P	1300 = 2						
Note:		FCC (flux current contro	•					
		flux current for improve	•					
		, linear V/f is active at l	•	ies				
		quadratic characterist	CIC					
		ifugal fans/pumps	.4: - 4: -					
		programmable charac						
		racteristic (see P1320) near characteristic and		/lode				
		stic with Economy Mod		node				
		out voltage to reduce po		nption				
	P1300 = 5,6: V/f for t			.6.011				
	Slip compensation	n disabled.						
		odifies the output volta	age only.					
	Imax controller deligned	oes not influence the o	utput freque	ncy.				
	P1300 = 7: V/f with o	uadratic characteristic	and Econon	ny Mode				
	Quadratic character	teristic with Economy I	Mode					
	 Modifies the outp 	ut voltage to reduce po	ower consun	nption				
	P1300 = 19: V/f cont	rol with independent vo	oltage setpoi	nt				

Parameter	Function		Range	Factory default	Can be changed	Scaling	g	Da	ata	se	t	Da typ		Acc. Level
	The follo	wing table p	resents an overvi	•		that car	ı be	m	od	ifie	d ir			
		ependencies												
	Par No.	Parameter na	ame			Level	V/f							
								300		۱ ۵	_ 1 .	ماد		
	P1300[3]	Control mode				2	X					6 19 × ×		
	P1310[3]	Continuous be				2	х	х	_		_	χχ		
	P1311[3]	Acceleration b				2	Х	_	_	_	_	x x		
	P1312[3] P1316[3]	Starting boos Boost end free				3	X	$\overline{}$		_	_	x x x x		
	P1320[3]	_	e V/f freq. coord. 1			3	-	-	_	х	_ -	- -		
	P1321[3]		e V/f volt. coord. 1			3	_	-	_	Х	4			
	P1322[3] P1323[3]	$\overline{}$	e V/f freq. coord. 2 e V/f volt. coord. 2			3	-	-	-	X	+	+		
	P1323[3]	_	e V/f freq. coord. 3			3	-	$\overline{}$	_	X	+	+		
	P1325[3]		e V/f volt. coord. 3			3	_	_	_	x	1			
	P1330[3]	CI: Voltage se	tpoint			3	_	-	-	-		- x		
	P1333[3]	Start frequence	·			3	_	х	-	_	- 3	x –		
	P1335[3] P1336[3]	Slip compens CO: Slip limit	ation			2	Х	Х	$\overline{}$	Х	4	44		
	P1338[3]	<u> </u>	amping gain V/f			3	X	$\overline{}$	\rightarrow	X X	+	++		
	P1340[3]		ntroller prop. gain			3	x	x	^``	_	x z	x x		
	P1341[3]	lmax controlle	er integral time			3	Х	_	_	-	_	ΧХ		
	P1345[3]	Imax controlle				3	Х	х	_	_	_	ΧХ		
	P1346[3] P1350[3]	Imax voltage Voltage soft s	ctrl. integral time tart			3	X	$\overline{}$	X X	$\overline{}$	X 2	x x x x		
P1310[02]	Continuo	ous boost	0.0 - 250.0	50.0	U, T	PERC NT	E	DI	os			Flo	at	2
	Defines I	poost level in	[%] relative to P	0305 (rated moto	r current) app	plicable	to t	oth	ı lir	nea	ır a	nd q	uad	ratic V/f
			ncies the output vo		eep the flux le	evel con	sta	nt.	Но	we	ver	, the	out	put
		-	asynchronous m	-										
	_	the load	,											
	• overd	come losses	in the system.											
		rter output v	oltage can be incr etization.	eased via P1310) for the comp	oensatio	n o	f lo	SS	es,	ho	ld loa	ads	at 0 Hz
	The mag	nitude of the	boost in Volt at a	a frequency of ze	ro is defined	as follov	vs:							
	V_ConBo	oost,100 = P	0305 * Rsadj * (P	1310/100)										
	Where:													
	Rsadj =	stator resista	nce adjusted for t	temperature										
	Rsadj =	(r0395/100)	* (P0304/(sqrt(3) *	* P0305)) * P030	5 * sqrt(3)									
Note:			levels increases r			andstill).								
	Setting in	n P0640 (mo	tor overload facto	or [%]) limits the b	oost:									
	_	•	5 * Rsadj) <= P13	/										
	The boos	st values are	combined when on boost P1311 ar	continuous boost										
		ers as follow				ото. р								
	P1310 >	P1311 > P1	312											
			ted by following e	•										
	sum(V_E	8oost) <= 3 *	R_S * I_Mot = 3 *	* P0305 * Rsadj										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level					
P1311[02]	Acceleration boost [%]	0.0 - 250.0	0.0	U, T	PERCE NT	DDS	Float	2					
	Applies boost in [%] back out once the se	relative to P0305 (rate tpoint is reached.	d motor curr	ent) following	a positive	setpoint cha	inge and	d drops					
	P1311 will only prodution and deceleration	ice boost during rampi	ing, and is th	erefore usef	ul for additi	onal torque	during a	ccelera-					
	As opposed to P1312, which is only active on the first acceleration issued after the ON command, P1311 is always effect during an acceleration and deceleration when issued.												
	The magnitude of the boost in volt at a frequency of zero is defined as follows: V_AccBoost,100 = P0305 * Rsadj * (P1311/100) Where:												
	=	ince adjusted for temp * (P0304/(sqrt(3) * P03		5 * sart(3)									
Note:	See P1310			,									
P1312[02]	Starting boost [%]	0.0 - 250.0	0.0	U, T	PERCE NT	DDS	Float	2					
	linear or quadratic) a	Applies a constant linear offset (in [%] relative to P0305 (rated motor current)) to active V/f curve (either linear or quadratic) after an ON command and is active until: 1. ramp output reaches setpoint for the first time respectively											
	2. setpoint is reduced to less than present ramp output This is useful for starting loads with high inertia. Setting the starting boost (P1312) too high will cause the inverter to limit the current, which will in turn restrict the output frequency to below the setpoint frequency.												
	The magnitude of the boost in volt at a frequency of zero is defined as follows:												
	V_StartBoost,100 = P0305 * Rsadj * (P1312/100) Where:												
	Rsadj = stator resistance adjusted for temperature Rsadj = (r0395/100) * (P0304/(sqrt(3) * P0305)) * P0305 * sqrt(3)												
Note:	See P1310	(F0304/(Sqrt(3) F03	000)) F030	o sqrt(o)									
r1315	CO: Total boost voltage [V]	-	-	-	-	-	Float	4					
	Displays total value of	of voltage boost.	II.	1	I	1	<u>l</u>	l					
P1316[02]	Boost end frequen- cy [%]	0.0 - 100.0	20.0	U, T	PERCE NT	DDS	Float	3					
		h programmed boost r				e is expresse	ed in [%]	relative					
	V_Boost,min = 2 * (3	+ (153/sqrt(P_Motor))											
Dependency:	This parameter is infl	uenced by automatic	calculations	defined by Po	0340.								
Note:	The expert user may lar frequency.	change this value to a	alter the shap	oe of the curv	e, e.g. to in	ncrease torq	ue at a l	oarticu-					
	Default value is depe	nding on inverter type	and its ratin	g data.									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level					
P1320[02]	Programmable V/f freq. coord. 1 [Hz]	0.00 - 550.00	0.00	Т	-	DDS	Float	3					
		the first point of V/f coer pairs can be used to					e V/f ch	aracter-					
Dependency:		ect P1300 = 3 (V/f witl I in P1311 and P1312						and					
Note:	Linear interpolation w	vill be applied between	the individua	al data point	S.								
	V/f with programmable characteristic (P1300 = 3) has 3 programmable points and 2 non-programmable points. The 2 non-programmable points are:												
	Continuous boost	P1310 at 0 Hz											
	Rated motor volta	ge P0304 at rated mo	tor frequency	y P0310									
P1321[02]	Programmable V/f volt. coord. 1 [V]	0.0 - 3000.0	0.0	U, T	-	DDS	Float	3					
	See P1320												
P1322[02]	Programmable V/f freq. coord. 2 [Hz]	0.00 - 550.00	0.00	Т	-	DDS	Float	3					
	See P1320												
P1323[02]	Programmable V/f volt. coord. 2 [V]	0.0 - 3000.0	0.0	U, T	1	DDS	Float	3					
	See P1320												
P1324[02]	Programmable V/f freq. coord. 3 [Hz]	0.00 - 550.00	0.00	Т	-	DDS	Float	3					
	See P1320												
P1325[02]	Programmable V/f volt. coord. 3 [V]	0.0 - 3000.0	0.0	U, T	-	DDS	Float	3					
	See P1320												
P1330[02]	CI: Voltage setpoint	0 - 4294967295	0	T	-	CDS	U32	3					
	BICO parameter for s	electing source of volt	age setpoint	for indepen	dent V/f co	ntrol (P1300	= 19).						
P1333[02]	Start frequency for FCC [%]	0.0 - 100.0	10.0	U, T	PERCE NT	DDS	Float	3					
	Defines start frequen (P0310).	cy at which FCC (flux o	current contr	ol) is enable	d as [%] of	rated motor	frequer	ncy					
Notice:	If this value is too low	, the system may beco	ome unstable	e									

Parameter	Function	Range	Factory	Can be	Scaling	Data set	Data	Acc.
			default	changed			type	Level
P1334[02]	Slip compensation activation range [%]	1.0 - 20.0	6.0	U, T	PERCE NT	DDS	Float	3
	To set the frequency motor rated frequence	activation range for sl	ip compensa	tion. The pe	rcentage va	alue of P133	4 refers	to the
	•	will always stay 4 % a	bove P1334.					
	Range of slip compens	ation:	_					
	0/2		f _{out}					
	1 •		†		with slip	compensatior	1	
	P1335	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			-without s	lip compensat	tion	
		f _{out}			f _{set}			
	P1334 P133	34+4% 100% f _N	P133	34 P1334+4%	, f _N			
Dependency:	Slip compensation (F	21335) active.						
Note:	See P1335.							
	The starting frequence	y of the slip compens	ation is P133	34 * P0310.	T			T
P1335[02]	Slip compensation [%]	0.0 - 600.0	0.0	U, T	PERCE NT	DDS	Float	2
	Parameter dynamica of motor load.	lly adjusts inverter out	put frequenc	y so that mo	tor speed is	s kept consta	ant inde	pendent
	frequency. For a give	motor frequency will a en output frequency, the notors, can be compe- compensation.	ne motor freq	uency will dr	op as load	is increased	. This be	ehavior,
Dependency:	Gain adjustment ena	bles fine-tuning of the	actual motor	speed.				
	P1335 > 0, P1336 >	0, P1337 = 0 if P1300	= 5, 6.					
Notice:		the slip compensation	(scaled by F	P1335) is limi	ted by follo	wing equation	on:	
	f_Slip_comp,max = r0	0330 * (P1336/100)						
Note:	P1335 = 0 %:							
	Slip compensation di							
	P1335 = 50 % - 70 %		l lood)					
		n at cold motor (partiandard setting for warm	•					
	`	n at warm motor (full	,					
P1336[02]	Slip limit [%]	0 - 600	250	U, T	1_	DDS	U16	2
. 1000[02]		nit in [%] relative to r0		1	ich is adde	II		l .
Dependency:	Slip compensation (F			5.01 0.1p _/ , WI		to moquon	Joip	
r1337	CO: V/f slip fre-	-	-	_	PERCE	_	Float	3
	quency [%]				NT			
	Displays actual comp	ensated motor slip as	[%]. f_slip [H	lz] = r1337 ['	%] * P0310	/100	-	
Dependency:	Slip compensation (F	21335) active.						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P1338[02]	Resonance damp- ing gain V/f	0.00 - 10.00	0.00	U, T	-	DDS	Float	3				
		amping gain for V/f. Th nce damping circuit de					338. If c	li/dt				
Dependency:	This parameter is infl	uenced by automatic o	alculations o	defined by Po	0340.							
Note:	tion. In V/ f modes (se	t damps oscillations of ee P1300), the resonal requency (P0310). If the	nce damping	circuit is ac	tive in a rai	nge from app	rox. 6	% to				
P1340[02]	Imax controller proportional gain	0.000 - 0.499	0.030	U, T	-	DDS	Float	3				
	Proportional gain of the	he I_max controller.										
	The Imax controller re (r0067).	educes inverter curren	t if the outpu	t current exc	eeds the m	naximum mo	tor curre	ent				
		c V/f, FCC, and progra and P1341) and a vo					th a free	quency				
	The frequency controller seeks to reduce current by limiting the inverter output frequency (to a minimum of the two times nominal slip frequency).											
	If this action does not using the I_max volta	successfully remove t ge controller.	the overcurre	ent condition	, the invert	er output volt	tage is i	reduced				
	When the overcurren ramp-up time set in F	t condition has been re 21120.	emoved succ	essfully, fred	quency limi	ting is remov	ed usir	g the				
	In linear V/f for textile reduce current (see F	s, FCC for textiles, or 0 21345 and P1346).	external V/f r	modes only t	he I_max v	oltage contro	oller is u	ised to				
Note:		can be disabled by set quency and voltage co		uency contro	oller integra	ıl time P1341	to zero	o. This				
		led, the I_max controll ated, and the inverter										
P1341[02]	Imax controller integral time [s]	0.000 - 50.000	0.300	U, T	-	DDS	Float	3				
	Integral time constant	t of the I_max controlle	er.									
	• P1341 = 0: I_max	controller disabled										
	• P1340 = 0 and P1	1341 > 0: frequency co	ntroller enha	nced integra	al							
	• P1340 > 0 and P1	1341 > 0: frequency co	ntroller norm	nal PI control								
Dependency:	This parameter is infl	uenced by automatic c	alculations o	defined by Po	0340.							
Note:	See P1340 for further	r information. The Fact	tory setting d	epends on i	nverter pov	ver.						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r1343	CO: Imax controller frequency output [Hz]	-	-	-	-	-	Float	3				
	Displays effective frequen	cy limitation.										
Dependency:	If I_max controller not in o	peration, parameter	normally sho	ws maxim	um frequer	ncy P1082	2.					
r1344	CO: Imax controller voltage output [V]	-	-	-	-	-	Float	3				
	Displays amount by which	the I_max controller	r is reducing	the inverte	r output vo	ltage.						
P1345[02]	Imax voltage controller proportional gain	0.000 - 5.499	0.250	U, T	-	DDS	Float	3				
	If the output current (r0068) exceeds the maximum current (r0067), the inverter is dynamically controlled by reducing the output voltage. This parameter sets the proportional gain of this controller.											
Dependency:	This parameter is influenced by automatic calculations defined by P0340.											
Note:	See P1340 for further info	rmation. The Factory	y setting dep	ends on inv	erter powe	er.						
P1346[02]	Imax voltage controller integral time [s]	0.000 - 50.000	0.300	U, T	-	DDS	Float	3				
	Integral time constant of the I_max voltage controller.											
	P1341 = 0: I_max controller disabled											
	• P1345 = 0 and P1346	> 0: I_max voltage of	ontroller enh	anced inte	gral							
	 P1345 > 0 and P1346 	> 0: I_max voltage o	ontroller nor	mal PI cont	trol							
Dependency:	This parameter is influenced by automatic calculations defined by P0340.											
Note:	See P1340 for further information. The Factory setting depends on inverter power.											
r1348	Economy mode factor [%]	-	-	-	PERCE NT	-	Float	2				
	Displays the calculated economy mode factor (range 80%-120%) applied to the demanded output volts. Economy mode is used to find the most efficient operating point for a given load. It does this by a continuous method of hill climbing optimization. Hill climbing optimization works by slightly changing the output volts either up or down and monitoring the change in input power. If the input power has decreased, the											
	algorithm changes the output volts in the same direction. If the input power has increased then the algorithm adjusts the output volts in the other direction. Using this algorithm, the software should be able to find the minimum point on the graph between input power and output volts.											
Notice:	If this value is too low, the	system may becom	e unstable.									
P1350[02]	Voltage soft start	0 - 1	0	U, T	-	DDS	U16	3				
	Sets whether voltage is built up smoothly during magnetization time (ON) or whether it simply jumps to boost voltage (OFF).											
	0	OFF										
	1	ON										
Note:	The settings for this parar	neter bring benefits a	and drawbac	ks:								
	• P1350 = 0: OFF (jump	to boost voltage)										
	Benefit: flux is built up	quickly										
	Drawback: motor may	move										
	 P1350 = 1: ON (smooth 											
	Benefit: motor less like											
	Drawback: flux build-up takes longer											

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P1780[02]	Control word adaption	d of Rs/Rr-	0 - 1	1	U, T	-	DDS	U16	3			
		•	on of stator and rotor speed errors in spe			•	•		regula-			
	Bit	Signal name)			1 signal		0 signa	ıl			
	00	Enable them	nal Rs/Rr-adapt.			Yes		No				
P1800[02]	Pulse freque	ency [kHz]	2 - 16	4	U, T	-	DDS	U16	2			
	Sets pulse f	requency of p	ower switches in inv	erter. The fre	quency car	n be chang	ed in ster	os of 2 kl	Ηz.			
Dependency:	The minimu	m/maximum/c	efault values of the	pulse frequei	ncy are det	ermined by	the used	d power r	nodule.			
			e minimum pulse frequency depends on the parameterization of P1082 (maximum from 10310 (rated motor frequency).									
Note:	_											
	ing characteristic depends on the type and power of the inverter. If silent operation is not absolutely necessary, lower pulse frequencies may be selected to reduce i losses and radio-frequency emissions. Under certain circumstances, the inverter may reduce the pulse frequency to provide protection ag											
			ces, the inverter may 290 and P0291 bit 00		oulse frequ	ency to pro	vide prot		gainst			
r1801[01]	CO: Pulse fi [kHz]	requency	-	-	-	-	-	U16	3			
	Displays info	ormation abou	t pulse frequency of	power switch	hes in inver	ter.						
	r1801[0] displays the actual inverter pulse frequency. r1801[1] displays the minimum inverter pulse frequency which can be reached when the functions "motor											
			mum inverter pulse to overload reaction" a									
Index:	[0]		Actual pulse freque	ency								
	[1]		Minimum pulse free	quency								
Notice:	Under certain P1800 (puls		inverter overtempera	ature, see P0	290), this c	an differ fr	om the va	امم مما				
P1802	1	e irequericy).						alues sei	ected in			
	Modulator m		1 - 3	3	U, T	-	_	U16	ected in			
			1	Γ	U, T	-	-		1			
		node	1	Γ	U, T	-	-		1			
	Selects inve	node	mode.	3	U, T	-	-		1			
	Selects inve	node	mode. Asymmetric SVM	3 ulation	U, T	-	-		1			
Notice:	Selects inve	node erter modulato	mode. Asymmetric SVM Space vector modu	allation lled mode (M) produces	s lower swit	•		U16	3			
Notice:	Selects inve	etric space vector (SVM), but	Asymmetric SVM Space vector modu SVM/ASVM contro	allation lled mode (M) produces r rotation at v	s lower swit	eeds.	es than sp	U16	3 tor			
Notice:	Selects inverted 1 2 3 • Asymmetric modulati • Space vioutput voi	etric space vector (SVM), but ector modulate oltages.	Asymmetric SVM Space vector modulation (ASV) may cause irregula	allation Illed mode (M) produces r rotation at v	s lower swit very low spo nay produc	eeds. e current w	es than sp	U16	tor			
Notice:	Selects inversely 1 2 3 3 • Asymmetric modulation • Space violet	etric space vector (SVM), but ector modulate oltages.	Asymmetric SVM Space vector modulation (ASV) may cause irregulation (SVM) with over-	allation Illed mode (M) produces r rotation at v	s lower swit very low spo nay produc	eeds. e current w	es than sp	U16	tor			
	Selects inverse 1 2 3 • Asymmetric modulati • Space voo to motor Maximum m [%]	etric space vector (SVM), but ector modulate oltages.	Asymmetric SVM Space vector modulation (ASV) may cause irregulation (SVM) with over- on (SVM) without over-	allation Illed mode (M) produces r rotation at v modulation r	s lower swit very low spo nay produc	eeds. e current w	es than sp vaveform m output	U16 Dace vectorior distortior voltage a	tor n at high			

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P1810	Control wor	rd Vdc control	0 - 3	3	U, T	-	-	U16	3		
	Configures	Vdc filtering ar	nd compensation.								
	Bit	Signal name	•			1 signal		0 signa	al		
	00	Enable Vdc	average filter			Yes		No			
	01	Enable Vdc	compensation			Yes		No			
Note:	P1810 defa	ult for the sing	le phase variants is	2.		,					
P1820[02]	Reverse ou sequence		0 - 1	0	Т	-	DDS	U16	2		
	Changes se	equence of pha	ses without changing setpoint polarity.								
	0		Forward								
	1		Reverse the Motor								
Note:	See P1000		•								
P1825	On-state volt	tage of IGBT [V]	0.0 - 20.0	0.9	U, T	-	_	Float	4		
	Corrects or	n-state voltage	of the IGBTs.	1	<u> </u>						
P1828		lead time [µs]	0.00 - 3.98	0.01	U, T	-	_	Float	4		
	Sets compe	ensation time o	f gating unit interlocl	1	<u> </u>						
P1900		or data identi-	0 - 2	0	C, T	-	-	U16	2		
	Performs m	notor data ident	ification.	•	•						
	0		Disabled								
	2		Identification of all	parameters i	n standstill						
Dependency:	No measur	ement if motor		•							
	P1900 = 2:	Calculated val	ue for stator resistar	nce (see P03	50) is over	written.					
Notice:	When the id		finished P1900 is se	t to 0. When	choosing t	he setting t	or measu	urement,	observe		
	shown in th		ted as P0350 param rameters below. Ens ation.								
Note:	Before sele	cting motor da	ta identification, "Qu	ick commissi	ioning" has	to be perfe	ormed in	advance			
	estimation.	Better results	he applications diffe of the motor identific identification by mea	ation can be	achieved b						
		led (P1900 > 0 tor parameters), A541 generates a	warning that	the next C	N commar	nd will init	iate mea	asure-		
			a USS as well as via . These calculations					nat it tak	es to		
P1909[02]	Control word		0 - 65519	23552	U, T	-	DDS	U16	4		
	Control wor	rd of motor data	a identification.								
	Bit	Signal name)			1 signal		0 signal			
	00	Estimation of	f Xs			Yes		No			
	01	Motor ID at 2	2 kHz			Yes No					
	02	Estimation of	f Tr			Yes		No			
	03	Estimation of	f Leiama			Yes		No			

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
	05	Det. Tr mea	s. with 2 freq.	10.00.0	o.i.a.i.goa	Yes	1001	No	1 = 5 + 5 .	
	06		nt of on voltage			Yes		No		
	07		etection from Rs mea	surement		Yes		No		
	08		w deadtime comp ac			Yes		No		
	09		e detection with 2 free			Yes		No		
	10		th LsBlock method	•		Yes		No		
	11		aption of magnetizing current Yes							
	12		ion of main reactanc			Yes		No		
	13	-	n off saturation curve			Yes		No		
	14		ation curve optim. all			Yes		No		
	15		ation curve optim. big			Yes	No			
P1910	Select motor		0 - 23	0	Т	-	_	U16	4	
1 1310	fication	uata iuciiti-	0 - 23		'			010	-	
	Performs a n	notor data ide	entification with exten	ded figures.			II.	1		
	Performs sta	itor resistance	tance measuring.							
	0		Disabled							
	1		Identification of all	oarameters v	vith parame	eter change	je			
	2		Identification of all	oarameters v	vithout para	ameter cha	inge			
	3		Identification of sat	uration curve	with parar	neter chan	ige			
	4		Identification of sat	uration curve	without pa	rameter cl	hange			
	5		Identification of Xsi	gDyn withou	t paramete	r change				
	6		Identification of Tde	ead without p	arameter c	hange				
	7		Identification of Rs							
	8		Identification of Xs							
	9		Identification of Tr v	-						
	10		Identification of Xsi	gma without	parameter	change				
	20		Set voltage vector							
	21		Set voltage vector			!				
	23		Set voltage vector i							
Notice:	Ensure that t changed whi finished P19	the motor hold le the motor i	Set voltage vector to ding brake is not action dentification with P19 When choosing the	ve when per 900 is active	forming the $(P1900 = 2)$	2 or 3). Wh	en the id	entificati		
	means th	at the value i	s actually adopted as read-only parameter		ameter sett	ing and ap	plied to th	ne contro	ol as well	
	• "without p	parameter ch	ange"							
		nat the value i entified stator	s only displayed, i.e. resistance).	shown for cl	hecking pu	rposes in tl	he read-c	nly para	meter	
	The value is	not applied to	the control.							
Dependency:	No measure	ment if motor	data incorrect.							
	P1910 = 1: C	Calculated val	ue for stator resistan	ce (see P03	50) is oven	written.				
Note:	See P1900									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
r1912[0]	Identified stator resistance $[\Omega]$	-	-	-	-	-	Float	4
	Displays measured stator	resistance value (lin	e-to-line). Th	is value als	so includes	the cable	e resista	nces.
Index:	[0]	U_phase						
Notice:	If the value identified (Rs message 41 (motor data i in this case).							
Note:	This value is measured us	sing P1900 = 2.						
r1920[0]	Identified dynamic leak- age inductance	-	-	-	-	-	Float	4
	Displays identified total dy	namic leakage induc	ctance.					
Index:	[0]	U_phase						
r1925[0]	Identified on-state voltage [V]	-	-	-	-	-	Float	4
	Displays identified on-stat	e voltage of IGBT.						
Index:	[0]	U_phase						
Notice:	If the identified on-state veridentification failure) is iss	•	_			_	`	data
r1926	Identified gating unit dead time [µs]	-	-	-	-	-	Float	2
	Displays identified dead ti	me of gating unit inte	erlock.					
P2000[02]	Reference frequency [Hz]	1.00 - 550.00	50.00	Т	-	DDS	Float	2
	P2000 represents the reference centage or a hexadecimal Where: • hexadecimal 4000 H = percentage 100 % ====	value. => P2000 (e.g.: USS	S-PZD)	alues which	are displa	yed/trans	ferred a	s a per-
Example:	If a BICO connection is m the parameters (standard automatic conversion to the standard standard conversion to the standard stand	zed (Hex) or physica						
	r0021 x[Hz]	[0] USS-PZD ([1] RS485 [3] y[Hex]	on y[Hex]=	- r0021[Hz] P2000[Hz]	4000[Hex]			
	USS-PZD on RS485 [0] [1] [2] [3] x[Hex]	P1070 y[Hz]		r2018[1] 4000[Hex]				
Dependency:	When Quick Commission	ng is carried out, P2	000 is chang	ed as follo	ws: P2000	= P1082.		


Parameter	Function	Range	Factory	Can be	Scaling	Data	Data	Acc.			
rarameter	Function	Range	default	changed	Scaling	set	type	Level			
Caution:	P2000 represents the refe A maximum frequency se Unlike P1082 (Maximum ence frequency. By modification of P2000 PZD f (Hex)	2000 represents the reference frequency of the above mentioned interfaces. maximum frequency setpoint of 2*P2000 can be applied via the corresponding interface. Inlike P1082 (Maximum Frequency) this limits the inverter frequency internally independent of the reference frequency. by modification of P2000 it will also adapt the parameter to the new settings. P2D f (P4) Setpoint channel f_act f_act,limit Motor control									
	$f[Hz] = \frac{f(Hex)}{4000(Hex)} \cdot P2000 = 0$	f(%) 100 % · P2000	f_act	,limit = min(P	1082, f_act)						
Notice:	manner. This also applies to fixed A value of 100 % corresp values.	s also applies to fixed settings entered as a percentage. ralue of 100 % corresponds to a process data value of 4000H, or 4000 0000H in the case of double ues. rhis respect, the following parameters are available: respect, the following parameters are available:									
Note:	Changes to P2000 result	in a new calculation	of P2004.								
P2001[02]	Reference voltage [V]	10 - 2000	1000	Т	_	DDS	U16	3			
	Full-scale output voltage	1	er serial link (correspond	ls to 4000h	H).					
Example:	r0026 P077			026[V] 001[V]		,					
Note:	Changes to P2001 result	in a new calculation	of P2004.								
P2002[02]	Reference current [A]	0.10 - 10000.0	0.10	Т	-	DDS	Float	3			
	Full-scale output current i	used over serial link ((corresponds	to 4000H)			-				
Example:	physical (i.e. A) values) m	a BICO connection is made between two parameters, the 'unit' of the parameters (standardized (Hex) or hysical (i.e. A) values) may differ. In this case an automatic conversion to the target value is made. $ \frac{P2051}{[0]} $ Fieldbus $y[Hex] = \frac{r0027[A]}{P2002[A]} \cdot 4000[Hex]$									
Dependency:	This parameter is influence	ced by automatic cald	culations defi	ined by P03	340.						
Note:	Changes to P2002 result			-							
	·										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P2003[02]	Reference torque [Nm]	0.10 - 99999.0	0.75	Т	-	DDS	Float	3			
	Full-scale reference torqu	e used over the seri	al link (corre	sponds to 4	000H).						
Example:		may differ. In this ca		natic convei	sion to the						
Dependency:	This parameter is influenced by automatic calculations defined by P0340.										
Note:	Changes to P2003 result in a new calculation of P2004.										
P2004[02]	Reference power	0.01 - 2000.0	0.75	Т	-	DDS	Float	3			
	Full-scale reference power	r used over the seria	al link (corres	sponds to 4	000H).						
	x[kW] or x[hp] depending on P0100	Fieldbus [2] [3] y[Hex]	y[Hex] = F	2004 · 4000	HexJ						
P2010[01]	USS/MODBUS baudrate	6 - 12	6	U, T	T_	1_	U16	2			
	Sets baud rate for USS/M			1 - , .	ı	I.	1	1-			
	6	9600 bps									
	7	19200 bps									
	8	38400 bps									
	9	57600 bps									
	10	76800 bps									
	11	93750 bps									
	12	115200 bps									
Index:	[0]	USS/MODBUS on	RS485								
	[1]	USS on RS232 (reserved)									
Notice:	Before fitting SINAMICS V20 Smart Access to V20, if RS485 communication is present, then you must set P2010[1] = 12 via the BOP.										
Note:	This parameter, index 0, v	vill alter the baudrate	e on RS485	regardless	of the prote	ocol sele	cted in Pa	2023.			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2011[01]	USS address	0 - 31	0	U, T	-	-	U16	2
	Sets unique address for in	verter.						
Index:	[0]	USS on RS485						
	[1]	USS on RS232 (res	served)					
Note:	You can connect up to a fwith the USS serial bus pr		a the serial I	ink (i.e. 31	inverters i	n total) aı	nd contro	I them
P2012[01]	USS PZD length	0 - 8	2	U, T	-	-	U16	3
	Defines the number of 16- continually exchanged bet main setpoint, and to cont	ween the master an						
Index:	[0]	USS on RS485						
	[1]	USS on RS232 (res	served)					
Notice:	USS protocol consists of F tively. □	PZD and PKW which	can be char	nged by the	user via l	P2012 an	id P2013	respec-
	I I STX II I GE II ADR II		ess data ZD	scc				
	PKE IND STX Start of text LGE Length ADR Address PKW Parameter ID PZD Process data BCC Block check		Sub-inde	ex	PZD4			
	PZD transmits a control w The number of PZD-words either: a) control word and main s b) status word and actual When P2012 is greater or fault setting). STW HSW ZSW HIW PZD1 PZD2 PZ P2012 — P2012 — STW Control word	s in a USS-telegram setpoint or value. equal to 4 the additi	are determir	ed by P20	12, where			
	ZSW Status word PZD Process data		lain actual val	ue				

Parameter	Function		Range	Facto defau	•	Can be changed	Scaling	Data set	Data type	Acc. Level	
P2013[01]	USS PKW I	ength	0 - 127	127		U, T	-	-	U16	3	
	ing on the p	articular requir	bit words in PKW pa ement, 3-word, 4-wo gram is used to read	ord or v	ariabl	e word len	gths can b	e parame			
	0		No words								
	3		3 words								
	4		4 words								
	127 Variable										
Example:						Data typ	ре				
			U16 (16 Bit)			U32 (32	Bit)	FI	oat (32 E	3it)	
	P2013 = 3		X		Para	meter acce	ess fault	Parame	ter acces	ss fault	
	P2013 = 4		X			Χ		X			
	P2013 = 12	7	X X			Х					
Index:	[0]		USS on RS485								
	[1]		USS on RS232 (res	served)							
Notice:	tively. P201 mines the le	3 determines tength of the Pkly adjusts the IPKE PKE PARAIND Sub-i	PZD and PKW which he number of PKW-value of	words ii words a	n a US and 4	SS-telegrar = four wor	m. Setting	P2013 to	3 or 4 d	eter-	

Parameter	Function	Range	Facto defau	•	Can be changed	Scaling	Data set	Data type	Acc. Level
	If a fixed PKW length is se	elected only one para	meter	value	can be trai	nsferred.			
	In the case of indexed par all indices transferred in a		e the v	ariabl	e PKW len	gth if you v	vish to ha	ve the va	alues of
	In selecting the fixed PKW this PKW length.	length, it is importa	nt to er	sure t	the value ir	question (can be tra	insferred	l using
	P2013 = 3, fixes PKW leng	gth, but does not allo	w acce	ess to	many para	meter valu	es.		
	A parameter fault is gener inverter state will not be at		-range	value	is used, th	e value wil	I not be a	ccepted	but the
	Useful for applications who	ere parameters are r	not cha	nged,	but MM3s	are also us	sed.		
	Broadcast mode is not pos	ssible with this settin	g.						
	P2013 = 4, fixes PKW leng	gth.							
	Allows access to all param	neters, but indexed p	arame	ters ca	an only be	read one ir	ndex at a	time.	
	Word order for single word	d values are different	to sett	ing 3	or 127, see	e example l	below.		
	P2013 = 127, most useful	setting.							
	PKW reply length varies d	epending on the am	ount of	inforn	nation need	ded.			
	Can read fault information	and all indices of a	parame	eter wi	ith a single	telegram v	vith this s	etting.	
	Example:								
	Set P0700 to value 5 (P07	700 = 2BC (hex))		1					
		P2013 = 3			P2013 =	: 4	P2	2013 = 1	27
	Master → SINAMICS	22BC 0000 0006		22B0	0000 000	0 0006	22BC 00	00 0006	0000
	SINAMICS → Master	12BC 0000 0006		12B0	0000 000	0 0006	12BC 00	00 0006	i
P2014[01]	USS/MODBUS telegram off time [ms]	0 - 65535	2000		Т	-	-	U16	3
	Index 0 defines a time T_c USS/MODBUS channel R		will be	gene	rated (F72)	if no teleg	ram is red	ceived vi	a the
	Index 1 defines a time T_c USS channel RS232 (rese		will be	gene	rated (F71)	if no teleg	ram is red	ceived vi	a the
Index:	[0]	USS/MODBUS on	RS485						
	[1]	USS on RS232 (res	served)						
Notice:	If time set to 0, no fault is	generated (i.e. watch	ndog di	sable	d).				
Note:	The telegram off time will	function on RS485 re	egardle	ss of	the protoco	ol set in P2	023.		

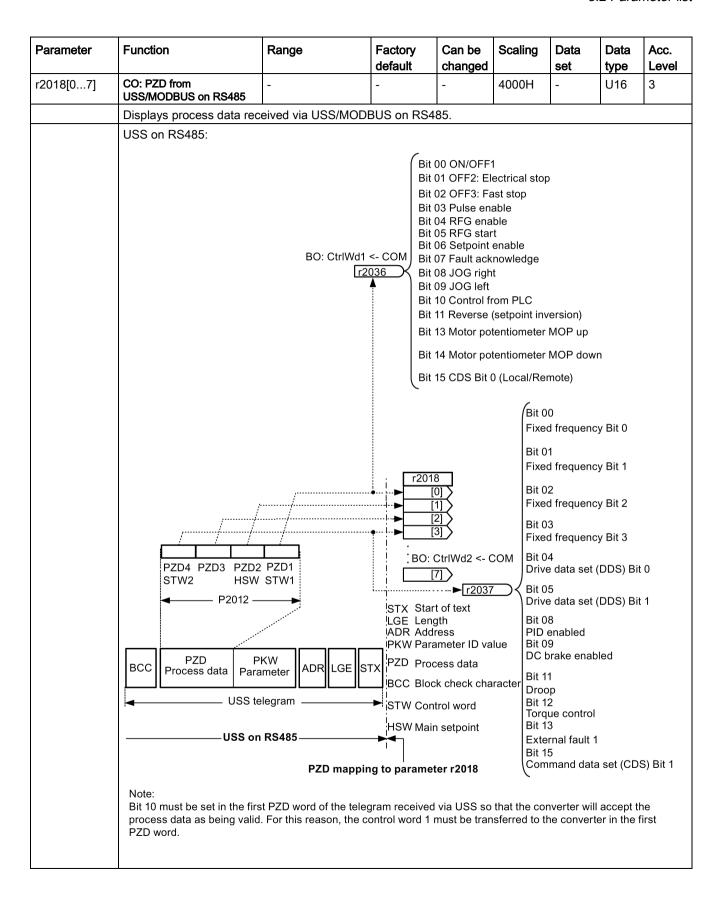

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
	MODBUS on RS485:		aoidait	onangou	I	1001	1.950	1 2010.
	HSW (sp 40003 oi	eed setpoint) 40101			ulses			
	STW0 STW3 40100 STW	DBUS telegram DBUS on RS485 Mappir abled) mp-function generator, to-power-up) ssible) e cancellation and powersible) OFF3 ramp p1135, there	ng to paramet hen pulse r-on inhibit)	Bit 09 1=Reserved Bit 10 1=Control via PLC Bit 11 1=Dir of rot reversal				··r,
Index:	[0]	Received word 0						
	[1]	Received word 1						
	[7]	Received word 7						
Note:	 Restrictions: If the above serial int transferred in the 1st If the setpoint source 2nd PZD-word. 	PZD-word.						
	When P2012 is great ferred in the 4th PZD	•					-	

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2019[07]	CI: PZD to USS/MODBUS on RS485	-	52[0]	Т	4000H	-	U32/I 16	3
	Displays process data tran	nsmitted via USS/MC	DBUS on F	RS485.				
	USS on RS485:							
	Bit 02 Act. freq. rd Bit 03 Act. curren Bit 04 Act. freq. rd Bit 05 Act. freq. rd Bit 06 Act. freq. rd Bit 07 Act. Vdc r0 Bit 08 Ramping fi Bit 10 PID output Bit 11 PID output Bit 14 Download d Bit 15 Download d CO/BO CO/BO CO/BO CO/BO: Act.	0021 > P2167 (f_off) 0021 > P1080 (f_min) t r0027 >= P2170 0021 >= P2155 (f_1) 0021 >= P2155 (f_1) 0021 >= setpoint 026 < P2172 026 > P2172 015hed 017294 == P2292 (PID_ore) 0294 == P2291 (PID_ore) 03052	max)	Bit 01 Dr Bit 02 Dr Bit 03 Dr Bit 04 Ol Bit 05 Ol Bit 06 Ol Bit 07 Dr Bit 08 De Bit 10 Mi Bit 11 Wi Bit 12 Mo Bit 14 Mo Bit 15 Inv	HIW ZS	am ADR	ached limit tive	X •
	Note:		ı					
	P2019[0] = 52, P201	9[1] = 21, P2019[3] = 5	3 are default	settings.				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
	MODBUS on RS485:			<u>, </u>	•	•	, , ,	•				
			HIV	V (actual spe	ed)							
			400	044 or 40111								
			معمد									
	CO/BO: Act StatWd1 P2019											
	[1]											
		ZSW0 400 ZSV	39 40035	40054 400 ZSW3 ZSV			40034 ZSW14					
			40110 ZSW									
	→ MODBUS telegram →											
	Mapping from parameter P2019 ─────── MODBUS on RS485 ───											
	ZSW (status word):	·	Bi	Bit 09 1=Control requested								
	Bit 00 1=Ready to power-u Bit 01 1=Ready to operate			Bit 10 1=f or n comparison value reached/exceeded								
	Bit 02 1=Operation enable	d (drive follows n_set)	Ві	t 11 1=1, M,	or P limit no	t reached	I					
	Bit 03 1=Fault present Bit 04 1=No coast down ad	ctive (OFF2 inactive)		t 12 Reserve t 13 1=No m		nperature	alarm					
	Bit 05 1=No fast stop activ	e (OFF3 inactive)		t 14								
	Bit 06 1=Power-on inhibit a	active	1=	Motor rotate	es forwards	(n_act >=	0)					
	Bit 07 1=Alarm present			=Motor rotate	es backward	ds (n_act <	< 0)					
	Bit 08 1=Speed setpoint - a tolerance t_off	Bi	Bit 15 1=No alarm, thermal overload, power unit									
Index:	[0]	Transmitted word 0										
	[1]	Transmitted word 1										
	[7]	Transmitted word 7										
Note:	If r0052 not indexed, disp	olay does not show ar	n index (".0")									

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level					
P2021	Modbus address	1 - 247	1	Т	-	_	U16	2					
	Sets unique address for ir	verter.	•	•		1							
P2022	Modbus reply timeout [ms]	0 - 10000	1000	U, T	-	-	U16	3					
		The time in which the inverter is allowed to respond to the Modbus master. If the forming of a response needs more time than specified in this parameter, the processing is done, but no response is sent.											
P2023	RS485 protocol selection	0 - 3	1	Т	-	-	U16	1					
	Select the protocol which	runs on the RS485 li	nk.										
	0	None											
	1	USS											
	2	Modbus											
	3	Script terminal											
Notice:	display has gone blank (m	owercycle the inverter. During the powercycle, wait until LED has gone off or the (may take a few seconds) before re-applying power. If P2023 has been changed e change has been saved to EEPROM via P0971.											
r2024[01]	USS/MODBUS error-free telegrams	-	-	-	-	-	U16	3					
	Displays number of error-	free USS/MODBUS t	elegrams red	ceived.									
Index:	[0]	USS/MODBUS on	RS485										
	[1]	USS on RS232 (res	USS on RS232 (reserved)										
Note:	The state of the telegram	information on RS48	nformation on RS485 is reported regardless of the protocol set in P2023.										
r2025[01]	USS/MODBUS rejected telegrams	-	-	-	-	-	U16	3					
	Displays number of USS/I	MODBUS telegrams	rejected.										
Index:	See r2024												
Note:	See r2024			•			•	_					
r2026[01]	USS/MODBUS character frame error	-	-	-	-	-	U16	3					
	Displays number of USS/I	MODBUS character f	rame errors.										
Index:	See r2024												
Note:	See r2024												
r2027[01]	USS/MODBUS overrun error	-	-	-	-	-	U16	3					
	Displays number of USS/I	MODBUS with overru	ın error.										
Index:	See r2024												
Note:	See r2024												
r2028[01]	USS/MODBUS parity error	-	-	_	-	-	U16	3					
	Displays number of USS/I	MODBUS telegrams	with parity e	rror.									
Index:	See r2024												
Note:	See r2024			<u> </u>				<u> </u>					

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r2029[01]	USS start not identified	-	-	-	_	-	U16	3			
	Displays number of USS t	elegrams with unide	ntified start.	•	•	•	•				
Index:	See r2024										
Note:	Not used on MODBUS.										
r2030[01]	USS/MODBUS BCC/CRC error	-	-	-	-	-	U16	3			
	Displays number of USS/MODBUS telegrams with BCC/CRC error.										
Index:	See r2024										
Note:	See r2024										
r2031[01]	USS/MODBUS length error	-	-	-	-	-	U16	3			
	Displays number of USS/I	MODBUS telegrams	with incorred	ct length.							
Index:	See r2024										
Note:	See r2024										
P2034	MODBUS parity on RS485	0 - 2	2	U, T	-	-	U16	2			
	Parity of MODBUS telegra	ams on RS485.									
	0	No parity									
	1	Odd parity									
	2	Even parity									
Note:	Also see P2010 for baudrate and P2035 for stop bit settings. You must set P2034 to 0 if P2035=2.										
P2035	MODBUS stop bits on RS485	1 - 2	1	U, T	-	-	U16	2			
	Number of stop bits in MC	Number of stop bits in MODBUS telegrams on RS485.									
	1	1 stop bit									
	2	2 stop bits									
Note:	Also see P2010 for baudr	ate and P2034 for pa	arity settings.	You must	set P2035	to 2 if P2	034=0.				
r2036.015	BO: CtrlWrd1 from USS/MODBUS on RS485	-	-	-	-	-	U16	3			
	Displays control word 1 fro r0054 for the bit field desc		n RS485 (i.e	e. word 1 wi	thin USS/I	MODBUS	= PZD1). See			
Dependency:	See P2012										
r2037.015	BO: CtrlWrd2 from USS on RS485 (USS)	-	-	-	-	-	U16	3			
	Displays control word 2 fro description.	om USS on RS485 (i	i.e. word 4 w	ithin USS =	PZD4). S	ee r0055	for the b	it field			
Dependency:	See P2012										
Note:	To enable the external factors P2012 = 4 P2106 = 1	ılt (r2037 bit 13) facil	ity via USS,	the followin	ig paramet	ers must	be set:				

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r2053[07]	I/O Extensi		-	0	-	-	-	U16	3			
	Displays ide	entification da	ta of the I/O Extensio	n Module.								
Index:	[0]		I/O Extension Module ID number									
	[1]		I/O Extension Mod	ule firmware	version nu	mber (maj	or)					
	[2]		I/O Extension Mod	ule firmware	version nu	mber (min	or)					
	[3]		I/O Extension Mod	ule firmware	version nu	mber (hot	fix)					
	[4]		I/O Extension Mod	ule firmware	version nu	mber (inte	rnal)					
	[5]		Not used									
	[6]		Not used									
	[7]		Company ID (Siem	ens = 42)								
r2067.012	CO/BO: Dig		-	-	-	-	U16	3				
	Displays sta	atus of digital	inputs.				•					
	Bit	Signal nam	e			1 signal	0 sign	al				
	00	Digital inpu	t 1			Yes		No				
	01	Digital inpu	t 2			Yes		No				
	02	Digital inpu	t 3			Yes		No				
	03	Digital inpu	t 4			Yes		No				
	04	Digital inpu	t 5			Yes		No				
	05	Digital inpu	t 6			Yes		No				
	11	Digital inpu	t Al1			Yes		No				
	12	Digital inpu	t Al2			Yes		No				
Note:	This is used	d for BICO co	nnection without softv	vare interver	ntion.	•		•				
	The digital	input 5 and 6	are provided by the o	ptional I/O E	xtension M	odule.						
P2100[02]	Alarm num	ber selection	0 - 65535	0	Т	-	-	U16	3			
	Selects up	to 3 faults or v	varnings for non-defa	ult reactions	·.	•	•	•	•			
Example:		example, an OFF3 is to be carried out instead of an OFF2 for a fault, the fault number haved in P2100 and the desired reaction selected in P2101 (in this case (OFF3) P2101 = 3).							o be			
Index:	[0]		Fault Number 1			-		•				
	[1]		Fault Number 2									
	[2]		Fault Number 3									
Note:	All fault cod		Fault Number 3 s have a default reaction to OFF2. odes caused by hardware trips (e.g. overcurrent) cannot be changed from the def						t reac-			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P2101[02]	Stop reaction value	0 - 4	0	Т	-	-	U16	3		
	Sets inverter stop reaction parameter specifies the sp							exed		
	0	No reaction, no dis	splay							
	1	OFF1 stop reactio	n							
	2	OFF2 stop reactio	n							
	3	OFF3 stop reactio	n							
	4	No reaction, warni	ng only							
Index:	[0]	Stop reaction valu	e 1							
	[1]	Stop reaction valu	e 2							
	[2]	Stop reaction valu	e 3							
Note:	Settings 1 - 3 are only available for fault codes. Setting 4 is only available for warnings. Index 0 (P2101) refers to fault/warning in index 0 (P2100).									
P2103[02]	BI: 1. Faults acknowl- 0 - 4294967295 722.2 T - CDS U32 3 edgement									
Setting:	Defines first source of fault acknowledgement.									
	722.0 Digital input 1 (requires P0701 to be set to 99, BICO)									
	722.1 Digital input 2 (requires P0702 to be set to 99, BICO)									
	722.2	Digital input 3 (req	uires P0703	to be set to	99, BICC))				
P2104[02]	BI: 2. Faults acknowl- edgement	0 - 4294967295	0	Т	-	CDS	U32	3		
	Selects second source of	fault acknowledgeme	ent.							
Setting:	See P2103									
P2106[02]	BI: External fault	0 - 4294967295	1	Т	-	CDS	U32	3		
	Selects source of external	faults.								
Setting:	See P2103									
r2110[03]	CO: Warning number	-	-	-	-	-	U16	2		
	Displays warning informat A maximum of 2 active waviewed.		d 1) and 2 h	istorical wa	rnings (ind	ices 2 and	3) may	be		
Index:	idex: [0] Recent Warnings, warning 1									
	[1]	Recent Warnings	, warning 2	2						
	[2]	Recent Warnings	-1, warning 3	3						
	[3]	Recent Warnings	-1, warning 4	4						
Notice:	Indices 0 and 1 are not sto	ored.								
Note:	The LED indicates the wa	rning status in this ca	ase. The key	pad will fla	sh while a	warning is	active.			
P2111	Total number of warnings	0 - 4	0	Т	-	-	U16	3		
	Displays number of warning	ng (up to 4) since las	t reset. Set t	to 0 to rese	t the warni	ng history		•		

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
P2113[02]	Disable inverter warnings	0 - 1	0	Т	-	-	U16	3	
	Switches off reporting of in running operation.	verter warnings. Ca	n be used in	conjunctio	n with P05	03 as an a	djunct t	o keep-	
	1	Inverter warnings	disabled						
	0	Inverter warnings	enabled						
Index:	[0]	Inverter data set 0	(DDS0)						
	[1]	Inverter data set 1	(DDS1)						
	[2]	Inverter data set 2 (DDS2)							
Note:	See also P0503								
r2114[01]	Run time counter	-	-	-	-	-	U16	3	
	Displays run time counter.								
	It is the total time the inverter has been powered up. When power is switched off, the value is saved, then restored on powerup. The run time counter will be calculate as followed: Multiply the value in r2114[0] by 65536 and then add it to the value in r2114[1]. The resultant answer be in seconds. This means that r2114[0] is not days. Total powerup time = 65536 * r2114[0] + r2114[seconds. If r2114[0] = 1 and r2114[1] = 20864 We get 1 * 65536 + 20864 = 86400 seconds which equals 1 day.							ver will	
Example:									
Е жаттрю.									
Index:	[0] System Time, Seconds, Upper Word								
	[1]	System Time, Sec							
P2115[02]	Real time clock								
	Displays real time.		1		1	L	ı	.1	
	All inverters require an on- logged. However, they hav driven RTC which requires	e no battery backed	Real Time (Clock (RTC	C). Inverters	s may supp			
	The time is stored in a word array parameter write" telet the timer itself using internal	grams. Once the las	st word is rec	eived in in	dex 2, the	software w			
	If power-cycle takes place,	then the real time n	nust be sent	again to th	e inverter.				
	Time is maintained in a wo fault report logs.	rd array parameter	and encoded	l as follows	s - the sam	e format wi	ll be us	ed in	
	Index	High E	Byte (MSB)			Low Byte	(LSB)		
	0	Secon	ds (0 - 59)			Minutes (C	- 59)		
	1	Hour	rs (0 - 23)			Days (1 -	· 31)		
	2	Mont	h (1 - 12)			Years (00	- 250)		
	The values are in binary fo	rm.							
Index:	[0] Real Time, Seconds + Minutes								
	[1]	Real Time, Hours	+ Days						
	[2]	Real Time, Month	+ Year						
P2120	Indication counter	0 - 65535	0	U, T	-	-	U16	4	
	Indicates total number of fa	Indicates total number of fault/warning events. This parameter is incremented whenever a fault/warning							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P2150[02]	Hysteresis frequency f_hys [Hz]	0.00 - 10.00	3.00	U, T	-	DDS	Float	3		
	Defines hysteresis level ap	plied for comparing	frequency a	nd speed to	threshold	l.				
Dependency:	See P1175.									
Note:	If P1175 is set, P2150 is al	so used to control the	ne Dual Ram	np function.						
P2151[02]	CI: Speed setpoint for messages	0 - 4294967295	1170[0]	U, T	-	DDS	U32	3		
	Selects the source of setpo quency deviation (see mor		al frequency	is compare	d with this	frequency	to dete	ct fre-		
P2155[02]	Threshold frequency f_1 [Hz]	0.00 - 550.00	30.00	U, T	-	DDS	Float	3		
	Sets a threshold for compastatus bits 4 and 5 in status		r frequency t	to threshold	l values f_	1. This thre	shold c	ontrols		
P2156[02]	Delay time of threshold freq f_1 [ms]	0 - 10000	10	U, T	-	DDS	U16	3		
	Sets delay time prior to three	eshold frequency f_	1 compariso	n (P2155).						
P2157[02]	Threshold frequency f_2 [Hz]	0.00 - 550.00	30.00	U, T	-	DDS	Float	2		
	Threshold_2 for comparing	speed or frequency	to threshold	ds.						
Dependency:	See P1175.									
Note:	If P1175 is set, P2157 is al	so used to control ti	ne Dual Ram	np function.						
P2158[02]	Delay time of threshold freq f_2 [ms]	0 - 10000	10	U, T	-	DDS	U16	2		
	When comparing speed or cleared.	frequency to thresh	old f_2 (P21	57) this is t	he time de	lay before	status k	oits are		
P2159[02]	Threshold frequency f_3 [Hz]	0.00 - 550.00	30.00	U, T	-	DDS	Float	2		
	Threshold_3 for comparing	speed or frequency	to threshold	ds.						
Dependency:	See P1175.									
Note:	If P1175 is set, P2159 is al	so used to control the	ne Dual Ram	np function.						
P2160[02]	Delay time of threshold freq f_3 [ms]	0 - 10000	10	U, T	-	DDS	U16	2		
	When comparing speed or set.	frequency to thresh	old f_3 (P21	59) this is t	he time de	lay before	status k	oits are		
P2162[02]	Hysteresis freq. for over- speed [Hz]	0.00 - 25.00	3.00	U, T	-	DDS	Float	3		
	Hysteresis speed (frequency maximum frequency.	cy) for overspeed de	etection. For	V/f control	modes the	hysteresis	acts b	elow the		
P2164[02]	Hysteresis frequency deviation [Hz]	0.00 - 10.00	3.00	U, T	-	DDS	Float	3		
	Hysteresis frequency for do quency controls bit 8 in sta	• •	eviation (fror	m setpoint)	or frequen	cy or speed	d. This	fre-		
P2166[02]	Delay time ramp up com- pleted [ms]	0 - 10000	10	U, T	-	DDS	U16	3		
	Delay time for signal that ir	ndicates completion	of ramp-up.	•	•	•	•	•		

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P2167[02]	Switch-off frequency f_off [Hz]	0.00 - 10.00	1.00	U, T	-	DDS	Float	3				
	Defines the threshold of the monitoring function f_act > P2167 (f_off). P2167 influences following functions:											
	If the actual frequency f (r0053) is reset.											
	If an OFF1 or OFF3 wa	s applied and bit 1 i	s reset the ir	nverter will	disable the	pulse (OF	F2).					
P2168[02]	Delay time T_off [ms]	0 - 10000	0	U, T	-	DDS	U16	3				
	Defines time for which the occurs.	nverter may operat	e below swit	ch-off frequ	iency (P21	67) before	switch	off				
Dependency:	Active if holding brake (P12	215) not parameteriz	zed.									
P2170[02]	Threshold current I_thresh [%]	0.00 - 400.0	100.0	U, T	-	DDS	Float	3				
	Defines threshold current re I_Thresh. This threshold co	,		,	used in co	omparisons	of I_ac	t and				
P2171[02]	Delay time current [ms]	0 - 10000	10	U, T	-	DDS	U16	3				
	Defines delay time prior to activation of current comparison.											
P2172[02]	Threshold DC-link voltage [V]	0 - 2000	800	U, T	-	DDS	U16	3				
	Defines DC link voltage to 3 (r0053).	be compared to act	ual voltage. ⁻	This voltage	e controls l	oits 7 and 8	3 in stat	us word				
P2173[02]	Delay time DC-link voltage [ms]	0 - 10000	10	U, T	-	DDS	U16	3				
	Defines delay time prior to	activation of thresh	old comparis	on.								
P2177[02]	Delay time for motor is blocked [ms]	0 - 10000	10	U, T	-	DDS	U16	3				
	Delay time for identifying th	at the motor is bloc	ked.									
P2179	Current limit for no load identified [%]	0.00 - 10.0	3.0	U, T	-	-	Float	3				
	Threshold current for A922	(no load applied to	inverter) rela	ative to P03	305 (rated	motor curre	ent).					
Notice:	If a motor setpoint cannot be load applied) is issued whe			P2179) is r	not exceed	ed, warnin	g A922	(no				
Note:	It may be that the motor is	not connected or a	phase could	be missing).							
P2180	Delay time for no-load detection [ms]	0 - 10000	2000	U, T	-	-	U16	3				
	Delay time for detecting a r	nissing output load.										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P2181[02]	Load monitoring mode	0 - 6	0	Т	-	DDS	U16	3				
	Sets load monitoring mode											
	This function allows monito also detect conditions whic values when this paramete	h cause an overload	d, such as a									
	P2182 = P1080 (Fmin) P2183 = P1082 (Fmax) * 0.8											
	, ,	.8										
	P2184 = P1082 (Fmax)	- t\ * 4 4										
	P2185 = r0333 (rated moto	r torque) * 1.1										
	P2186 = 0	" to """ \										
	P2187 = r0333 (rated moto P2188 = 0	r torque) 1.1										
	P2189 = r0333 (rated moto	r torque) * 1 1										
	P2190 = r0333 (rated moto	• •										
	This is achieved by compar	• •	iency/torque	curve with	a program	med envel	nne (se	۵				
	P2182 - P2190). If the curv											
	0	Load monitoring di	isabled									
	1	Warning: Low torq	ue/frequency	У								
	2	Warning: High toro	que/frequenc	У								
	3	Warning: High/low	torque/frequ	iency								
	4	Trip: Low torque/fr	equency									
	5	Trip: High torque/fi	requency									
	6	Trip: High/low torq	ue/frequency	y	1	T.		Ī				
P2182[02]	Load monitoring threshold frequency 1 [Hz]	0.00 - 550.00	5.00	U, T	-	DDS	Float	3				
	Sets the lower frequency the frequency torque envelope the other 6 define the low a	is defined by 9 para	ameters - 3 a	are frequen	cy parame	ters (P2182						
Dependency:	See P2181 for calculated d	efault value.										
Note:	Below the threshold in P21 In this case the values for r											
P2183[02]	Load monitoring threshold frequency 2 [Hz]	0.00 - 550.00	30.00	U, T	-	DDS	Float	3				
	Sets the frequency thresho P2182.	ld f_2 for defining th	ne envelope	in which the	e torque va	lues are va	alid. Se	e				
Dependency:	See P2181 for calculated d	efault value.										
P2184[02]	Load monitoring threshold frequency 3 [Hz]	0.00 - 550.00	50.00	U, T	-	DDS	Float	3				
	Sets the upper frequency the P2182.	nreshold f_3 for defi	ning the area	a where the	e load mon	itoring is ef	fective.	See				
Dependency:	See P2181 for calculated d	efault value.		<u> </u>								

Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
Upper torque threshold 1 [Nm]	0.0 - 99999.0	Value in r0333	U, T	-	DDS	Float	3
Upper limit threshold valu	e 1 for comparing a	ctual torque.					
This parameter is influence	ed by automatic ca	lculations def	ined by P03	340.			
See P2181 for calculated	default value.						
The factory setting depen	ds on rating data of	Power Modu	le and Moto	or.			
Lower torque threshold 1 [Nm]	0.0 - 99999.0	0.0	U, T	-	DDS	Float	3
Lower limit threshold valu	e 1 for comparing a	ctual torque.					
See P2181 for calculated	default value.						
Upper torque threshold 2 [Nm]	0.0 - 99999.0	Value in r0333	U, T	-	DDS	Float	3
Upper limit threshold valu	e 2 for comparing a	ctual torque.					
This parameter is influence	ed by automatic ca	lculations def	ined by P03	340.			
See P2181 for calculated	default value.		-				
See P2185							
Lower torque threshold 2 [Nm]	0.0 - 99999.0	0.0	U, T	-	DDS	Float	3
Lower limit threshold valu	e 2 for comparing a	ctual torque.					
See P2181 for calculated	default value.						
Upper torque threshold 3 [Nm]	0.0 - 99999.0	Value in r0333	U, T	-	DDS	Float	3
Upper limit threshold valu	e 3 for comparing a	ctual torque.					
This parameter is influence	ed by automatic ca	lculations def	ined by P03	340.			
See P2181 for calculated	default value.						
Coo D2105							
366 L7 192							
Lower torque threshold 3 [Nm]	0.0 - 99999.0	0.0	U, T	-	DDS	Float	3
Lower torque threshold 3			U, T	-	DDS	Float	3
Lower torque threshold 3 [Nm]	e 3 for comparing a		U, T	-	DDS	Float	3
Lower torque threshold 3 [Nm] Lower limit threshold value	e 3 for comparing a		U, T	-	DDS	Float U16	3
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay	e 3 for comparing a default value. 0 - 65	ctual torque.	U, T				
Lower torque threshold 3 [Nm] Lower limit threshold values P2181 for calculated Load monitoring delay time [s]	e 3 for comparing a default value. 0 - 65 fore warning/trip be	ctual torque. 10 comes active	U, T				
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trar	tual torque. 10 comes active asient condition	U, T				
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be lit is used to eliminate events.	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trar	tual torque. 10 comes active asient condition	U, T				
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be lit is used to eliminate every lit is used for both method CO/BO: Monitoring word	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trar ds of fault detection	tual torque. 10 comes active esient condition.	U, T	-	DDS	U16	3
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be lit is used to eliminate event is used for both method CO/BO: Monitoring word 1	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trands of fault detection - ndicates the state of	tual torque. 10 comes active esient condition.	U, T	-	DDS	U16	3 3 function.
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be - It is used to eliminate every limit is used for both method CO/BO: Monitoring word 1 Monitoring word 1 which is	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trar ds of fault detection - ndicates the state of	tual torque. 10 comes active esient condition.	U, T	- bit repres	DDS	U16 U16	3 3 function.
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be lit is used to eliminate every lit is used for both method CO/BO: Monitoring word 1 Monitoring word 1 which is Bit Signal name.	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trands of fault detection - ndicates the state of the	tual torque. 10 comes active esient condition.	U, T	- bit repres	DDS	U16 U16 onitor f	3 3 function.
Lower torque threshold 3 [Nm] Lower limit threshold value See P2181 for calculated Load monitoring delay time [s] P2192 defines a delay be - It is used to eliminate every lit is used for both method CO/BO: Monitoring word 1 Monitoring word 1 which is Bit Signal name 00 If_act <= P	e 3 for comparing a default value. 0 - 65 fore warning/trip be ents caused by trands of fault detection - Indicates the state of the comparing of the compa	tual torque. 10 comes active esient condition.	U, T	- bit repres 1 signal Yes	DDS	U16 U16 onitor f 0 sign	3 3 function.
	Upper torque threshold 1 [Nm] Upper limit threshold value This parameter is influence See P2181 for calculated The factory setting depension Lower torque threshold 1 [Nm] Lower limit threshold value See P2181 for calculated Upper torque threshold 2 [Nm] Upper limit threshold value This parameter is influence See P2181 for calculated See P2185 Lower torque threshold 2 [Nm] Lower limit threshold value See P2181 for calculated Upper torque threshold 3 [Nm] Upper limit threshold value See P2181 for calculated Upper torque threshold 3 [Nm] Upper limit threshold value This parameter is influence See P2181 for calculated See P2181 for calculated Upper limit threshold value This parameter is influence See P2181 for calculated	Upper torque threshold 1 [Nm] Upper limit threshold value 1 for comparing a This parameter is influenced by automatic ca See P2181 for calculated default value. The factory setting depends on rating data of Lower torque threshold 1 [Nm] Lower limit threshold value 1 for comparing a See P2181 for calculated default value. Upper torque threshold 2 [Nm] Upper limit threshold value 2 for comparing a This parameter is influenced by automatic ca See P2181 for calculated default value. See P2185 Lower torque threshold 2 [Nm] Lower limit threshold value 2 for comparing a See P2181 for calculated default value. See P2181 for calculated default value. See P2181 for calculated default value. Upper torque threshold 2 [Nm] Upper torque threshold 3 [Nm] Upper limit threshold value 3 for comparing a See P2181 for calculated default value.	Upper torque threshold 1 [Nm]	Upper torque threshold 1 0.0 - 99999.0 Value in r0333 U, T This parameter is influenced by automatic calculations defined by P03 See P2181 for calculated default value. The factory setting depends on rating data of Power Module and Moto Lower torque threshold 1 0.0 - 99999.0 0.0 U, T [Nm] Lower limit threshold value 1 for comparing actual torque. See P2181 for calculated default value. Upper torque threshold 2 0.0 - 99999.0 Value in r0333 Upper limit threshold value 2 for comparing actual torque. This parameter is influenced by automatic calculations defined by P03 See P2181 for calculated default value. See P2185 Lower torque threshold 2 0.0 - 99999.0 0.0 U, T [Nm] Lower limit threshold value 2 for comparing actual torque. See P2181 for calculated default value. See P2185 Lower torque threshold 2 0.0 - 99999.0 0.0 U, T [Nm] Lower limit threshold value 2 for comparing actual torque. See P2181 for calculated default value. Upper torque threshold 3 0.0 - 99999.0 Value in r0333 In r0333 In r0333 Upper limit threshold value 3 for comparing actual torque. This parameter is influenced by automatic calculations defined by P03 In r0333 I	Upper torque threshold 1 0.0 - 99999.0 Value in r0333 U, T - Imm Value in r0333 Value in	Upper torque threshold 1 0.0 - 99999.0 Value in r0333 U, T - DDS	Upper torque threshold 1 [Nm]

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
	04	f_act >= setp	. (f_set)		1	Yes	L	No	1
	05	f_act <= P2				Yes		No	
	06	f_act >= P10				Yes		No	
	07	f_act == setp				Yes		No	
	08	†	0027 >= P2170			Yes		No	
	09	Act. unfilt. Vd	c < P2172			Yes		No	
	10	Act. unfilt. Vd	c > P2172			Yes		No	
	11	Output load is	Output load is not present Yes No					No	
	12	f_act > P108	32 with delay			Yes		No	
r2198.012	CO/BO: Moi	nitoring word	-	-	-	-	-	U16	3
	Monitoring v	vord 2 which in	dicates the state of	monitor fund	tions. Each	bit repres	ents one m	onitor	function.
	Bit	Signal name				1 signal		0 sign	al
	00	f_act <= P2	157 (f_2)			Yes		No	
	01	f_act > P215	57 (f_2)			Yes		No	
	02	f_act <= P2	159 (f_3)			Yes		No	
	03	f_act > P215	59 (f_3)			Yes		No	
	04	Unused				Yes		No	
	05	f_set > 0				Yes		No	
	06	Motor blocked				Yes		No	
	07	Motor pulled	out			Yes		No	
	08	I_act r0068	< P2170			Yes		No	
	09	m_act > P2	174 & setpoint reach	ned		Yes		No	
	10	m_act > P21	174			Yes		No	
	11	Load monitor	ing signals an alarm	า		Yes		No	
	12	Load monitor	ing signals a fault			Yes		No	
P2200[02]	BI: Enable F	PID controller	0 - 4294967295	0	U, T	-	CDS	U32	2
	Allows user	to enable/disal	ole the PID controlle	er. Setting to	1 enables	the PID clo	sed-loop c	ontrolle	r.
Dependency:	Setting 1 au setpoints.	tomatically disa	ables normal ramp t	imes set in F	21120 and	P1121 and	I the norma	I freque	ency
			3 command, howev	er, the inver	ter frequen	cy will ram	p down to :	zero us	ing the
Notice:	(P1091 to P	1094) remain a	m motor frequencie active on the inverte	r output.	•		ne skip freq	uencie	S
	However, er	nabling skip fre	quencies with PID o	control can p	roduce inst	abilities.			
Note:		•	selected using P22						
		•	PID feedback signal	•		•			
		of the PID conti ncy) when PID	roller is displayed as is enabled.	s [%] and the	en normaliz	ed into [Hz	ː] through F	2000 (r efer -
	The reverse	command is n	ot active when PID	is active.					
		2200 and P280 ctive at same ti	3 are locked param me.	eter against	each other	. PID and	FFB of the	same d	ata set

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2201[02]	Fixed PID setpoint 1 [%]	-200.00 - 200.00	10.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	1. There are 2 types	s of fixed free	quencies:				
	1. Direct selection (P2216	= 1):						
	 In this mode of oper 	ation 1 Fixed Frequ	iency selecto	or (P2220 to	o P2223) s	elects 1 fix	ed freq	uency.
	 If several inputs are FF2 + PID-FF3 + PI 	_	e selected fre	equencies a	are summe	d. E.g.: PII)-FF1 +	PID-
	2. Binary coded selection	(P2216 = 2):						
	 Up to 16 different fix 	ced frequency value	s can be sel	ected using	this meth	od.		
Dependency:	P2200 = 1 required in user	access level 2 to e	nable setpoir	nt source.				
Note:	You may mix different type together.	•	wever, reme	ember that	they will be	summed i	f select	ed
	P2201 = 100 % correspond	ds to 4000 hex.		T	T		1	Т
P2202[02]	Fixed PID setpoint 2 [%]	-200.00 - 200.00	20.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	2.						
Note:	See P2201	1		T	1		T	1
P2203[02]	Fixed PID setpoint 3 [%]	-200.00 - 200.00	50.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	3.						
Note:	See P2201	1		T	1		T	1
P2204[02]	Fixed PID setpoint 4 [%]	-200.00 - 200.00	100.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	4.						
Note:	See P2201			T	T		1	Т
P2205[02]	Fixed PID setpoint 5 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	5.						
Note:	See P2201	1		T	1		T	1
P2206[02]	Fixed PID setpoint 6 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	6.						
Note:	See P2201		_	1	ı		1	ı
P2207[02]	Fixed PID setpoint 7 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	7.						
Note:	See P2201	I	T	T	1		1	T
P2208[02]	Fixed PID setpoint 8 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	8.						
Note:	See P2201							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2209[02]	Fixed PID setpoint 9 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	9.						
Note:	See P2201							
P2210[02]	Fixed PID setpoint 10 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	10.						
Note:	See P2201							
P2211[02]	Fixed PID setpoint 11 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	11.						
Note:	See P2201							
P2212[02]	Fixed PID setpoint 12 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	12.						
Note:	See P2201							
P2213[02]	Fixed PID setpoint 13 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	13.						
Note:	See P2201							
P2214[02]	Fixed PID setpoint 14 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	14.						
Note:	See P2201							
P2215[02]	Fixed PID setpoint 15 [%]	-200.00 - 200.00	0.00	U, T	-	DDS	Float	2
	Defines fixed PID setpoint	15.						
Note:	See P2201							
P2216[02]	Fixed PID setpoint mode	1 - 2	1	Т	-	DDS	U16	2
	Fixed frequencies for PID s	setpoint can be sele	cted in two	different mo	des. P221	6 defines th	ne mod	e.
	1	Direct selection						
	2	Binary selection						
P2220[02]	BI: Fixed PID setpoint select bit 0	0 - 4294967295	722.3	Т	-	CDS	U32	3
	Defines command source	of fixed PID setpoin	t selection b	it 0.				
P2221[02]	BI: Fixed PID setpoint select bit 1	0 - 4294967295	722.4	Т	-	CDS	U32	3
	Defines command source	of fixed PID setpoin	t selection b	it 1.				
P2222[02]	BI: Fixed PID setpoint select bit 2	0 - 4294967295	722.5	Т	-	CDS	U32	3
	Defines command source	of fixed PID setpoin	t selection b	it 2.	- 			

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2223[02]	BI: Fixed select bit	PID setpoint 3	0 - 4294967295	722.6	Т	-	CDS	U32	3
	Defines co	ommand source	of fixed PID setpoir	nt selection b	oit 3.				
r2224	CO: Actua	al fixed PID %]	-	-	-	-	-	Float	2
	Displays t	otal output of PID	fixed setpoint sele	ection.					
Note:	r2224 = 1	00 % correspond	s to 4000 hex.						
r2225.0	BO: PID fi	ixed frequency	-	-	-	-	-	U16	3
	Displays t	he status of PID	fixed frequencies.						
	Bit	Signal name				1 signal		0 sign	al
	00	Status of FF				Yes		No	
P2231[02]	PID-MOP	mode	0 - 3	0	U, T	-	DDS	U16	2
	PID-MOP	mode specificati	on	•			•		
	Bit	Signal name				1 signal		0 sign	al
	00	Setpoint store	e active			Yes		No	
	01	No On-state	for MOP necessary	,		Yes		No	
Note:	Defines th	· ·	e of the motorized		er. See P22	40.			
P2232	Inhibit rev PID-MOP	erse direction of	0 - 1	1	Т	-	-	U16	2
	Inhibits re	verse setpoint se	lection of the PID-I	MOP.					
	0		Reverse direction	is allowed					
	1		Reverse direction	inhibited					
Note:	Setting 0 of frequency	_	e of motor direction	using the m	notor potenti	ometer set	point (incre	ase/de	crease
P2235[02]	BI: Enable	PID-MOP (UP-	0 - 4294967295	0	Т	-	CDS	U32	3
	Defines so	ource of UP comi	mand.	1	1	•	•		•
Dependency:	To change	e setpoint:							
	- Configur	e a digital input a	as source						
	- Use UP/	DOWN key on op	perator panel.						
Notice:	0.2 % (P0	If this command is enabled by short pulses of less than 1 second, the frequency is changed in steps of 0.2 % (P0310). When the signal is enabled longer than 1 second the ramp generator accelerates with the rate of P2247.							
P2236[02]	BI: Enable PID-MOP (DOWN-cmd) 0 - 4294967295 0 T						CDS	U32	3
	Defines so	ource of DOWN o	command.						
Dependency:	See P223	5							
Notice:	0.2 % (P0	e P2235 his command is enabled by short pulses of less than 1 second, the frequency is changed in steps of (P0310). When the signal is enabled longer than 1 second the ramp generator decelerates with the of P2248.							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P2240[02]	Setpoint of PID-MOP [%]	-200.00 - 200.00	10.00	U, T	-	DDS	Float	2				
	Setpoint of the motor poter	ntiometer. Allows us	er to set a di	gital PID se	etpoint in [9	%] .						
Note:	P2240 = 100 % correspond	ds to 4000 hex.										
	The start value gets active (for the MOP output) only at the start of the MOP. P2231 influences the start value behavior as follows:											
	• P2231 = 0:											
	P2240 gets immediately the next OFF and ON c		state and wh	ien change	d in the Of	N-state, it g	ets acti	ve after				
	• P2231 = 1:											
	The last MOP output be P2240 while in ON-stat	-	_		_	elected, so	a chai	nge of				
	• P2231 = 2:											
	The MOP is active ever of P2231 to 0.	ry time, so the chan	ge of P2240	affects afte	er the next	power-cycl	e or a c	hange				
	• P2231 = 3:											
	The last MOP output be pendent from the ON-co	•		_								
P2241[02]	BI: PID-MOP select set- point auto/manu	0 - 4294967295	0	Т	-	CDS	U32	3				
	Sets the signal source to of ter in the manual mode the If using the automatic mode 0: manually 1: automatically	setpoint is changed	d using two s	ignals for ι	ıp and dow	n, e.g. P22	235 and					
Notice:	Refer to: P2235, P1036, P2	2242										
P2242[02]	CI: PID-MOP auto set- point	0 - 4294967295	0	Т	-	CDS	U32	3				
	Sets the signal source for t ed.	he setpoint of the m	otorized pote	entiometer	if automati	c mode P2	241 is s	select-				
Notice:	Refer to: P2241	T	1	1	ı	ı	1					
P2243[02]	BI: PID-MOP accept rampgenerator setpoint	0 - 4294967295	0	Т	-	CDS	U32	3				
	Sets the signal source for the setting command to accept the setting value for the motorized potentiometer. The value becomes effective for a 0/1 edge of the setting command.											
Notice:	e: Refer to: P2244											
P2244[02]	CI: PID-MOP rampgenerator setpoint	0 - 4294967295	0	Т	-	CDS	U32	3				
	Sets the signal source for the setpoint value for the MOP. The value becomes effective for a 0/1 edge of the setting command.											
Notice:	Refer to: P2243											

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r2245	CO: PID-MOP input frequency of the RFG [%]	-	-	-	-	-	Float	3			
	Displays the motorized pot	entiometer setpoint	before it pas	sed the PI	D-MOP RF	G.					
P2247[02]	PID-MOP ramp-up time of the RFG [s]	0.00 - 1000.0	10.00	U, T	-	DDS	Float	2			
		Sets the ramp-up time for the internal PID-MOP ramp-function generator. The setpoint is changed from zero up to limit defined in P1082 within this time.									
Notice:	Refer to: P2248, P1082										
P2248[02]	PID-MOP ramp-down time of the RFG [s]	0.00 - 1000.0	10.00	U, T	-	DDS	Float	2			
	Sets the ramp-down time for limit defined in P1082 down		-	ınction gen	erator. The	e setpoint is	chang	ed from			
Notice:	Refer to: P2247, P1082										
r2250	CO: Output setpoint of PID-MOP [%]	-	-	-	PERCE NT	-	Float	2			
	Displays output setpoint of	motor potentiomete	er.								
P2251	PID mode	0 - 1	0	Т	-	-	U16	3			
	Enables function of PID co	ntroller.									
	0 PID as setpoint										
	1	PID as trim									
Dependency:	Active when PID loop is en	abled (see P2200).									
P2253[02]	CI: PID setpoint	0 - 4294967295	0	U, T	4000H	CDS	U32	2			
	Defines setpoint source for PID setpoint. Normally, a d										
P2254[02]	CI: PID trim source	0 - 4294967295	0	U, T	4000H	CDS	U32	3			
	Selects trim source for PID point.	setpoint. This signa	al is multiplie	d by the tri	m gain and	added to	the PID	set-			
Setting:	755	Analog input 1									
	2224	Fixed PI setpoint (see P2201 to	o P2207)							
	2250	Active PI setpoint	(see P2240)								
P2255	PID setpoint gain factor	0.00 - 100.00	100.00	U, T	-	-	Float	3			
	Gain factor for PID setpoint. The PID setpoint input is multiplied by this gain factor to produce a suitable ratio between setpoint and trim.										
P2256	PID trim gain factor	0.00 - 100.00	100.00	U, T	-	-	Float	3			
	Gain factor for PID trim. Th	is gain factor scales	the trim sig	nal, which	is added to	the main I	PID set	point.			
P2257	Ramp-up time for PID setpoint [s]	0.00 - 650.00	1.00	U, T	-	-	Float	2			
	Sets the ramp-up time for t	he PID setpoint.									
Dependency:	P2200 = 1 (PID control is enabled) disables normal ramp-up time (P1120). PID ramp time is effective only on PID setpoint and active only when PID setpoint is changed or when RUN command is given (when PID setpoint uses this ramp to reach its value from 0%).										
Notice:	Setting the ramp-up time to	oo short may cause	the inverter t	to trip, on o	vercurrent	for examp	e				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2258	Ramp-down time for PID setpoint [s]	0.00 - 650.00	1.00	U, T	-	-	Float	2
	Sets ramp-down time for P	ID setpoint.						
Dependency:	P2200 = 1 (PID control is e only on PID setpoint chang ramp times used after OFF	es. P1121 (ramp-do	own time) ar					
Notice:	Setting the ramp-down time	e too short can caus	se the invert	er to trip on	overvoltag	ge F2/overd	current	F1.
r2260	CO: PID setpoint after PID-RFG [%]	-	-	-	-	-	Float	2
	Displays total active PID se	etpoint after PID-RF	G.					
Note:	r2260 = 100 % correspond	s to 4000 hex.						
P2261	PID setpoint filter time constant [s]	0.00 - 60.00	0.00	U, T	-	-	Float	3
	Sets a time constant for sm	noothing the PID se	tpoint.					
Note:	P2261 = 0 = no smoothing.							
r2262	CO: Filtered PID setpoint after RFG [%]	-	-	-	-	-	Float	3
	Displays filtered PID setpoi Filter and the time constant		2262 is the	result of the	value in r2	2260, filtere	ed with	PT1-
Note:	r2262 = 100 % correspond	s to 4000 hex.						
P2263	PID controller type	0 - 1	0	Т	-	-	U16	3
	Sets the PID controller type	e.						
	0	D component on fe	eedback sig	nal				
	1	D component on e	error signal					
P2264[02]	CI: PID feedback	0 - 4294967295	0	U, T	4000H	CDS	U32	2
	Selects the source of the P	ID feedback signal.					•	
Setting:	See P2254							
Note:	When analog input is select scaling).	ted, offset and gain	can be imp	lemented us	sing P0756	6 to P0760	(analog	input
P2265	PID feedback filter time constant [s]	0.00 - 60.00	0.00	U, T	-	-	Float	2
	Defines time constant for P	ID feedback filter.						
r2266	CO: PID filtered feedback [%]	-	-	-	-	-	Float	2
	Displays PID feedback sign	nal.						
Note:	r2266 = 100 % correspond	s to 4000 hex.						
P2267	Maximum value for PID feedback [%]	-200.00 - 200.00	100.00	U, T	-	-	Float	3
	Sets the upper limit for the	value of the feedba	ck signal.		•	•	•	•
Notice:	When PID is enabled (P22)	00 = 1) and the sigr	nal rises abo	ve this valu	e, the inve	rter will trip	with F	222.
Note:	P2267 = 100 % correspond	ds to 4000 hex.				<u> </u>		

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P2268	Minimum value for PID feedback [%]	-200.00 - 200.00	0.00	U, T	-	-	Float	3				
	Sets lower limit for value	of feedback signal.										
Notice:	When PID is enabled (P2	200 = 1) and the sign	al drops belo	w this value	, the inver	ter will tr	ip with F	221.				
Note:	P2268 = 100 % correspon	nds to 4000 hex.										
P2269	Gain applied to PID feedback	0.00 - 500.00	100.00	U, T	-	-	Float	3				
	Allows the user to scale the signal has not changed from		percentage	value. A gai	n of 100.0	% mean	s that fe	edback				
P2270	PID feedback function selector	0 - 3	0	U, T	-	-	U16	3				
	Applies mathematical fun-	ctions to the PID feed	back signal,	allowing mu	Itiplication	of the re	sult by I	2269.				
	0	Disabled										
	1	Square root (root(x))									
	2	Square (x*x)										
	3	Cube (x*x*x)										
P2271	PID transducer type	0 - 1	0	U, T	_	_	U16	2				
	Allows the user to select t	Allows the user to select the transducer type for the PID feedback signal.										
	0 Disabled											
	1	Inversion of PID fee	dback signal									
Notice:	It is essential that you sel you can determine the co 1. Disable the PID functi 2. Increase the motor fre 3. If the feedback signal 4. If the feedback signal be set to 1.	rrect type as follows: on (P2200 = 0). quency while measur increases with an inci	ing the feedb	oack signal. or frequency	/, the PID tr	ansducer	type sho	uld be 0.				
r2272	CO: PID scaled feed- back [%]	-	-	-	-	-	Float	2				
	Displays PID scaled feed	oack signal.	II.	•	•							
Note:	r2272 = 100 % correspon	ds to 4000 hex.										
r2273	CO: PID error [%]	-	-	-	-	-	Float	2				
	Displays PID error (differen	ence) signal between	setpoint and	feedback si	gnals.	•	•	•				
Note:	r2273 = 100 % correspon	ds to 4000 hex.										
P2274	PID derivative time [s]	0.000 - 60.000	0.000	U, T	-	-	Float	2				
	Sets PID derivative time. P2274 = 0: The derivative	term does not have a	any effect (it	applies a ga	ain of 1).							
P2280	PID proportional gain	0.000 - 65.000	3.000	U, T	-	-	Float	2				
	Allows user to set proport ard model. For best result	•		PID controlle	er is impler	nented u	sing the	stand-				
Dependency:	P2280 = 0 (P term of PID = 0): The I term acts on the square of the error signal.											
	P2285 = 0 (I term of PID = 0): PID controller acts as a P or PD controller respectively.											
Note:	If the system is prone to s	2285 = 0 (I term of PID = 0): PID controller acts as a P or PD controller respectively. the system is prone to sudden step changes in the feedback signal, P term should normally be set to a mall value (0.5) with a faster I term for optimum performance.										

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P2285	PID integral	time [s]	0.000 - 60.000	0.000	U, T	-	-	Float	2		
	Sets integral	time constan	t for PID controller.								
Note:	See P2280										
P2291	PID output u [%]	pper limit	-200.00 - 200.00	100.00	U, T	-	-	Float	2		
	Sets upper li	mit for PID co	ntroller output								
Dependency:	If f_max (P1082) is greater than P2000 (reference frequency), either P2000 or P2291 (PID output upper limit) must be changed to achieve f_max.										
Note:	P2291 = 100	% correspon	ds to 4000 hex (as de	efined by P20	000 (referen	ce frequer	ncy)).				
P2292	PID output lo	wer limit [%]	-200.00 - 200.00	0.00	U, T	-	-	Float	2		
	Sets lower lin	nit for the PID	controller output.								
Dependency:	A negative va	alue allows bi	polar operation of PID	controller.							
Note:	P2292 = 100	% correspon	ds to 4000 hex.								
P2293	Ramp-up/-do PID limit [s]	wn time of	0.00 - 100.00	1.00	U, T	-	-	Float	3		
	When PI is e limit) and P2 PID when the	nabled, the o 292 (PID outp e inverter is s	on output of PID. utput limits are rampe out lower limit). Limits tarted. Once the limits are used whenever a	prevent large have been r	e step chan eached, the	ges appea e PID cont	iring on th	ne outpi	ut of the		
Note:	If an OFF1 o	r OFF 3 are is	ssued, the inverter ou				in P1121	(ramp-	down		
r2294	CO: Actual P	ID output	-	-	-	-	-	Float	2		
	Displays PID	output.									
Note:	r2294 = 100	% correspond	ds to 4000 hex.								
P2295	Gain applied output	to PID	-100.00 - 100.00	100.00	U, T	-	-	Float	3		
	Allows the user to scale the PID output as a percentage value. A gain of 100.0 % means that output has not changed from its default value.								ut signal		
Note:	The ramp rat	e applied by	the PID controller is c	lamped to a i	rate of 0.1s	/100% to p	rotect the	inverte	er.		
r2349	CO/BO: PID	status word	-	0	-	-	_	U16	3		
	Displays PID	status word.									
	Bit	Signal name	1			1 signal		0 sign	al		
	00	PID disabled	<u> </u>			Yes		No			
	01	PID limit rea	ched			Yes		No			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P2350	PID autotune enable	0 - 4	0	U, T	-	-	U16	2			
	Enables autotune function	of PID controller.									
	0	PID autotuning disab	led								
	1	PID autotuning via Ziegler Nichols (ZN) standard									
	2 PID autotuning as 1 plus some overshoot (O/S)										
	3 PID autotuning as 2 little or no overshoot (O/S)										
	4 PID autotuning PI only, quarter damped response										
Dependency:	Active when PID loop is en	ID loop is enabled (see P2200).									
Note:	• P2350 = 1										
	This is the standard Ziegler Nichols (ZN) tuning which should be a quarter damped response to a step P2350 = 2										
	This tuning will give some overshoot (O/S) but should be faster than option 1. • P2350 = 3										
	This tuning should give little or no overshoot but will not be as fast as option 2. • P2350 = 4										
	This tuning only chang The option to be selected sponse, whereas if a faste If no overshoot is desired can be selected.	depends on the applic r response is desired	ation but bro	adly speak uld be sele	ing option cted.	1 will giv					
	The tuning procedure is the ent.	·	-		of P and I	D values	that is	differ-			
P2354	After autotune this parame PID tuning timeout length [s]	60 - 65000	240	U, T	-	-	U16	3			
	This parameter determine oscillation has been obtain		otuning code	will wait be	efore abort	ing a tun	ing run	if no			
P2355	PID tuning offset [%]	0.00 - 20.00	5.00	U, T	-	-	Float	3			
	Sets applied offset and de	viation for PID autotur	ning.								
Note:	Sets applied offset and deviation for PID autotuning. This can be varied depending on plant conditions e.g. a very long system time constant might require a larger value.							iire a			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P2360[02]	Enable cavitation protection	0 - 2	0	U, T	-	DDS	U16	2			
	Cavitation protection enab	led.	•	•	•		•				
	Will generate a fault/warni	ng when cavitation co	nditions are	deemed to	be presen	t.					
	PID S Feedback flow / pressure sensor	Scaled feedback [%] r2272									
		ation Threshold to 200.00 [%]			Cavita	tion proted	ction dela	ау			
	P2361 (40.00) Statusword 2 bit 10 PID minimum limit reached 0 65000 [s]										
	Statusword 2 bit 10 PID	minimum limit reached			7	P23 <u>6</u>					
	R53.10					_	-				
	Statusword 2 bit 11 PID reached	_ ≥	:1	&		→	0				
	R53.1 Statusword1 bit 2 PII			\rightarrow							
	R52.0	12			_						
	PID enable	/ disable		>							
	P2200.	CDS		<u> </u>	_						
	Cavi	itation protection enable 02 P2360 (0)	Cavitatio Trigger c	n protection avitation fau	t F410	 001					
		Cavitation Protection	Not used	avitation war	-						
	0	Disable									
	1	Fault									
	2	Warn									
P2361[02]	Cavitation threshold [%]	0.00 - 200.00	40.00	U, T	-	DDS	Float	2			
	Feedback threshold over v	which a fault/warning	s triggered, a	as a percer	tage (%).						
P2362[02]	Cavitation protection time [s]	0 - 65000	30	U, T	_	DDS	U16	2			
	The time for which cavitati	on conditions have to	be present b	pefore a fau	lt/warning	is trigger	red.				
P2365[02]	Hibernation enable/disable	0 - 2	0	U, T	-	DDS	U16	2			
	Select or disable the hiber	nation functionality.									
	0	Disabled									
	1 Frequency hibernation (The inverter uses the frequency setpoint as the wakeup trigger. You can use P2366 and P2367 to configure this function.)										
	2	PID hibernation (The can use P2390, P23					trigger.	You			

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P2366[02]	Delay before stopping motor [s]	0 - 254	5	U, T	-	DDS	U16	3				
	With hibernation enabled. seconds before the inverte		and drops be	elow the thre	eshold ther	e is a de	elay of P	2366				
P2367[02]	Delay before starting motor [s]	0 - 254	2	U, T	-	DDS	U16	3				
	With hibernation enabled. If pulses have been disabled by the unit going into hibernation, and the frequency demand has increased to above the hibernation threshold, there will be a delay of P2367 seconds before the inverter restarts.											
P2370[02]	Motor staging stop mode	0 - 1	0	Т	-	DDS	U16	3				
	Selects stop mode for ext	ernal motors when m	otor staging	is in use.								
	0	Normal stop										
	1	Sequence stop										
P2371[02]	Motor staging configura-	0 - 3	0	Т	-	DDS	U16	3				
	Selects configuration of ex	kternal motors (M1. N	//2) used for i	motor stagin	a feature.	· L	· ·					
	0	Motor staging disab	•		<u>J</u>							
	1	M1 = 1 x MV, M2 =										
	2	· ·										
	 											
Caution:	3 M1 = 1 x MV, M2 = 2 x MV For this kind of motor application it is mandatory to disable negative frequency setpoint!											
Caution: Note:	Motor staging allows the otem. The complete system concontrolled from contactors. The contactors or motor so the diagram below shows A similar system could be Mains Inverter Mo	sists of one pump co or motor starters. tarter are controlled b a typical pumping s	ntrolled by the py outputs from the pystem. d air ducts, in	e inverter wo	ith up to 2 ter. mps and p	further p						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
	By default the motor state	s are controlled from o	1				1-71	
	In the text below, the follow		•					
	MV - Variable speed (Inve	•	o acca.					
	M1 - Motor switched with	•						
		•						
	M2 - Motor switched with	• .						
	Staging: The process of st	J	•					
	De-staging: The process of	•	•					
	When the inverter is runni is required, the inverter sw							
	At the same time, to keep minimum frequency.	the controlled variable	as constant	as possibl	e, the inve	rter must	ramp d	lown to
	Therefore, during the stag	ing process, PID contr	rol must be s	uspended ((see P2378	3 and dia	gram be	elow)
	Staging of external motors	s (M1. M2)			Swite	ch-on		
	1.	2. 3.	4.	5.	6.	7. > t		
	P2371 = 0		-	-	-	 τ		
	1 - M1	M1 M1	M1	M1	M1	M1		
	2 - M1	M1+M2 M1+M2				11+M2		
	3 - M1	M2 M1+M2	M1+M2 M	I1+M2 N	11+M2 N	11+M2		
	When the inverter is runni required, the inverter switch In this case, the inverter matrol (see P2378 and diagrams).	ches off (de-stages) or nust ramp from minimu am below).	ne of the digit	al output c	ontrolled m um frequen	notors M ² cy outsid	1 and M	2.
	required, the inverter switch In this case, the inverter many	ches off (de-stages) or nust ramp from minimu am below). ors (M1, M2)	ne of the digit	al output c	ontrolled mum frequen	notors M ² cy outsic	1 and M	2.
	required, the inverter switch In this case, the inverter modern trol (see P2378 and diagram Destaging of external modern tropic in the case of the inverter modern tropic in the inverter switch inverter switch in the inverter switch in the inverter switch inverter modern tropic in the inverter modern tropic inverter mod	ches off (de-stages) or nust ramp from minimu am below).	ne of the digit	al output c	ontrolled m um frequen	notors M ² cy outsid	1 and M	2.
	required, the inverter switch In this case, the inverter model trol (see P2378 and diagrant Destaging of external model P2371 = 0	ches off (de-stages) or nust ramp from minimu am below). ors (M1, M2)	ne of the digit	al output c	ontrolled mum frequen	notors M ² cy outsic	1 and M	2.
	required, the inverter switch In this case, the inverter model trol (see P2378 and diagrate) Destaging of external model P2371 = 0 - 1 M1	ches off (de-stages) or nust ramp from minimu am below). ors (M1, M2)	ne of the digit	al output c	ontrolled mum frequen	notors M ² cy outsic	1 and M	2.
	required, the inverter switch In this case, the inverter model trol (see P2378 and diagrate) Destaging of external model P2371 = 0 - 1 M1 M1 M1+M2	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	ne of the digit	al output c	ontrolled mum frequen	notors M ² cy outsic	1 and M	2.
² 2372[02]	required, the inverter switch In this case, the inverter model trol (see P2378 and diagrate) Destaging of external model P2371 = 0 - 1 M1 M1 M1+M2	ches off (de-stages) or nust ramp from minimular below). ors (M1, M2) 1. 2. 3.	ne of the digit	al output c	ontrolled mum frequen	notors M ² cy outsic	1 and M	2.
P2372[02]	required, the inverter switch In this case, the inverter metrol (see P2378 and diagratical Destaging of external mote P2371 = 0 - 1 M1 2 M1+M2 3 M1+M2	ches off (de-stages) or nust ramp from minimular below). ors (M1, M2) 1. 2. 3. M1 M2 M1 - 0 - 1	e of the digit im frequency 4. - - - -	5.	ontrolled mum frequen	ch-off 7. t	le of PII	2. O con-
P2372[02]	required, the inverter switch In this case, the inverter model trol (see P2378 and diagrated Destaging of external model) P2371 = 0	ches off (de-stages) or nust ramp from minimular below). ors (M1, M2) 1. 2. 3.	4 0 ure. estaging is ba	5 T	ontrolled mum frequents Switch	ch-off 7. t DDS	1 and Mile of PII	2. O con-
P2372[02]	required, the inverter switch In this case, the inverter material trol (see P2378 and diagrated by the P2371 = 0	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	4. 0 ure. estaging is based on. When	5 T ased on the destaging,	Switch 6	notors M² cy outsic ch-off 7. t DDS DDS	U16 P2380.st hours	3 When is
P2372[02]	required, the inverter switch In this case, the inverter material trol (see P2378 and diagrated by the P2371 = 0	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	4. 0 ure. estaging is based on. When	5 T ased on the destaging,	Switch 6	notors M² cy outsic ch-off 7. t DDS DDS	U16 P2380.st hours	3 When is
P2372[02]	required, the inverter switch In this case, the inverter metrol (see P2378 and diagrated Destaging of external mote of the part of the par	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	4. 0 ure. estaging is based on. When	5 T ased on the destaging,	Switch 6	notors M² cy outsic ch-off 7. t DDS DDS	U16 P2380.st hours	3 When is
	required, the inverter switch In this case, the inverter material trol (see P2378 and diagrated Destaging of external moterial M1 2	ches off (de-stages) or nust ramp from minimular below). ors (M1, M2) 1. 2. 3.	4. 0 ure. estaging is based on. When	5 T ased on the destaging,	Switch 6	notors M² cy outsic ch-off 7. t DDS DDS	U16 P2380.st hours	3 When is
P2372[02]	required, the inverter switch In this case, the inverter method (see P2378 and diagrated) Destaging of external motors and the switched off. If staged motors are differ there is still a choice, on head of the switched off. Motor staging hysteresis	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	4. 4. 0 ure. estaging is based on. When	5 T ased on the destaging, t based on	ontrolled mum frequents Switch 6.	notors M² cy outsic ch-off 7. t DDS counter with most	U16 P2380.st hours e, and tr	3 When is
	required, the inverter switch In this case, the inverter metrol (see P2378 and diagrated Destaging of external mote P2371 = 0	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	4. 10 ure. estaging is based on. When motor is firs	5 T ased on the destaging, t based on	ontrolled mum frequents Switce 6	notors M² cy outsic ch-off 7. t DDS counter with most notor size DDS	U16 P2380.st hours e, and the	3 When is
P2373[02]	required, the inverter switch In this case, the inverter metrol (see P2378 and diagrated Destaging of external moter of the P2371 = 0	ches off (de-stages) or nust ramp from minimulam below). ors (M1, M2) 1. 2. 3.	4. 10 ure. estaging is based on. When motor is firs	5 T ased on the destaging, t based on	ontrolled mum frequents Switce 6	notors M² cy outsic ch-off 7. t DDS counter with most notor size DDS	U16 P2380.st hours e, and the	3 When is

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P2375[02]	Motor destaging delay [s]	0 - 650	30	U, T	-	DDS	U16	3			
	Time that PID error r2273	must exceed motor st	aging hyster	esis P2373	before de	staging o	occurs.				
P2376[02]	Motor staging delay override [%]	0.0 - 200.0	25.0	U, T	PERCE NT	DDS	Float	3			
	P2376 as a percentage of PID setpoint. When the PID error r2273 exceeds this value, a motor is staged/destaged irrespective of the delay timers.										
Note: P2377[0 2]	The value of this parameter	er must always be larg	er than stagi	ng hystere	sis P2373.						
P2377[02]	Motor staging lockout timer [s]	0 - 650	30	U, T	-	DDS	U16	3			
	Time for which delay over	ride is prevented after	a motor has	been stage	ed or desta	iged.					
	This prevents a second sta after the first staging even		ely after a firs	t, being ca	used by th	e transie	ent cond	itions			
P2378[02]	CO: Motor staging frequency f_st [%]	0.0 - 120.0	50.0	U, T	PERCE NT	DDS	Float	3			
	The frequency as a perceifrom maximum to minimum switched.										
	This is illustrated by the fo	llowing diagrams.									
	Staging:										
	f .										
	P1082-	(a) k									
	f _{act}										
	f _{set}					-					
	P1082 · P2378 100				/						
	100										
	-		t _y →	- P1121	1	→ t					
	%▲										
	Δ_{PID}		_								
	P2373-										
					-	→ t					
	r2379 ▲	P2374 ©									
	Bit 01 1-	•									
	, , , , , , , , , , , , , , , , , , ,					_					
	Bit 00 0					→ t					
	Condition for staging:										
	ⓐ f_{act} ≥ P1082 ⓑ Δ_{PID} ≥ P2373 ⓒ $f_{(a)(b)}$ > P2374		$t_y = \left(1 - \frac{P23}{10}\right)$	78 0)•P1121							

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
	-P23 r23 Bit 01 Bit 00 Condition fo	% Δ _{PID} 73 79 1- 0- 1-		$t_{x} = \left(\frac{P2378}{100}\right)$	— P1120 —)			type	
r2379.01	CO/BO: Mo	ab > Р2375	 -	 -	-	_	T_	U16	3
12010.01	status word	tor otaging							
	Output word	from the mot	or staging feature that	allows exte	ernal connect	tions to be	made.		
	Bit	Signal name)			1 signal		0 sign	al
	00	Start motor	1			Yes		No	
	01	Start motor :	2			Yes		No	
P2380[02]	Motor stagir	ng hours run	0.0 - 429496720.0	0.0	U, T	-	-	Float	3
	Displays ho is ignored.	urs run for ext	ernal motors. To reset	the running	g hours, set t	he value t	o zero, a	ny othe	value
Example:	P2380 = 0.1	l ==> 6 min							
-	60 min = 1 h								
Index:	[0]		Motor 1 hrs run						
	[1]		Motor 2 hrs run						
_	[2]		Not used						
	[4]		1401 0360						

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P2390	PID hibernat	tion setpoint	-200.00 - 200.00	0	U, T	-	-	Float	3		
	setpoint, the	PID hibernati	is set to 2 and the inve on timer P2391 is star o stop and enters the F	ted. When th	e PID hibe						
Notice:	inverter is ru		ed feature to enhance etpoint. Note that this jing.								
Note:		reater than the	is 0, the PID hibernati minimum frequency (
P2391	PID hibernat	tion timer [s]	0 - 254	0	Т	-	-	U16	3		
	When the PI		timer P2391 has expi	red, the inve	rter is ramp	ed down to	stop an	d enter	s the		
P2392	PID hibernatisetpoint [%]	tion restart	-200.00 - 200.00	0	Т	-	-	Float	3		
			node, the PID controlle, the inverter immediat		-						
r2399	CO/BO: PID status word	hibernation	-	0	-	-	-	U16	3		
	Displays PID hibernation status word.										
	Bit	Signal name	ı	1 signal		0 signal					
	Bit 00	Not used				Yes		No			
	Bit 01		ion enabled (PID hibe s not in PID hibernatio		abled and	Yes		No			
	Bit 02		active (PID hibernation PID hibernation.)	n is enabled a	and the	Yes		No			
P2800	Enable FFB	S	0 - 1	0	U, T	-	-	U16	3		
	Free function	n blocks (FFB) are enabled in two st	eps:	•	•	•				
	1. P2800 e	nables all free	function blocks (P280	0 = 1).							
		 P2801 and P2802 respectively, enable each free function block individually. Additionally fast free function blocks can be enabled via P2803 = 1. 									
	0		Disable								
	1		Enable								
Dependency:	All active function blocks will be calculated in every 128 ms, fast free function blocks in every 8 ms.										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P2801[016]	Activate FFBs	0 - 6	0	U, T	-	_	U16	3				
	0). In addition, P2801 level in which the free	ectively, enable each frand P2802 determine the unction block will work. ws that the priority decr	e chronologica	al order of e	each functi	on block	by setti					
					low ← Pri	iority 2	high					
		Fast FFBs			L	evel 6	T_					
		P2803 = 1			L	evel 5	Priority 1					
						evel 4	rior					
						evel 3	. ★					
						evel 2	<u>NO</u>					
						evel 1 nactive 0						
						lactive 0						
	CMP 2 CMP 1 DIV 2 DIV 2 MUL 2 MUL 1 SUB 2	ADD 1 Timer 4 Timer 2 Timer 2 Timer 1 Timer 1 RS-FF 3 RS-FF 7 RS-FF 1 D-FF 2	D-FF 1 NOT 3 NOT 2 NOT 1 XOR 3	XOR 2 XOR 1 OR 3 OR 2	AND 3 AND 2 AND 1							
	[13] [12] [11] [10] [10] [10] [10] [10]	13 4 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	12]	<u></u>								
	P2802 [13] P2802 [14] P2802 [10] P2802 [10] P2802 [8] P2802 [8] P2802 [7]	P2802 [4] P2802 [3] P2802 [3] P2802 [1] P2802 [0] P2801 [16] P2801 [16] P2801 [16]	P2801 [12] P2801 [11] P2801 [10] P2801 [9] P2801 [8]	P2801 [6 P2801 [6 P2801 [6 P2801 [7 P28	P2801 [7							
	0	Not Active										
	1	Level 1										
	2	Level 2										
	6 Level 6											
Fermina	P2801[3] = 2, P2801[4] = 2, P2802[3] = 3, P2802[4] = 2											
Example:		= 2, P2802[3] = 3, P28 in following order: P28		3] , P2801[4	1], P2802[⁴	1]						
Index:	[0]	Enable AND 1										
	[1]	Enable AND 2										
	[2]	Enable AND 3										
	[3]	Enable OR 1										
	[4]	Enable OR 2										
	[5]	Enable OR 3										
	[6] [7]	Enable XOR 1 Enable XOR 2										
	[8]	Enable XOR 3										
	[9]	Enable NOT 1										
	[10]	Enable NOT 2										
	[11]	Enable NOT 3										
	[12] Enable NOT 3											
	[13] Enable D-FF 2											
	[14]	Enable RS-FF 1										
	[15]	Enable RS-FF 2										
	[16]	Enable RS-FF 3										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
Dependency:	Set P2800 to 1 to enable	function blocks.								
	All active function blocks (level 4 to 6) will be calcul		ery 128 ms, i	if set to lev	el 1 to 3. F	ast free t	function	blocks		
P2802[013]	Activate FFBs	0 - 3	0	U, T	-	-	U16	3		
	Enables free function bloc	ks (FFB) and determin	es the chrono	ological orde	r of each fu	nction blo	ck. See F	2801.		
	0	Not Active								
	1	Level 1								
	2	Level 2								
	3	Level 3								
Index:	[0]	Enable timer 1								
	[1]	Enable timer 2								
	[2]	Enable timer 3								
	[3]	Enable timer 4								
	[4]	Enable ADD 1								
	[5]	Enable ADD 2								
	[6]	Enable SUB 1								
	[7]	Enable SUB 2								
	[8]	Enable MUL 1								
	[9]	Enable MUL 2								
	[10]	Enable DIV 1								
	[11]	Enable DIV 2								
	[12]	Enable CMP 1								
	[13]	Enable CMP 2								
Dependency:	Set P2800 to 1 to enable	•								
,	All active function blocks,	enabled with P2802, v	ill be calcula	ated in ever	ry 128 ms.					
P2803[02]	Enable Fast FFBs	0 - 1	0	U, T	_	CDS	U16	3		
	Fast free function blocks (FFB) are enabled in tv	o steps:				•	•		
	1. P2803 enables the use of fast free function blocks (P2803 = 1).									
	 2. P2801 enables each fast free function block individually and determines the chronological order (P2801[x] = 4 to 6). 									
	0	Disable								
	1	Enable								
Dependency:	All active fast function blo	l.	n everv 8 ms	i.						
Note:	Attention: P2200 and P28 cannot be active at same	03 are locked paramet			PID and FF	B of the	same d	lata set		
P2810[01]	BI: AND 1	0 - 4294967295	0	U, T	-	-	U32	3		
	P2810[0], P2810[1] define inputs of AND 1 element, output is r2811. P2800 P2801[0] A B C 0 0 0 0 0 1 0 1 0 0 1 0 0 1 1 0 1 1 1 1									
Index:	[0]	Binector input 0 (BI 0)							
	[1] Binector input 1 (BI 1)									
Dependency:	P2801[0] assigns the ANI		•	200						
Dependency:	rzou i [u] assigns the ANL	element to the proces	sang sequer	ICE.						

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
r2811.0	BO: AND 1		-	-	-	-	_	U16	3	
	Output of Al	ND 1 element	. Displays and logic of	bits defined	in P2810[0]], P2810[1]	-		•	
	Bit	Signal nam	9			1 signal	•	0 sign	al	
	00	Output of B	0			Yes		No		
Dependency:	See P2810									
P2812[01]	BI: AND 2		0 - 4294967295	0	U, T	-	-	U32	3	
	P2812[0], 28	312[1] define	inputs of AND 2 eleme	ent, output is	r2813.					
Index:	See P2810									
Dependency:	P2801[1] as	signs the AN	D element to the proce	essing seque	nce.					
r2813.0	BO: AND 2		-	-	-	-	-	U16	3	
	Output of All field descrip		. Displays and logic of	bits defined	in P2812[0], P2812[1]	. See r28	311 for t	he bit	
Dependency:	See P2812									
P2814[01]	BI: AND 3		0 - 4294967295	0	U, T	-	-	U32	3	
	P2814[0], P	2814[1] defin	e inputs of AND 3 elen	nent, output i	s r2815.					
Index:	See P2810									
Dependency:	P2801[2] as	signs the AN	D element to the proce	essing seque	nce.					
r2815.0	BO: AND 3		-	-	-	-	-	U16	3	
	•	Output of AND 3 element. Displays and logic of bits defined in P2814[0], P2814[1]. See r2811 for the b field description.								
Dependency:	See P2814				•				•	
P2816[01]	BI: OR 1		0 - 4294967295	0	U, T	-	-	U32	3	
	P2816[0], P. P2816 P2816 Index 0 Index 1	2816[1] defin P2800 P280 A B	e inputs of OR 1 elements of OR 1 elemen	B C 0 0 1 1 1 0 1 1 1						
Index:	See P2810									
Dependency:	P2801[3] as	signs the OR	element to the proces	sing sequend	ce.					
r2817.0	BO: OR 1		-	-	-	-	-	U16	3	
		R 1 element.	Displays or logic of bit	s defined in F	P2816[0], P	2816[1]. S	ee r2811	for the	bit field	
	description.									
Dependency:	See P2816				•					
Dependency: P2818[01]			0 - 4294967295	0	U, T	-	-	U32	3	
	See P2816 BI: OR 2	2818[1] defin	0 - 4294967295 e inputs of OR 2 eleme	-	<u> </u>	-	-	U32	3	
	See P2816 BI: OR 2	2818[1] defin	1	-	<u> </u>	-	-	U32	3	

Parameter	Function	Range	Factory	Can be	Scaling	Data	Data	Acc.				
			default	changed		set	type	Level				
r2819.0	BO: OR 2	-	-	-	-	-	U16	3				
	Output of OR 2 element. I description.	Displays or logic of bits	s defined in F	2818[0], P	2818[1]. Se	ee r2811	for the	bit field				
Dependency:	See P2818											
P2820[01]	BI: OR 3	0 - 4294967295	0	U, T	-	-	U32	3				
	P2820[0], P2820[1] define	inputs of OR 3 eleme	nt, output is	r2821.								
Index:	See P2810											
Dependency:	P2801[5] assigns the OR	element to the process	sing sequend	e.								
r2821.0	BO: OR 3	-	-	-	-	-	U16	3				
	Output of OR 3 element. I description.	Displays or logic of bits	defined in F	2820[0], P	2820[1]. Se	ee r2811	for the	bit field				
Dependency:	See P2820											
P2822[01]	BI: XOR 1	0 - 4294967295	0	U, T	-	-	U32	3				
	P2822 Index 0 Index 1 A B =1	C r2823	B C 0 0 1 1 1 0 1 0									
Index:	See P2810											
Dependency:	P2801[6] assigns the XOR element to the processing sequence.											
r2823.0	BO: XOR 1	-	-	-	_	_	U16	3				
	Output of XOR 1 element the bit field description.	. Displays exclusive-or	logic of bits	defined in I	P2822[0], F	P2822[1].	See r2	811 for				
Dependency:	See P2822	1	T	T	1	1	1	1				
P2824[01]	BI: XOR 2	0 - 4294967295	0	U, T	-	-	U32	3				
	P2824[0], P2824[1] define	inputs of XOR 2 elem	nent, output is	s r2825.								
Index:	See P2810											
Dependency:	P2801[7] assigns the XOF	R element to the proce	ssing seque	nce.	1	1	1	1				
r2825.0	BO: XOR 2	-	-	-	-	-	U16	3				
	Output of XOR 2 element the bit field description.	. Displays exclusive-or	logic of bits	defined in I	P2824[0], F	P2824[1].	See r2	811 for				
Dependency:	See P2824	1		,	1	1	T	1				
P2826[01]	BI: XOR 3	0 - 4294967295	0	U, T	-	-	U32	3				
	P2826[0], P2826[1] define	inputs of XOR 3 elem	nent, output is	s r2827.								
Index:	See P2810											
Dependency:	P2801[8] assigns the XOF	R element to the proce	ssing seque	nce.								

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
r2827.0	BO: XOR 3	-	-	-	-	-	U16	3				
	Output of XOR 3 elemen the bit field description.	t. Displays exclu	sive-or logic	of bits define	ed in P2826	[0], P2826	6[1]. See	r2811 for				
Dependency:	See P2826											
P2828	BI: NOT 1	0 - 4294967295	0	U, T	-	-	U32	3				
	P2828 defines input of NOT 1 element, output is r2829.											
	P2800 P2801[9] P2828 A C 0 1 1 0											
Dependency:	P2801[9] assigns the NC	T element to the	processing	sequence.								
r2829.0	BO: NOT 1	-	-	-	-	-	U16	3				
	Output of NOT 1 elemention.	Output of NOT 1 element. Displays not logic of bit defined in P2828. See r2811 for the bit field description.										
Dependency:	See P2828											
P2830	BI: NOT 2	0 - 4294967295	0	U, T	-	-	U32	3				
	P2830 defines input of NOT 2 element, output is r2831.											
Dependency:	P2801[10] assigns the N	OT element to the	ne processin	g sequence.								
r2831.0	BO: NOT 2	-	-	-	-	-	U16	3				
	Output of NOT 2 elemention.	t. Displays not lo	gic of bit de	fined in P283	0. See r281	1 for the	bit field d	escrip-				
Dependency:	See P2830											
P2832	BI: NOT 3	0 - 4294967295	0	U, T	-	-	U32	3				
	P2832 defines input of N	OT 3 element, o	utput is r283	33.								
Dependency:	P2801[11] assigns the N	OT element to the	ne processin	g sequence.								
r2833.0	BO: NOT 3	-	-	-	-	_	U16	3				
	Output of NOT 3 elemention.	t. Displays not lo	ogic of bit de	fined in P283	2. See r281	1 for the	bit field d	escrip-				
Dependency:	See P2832						<u> </u>					

Parameter	Function	Range	Factory default	Can be changed	Sca	•	Data set	Data type	Acc. Level
P2834[03]	BI: D-FF 1	0 - 4294967295	0	U, T	_	-	_	U32	3
	P2834[0], P2834[1], P2834 P2834 Index 0 Index 1 Index 2 Index 3	P2800 P SET (Q=1) D C	2801[12] r28	35	lop 1, ou	itputs ar	e r2835,	r2836.	
		RESET (Q=0)	SET	RESET	D	STORE	≣ Q	Q	•
		†	1	0	х	х	1	0	
			0	1	х	х	0	1	
		≥1 -	1	1	х	х	Q _{n-}	, Q	ı-1
	POWER ON		0	0	1		1	0	
			0	0	0		0	1	
				POWE	R-ON		0	1	
Index:	[0]	Binector input:	Set						
	[1]	Binector input:	D input						
	[2]	Binector input:	Store pulse						
_	[3]	Binector input:	Reset						
Dependency:	P2801[12] assigns the D	FlipFlop to the p	rocessing se	equence.					ı
r2835.0	BO: Q D-FF 1	-	-	-	-	-	-	U16	3
	Displays output of D-Flip for the bit field description		e defined in	P2834[0], F	P2834[1]	, P2834	[2], P283	34[3]. S	ee r2811
Dependency:	See P2834		•						
r2836.0	BO: NOT-Q D-FF 1	-	-	-	-	-	-	U16	3
	Displays Not-output of D- r2811 for the bit field des		s are define	d in P2834	[0], P283	34[1], P2	2834[2],	P2834[3	3]. See
Dependency:	See P2834								
P2837[03]	BI: D-FF 2	0 - 4294967295	0	U, T	-	-	•	U32	3
	P2837[0], P2837[1], P283	37[2], P2837[3] (define inputs	of D-FlipFl	lop 2, ou	ıtputs ar	e r2838,	r2839.	
Index:	See P2834								
Dependency:	P2801[13] assigns the D	FlipFlop to the p	rocessing se	equence.	ı	,			•
r2838.0	BO: Q D-FF 2	-	-	-	-	-	-	U16	3
_	Displays output of D-Flipl for the bit field description		e defined in	P2837[0], F	P2837[1]	, P2837	[2], P283	37[3]. S	ee r2811
Dependency:	See P2837			<u> </u>					
r2839.0	BO: NOT-Q D-FF 2	-	_	_	-] -	-	U16	3
	Displays Not-output of D- r2811 for the bit field des		s are define	d in P2837	[0], P283	37[1], P2	2837[2],		1
Dependency:	See P2837	•							
_ spendonoy.	1000.200.								

Index: [0] [1] Dependency: P2801 r2841.0 BO: Q Displa descriphorism Dependency: See P. P2842.0 BO: N Displa descriphorism Dependency: See P. P2843[01] BI: RS P2843 Index: See P. Dependency: P2801 r2844.0 BO: Q Displa descriphorism Dependency: See P. P2845.0 BO: N P2845.0 BO:	P2840 P2840 P2840 POWER ON [14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: C=0)	Set Reset processing - are defined in	sequence - n P2840	e r284 SET 0 1 1 POWE	RESET 0 1 0 1 ER-ON	Q Q _{n-1} 0 1 Q _{n-1} 0 - See r.2		U16 U16 U16	3 field						
P2840 P2840 P2840 P2840 P2841.0 P2801 P2	P2840 P2840 P2840 POWER ON [14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: Binector input: Binector input: C=0) RESET (Q=1) RESET (Q=0) RESET (Q=0) RESET (Q=0) RESET (Q=0) RESET (Q=0)	Set Reset processing - are defined in uts are defined	sequence - n P2840 - ned in P2	SET 0 0 1 1 POWE	RESET 0 1 0 1 ER-ON	Q Q _{n-1} 0 1 Q _{n-1} 0 - See r.2	Q _{n-1} 1 0 Q _{n-1} 1	U16	field						
Index: [0]	P2840 Index 0 Index 1 POWER ON [14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: Binector input: Binector input: C=0) RESET (Q=1) RESET (Q=0) RESET (Q=0) RESET (Q=0) RESET (Q=0) RESET (Q=0)	Set Reset processing - are defined in uts are defined	sequence - n P2840 - ned in P2	SET 0 0 1 1 POWE	RESET 0 1 0 1 ER-ON	Q Q _{n-1} 0 1 Q _{n-1} 0 - See r.2	Q _{n-1} 1 0 Q _{n-1} 1	or the bit	field						
Index: [0]	Index 0 Index 1 POWER ON [14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: Binector input: Binector input: Care input: Binector input: Binector input: Binector input: Care input: Ca	Set Reset processing - are defined in uts are defined	sequence - n P2840	0 0 1 1 POWE	0 1 0 1 ER-ON	Q _{n-1} 0 1 Q _{n-1} 0	Q _{n-1} 1 0 Q _{n-1} 1	or the bit	field						
Index: [0]	Index 0 Index 1 POWER ON [14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: Binector input: RS-FlipFlop to the - ClipFlop 1, inputs a	Set Reset processing - are defined in	sequence - n P2840	0 1 1 POWE	1 0 1 ER-ON	0 1 Q _{n-1} 0	1 0 \overline{Q}_{n-1} 1	or the bit	field						
Index: [0]	Index 1 POWER ON [14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: Binector input: RS-FlipFlop to the - FlipFlop 1, inputs a	Set Reset processing - are defined in	sequence - n P2840	1 1 POWE	0 1 ER-ON	1 Q _{n-1} 0	0 \overline{\overline{Q}_{n-1}} 1	or the bit	field						
Index: [0]	[14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: Binector input: RS-FlipFlop to the - TlipFlop 1, inputs a - RS-FlipFlop 1, inputs a	Set Reset processing - are defined in - uts are defin	sequence - n P2840 - ned in P2	1 POWE	1 ER-ON	Q _{n-1} 0	Q _{n-1} 1	or the bit	field						
Index: [0]	[14] assigns the F RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: Binector input: RS-FlipFlop to the - FlipFlop 1, inputs a - RS-FlipFlop 1, inputs a	Set Reset processing - are defined in - uts are defin	sequence - n P2840 - ned in P2	ce.	- - -840[1].	o	1 2811 fd	or the bit	field						
[1] Dependency: P2801 r2841.0 BO: Q Displa descri Dependency: See P r2842.0 BO: N Displa descri Dependency: See P P2843[01] BI: RS P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri Dependency: See P r2845.0 BO: N Displa descri Displa	RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: RS-FlipFlop to the - FlipFlop 1, inputs a - RS-FlipFlop 1, inp 0 - 4294967295	Reset processing - are defined in - uts are defin	- n P2840 - ned in P2	ce. [0], P2	- :840[1].	- See r.	2811 fd	or the bit	field						
[1] Dependency: P2801 r2841.0 BO: Q Displa descri Dependency: See P r2842.0 BO: N Displa descri Dependency: See P P2843[01] BI: RS P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri Dependency: See P r2845.0 BO: N Displa descri Displa	RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	Binector input: RS-FlipFlop to the - FlipFlop 1, inputs a - RS-FlipFlop 1, inp 0 - 4294967295	Reset processing - are defined in - uts are defin	- n P2840 - ned in P2	[0], P2	-	-		or the bit	field						
Dependency: P2801 r2841.0 BO: Q Displa descri Dependency: See P r2842.0 BO: N Displa descri Dependency: See P P2843[01] BI: RS P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri Dependency: See P	RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	RS-FlipFlop to the - FlipFlop 1, inputs a - RS-FlipFlop 1, inp 0 - 4294967295	processing - are defined in - uts are defir	- n P2840 - ned in P2	[0], P2	-	-		or the bit	field						
r2841.0 BO: Q Displa descri Dependency: See P r2842.0 BO: N Displa descri Dependency: See P P2843[01] BI: RS P2843 P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri Displa descri	RS-FF 1 ys output of RS-F otion. 2840 OT-Q RS-FF 1 ys Not-output of F otion. 2840 -FF 2 [0], P2843[1] defi	- FlipFlop 1, inputs a - RS-FlipFlop 1, inp 0 - 4294967295	are defined in	- n P2840 - ned in P2	[0], P2	-	-		or the bit	field						
Displa descri	ys output of RS-Fotion. 2840 OT-Q RS-FF 1 ys Not-output of Fotion. 2840 -FF 2 [0], P2843[1] defi	- RS-FlipFlop 1, inp 0 - 4294967295	- uts are defir	- ned in P2		-	-		or the bit	field						
Dependency: See P r2842.0 BO: N Displates Dependency: See P P2843[01] BI: RS P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displates Dependency: See P P2845.0 BO: N Displates Displates Displates Dependency: See P Displates Displates Dependency: See P Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displates Displat	otion. 2840 OT-Q RS-FF 1 ys Not-output of Fotion. 2840 -FF 2 [0], P2843[1] defi	- RS-FlipFlop 1, inp 0 - 4294967295	- uts are defir	- ned in P2		-	-									
r2842.0 BO: N Displa descri Dependency: See P P2843[01] BI: RS P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri	OT-Q RS-FF 1 ys Not-output of Fotion. 2840 -FF 2 [0], P2843[1] defi	0 - 4294967295	T	1	2840[0	-], P284	- 0[1]. S	ee r28	U ₁₆	3						
Displate	ys Not-output of Fotion. 2840 -FF 2 [0], P2843[1] defi	0 - 4294967295	T	1	2840[0	-], P284	- 0[1]. S	ee r28	U16	3						
Dependency: See P.	otion. 2840 -FF 2 [0], P2843[1] defi	0 - 4294967295	T	1	2840[0]], P284	0[1]. S	ee r28								
P2843[01] BI: RS P2843 P2843 P2843 P2843 P2801 P280	-FF 2 [0], P2843[1] defi	-	0	ППТ		Displays Not-output of RS-FlipFlop 1, inputs are defined in P2840[0], P2840[1]. See r2811 for the bit field description. See P2840										
P2843 Index: See P Dependency: P2801 r2844.0 BO: Q Displa descrip Dependency: See P r2845.0 BO: N Displa descrip Displa Displ	[0], P2843[1] defi	-	0	III T			-		1							
Index: See P Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri		ine inputs of RS-F				-	-		U32	3						
Dependency: P2801 r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri Displa descri	0040		lipFlop 2, οι	utputs ar	e r284	4, r284	5.									
r2844.0 BO: Q Displa descri Dependency: See P r2845.0 BO: N Displa descri																
Displa descri Dependency: See P r2845.0 BO: N Displa descri		RS-FlipFlop to the	processing	sequen	ce.				1	Τ_						
descri Dependency: See P. r2845.0 BO: N Displa descri		- -	-	- -	[0] D0	-		2044.6	U16	3						
r2845.0 BO: N Displa descri	otion.	FlipFlop 2, inputs a	are defined i	n P2843	[0], P2	.843[1].	See n	2811 fc	or the bit	tield						
Displa descri							1		1	Т.						
descri	OT-Q RS-FF 2	-	-	-		-	-		U16	3						
Dependency: See P.	•	RS-FlipFlop 2, inp	uts are defir	ned in P2	2843[0]], P284	3[1]. S	ee r28	11 for th	e bit field						
		ı			1		-		1							
P2846[01] BI: RS	-FF 3	0 - 4294967295	0	U, T		-	-		U32	3						
P2846	[0], P2846[1] defi	ine inputs of RS-F	lipFlop 3, οι	utputs ar	e r284	7, r284	8.									
Index: See P.	2840															
Dependency: P2801	[16] assigns the F	RS-FlipFlop to the	processing	sequen	ce.	•			1							
r2847.0 BO : Q	RS-FF 3	-	-	-		-	-		U16	3						
Displa descri		FlipFlop 3, inputs a	are defined i	n P2846	[0], P2	846[1].	See r	2811 fc	or the bit	field						
Dependency: See P.	2846															
r2848.0 BO: N		-	-	-		-	-		U16	3						
Displa descri	OT-Q RS-FF 3	Displays Not-output of RS-FlipFlop 3, inputs are defined in P2846[0], P2846[1]. See r2811 for the bit field														
Dependency: See P.	ys Not-output of F	RS-FilpFlop 3, Inp	uts are defir													

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
P2849	BI: Timer 1	0 - 4294967295	0	U, T	-	-	U32	3			
1 2040	Define input signal	4294967295 of timer 1. P2849, P P2850 (0.0 P2800 P2802 0 Delay Tim ON Delay ON/OFF Delay ON/OFF Delay Pulse Genera	2850, P2851 00) P2851(0) 1/11 0/2/12		of the times						
	Out P2851 = 0 (ON D P2851 = 1 (OFF I	P2850 Delay) FF Delay) P2850		P2850	_, 	t					
	P2851 = 3 (Pulson	e Generator)				t					
	In Out	P2850			>	t					
	Doggardi-	P2850									
Dependency:		he timer to the proce					T:	Τ_			
P2850	Delay time of times Defines delay time		0.0 2850, P2851	U, T	- s of the timer	- -, outputs	Float are r285	3 2, r2853.			
	Defines delay time of timer 1. P2849, P2850, P2851 are the inputs of the timer, outputs are r2852, r2853. See P2849										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level	
P2851	Mode timer 1	0 - 13	0	U, T	-	-	U16	3	
	Selects mode of timer 1.	P2849. P2850. F	2851 are th	· · ·	e timer. out	puts are r	2852. r28	353.	
	0	ON delay (seco		p		p			
	1	OFF delay (sed							
	2	ON/OFF delay							
	3	Pulse generato							
	10	ON delay (minu	utes)						
	11	OFF delay (mir	nutes)						
	12	ON/OFF delay	(minutes)						
	13	Pulse generate	r (minutes)						
Dependency:	See P2849								
r2852.0	BO: Timer 1	-	-	-	-	-	U16	3	
	Displays output of timer? See r2811 for the bit field		, P2851 are	the inputs of	the timer, o	utputs are	r2852, r	2853.	
Dependency:	See P2849								
r2853.0	BO: Nout timer 1	-	-	-	-	-	U16	3	
	Displays Not-output of tin r2853. See r2811 for the			are the input	s of the time	er, outputs	are r28	52,	
Dependency:	See P2849								
P2854	BI: Timer 2	0 - 4294967295	0	U, T	-	_	U32	3	
	Define input signal of tim	er 2. P2854, P28	355, P2856 a	re the inputs	of the time	r, outputs	are r285	7, r2858.	
Dependency:	P2802[1] assigns the timer to the processing sequence.								
P2855	Delay time of timer 2 [s]	0.0 - 9999.9	0.0	U, T	-	-	Float	3	
	Defines delay time of tim		355, P2856 a	re the inputs	of the time	r, outputs	are r285	7, r2858.	
Dependency:	See P2854	·	·			· .			
P2856	Mode timer 2	0 - 13	0	U, T	-	-	U16	3	
	Selects mode of timer 2.	P2854, P2855, F	2856 are th		e timer, out	puts are r	2857, r28	358.	
	See P2851 for value des			•	,	•	,		
Dependency:	See P2854	·							
r2857.0	BO: Timer 2	-	-	-	-	-	U16	3	
	Displays output of timer 2 See r2811 for the bit field		, P2856 are	the inputs of	the timer, o	utputs are		2858.	
Dependency:	See P2854								
r2858.0	BO: Nout timer 2	-	-	-	-	-	U16	3	
	Displays Not-output of tin See r2811 for the bit field	•	855, P2856	are the inputs	of the time	r, outputs	are r285	7, r2858	
Dependency:	See P2854	·							
P2859	BI: Timer 3	0 - 4294967295	0	U, T	-	_	U32	3	
	Define input signal of tim				of the time	r, outputs	1	1	
Dependency:	P2802[2] assigns the tim							,	
P2860	Delay time of timer 3 [s]	0.0 - 9999.9	0.0	U, T	-	T_	Float	3	
	Defines delay time of tim	1	1		of the time	r. outputs		1	
Dependency:	See P2859	5. 5. 1 2500, 1 20		o mpato	5. a.o ao.	, carparo		_,000.	

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2861	Mode timer 3	0 - 13	0	U, T	-	-	U16	3
	Selects mode of timer 3. P2851 for value descripti		2861 are th	ne inputs of th	ne timer, out	puts are r	2862, r28	363. See
Dependency:	See P2859							•
r2862.0	BO: Timer 3	-	-	-	-	-	U16	3
	Displays output of timer 3 See r2811 for the bit field	•	, P2861 are	the inputs of	the timer, o	utputs are	r2862, r	2863.
Dependency:	See P2859	1		1	1			1
r2863.0	BO: Nout timer 3	-	-	-	-	-	U16	3
	Displays Not-output of tin r2863. See r2811 for the			are the input	s of the time	er, outputs	s are r28	62,
Dependency:	See P2859	1		1	_	•	_	_
P2864	BI: Timer 4	0 - 4294967295	0	U, T	-	-	U32	3
	Define input signal of timer 4	1. P2864, P2865, F	P2866 are the	inputs of the ti	mer, outputs	are P2867,	, P2868.	
Dependency:	P2802[3] assigns the time	er to the process	sing sequen	ce.				
P2865	Delay time of timer 4 [s]	0.0 - 9999.9	0.0	U, T	-	-	Float	3
	Defines delay time of time	er 4. P2864, P28	365, P2866 a	are the inputs	of the time	r, outputs	are r286	7, r2868.
Dependency:	See P2864							
P2866	Mode timer 4	0 - 13	0	U, T	-	-	U16	3
	Selects mode of timer 4. P2851 for value descripti		P2866 are th	ne inputs of th	ne timer, out	puts are r	2867, r28	868. See
Dependency:	See P2864							
r2867.0	BO: Timer 4	-	-	-	-	-	U16	3
	Displays output of timer ² See r2811 for the bit field		, P2866 are	the inputs of	the timer, o	utputs are	: r2867, r	2868.
Dependency:	See P2864							
r2868.0	BO: Nout timer 4	-	-	-	-	-	U16	3
	Displays Not-output of tin r2868. See r2811 for the			are the input	s of the time	er, outputs	s are r28	67,
Dependency:	See P2864							
P2869[01]	CI: ADD 1	0 - 4294967295	0	U, T	4000H	-	U32	3
	Define inputs of Adder 1, P2800 P20 P2869 Index 0 Index 1 x1+x2		r2870 R	Result = x1 + x2 > 20 x1 + x2 < -20 x1 + x2 < -20	0% → Res	ult = 200% ult =-200%		
Index:	[0]	Connector inpu	ut 0 (CI 0)					
	[1]	Connector inpu						
Dependency:	P2802[4] assigns the Add			nce.				
r2870	CO: ADD 1	-	-	-	_	_	Float	3
	Result of Adder 1.	1	<u> </u>				1	1
Dependency:	See P2869							
_ 	1550. 2000							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
P2871[01]	CI: ADD 2	0 - 4294967295	0	U, T	4000H	-	U32	3
	Define inputs of Adder 2,	result is in r2872	2.					
Index:	See P2869							
Dependency:	P2802[5] assigns the Add	der to the proces	sing seguer	nce.				
r2872	CO: ADD 2	ļ_	-	-	_	-	Float	3
	Result of Adder 2.	I	I		I			I
Dependency:	See P2871							
P2873[01]	CI: SUB 1	0 - 4294967295	0	U, T	4000H	-	U32	3
	P2873 x1 x1 x1 x1 x1 x1 x1 x2 x1 x1 x2		r ₂₈₇₄ R	esult = x1 - x : x1 - x2 > 20 x1 - x2 < -20	0% → Res	sult = 200% sult =-200%		
Index:	See P2869							
Dependency:	P2802[6] assigns the Sub	otractor to the nr	ncessing se	GUANCA				
r2874	CO: SUB 1			-		Τ_	Float	3
12014	Result of Subtractor 1.					1	Tioat	10
Dependency:	See P2873							
P2875[01]	CI: SUB 2	0 - 4294967295	0	U, T	4000H	_	U32	3
	Define inputs of Subtractor			_ ,				1
Index:	See P2869	,	-					
Dependency:	P2802[7] assigns the Sub	otractor to the pr	ocessing se	quence.				
r2876	CO: SUB 2	-	-	-	-	-	Float	3
	Result of Subtractor 2.							
Dependency:	See P2875							
P2877[01]	CI: MUL 1	0 - 4294967295	0	U, T	4000H	-	U32	3
	Define inputs of Multiplier P2800 P2802[1 P2877 Index 0 Index 1 x1 x2 x1+x2 100%		Res	$ult = \frac{x1 * x2}{100\%}$ $\frac{(1 * x2)}{100\%} > 200\%$ $\frac{(1 * x2)}{100\%} < -200\%$				
Index:	See P2869							
Dependency:	P2802[8] assigns the Mu	tiplier to the pro	cessing sequ	uence.	Т	1		
r2878	CO: MUL 1	-	-	-	-	-	Float	3
	Result of Multiplier 1.							
Dependency:	See P2877	1	T		T	1		1
P2879[01]	CI: MUL 2	0 - 4294967295	0	U, T	4000H	-	U32	3
	Define inputs of Multiplier	2, result is in r2	880.					
Index:	See P2869							
Dependency:	P2802[9] assigns the Mu	tiplier to the pro	cessing sequ	uence.				

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r2880	CO: MUL 2	-	-	-	-	-	Float	3			
	Result of Multiplier 2.										
Dependency:	See P2879										
P2881[01]	CI: DIV 1	0 - 4294967295	0	U, T	4000H	-	U32	3			
	Result = $\frac{x1*100\%}{x2}$ Index 1 $\frac{x_1*100\%}{x_2}$ $\frac{x_1*100\%}{$										
Index:	See P2869										
Dependency:	P2802[10] assigns the D	2802[10] assigns the Divider to the processing sequence.									
r2882	CO: DIV 1	-	-	-	-	-	Float	3			
	Result of Divider 1.										
Dependency:	See P2881										
P2883[01]	CI: DIV 2	0 - 4294967295	0	U, T	4000H	-	U32	3			
	Define inputs of Divider 2	2, result is in r288	34.								
Index:	See P2869										
Dependency:	P2802[11] assigns the D	ivider to the proc	essing sequ	ience.							
r2884	CO: DIV 2	-	-	-	-	-	Float	3			
	Result of Divider 2.										
Dependency:	See P2883										
P2885[01]	CI: CMP 1	0 - 4294967295	0	U, T	4000H	-	U32	3			
	Defines inputs of Compa	rator 1, output is	r2886.								
	P2885	Out	X1 ≥ x; X1 < x;	$\begin{array}{c} 2 \rightarrow \text{Out} = 1 \\ 2 \rightarrow \text{Out} = 0 \end{array}$							
Index:	See P2869										
Dependency:	P2802[12] assigns the C	omparator to the	processing	sequence.							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
r2886.0	BO: CMP 1	-	-	-	-	-	Float	3			
	Displays result bit of Con	nparator 1. See i	2811 for the	e bit field des	cription.						
Dependency:	See P2885										
P2887[01]	CI: CMP 2	0 - 4294967295	0	U, T	4000H	-	U32	3			
	Defines inputs of Compa	rator 2, output is	r2888.								
Index:	See P2869										
Dependency:	P2802[13] assigns the C	omparator to the	processing	sequence.							
r2888.0	BO: CMP 2	-	-	-	-	-	U16	3			
	Displays result bit of Con	nparator 2. See i	2811 for the	e bit field des	cription.						
Dependency:	See P2887										
P2889	CO: Fixed setpoint 1 in [%]	-200.00 - 200.00	0.00	U, T	-	-	Float	3			
	Connector Setting in % P2889 P2890 Range: -200% to 200%										
P2890	CO: Fixed setpoint 2 in [%]	-200.00 - 200.00	0.00	U, T	-	-	Float	3			
	Fixed percent setting 2.					•					
P2940	BI: Release wobble function	0 - 4294967295	0.0	Т	-	-	U32	2			
	Defines the source to rele	ease the wobble	function.								
P2945	Wobble signal frequen- cy [Hz]	0.001 - 10.000	1.000	Т	-	-	Float	2			
	Sets the frequency of the	wobble signal.									


Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P2946	Wobble signal a tude [%]	ampli-	0.000 - 0.200	0.000	Т	-	-	Float	2		
	Sets the value for the amplitude of the wobble-signal as a proportion of the present ramp function generator (RFG) output. The value of P2946 is multiplied by the output value of the RFG then added to RFG output. For example, if the RFG output is 10 Hz, and P2946 has a value of 0.100, the wobble signal amplitude will be 0.100 * 10 = 1 Hz. This means that the RFG output will therefore wobble between 9 Hz and 11 Hz.										
P2947	Wobble signal of ment step		0.000 - 1.000	0.000	Т	-	-	Float	2		
	dependant upor	n the sign	nent step at the er al amplitude as fo ement step = P294	llows:	ve signal peri	od. The am	plitude o	f the ste	p is		
P2948	Wobble signal i		0.000 - 1.000	0.000	Т	-	-	Float	2		
	Sets the value for the increment step at the end of the negative signal period. The amplitude of the increment step is dependant upon the signal amplitude as follows: Amplitude of signal increment step = P2948 * P2946										
P2949	Wobble signal p		0 - 100	50	Т	-	-	U16	2		
	falling pulse. A value of 60%	in P2949	means that 60% of the period the wo	of the wobble p	period the wo						
r2955	CO: Wobble sig	gnal	-	-	-	-	-	Float	2		
	Displays the output of the wobble function.								,		
r3113.015	CO/BO: Fault b	it array	-	-	-	-	-	U16	1		
	Gives information	on about a	actual fault.								
	Bit S	Signal nan	ne			1 signal		0 signal			
	00 li	nverter er	ror			Yes		No			
	01 F	Power line	failure			Yes		No			
	02 lı	ntermedia	te circuit power vo	oltage		Yes		No			
	03 E	Frror powe	er electronics			Yes		No			
	04 II	nverter ov	ertemperature			Yes		No			
	05 E	arth leak	age			Yes		No			
	06 N	Notor ove	load			Yes		No			
	07 E	Bus fault				Yes		No			
	09 F	Reserved				Yes		No			
	10 Fault internal communication							No			
	†	Notor curr	ent limit			Yes		No			
	12 8	Supply fail	ure			Yes		No			
		Reserved				Yes		No			
		Reserved				Yes		No			
	15 C	Other erro	r			Yes		No	No		


Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level
r3237[01]	CO: Calculated rms DC ripple voltage [V]	-	0	-	-	-	Float	4
	Displays calculated rms of	lc-link ripple voltage.						
Index:	[0]	Ripple Volts						
	[1]	Unfiltered Volts		•	•	•		•
P3350[02]	Super torque modes	0 - 3	0	Т	-	_	U16	2

Selects the super torque function. Three different super torque modes are available:

- Super Torque applies a pulse of torque for a given time to help start the motor
- Hammer Start applies a sequence of torque pulses to help start the motor
- Blockage Clearing performs a reverse-forward operation to clear a pump blockage

Super Torque Operation:

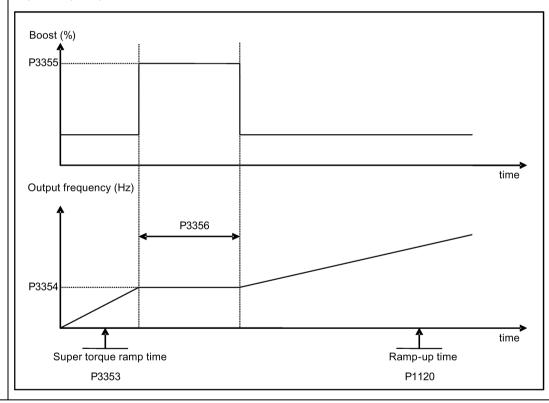

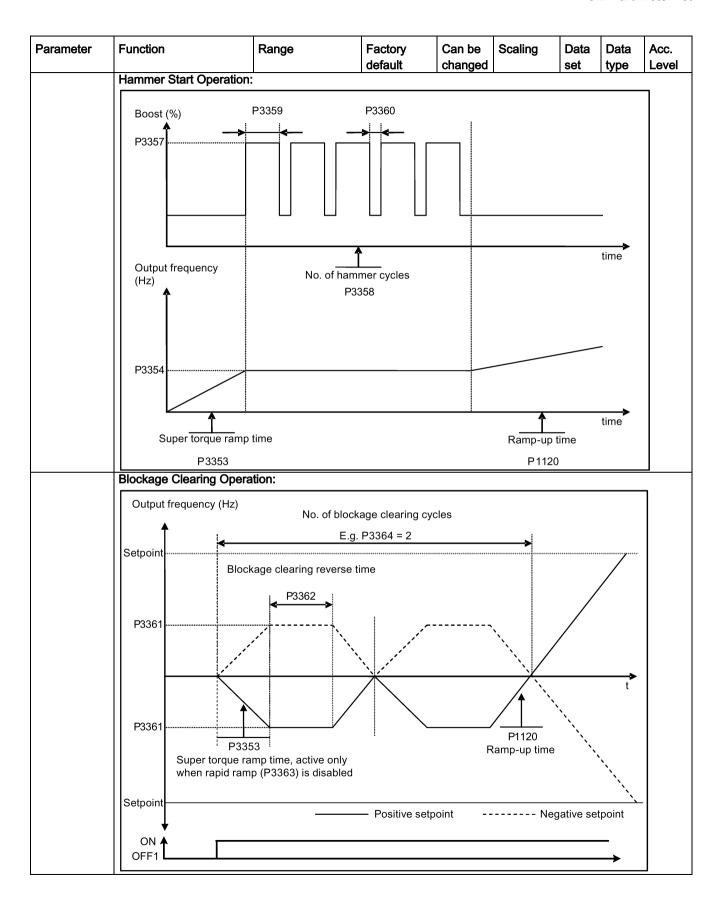

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
	0	Super torque mode	s disabled			•					
	1	Super torque enabl	ed								
	2	Hammer start enab	led								
	3	Blockage clearing e	enabled								
Index:	[0]	Inverter data set 0	(DDS0)								
	[1]	Inverter data set 1	(DDS1)								
	[2]	Inverter data set 2	(DDS2)								
Note:	When the value of P3350	is changed, the valu	ue of P3353 is	changed a	s follows:						
	• P3350 = 2: P3353 = 0	0.0s									
	• P3350 ± 2: P3353 = 0	lefault									
	The ramp time of 0s gives an additional 'kicking' effect when hammer start is in use.										
	This setting can be overridden by the operator.										
	If blockage clearing mode P1032 = P1110 = 0.	e is enabled (P3350	= 3), make sur	e that reve	rse direction	is not in	nhibited,	i.e.			
P3351[02]	BI: Super torque enable	0 - 4294967295	0	Т	-	CDS	U32	2			
	Defines source of the sup	er torque enable wh	en P3352 = 2.								
Dependency:	Applies only when P3352 = 2.										
P3352[02]	Super torque startup mode	0 - 2	1	Т	-	-	U16	2			
	Defines when the super torque function becomes active.										
	0 Enabled on first run after power-up										
	1	Enabled on every r	un								
	2	Enabled by digital in	nput								
Index:	See P3350										
Dependency:	If P3352 = 2, enable sour	ce is defined by P33	51								
P3353[02]	Super torque ramp time [s]	0.0 - 650.0	5.0	Т	-	-	Float	2			
	Defines the ramp time to is ramping to super torque										
Index:	See P3350										
Dependency:	The value of this paramet	er is changed by the	setting of P33	350.							
	See the description of P3	350.									
P3354[02]	Super torque frequency [Hz]	0.0 - 550.0	5.0	Т	-	-	Float	2			
	Defines the frequency at	which the additional	boost is applie	ed for supe	r torque and	hamme	r start m	odes.			
Index:	See P3350										
P3355[02]	Super torque boost level [%]	0.0 - 200.0	150.0	Т	PERCEN T	-	Float	2			
	The magnitude of the Sup	per Torque boost is o	calculated as fo	ollows:							
	V_ST = P0305 * Rsadj * (P3355/100)									
	Note:										
	Rsadj = stator resistance	adjusted for tempera	ature								
	Rsadj = (r0395/100) * (P0	0304/(sqrt(3) * P0305	5)) * P0305 * s	qrt(3)							

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
Index:	See P3350									
Dependency:	Up to 200% of rated motor	or current (P0305) or	limit of inverte	er.						
Note:	The Super Torque boost sistance is used, the calc Continuous Boost.	ulated voltage is onl	y accurate at 0	Hz. There						
	Setting in P0640 (motor of	1		-	1		1			
P3356[02]	Super torque boost time [s]	0.0 - 20.0	5.0	Т	-	-	Float	2		
	Sets the time for which the	e additional boost w	ill be applied, v	when the o	utput freque	ncy is he	eld at P3	354 Hz.		
Index:	See P3350									
P3357[02]	Hammer start boost level [%]	0.0 - 200.0	150.0	Т	PERCEN T	-	Float	2		
	The magnitude of the Ha	mmer Start boost is	calculated as f	ollows:						
	V_HS = P0305 * Rsadj *	(P3357/100)								
	Note:									
	Rsadj = stator resistance	adjusted for tempera	ature							
	Rsadj = (r0395/100) * (P0	Rsadj = (r0395/100) * (P0304/(sqrt(3) * P0305)) * P0305 * sqrt(3)								
Index:	See P3350									
Dependency:	Up to 200% of rated motor	or current (P0305) or	limit of inverte	er.						
Note:	sistance is used, the calc Continuous Boost.	The Hammer Start boost is calculated in the same way as Continuous Boost (P1310). As the stator resistance is used, the calculated voltage is only accurate at 0Hz. Thereafter, it will vary in the same way as Continuous Boost. Setting in P0640 (motor overload factor [%]) limits the boost.								
P3358[02]	Number of hammer cycles	1 - 10	5	C, T	_	_	U16	2		
	The number of times the	hammer start boost	level (P3357) i	l						
Index:	See P3350		, ,							
P3359[02]	Hammer on time [ms]	0 - 1000	300	Т	-	-	U16	2		
	Time for which the addition	onal boost is applied	for each repet	ition.	I.		ı			
Index:	See P3350									
Dependency:	The time must be at least	t 3 x motor magnetiz	ation time (P0	346).						
	Hammer off Time [ms]		100	ĪΤ	_	_	U16	2		
	Time for which the addition			etition.	I	1	<u>. </u>	ı		
Index:	See P3350									
Note:	During this time, the boos	st level drops to the I	evel defined by	y P1310 (ი	ontinuous bo	ost).				
P3361[02]	Blockage clearing frequency [Hz]	0.0 - 550.0	5.0	T	-	-	Float	2		
	Defines the frequency at age clearing reverse sequences		ns in the oppo	site directi	on to the set	point du	ring the	block-		
Index:	See P3350									
P3362[02]	Blockage clearing reverse time [s]	0.0 - 20.0	5.0	Т	-	-	Float	2		
	Sets the time for which the quence.	e inverter runs in the	e opposite dire	ction to the	setpoint du	ring the	reverse	se-		
Index:	See P3350									

Parameter	Function		Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P3363[02]	Enable rapid	ramp	0 - 1	0	Т	-	-	U16	2		
	Selects whet	ther the inve	ter ramps to, or star	ts directly from	, the block	age clearing	frequer	ncy (P33	61).		
	0		Disable rapid ramp	for blockage of	learing						
	1		Enable rapid ramp	for blockage c	learing						
Index:	See P3350										
Note:	If P3363 = 1 clear the blo		umps to the reverse	frequency - thi	s introduce	es a "kicking"	effect v	which he	lps to		
P3364[02]	Number of b clearing cycl	•	1 - 10	1	Т	-	-	U16	2		
	The number	of times the	blockage clearing re	versing cycle i	s repeated	ted.					
Index:	See P3350										
r3365	CO/BO: Stat		-	-	-	-	-	U16	2		
	Shows the o	perational sta	atus of the Super To	rque function,	while active	е.					
	Bit	Signal nan	ne			1 signal		0 signa	al		
	00	Super Toro	que Active			Yes		No			
	01	Super Torque Ramping						No			
	02	Super Toro	que Boost On			Yes		No			
	03	Super Torque Boost Off						No			
	04	Blockage (Clearing Reverse On			Yes		No			
	05	Blockage (Clearing Reverse Off			Yes		No			
P3852[02]	BI: Enable fr	ost protec-	0 - 4294967295	0	U, T	-	CDS	U32	2		
	be initiated. follows: • If P3853	 If P3853 ≠ 0, frost protection is applied by applying the given frequency to the motor If P3853 = 0, and P3854 ≠ 0, condensation protection is applied by applying the given current to the 									
Note:	If inverter If inverter mand over	 If inverter is turning motor due to active protection signal and a RUN command is received, RUN command overrides frost signal 									
P3853[02]	Frost protect		0.00 - 550.00	5.00	U, T	-	DDS	Float	2		
		cy applied to	the motor when fros	t protection is	active.	1		•	1		
Dependency:	See also P3			-							

P3854[02] Condensation protection current [%] 0 - 250 100 U, T - DDS U16 2 The DC current (as a percentage of nominal current) which is applied to the motor when condensation protection is active. Dependency: See also P3852. P3900 End of quick commissioning Performs calculations necessary for optimized motor operation. After completion of calculation, P3900 P0010 (parameter groups for commissioning) are automatically reset to their original value 0. 0 No quick commissioning 1 End quick commissioning with factory reset 2 End quick commissioning 3 End quick commissioning only for motor data Dependency: Changeable only when P0010 = 1 (quick commissioning).	Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level			
Dependency: See also P3852.	P3854[02]		0 - 250	100		-	DDS		2			
Page Page		1	rcentage of nominal	current) which	is applied t	o the motor	when co	ondensa	tion			
Seloning	Dependency:	See also P3852.										
P0010 (parameter groups for commissioning) are automatically reset to their original value 0. No quick commissioning	P3900	-	0 - 3	0	C(1)	-	-	U16	1			
1 End quick commissioning with factory reset 2 End quick commissioning 3 End quick commissioning only for motor data Dependency: Changeable only when P0010 = 1 (quick commissioning). Note: P3900 = 1: When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor callations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick consioning with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Strontrol (communications via Fieldbus): • Parameter fault 30 • Inverter fault 75 r3930[04] Inverter data version U16 3 Displays the A5E number and the inverter data versions. Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits									900 and			
2 End quick commissioning 3 End quick commissioning only for motor data Dependency: Changeable only when P0010 = 1 (quick commissioning). Note: P3900 = 1: When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor calations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick consisting with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Stontrol (communications via Fieldbus): Parameter fault 70 Inverter fault 75 Displays the A5E number and the inverter data versions. Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits		0	No quick commiss	ioning								
Dependency: Changeable only when P0010 = 1 (quick commissioning). Note: P3900 = 1: When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor collations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick consioning with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Stontrol (communications via Fieldbus): Parameter fault 30 Inverter fault 70 Inverter fault 75 Inverter fault 75 Inverter data version A5E 1st 4 digits [1] A5E 2nd 4 digits [2] Logistic Version		1 End quick commissioning with factory reset										
Dependency: Changeable only when P0010 = 1 (quick commissioning). Note: P3900 = 1: When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor callations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick comsioning with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Stoontrol (communications via Fieldbus): Parameter fault 30 Inverter fault 70 Inverter fault 75 Displays the A5E number and the inverter data versions. Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits		2	End quick commis	sioning								
Note: P3900 = 1: When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quick commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor callations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick comsioning with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Sicontrol (communications via Fieldbus): Parameter fault 30 Inverter fault 70 Inverter fault 75 Jisplays the A5E number and the inverter data versions. Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits [2] Logistic Version												
When setting 1 is selected, only the parameter settings carried out via the commissioning menu "Quici commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor callations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick comsioning with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Strontrol (communications via Fieldbus): Parameter fault 30 Inverter fault 70 Inverter fault 75 Displays the A5E number and the inverter data versions. Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits [2] Logistic Version	Dependency:											
commissioning" are retained; all other parameter changes, including the I/O settings, are lost. Motor callations are also performed. P3900 = 2: When setting 2 is selected, only those parameters, which depend on the parameters in the commission menu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default and motor calculations performed. P3900 = 3: When setting 3 is selected, only the motor and controller calculations are performed. Exiting quick consioning with this setting saves time (for example, if only motor rating plate data have been changed). Calculates a variety of motor parameters, overwriting previous values. These include P0344 (motor weight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). When transferring P3900, the inverter uses its processor to carry out internal calculations. Communications - both via USS as well as via the Fieldbus - are interrupted for the time that it takes to make these calculations. This can result in the following error messages at the connected SIMATIC Strontrol (communications via Fieldbus): Parameter fault 30 Inverter fault 70 Inverter data version Jinverter data version ASE 1st 4 digits [1] ASE 2nd 4 digits [2] Logistic Version	Note:											
r3930[04] Inverter data version U16 3 Displays the A5E number and the inverter data versions. Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits [2] Logistic Version		lations are also performed P3900 = 2: When setting 2 is selected menu "Quick commission motor calculations performed P3900 = 3: When setting 3 is selected sioning with this setting 3: Calculates a variety of motor weight), P0350 (stator rewind when transferring P3900 Communications - both make these calculations control (communications - Parameter fault 30 - Inverter fault 70	ommissioning" are retained; all other parameter changes, including the I/O settings, are lost. Moto tions are also performed. 3900 = 2: Then setting 2 is selected, only those parameters, which depend on the parameters in the commissionu "Quick commissioning" (P0010 = 1) are calculated. The I/O settings are also reset to default of otor calculations performed. 3900 = 3: Then setting 3 is selected, only the motor and controller calculations are performed. Exiting quick coning with this setting saves time (for example, if only motor rating plate data have been changed alculates a variety of motor parameters, overwriting previous values. These include P0344 (motor eight), P0350 (stator resistance), P2000 (reference frequency), P2002 (reference current). Then transferring P3900, the inverter uses its processor to carry out internal calculations. The processor is a processor to carry out internal calculations. The parameters are interrupted for the time that it take these calculations. This can result in the following error messages at the connected SIMATIC control (communications via Fieldbus):									
Displays the A5E number and the inverter data versions. Index: [0]	-2020I0 41		T		1		Τ	1146				
Index: [0] A5E 1st 4 digits [1] A5E 2nd 4 digits [2] Logistic Version	10800[04]		or and the inverter do	ta versions	1-	<u> </u> -	1	1010	٦			
[1] A5E 2nd 4 digits [2] Logistic Version	Index.			ta VEI 310113.								
[2] Logistic Version	muex.	İ	_									
			i									
[2] Fixed Data version				`								
[4] Calib Data Version		İ										

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level				
P3950	Access of hidden pa- rameters	0 - 255	0	U, T	-	-	U16	4				
	Accesses special parameters for development (expert only) and factory functionality (calibration parameter).											
r3954[012]	CM info and GUI ID	-	-	-	-	-	U16	4				
	Used to classify firmware	(only for SIEMENS	internal purp	oses).								
Index:	[0]	CM label (incremer	nt/branch)									
	[1]	CM label (counter)										
	[2]	CM label										
	[310]	GUI ID										
	[11]	GUI ID major release										
	[12]	GUI ID minor release										
r3978	BICO counter	-	-	-	-	-	U32	4				
	Counts the number of cha	anged BICO links.										
P3981	Reset active fault	0 - 1	0	Т	-	-	U16	4				
	Resets active faults when changed from 0 to 1.											
	0	0 No fault reset										
	1	Reset fault										
Note:	See P0947 (last fault cod	le)										
	Automatically reset to 0.											
P3984	Client telegram off time [ms]	100 - 10000	1000	Т	-	-	U16	3				
	Defines time after which	a fault will be genera	ted (F73) if n	o telegram i	s received f	rom the	client.					
Dependency:	Setting 0 = watchdog disa	abled										
r3986[01]	Number of parameters	-	-	-	-	-	U16	4				
	Number of parameters or	the inverter.				•	•	•				
Index:	[0]	Read only										
	[1]	Read & write										
r4000 - r4064	Reserved	•										
P7844	Acceptance test, con- firmation	0 - 2	0	Т	-	-	U16	3				
	After an automatic downla fault F395 will be set.	After an automatic download from the SD card at startup, this parameter will be automatically set to 1. Also										
	With setting to P7844 = 0											
	only possible if an autom- undone and the previous				III UIIS CASE	the dov	wilload V	nii be				
	undone and the previously stored parameters will be enabled. 0 Acceptance test/confirmation OK											
	Acceptance test/confirmation on Acceptance test/confirmation is pending											
	2 Undo clone											
Note:		If no automatic download from the SD card has been performed during startup the setting 2 is not possible.										
	If the clone file contains uset to the user defaults in	ser defaults and the	cloning at st	artup is rejed	cted with P7	-						

Parameter	Function	Range	Factory default	Can be changed	Scaling	Data set	Data type	Acc. Level		
P8458	Clone control	0 - 4	2	C, T	-	-	U16	3		
	This parameter specifies If no SD card is inserted			performed	d. The File cl	one00.b	oin will be	e used.		
	0	No startup cloning								
	1	Clone at startup on	Clone at startup once							
	2	Clone at startup always								
	3	Clone at startup once, except the motor data								
	4	Clone at startup alv	vays, except th	ne motor da	ata					
Note:	Default value is 2. After fithe inverter will set a faul by a flashing RUN LED (forming a factory reset.	t F61/F63/F64 which	can only be cl	leared by a	power-cycle	e. The fa	ault is sig	naled		
P8553	Menu type	0 - 1	0	U, T	-	-	U16	1		
	Selects whether to have	have menus with no text or menus with some text on the BOP.								
	0	Menus with no text								
	1	Menus with some to	ext					·		

Faults and alarms

Note

If there are multiple active faults and alarms, the BOP first displays all faults one after another. Once all faults are displayed, it displays all alarms in succession.

9.1 Faults

Immediately when a fault occurs the fault icon shows and the display transitions to the faults screen. The faults screen displays the fault number proceeded by "F".

Acknowledging/clearing faults

- To navigate through the current list of faults, press ▲ or ▼.
- To view the inverter status at fault, press (> 2 s); to return to the fault code display, press (< 2 s).
- To clear/acknowledge the fault, press or acknowledge externally if the inverter has been set up so; to ignore the fault, press ...

After you acknowledge or ignore the fault, the screen returns to the previous display. The fault icon remains active until the fault is cleared/acknowledged.


Note

Under the following circumstances, the faults screen displays again:

- If the fault has not been cleared and the **1** button is pressed, the faults screen displays again.
- If there is no key press for 60 seconds.

If a fault is active and there has been no key press for 60 seconds, the backlight (P0070) flashes.

Viewing inverter status at fault

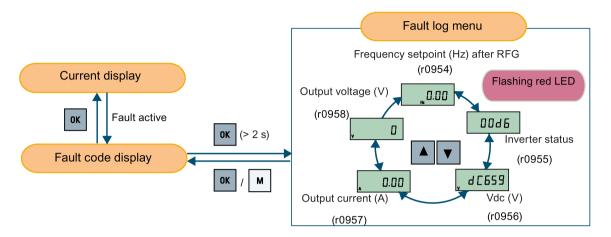

Fault code list

Fault	Cause	Remedy
F1 Overcurrent	 Motor power (P0307) does not correspond to the inverter power (r0206). Motor lead short circuit Earth faults r0949 = 0: Hardware reported r0949 = 1: Software reported r0949 = 22: Hardware reported 	 Check the following: Motor power (P0307) must correspond to inverter power (r0206). Cable length limits must not be exceeded. Motor cable and motor must have no short-circuits or earth faults. Motor parameters must match the motor in use. Value of stator resistance (P0350) must be correct. Motor must not be obstructed or overloaded. Increase ramp-up time (P1120) Reduce starting boost level (P1312)
F2 Overvoltage	 Main supply voltage too high Motor is in regenerative mode r0949 = 0: Hardware reported r0949 = 1 or 2: Software reported 	 Check the following: Supply voltage (P0210) must lie within limits indicated on rating plate. Ramp-down time (P1121) must match inertia of load. Required braking power must lie within specified limits. Vdc controller must be enabled (P1240) and parameterized properly. Note: Regenerative mode can be caused by fast ramp downs or if the motor is driven by an active load. Higher inertia requires longer ramp times; otherwise, apply braking resistor.
F3 Undervoltage	 Main supply failed. Shock load outside specified limits. r0949 = 0: Hardware reported r0949 = 1 or 2: Software reported 	Check supply voltage.

Fault	Cause	Remedy
F4	Inverter overloaded	Check the following:
Inverter over-	Ventilation inadequate	Load or load cycle too high?
temperature	Pulse frequency too high	Motor power (P0307) must match inverter power (r0206)
	Surrounding temperature too high	Pulse frequency must be set to default value
	Fan inoperative	Surrounding temperature too high?
	·	Fan must turn when inverter is running
F5	Inverter overloaded.	Check the following:
Inverter I2t	Load cycle too demanding.	Load cycle must lie within specified limits.
	Motor power (P0307) exceeds	Motor power (P0307) must match inverter power (r0206)
	inverter power capability (r0206).	Note: F5 cannot be cleared until the inverter overload utilization (r0036) is lower than the inverter I²t warning (P0294).
F6	Load at start-up is too high	Check the following:
Chip temperature	Load step is too high	Load or load step too high?
rise exceeds criti- cal levels	Ramp-up rate is too fast	Increase ramp-up time (P1120).
		Motor power (P0307) must match inverter power (r0206).
		• Use setting P0290 = 0 or 2 for preventing F6.
F11	Motor overloaded	Check the following:
Motor overtemper-		Load or load step too high?
ature		Motor nominal overtemperatures (P0626 - P0628) must be correct
		Motor temperature warning level (P0604) must match
	This fault may occur if small mo-	Check the following:
	tors are used and run at a frequency below 15 Hz, even	Motor current is not in excess of the motor nominal current as indicated by the motor rating plate
	though the motor temperature is within limits.	Physical temperature of the motor lies within limits
	within limits.	If these two conditions are satisfied, then set parameter P0335 = 1.
F12	Wire breakage of inverter tempera-	
Inverter tempera- ture signal lost	ture (heat sink) sensor.	
F20	The calculated DC ripple level has exceeded the safe threshold. This is	Check the mains supply wiring.
DC ripple too high	commonly caused by loss of one of the mains input phases.	
F23	The calculated output ripple level	Check the output wiring.
Output current	has exceeded the safe threshold. This is commonly caused by loss of	
ripple too high	one of the output phases.	
F35	Auto restart attempts exceed value	
Maximum number	of P1211.	
of auto restart attempts exceeded		

9.1 Faults

Fault	Cause	Remedy
F41	Motor data identification failed.	Check the following:
Motor data identifi-	• r0949 = 0: No load applied	• r0949 = 0: is the motor connected to the inverter?
cation failure	r0949 = 1: Current limit level reached during identification.	• r0949 = 1 - 49: are the motor data in P0304 - P0311 correct?
	• r0949 = 2: Identified stator resistance less than 0.1% or greater than 100%.	Check what type of motor wiring is required (star, delta).
	r0949 = 30: Current controller at voltage limit	
	r0949 = 40: Inconsistency of identified dataset, at least one identification failed	
	Percentage values based on the impedance Zb = Vmot,nom/sqrt(3)/lmot,nom	
F51 Parameter	Read or write failure while access to EEPROM. This can also be caused	Must be power-cycled to cancel this bug as some parameters may not be read correct.
EEPROM fault	by the EEPROM being full, too many parameters have been changed.	Factory reset and new parameterization, if power-cycle does not remove fault.
		Change some parameters back to default values if the EEPROM is full, then power-cycle.
		Change inverter.
		Note:
		• r0949 = 1: EEPROM full
		r0949 = 1000 + block No: reading data block failed
		r0949 = 2000 + block No: reading data block timeout
		r0949 = 3000 + block No: reading data block CRC failed
		r0949 = 4000 + block No: writing data block failed
		r0949 = 5000 + block No: writing data block timeout
		• r0949 = 6000 + block No: writing data block verify failed
		r0949 = 7000 + block No: reading data block at wrong time
		• r0949 = 8000 + block No: writing data block at wrong time
		r0949 = 9000 + block No: factory reset did not work be- cause restart or power failure

Fault	Cause	Remedy
F52	Read failure for inverter information	Note:
Inverter software	or invalid data.	r0949 = 1: Failed reading inverter identity
fault		• r0949 = 2: Inverter identity wrong
		r0949 = 3: Failed reading inverter version
		• r0949 = 4: Inverter version wrong
		r0949 = 5: Start of Part 1 inverter data wrong
		• r0949 = 6: Inverter number of temperature sensor wrong
		• r0949 = 7: Inverter number of application wrong
		r0949 = 8: Start of Part 3 inverter data wrong
		r0949 = 9: Reading inverter data string wrong
		r0949 = 10: Inverter CRC failed
		• r0949 = 11: Inverter is blank
		• r0949 = 15: Failed CRC of inverter block 0
		• r0949 = 16: Failed CRC of inverter block 1
		• r0949 = 17: Failed CRC of inverter block 2
		r0949 = 20: Inverter invalid
		• r0949 = 30: Directory size wrong
		• r0949 = 31: Directory ID wrong
		• r0949 = 32: Invalid block
		• r0949 = 33: File size wrong
		• r0949 = 34: Data section size wrong
F52 (continued)		r0949 = 35: Block section size wrong
		• r0949 = 36: RAM size exceeded
		r0949 = 37: Parameter size wrong
		r0949 = 38: Device header wrong
		r0949 = 39: Invalid file pointer
		• r0949 = 40: Scaling block version wrong
		r0949 = 41: Calibration block version wrong
		• r0949 = 50: Wrong serial number format
		r0949 = 51: Wrong serial number format start
		• r0949 = 52: Wrong serial number format end
		• r0949 = 53: Wrong serial number format month
		• r0949 = 54: Wrong serial number format day
		• r0949 = 1000 + addr: Inverter read data failed
		• r0949 = 2000 + addr: Inverter write data failed
		r0949 = 3000 + addr: Inverter read data wrong time
		• r0949 = 4000 + addr: Inverter write data wrong time
		r0949 = 5000 + addr: Inverter read data invalid
		r0949 = 6000 + addr: Inverter write data invalid
		Power-cycle inverter
		Contact service department or change inverter

9.1 Faults

Fault	Cause	Remedy	
F60	Internal communications failure.	Check inverter.	
Asic timeout		Fault appears sporadically:	
		Note:	
		r0949 = 0: Hardware reported link fail	
		r0949 = 1: Software reported link fail	
		r0949 = 6: Feedback is not disabled for reading inverter data	
		r0949 = 7: During inverter download, message didn't transmit to disable feedback	
		Communication failure due to EMC problems	
		Check - and if necessary - improve EMC	
		Use EMC filter	
F61 SD card parameter cloning failed	 Parameter cloning failed. r0949 = 0: The SD card is not connected or the card type is incorrect or the card failed to initialize for automatic cloning. r0949 = 1: Inverter data cannot be written to the card. r0949 = 2: Parameter cloning file is unavailable. r0949 = 3: The SD card cannot read the file. r0949 = 4: Reading data from the clone file failed (e.g., reading failed, data or checksum wrong). File exists but the contents are not valid control word corruption. 	 r0949 = 0: Use an SD card with FAT16 or FAT32 format, or fit an SD card to the inverter. r0949 = 1: Check the SD card (for example, is the card memory full?) - format the card again to FAT16 or FAT32. r0949 = 2: Put the correct named file in the correct directory /USER/SINAMICS/DATA. r0949 = 3: Make sure file is accessible - recreate file if possible. r0949 = 4: File has been changed - recreate file. Recopy and ensure operation completes.	
Parameter cloning contents invalid	valid control word corruption.		
F63 Parameter cloning contents incompatible	File exists but was not the correct inverter type.	Ensure clone from compatible inverter type.	
F64	No Clone00.bin file in the correct	If an automatic clone is required:	
Inverter attempted	directory /USER/SINAMICS/DATA.	Insert the SD card with correct file and power-cycle.	
to do an automatic clone during		If no automatic clone is required:	
startup		Remove the card if not needed and power-cycle.	
		Reset P8458 = 0 and power-cycle.	
		Note:	
		Fault can only be cleared by a power-cycle.	
F70 I/O Extension Module communication fault	Communication is no longer established with the I/O Extension Module.	Reconnect the module and check whether it is operating correctly. Acknowledge the fault. If the fault persists, replace the module.	

Coult	Cause	Domody.	
Fault F71	No cotroint values from USS during	Remedy Check USS master	
USS setpoint fault	No setpoint values from USS during telegram off time	Officer Ood master	
F72 USS/MODBUS setpoint fault	No setpoint values from USS/MODBUS during telegram off time	Check USS/MODBUS master	
F80	Broken wire		
Signal lost on ana- log input	Signal out of limits		
F85 External fault	External fault triggered via command input via control word 2, bit 13.	 Check P2106. Disable control word 2 bit 13 as command source. Disable terminal input for fault trigger. 	
F100	Software error	Contact service department or change inverter.	
Watchdog reset			
F101 Stack overflow	Software error or processor failure.	Contact service department or change inverter.	
F200 Script error	Script of the internal inverter program has stopped running due to script errors except for forced exit.	Check the script and make necessary corrections.	
F221 PID feedback below minimum value	PID feedback below minimum value P2268.	Change value of P2268.Adjust feedback gain.	
F222 PID feedback above maximum value	PID feedback above maximum value P2267.	Change value of P2267.Adjust feedback gain.	
F350 Configuration vector for the inverter failed	 During startup the inverter checks if the configuration vector (SZL vector) has been programmed correctly and if hardware matches the programmed vector. If not the inverter will trip. r0949 = 1: Internal failure - no hardware configuration vector available. r0949 = 2: Internal failure - no software configuration vector available. r0949 = 11: Internal failure - inverter code not supported. 	Internal failures cannot be fixed. r0949 = 13 - Make sure the right power module is fitted. Note: Fault needs power-cycle to be acknowledged.	
	 r0949 = 12: Internal failure - software vector not possible. r0949 = 13: Wrong power module fitted. r0949 > 1000: Internal failure - wrong I/O board fitted. 		

9.1 Faults

Fault	Cause	Remedy
F395 Acceptance test/confirmation pending	This fault occurs after a startup clone. It can also be caused by a faulty read from the EEPROM, see F51 for more details.	The current parameter set needs to be checked and confirmed by clearing the fault.
	A startup clone could have changed and might not match the application.	
	This parameter set needs to be checked before the inverter can start a motor.	
	• r0949 = 3/4: Inverter data change	
	r0949 = 5: Startup clone via an SD card has been performed	
	r0949 = 10: Previous startup clone was aborted	
F410 Cavitation protection failure	Conditions exist for cavitation damage. Cavitation damage is damage caused to a pump in pumping systems when the fluid is not flowing sufficiently. This can lead to heat build up and subsequent damage to the pump.	If cavitation is not occurring, reduce the cavitation threshold P2361, or increase the cavitation protection delay. Ensure sensor feedback is working.
F452	Load conditions on motor indicate	Check the following:
Load monitoring	belt failure or mechanical fault.	No breakage, seizure or obstruction of inverter train.
trip	• r0949 = 0: trip low torque/speed	Apply lubrication if required.
	• r0949 = 1: trip high torque/speed	If using an external speed sensor, check the following parameters for correct function:
		- P2192 (delay time for permitted deviation)
		- P2182 (threshold frequency f1)
		- P2183 (threshold frequency f2)
		- P2184 (threshold frequency f3)
		If using a specific torque/speed range, check parameters:
		- P2182 (threshold frequency 1)
		- P2183 (threshold frequency 2)
		- P2184 (threshold frequency 3)
		- P2185 (upper torque threshold 1)
		- P2186 (lower torque threshold 1)
		- P2187 (upper torque threshold 2)
		- P2188 (lower torque threshold 2)
		- P2189 (upper torque threshold 3) - P2190 (lower torque threshold 3)
		· · · · · · · · · · · · · · · · · · ·
		- P2192 (delay time for permitted deviation)

9.2 Alarms

If an alarm is activated the alarm icon \blacktriangle shows immediately and then the display shows the alarm code proceeded by "A".

Note

Note that alarms cannot be acknowledged. They are cleared automatically once the warning has been rectified.

Alarm code list

Alarm	Cause	Remedy	
A501 Current limit	Motor power does not correspond to the inverter power Motor leads are too long Earth faults	See F1.	
	Small motors (120 W) under FCC and light load may cause a high current	Use V/f operation for very small motors	
A502 Overvoltage limit	Overvoltage limit is reached. This warning can occur during ramp down, if the Vdc controller is disabled (P1240 = 0).	If this warning is displayed permanently, check inverter input voltage.	
A503 Undervoltage limit	 Main supply failed. Main supply and consequently DC-link voltage (r0026) below specified limit. 	Check main supply voltage.	
A504 Inverter overtemperature	Warning level of inverter heat sink temperature, warning level of chip junction temperature, or allowed change in temperature on chip junction is exceeded, resulting in pulse frequency reduction and / or output frequency reduction (depending on parameterization in P0290).	Note: r0037[0]: Heat sink temperature r0037[1]: Chip junction temperature (includes heat sink) Check the following: Surrounding temperature must lie within specified limits Load conditions and load steps must be appropriate Fan must turn when inverter is running	
A505 Inverter I ² t	Warning level exceeded, current will be reduced if parameterized (P0610 = 1).	Check that load cycle lies within specified limits.	
A506 IGBT junction temperature rise warning	Overload warning. Difference between heat sink and IGBT junction temperature exceeds warning limits.	Check that load steps and shock loads lie within specified limits.	
A507 Inverter temperature signal lost	Inverter heat sink temperature signal loss. Possible sensor fallen off.	Contact service department or change inverter.	

9.2 Alarms

Alarm	Cause	Remedy
A511 Motor overtemperature I²t	 Motor overloaded. Load cycles or load steps too high. 	 Independently of the kind of temperature determination check: P0604 motor temperature warning threshold P0625 motor surrounding temperature Check if name plate data is correct. If not, perform quick commissioning. Accurate equivalent circuit data can be found by performing motor identification (P1900 = 2). Check if motor weight (P0344) is reasonable. Change if necessary. With P0626, P0627, and P0628 the standard overtemperature can be changed, If the motor is not a SIEMENS standard motor.
A535 Braking resistor overload A541 Motor data identification active	The braking energy is too large. The braking resistor is not suited for the application. Motor data identification (P1900) selected or running.	Reduce the braking energy. Use a braking resistor with a higher rating.
A600 RTOS overrun warning	Internal time slice overrun	Contact service department.
A910 Vdc_max controller de- activated	 Occurs if main supply voltage (P0210) is permanently too high. if motor is driven by an active load, causing motor to go into regenerative mode. at very high load inertias, when ramping down. If warning A910 occurs while the inverter is in standby (output pulses disabled) and an ON command is subsequently given, the Vdc_max controller (A911) will not be activated unless warning A910 is rectified. 	 Check the following: Input voltage must lie within range. Load must be match. In certain cases apply braking resistor.
A911 Vdc_max controller active	The Vdc_max controller works to keep the DC-link voltage (r0026) below the level specified in r1242.	 Check the following: Supply voltage must lie within limits indicated on rating plate. Ramp-down time (P1121) must match inertia of load. Note: Higher inertia requires longer ramp times; otherwise, apply braking resistor.


Alarm	Cause	Remedy
A912 Vdc_min controller active	The Vdc_min controller will be activated if the DC-link voltage (r0026) falls below the level specified in r1246.	
	The kinetic energy of the motor is used to buffer the DC-link voltage, thus causing deceleration of the inverter! So short mains failures do not necessarily lead to an undervoltage trip.	
	Note that this warning may also occur on fast ramp-ups.	
A921	Analog output parameters (P0777 and	Check the following:
Analog output parame-	P0779) should not be set to identical values, since this would produce illogical re-	Parameter settings for output identical
ters not set properly	sults.	Parameter settings for input identical
		Parameter settings for output do not correspond to analog output type Set P0777 and P0779 to different values.
A922	No Load is applied to the inverter	Check that motor is connected to inverter.
No load applied to inverter	No Load is applied to the inverter. As a result, some functions may not work as under normal load conditions.	Check that motor is connected to inverter.
A923	Both JOG right and JOG left	Do not press JOG right and left simultaneously.
Both JOG left and JOG right are requested	(P1055/P1056) have been requested. This freezes the RFG output frequency at its current value.	
A930	Conditions exist for possible cavitation	See F410.
Cavitation protection warn	damage.	
A936	PID autotuning (P2350) selected or running	Warning disappears when PID autotuning has fin-
PID autotuning active		ished.
A952	Load conditions on motor indicate belt fail-	See F452.
Load monitoring warning	ure or mechanical fault.	

9.2 Alarms

Technical specifications



Line supply characteristics

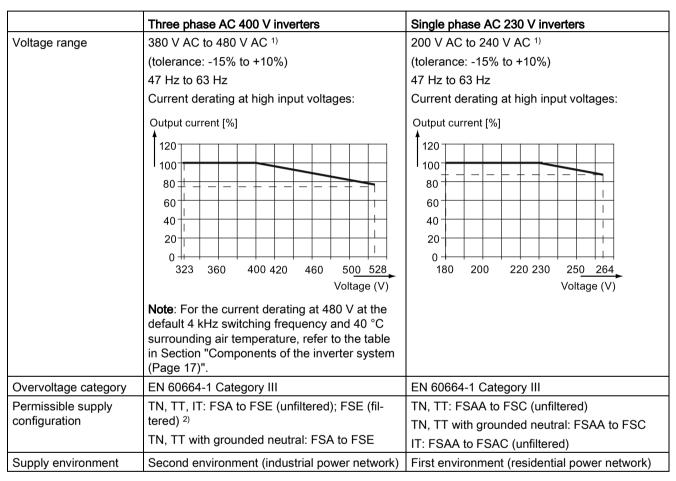

¹⁾ When the input voltage is below the rated value, current deratings are permissible and therefore the voltage-dependent speed and/or torque may be reduced.

²⁾ To operate FSE (filtered) on IT power supply, make sure you remove the screw for the EMC filter.

Overload capability

Power rating (kW)	Average output current	Overload current	Maximum overload cycle
0.12 to 15 18.5 (HO)/22 (HO)	100% rated	150% rated for 60 seconds	150% rated for 60 seconds followed by 94.5% rated for 240 seconds
22 (LO)/30 (LO)		110% rated for 60 seconds	110% rated for 60 seconds followed by more than 98% rated for 240 seconds

EMC requirements

Note

Install all inverters in accordance with the manufacturer's guidelines and in accordance with good EMC practices.

Use copper screened cable. For the maximum motor cable lengths, refer to Section "Terminal description (Page 39)".

Do not exceed the default switching frequency.

	Three phase AC 400 V inverters	Single phase AC 230 V inverters
ESD	EN 61800-3	EN 61800-3
Radiated immunity		
Burst		
Surge		
Conducted immunity		
Voltage distortion immunity		
Conducted emissions	Three phase AC 400 V filtered inverters:	Single phase AC 230 V filtered inverters:
Radiated emissions	EN 61800-3 Category C2/C3	EN 61800-3 Category C1/C2

Maximum power losses

Three ph	Three phase AC 400 V inverters																
Frame siz	ze	FSA						FSB		FSC	FSD			FSE			
Power	` '		0.55	0.75	1.1	1.5	2.2	3	4	5.5	7.5	11	15	18.5	22	22	30
rating										НО	LO	НО	LO				
	(hp)		0.75	1	1.5	2	3	5	5	7.5	10	15	20	25	30	30	40
														НО	LO	НО	LO
Maximum power loss (w) 1)		25	28	33	43	54	68	82	100	145	180	276	338	387	475	457	626

¹⁾ With I/O fully loaded

Single pl	Single phase AC 230 V inverters											
Frame size FSAA/FSAB FSAC FSB FSC												
Power	(kW)	0.12 0.25 0.37 0.55 0.7					1.1	1.5	1.1 1.5		2.2	3.0
rating	rating (hp) 0.17 0.3		0.33	0.5	0.75	1	1.5	2	1.5	2	3	4
Maximum power loss (w) 1)		14	22	29	39	48	57	87	72	95	138	177

¹⁾ With I/O fully loaded

Note

Power losses are given for nominal supply voltage, default switching frequency, and rated output current. Changing these factors may result in increased power losses.

Harmonic currents

In order that you may operate a 230 V V20 inverter in the first environment, Category C2, you must observe the limit values for harmonic currents. V20 inverters are professional equipment for use in trades, professions or industries and are not intended for sale to the general public.

Note

Observing the limit values for harmonic currents

With respect to the compliance with limits for harmonic currents, the EMC product standard EN 61800-3 for V20 230 V inverters refers to compliance with standards EN 61000-3-2 and EN 61000-3-12.

- V20 230 V inverters with the rated output power ≤1 kW and rated input current ≤ 16 A:
 - It cannot be guaranteed that the limit values are complied with EN 61000-3-2. The installation person/company or company operating the professionally used device must obtain authorization from the grid operator to connect the device regarding the harmonic currents. For more information about typical harmonic currents of V20 230 V inverters, see the following table.
- V20 230 V inverters with the rated output power > 1 kW and rated input current ≤ 16 A:
 These devices are not subject to any limit values, and as a consequence can be connected to the public low-voltage grid without any prior consultation.
- V20 230 V inverters with the rated input current > 16 A and ≤ 75 A:

It cannot be guaranteed that the limit values are complied with EN 61000-3-12. The installation person/company or company operating the professionally used device must obtain authorization from the grid operator to connect the device regarding the harmonic currents. For more information about typical harmonic currents of V20 230 V inverters, see the following table.

Typical harmonic currents of V20 230 V inverters

Single phase AC 230	Typical harmonic current (% of rated input current) at U _K 4%												
V inverters	3rd	5th	7th	9th	11th	13th	17th	19th	23rd	25th	29th		
Frame size AA/AB	42	40	37	33	29	24	15	11	4	2	1		
Frame size AC	53	42	31	23	16	11	2	3	2	1	1		
Frame size B	49	44	37	29	21	13	2	1	2	2	0		
Frame size C	54	44	31	17	6	2	7	6	2	0	0		

Output current deratings at different PWM frequencies and surrounding air temperatures

Three pha	ase AC 400 V i	nverters											
Frame	Power rat-	Curren	t rating [A] at PV	VM frequ	ency							
size	ing [kW]	PWM f	requenc	y range:	2 kHz to	16 kHz	(default	: 4 kHz)					
		2 kHz			4 kHz			6 kHz			8 kHz		
		40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C
Α	0.37	1.3	1.0	0.7	1.3	1.0	0.7	1.1	0.8	0.5	0.9	0.7	0.5
Α	0.55	1.7	1.3	0.9	1.7	1.3	0.9	1.4	1.0	0.7	1.2	0.9	0.6
Α	0.75	2.2	1.8	1.1	2.2	1.8	1.1	1.9	1.3	0.9	1.5	1.1	8.0
Α	1.1	3.1	2.6	1.6	3.1	2.6	1.6	2.6	1.9	1.3	2.2	1.6	1.1
Α	1.5	4.1	3.4	2.1	4.1	3.4	2.1	3.5	2.5	1.7	2.9	2.1	1.4
Α	2.2	5.6	4.6	2.8	5.6	4.6	2.8	4.8	3.4	2.4	3.9	2.8	2.0
В	3.0	7.3	6.3	3.7	7.3	6.3	3.7	6.2	4.4	3.1	5.1	3.7	2.6
В	4.0	8.8	8.2	4.4	8.8	8.2	4.4	7.5	5.3	3.7	6.2	4.4	3.1
С	5.5	12.5	10.8	6.3	12.5	10.8	6.3	10.6	7.5	5.3	8.8	6.3	4.4
D	7.5	16.5	14.5	8.3	16.5	14.5	8.3	14.0	9.9	6.9	11.6	8.3	5.8
D	11	25.0	21.0	12.5	25.0	21.0	12.5	21.3	15.0	10.5	17.5	12.5	8.8
D	15	31.0	28.0	15.5	31.0	28.0	15.5	26.4	18.6	13.0	21.7	15.5	10.9
E	18.5 (HO)	38.0	34.5	19.0	38.0	34.5	19.0	32.3	22.8	16.0	26.6	19.0	13.3
E	22 (LO)	45.0	40.5	22.5	45.0	40.5	22.5	38.3	27.0	18.9	31.5	22.5	15.8
E	22 (HO)	45.0	40.5	22.5	45.0	40.5	22.5	38.3	27.0	18.9	31.5	22.5	15.8
Е	30 (LO)	60.0	53.0	30.0	60.0	53.0	30.0	51.0	36.0	25.2	42.0	30.0	21.0

Three ph	ase AC 400 V i	nverters											
Frame	Power rat-	Curren	t rating [A] at PV	VM frequ	ency							
size	ing [kW]	PWM f	requenc	y range:	2 kHz to	16 kHz	(default	: 4 kHz)					
		10 kHz	:		12 kHz	:		14 kHz	:		16 kHz		
		40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C
Α	0.37	8.0	0.5	0.4	0.7	0.5	0.3	0.6	0.4	0.3	0.5	0.4	0.3
Α	0.55	1.0	0.7	0.5	0.9	0.6	0.4	0.8	0.5	0.4	0.7	0.5	0.3
Α	0.75	1.3	0.9	0.7	1.1	0.8	0.6	1.0	0.7	0.5	0.9	0.6	0.4
Α	1.1	1.9	1.3	0.9	1.6	1.1	0.8	1.4	1.0	0.7	1.2	0.9	0.6
Α	1.5	2.5	1.7	1.2	2.1	1.4	1.0	1.8	1.3	0.9	1.6	1.1	0.8
Α	2.2	3.4	2.4	1.7	2.8	2.0	1.4	2.5	1.7	1.2	2.2	1.6	1.1
В	3.0	4.4	3.1	2.2	3.7	2.6	1.8	3.3	2.3	1.6	2.9	2.0	1.5
В	4.0	5.3	3.7	2.6	4.4	3.1	2.2	4.0	2.7	1.9	3.5	2.5	1.8
С	5.5	7.5	5.3	3.8	6.3	4.4	3.1	5.6	3.9	2.8	5.0	3.5	2.5
D	7.5	9.9	6.9	5.0	8.3	5.8	4.1	7.4	5.1	3.6	6.6	4.6	3.3
D	11	15.0	10.5	7.5	12.5	8.8	6.3	11.3	7.8	5.5	10.0	7.0	5.0
D	15	18.6	13.0	9.3	15.5	10.9	7.8	14.0	9.6	6.8	12.4	8.7	6.2
E	18.5 (HO)	22.8	16.0	11.4	19.0	13.3	9.5	17.1	11.8	8.4	15.2	10.6	7.6
E	22 (LO)	27.0	18.9	13.5	22.5	15.8	11.3	20.3	14.0	9.9	18.0	12.6	9.0
E	22 (HO)	27.0	18.9	13.5	22.5	15.8	11.3	20.3	14.0	9.9	18.0	12.6	9.0
E	30 (LO)	36.0	25.2	18.0	30.0	21.0	15.0	27.0	18.6	13.2	24.0	16.8	12.0

Single phase AC 230 V inverters															
Frame	Power rat-	Current rating [A] at PWM frequency													
size	ing [kW]	PWM f	requenc	y range:	2 kHz to	16 kHz	(default	: 8 kHz)							
		2 kHz			4 kHz			6 kHz			8 kHz				
		40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C		
AA/AB	0.12	0.9	0.6	0.5	0.9	0.6	0.5	0.9	0.6	0.5	0.9	0.7	0.5		
AA/AB	0.25	1.7	1.2	0.9	1.7	1.2	0.9	1.7	1.2	0.9	1.7	1.4	0.9		
AA/AB	0.37	2.3	1.6	1.2	2.3	1.6	1.2	2.3	1.6	1.2	2.3	1.8	1.2		
AA/AB	0.55	3.2	2.2	1.6	3.2	2.2	1.6	3.2	2.2	1.6	3.2	2.3	1.6		
AA/AB	0.75	4.2	2.9	2.1	4.2	2.9	2.1	4.2	2.9	2.1	4.2	3.2	2.1		
AC	1.1	6.0	4.2	3.0	6.0	4.2	3.0	6.0	4.2	3.0	6.0	4.2	3.0		
AC	1.5	7.8	5.5	3.9	7.8	5.5	3.9	7.8	5.5	3.9	7.8	5.5	3.9		
В	1.1	6.0	4.2	3.0	6.0	4.2	3.0	6.0	4.2	3.0	6.0	4.2	3.0		
В	1.5	7.8	5.5	3.9	7.8	5.5	3.9	7.8	5.5	3.9	7.8	5.5	3.9		
С	2.2	11	7.7	5.5	11	7.7	5.5	11	7.7	5.5	11	7.7	5.5		
С	3.0	13.6	9.5	6.8	13.6	9.5	6.8	13.6	9.5	6.8	13.6	9.5	6.8		

Single ph	ase AC 230 V	inverters											
Frame	Power rat-	Curren	t rating [A] at PV	VM frequ	ency							
size	ing [kW]	PWM f	requenc	y range:	2 kHz to	16 kHz	(default	: 8 kHz)					
		10 kHz	:		12 kHz	:		14 kHz			16 kHz	:	
		40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C	40 °C	50 °C	60 °C
AA/AB	0.12	8.0	0.6	0.4	0.8	0.5	0.4	0.7	0.5	0.3	0.6	0.5	0.3
AA/AB	0.25	1.6	1.1	0.8	1.4	1.0	0.7	1.3	0.9	0.6	1.2	0.9	0.6
AA/AB	0.37	2.1	1.5	1.1	2.0	1.4	1.0	1.7	1.2	0.9	1.6	1.2	8.0
AA/AB	0.55	2.9	2.0	1.5	2.7	1.9	1.3	2.4	1.7	1.2	2.2	1.6	1.1
AA/AB	0.75	3.9	2.7	1.9	3.6	2.5	1.8	3.2	2.2	1.6	2.9	2.1	1.5
AC	1.1	5.5	3.8	2.8	5.1	3.6	2.5	4.5	3.1	2.2	4.2	3.0	2.1
AC	1.5	7.2	5.0	3.6	6.6	4.7	3.3	5.9	4.1	2.9	5.5	3.9	2.7
В	1.1	5.5	3.8	2.8	5.1	3.6	2.5	4.5	3.1	2.2	4.2	3.0	2.1
В	1.5	7.2	5.0	3.6	6.6	4.7	3.3	5.9	4.1	2.9	5.5	3.9	2.7
С	2.2	10.1	7.0	5.1	9.4	6.6	4.6	8.3	5.7	4.1	7.7	5.5	3.9
С	3.0	12.5	8.7	6.3	11.6	8.2	5.7	10.2	7.1	5.0	9.5	6.8	4.8

Motor control

Control methods	Linear V/F, quadratic V/F, multi-point V/F, V/F with FCC							
Output frequency	Default range: 0 Hz to 550 Hz	point vii, vii with ee						
range	Resolution: 0.01 Hz							
Maximum over-	Rated power 0.12 kW to 15 kW	150 % rated for 60 seconds followed by 94.5 % rated for 240 seconds						
load cycle	Rated power 18.5 kW (HO)/22 kW (HO)							
	Rated power 22 kW (LO)/30 kW (LO)	110% rated for 60 seconds followed by more than 98% rated for 240 seconds						

Mechanical specifications

Frame size)	FSAA	FSAB	FSAC	FSA		FSB	FSC	FSD 1)	FSE	
					with fan	without fan					
Outline	W	68/2.7	68/2.7	90.8	90/3.5	90/3.5	140/5.5	184/7.24	240/9.4	245/9.6	
dimen- sions	Н	142/5.6	142/5.6	160.9	166/6.5	150/5.9	160/6.3	182/7.17	206.5/8.1	264.5/10. 4	
(mm/inch)	D	107.8/4. 2	127.8/5	147	145.5/5.7	145.5 (114.5 ²⁾)/5.7(4.5 ²⁾)	164.5/6.5	169/6.7	172.5/6.8	209/8.2	
Mounting methods			•	et panel mounting hrough mounting (FSB FSE)							

¹⁾ Available for three phase AC 400 V inverters only.

²⁾ Depth of Flat Plate inverter (400 V 0.75 kW variant only).

Frame s	size	Net weight (kg)		Gross weight (ko	3)
		unfiltered	filtered	unfiltered	filtered
Three p	hase AC 400 V in	verters			
FSA	with fan	1.0	1.1	1.4	1.4
	without fan	0.9	1.0 (0.9 ¹⁾)	1.3	1.4 (1.3 ¹⁾)
FSB		1.6	1.8	2.1	2.3
FSC		2.4	2.6	3.1	3.3
FSD	7.5 kW	3.7	4.0	4.3	4.6
	11 kW	3.7	4.1	4.5	4.8
	15 kW	3.9	4.3	4.6	4.9
FSE	18.5 kW	6.2	6.8	6.9	7.5
	22 kW	6.4	7.0	7.1	7.7
Single p	hase AC 230 V ir	verters	·	·	·
FSAA		0.6	0.7	1.0	1.1
FSAB		0.8	0.9	1.2	1.3
FSAC		1.2	1.4	1.3	1.5
FSB		1.6	1.8	2.0	2.1
FSC		2.5	2.8	3.0	3.2

¹⁾ Weight of Flat Plate inverter (400 V 0.75 kW variant only).

Environmental conditions

Surrounding air temperature	- 10 °C to 40 °C: without derating
	40 °C to 60 °C: with derating (UL/cUL-compliant: 40 °C to 50 °C, with derating)
Storage temperature	- 40 °C to + 70 °C
Protection class	IP 20
Maximum humidity level	95% (non-condensing)
Shock and vibration	Long-term storage in the transport packaging according to EN 60721-3-1 Class 1M2
	Transport in the transport packaging according to EN 60721-3-2 Class 2M3
	Vibration during operation according to EN 60721-3-3 Class 3M2

Installation altitude	Up to 4000 m above sea level:								
	• For the installation altitude lower than or equal to 2000 m above sea level, it is permissible to connect a V20 inverter to any of the mains supply systems that are specified for it.								
	 For the installation altitude higher than 2000 m and lower than or equal to 4000 m above sea level, you must connect a V20 inverter to any of the specified mains supply systems either via an isolating transformer or with a grounded neutral point. 1000 m to 4000 m: output current derating 								
	Permissible output current [%]								
	100 90 80 70 60 0 1000 2000 3000 4000								
	Installation altitude above sea level [m]								
	2000 m to 4000 m: input voltage derating								
	Permissible input voltage [%] 100 90 80 77 70 60 0 1000 2000 3000 4000 Installation altitude above sea level [m]								
Environmental classes	Pollution degree: 2 Solid particles: class 3S2 Chemical gases: class 3C2 (SO ₂ , H ₂ S) Climate class: 3K3								
Minimum mounting clearance	Top: 100 mm Bottom: 100 mm (85 mm for fan-cooled frame size A) Side: 0 mm								

Standards



European Low Voltage Directive

The SINAMICS V20 product series and SINAMICS V20 Smart Access comply with the requirements of the Low Voltage Directive 2006/95/EC as amended by Directive 98/68/EEC. The units are certified for compliance with the following standards:

EN 61800-5-1 — Semiconductor inverters – General requirements and line commutated inverters

European EMC Directive

When installed according to the recommendations described in this manual, the SINAMICS V20 and SINAMICS V20 Smart Access fulfill all requirements of the EMC Directive as defined by the EMC Product Standard for Power Drive Systems EN 61800-3.

European RED Directive

SINAMICS V20 Smart Access complies with the following requirements of Radio Equipment Directive (RED) 2014/53/EU:

- Article 3(1)(a) Health and Safety (EN 60950-1, EN 62479)
- Article 3(1)(b) EMC (EN 301 489-1, EN 301 489-17)
- Article 3(2) Spectrum (EN 300 328)

The CE Declaration of Conformity is held on file available to the competent authorities at the following address:

Siemens AG

Digital Factory

Motion Control

Frauenauracher Straße 80

DE-91056 Erlangen

Germany



The SINAMICS V20 product series has been examined and certified by Underwriters Laboratories (UL) to standards UL508C/UL61800-5-1 and CSA C22.2 NO-14-10.



The SINAMICS V20 product series complies with the appropriate RCM standard.



The SINAMICS V20 product series complies with the appropriate EAC standard.



The SINAMICS V20 product series complies with the requirements of the Korean Certification (KC mark).

The SINAMICS V20 series (FSAA and FSAB excluded) has been defined as Class A equipment and is intended for industrial applications and has not been considered for home use. The SINAMICS V20 FSAA and FSAB products have been defined as Class B equipment and are intended for both industrial applications and home use.

EMC limit values in South Korea

The EMC limit values to be complied with for South Korea correspond to the limit values of the EMC product standard for variable-speed electric drives EN 61800-3, Category C2 or limit value class A, Group 1 according to EN55011. By applying suitable supplementary measures, the limit values according to Category C2 or according to limit value class A, Group 1 are maintained. Further, additional measures may be required, for instance, using an additional radio interference suppression filter (EMC filter). The measures for EMC-compliant design of the system are described in detail in this manual.

Please note that the final statement on compliance with the standard is given by the respective label attached to the individual unit.

ISO 9001

Siemens AG uses a quality management system that meets the requirements of ISO 9001.



SINAMICS V20 Smart Access complies with the appropriate FCC standard.

Changes or modifications made to this device that are not expressly approved by SIEMENS may void the FCC authorization to operate this device. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WPC

SINAMICS V20 Smart Access complies with the appropriate WPC standard.

SRRC

SINAMICS V20 Smart Access complies with the appropriate SRRC standard.

Certificates can be downloaded from the internet under the following link:

Website for certificates

(http://support.automation.siemens.com/WW/view/en/60668840/134200)

Options and spare parts

Note

Repair and replacement of equipment

Any defective parts or components must be replaced using parts contained in the relevant lists of spare parts or options.

Disconnect the power supply before opening the equipment for access.

B.1 Options


For more information about recommended cable cross-sections and screw tightening torques, see the table "Recommended cable cross-sections and screw tightening torques" in Section "Terminal description (Page 39)".

Note


In order to gain access to the expansion port to fit the Parameter Loader or Bop Interface Module, remove the detachable transparent cover gently using just finger pressure. It is recommended to keep the cover in a safe place and refit it when the expansion port is not in use.

B.1.1 Parameter Loader

Article number: 6SL3255-0VE00-0UA1

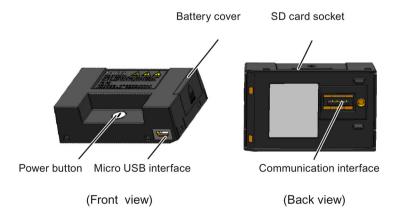

Outline dimensions (mm)

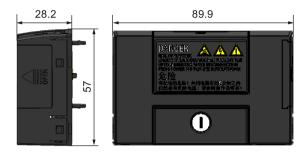

Functionality

The Parameter Loader provides the ability to upload/download parameter sets between the inverter and an SD card. It is only a commissioning tool and has to be removed during normal operation.

Note

To clone saved parameter settings from one inverter to another, a Parameter Loader is required. For more information about clone steps, see the data transferring steps described in this section.

During parameter cloning, make sure you either connect the PE terminal to earth or observe ESD protective measures.

SD card socket

The Parameter Loader contains an SD card socket which is connected directly to the expansion port on the inverter.

Battery power supply

In addition to the memory card interface, the Parameter Loader can hold two batteries (consumer grade, non-rechargeable carbon-zinc or alkaline AA size batteries only) which allow the inverter to be powered directly from this option module to perform data transfer when the mains power is unavailable.



WARNING

Risk of fire and explosion due to charging or short-circuiting of batteries

Battery charging or direct connection of plus (+) and minus (-) poles can cause leakage, heat generation, fire and even explosion.

- Do not charge the non-rechargeable batteries.
- Do not store and/or carry batteries with metallic products such as necklaces.



Risk of fire and explosion due to improper disposal of batteries

Direct contact with metallic products and/or other batteries can cause battery damage, liquid leakage, heat generation, fire and even explosion. Disposal of batteries in fire is extremely dangerous with a risk of explosion and violent flaring.



Do not discard batteries into trash cans. Place them in the designated public recycling area for waste batteries.



Risk of environmental pollution


Casual disposal of batteries into water, trash cans, etc. can cause environmental pollution.

Collect and recycle the waste batteries in compliance with relevant environmental laws and regulations.

Micro USB interface

As an alternative way to power the inverter to perform data transfer when the mains power is unavailable, you can use a Micro USB cable to connect an external 5 V DC power supply to the Micro USB interface on the Parameter Loader. If the inverter can be supplied from the mains power, it is not necessary to power the Parameter Loader either from the batteries or via a Micro USB cable.

Fitting the Parameter Loader to the inverter

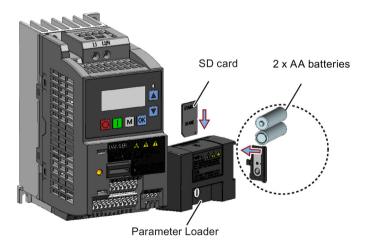

B.1 Options

Note

When the inverters you desire to install include FSAA and/or FSAB inverters and you want to install FSAA and/or FSAB inverters side by side, to make sure that there is sufficient space to fit the parameter loader to the FSAA/FSAB inverter, install all available FSAA inverters to the farthest right, followed by all available FSAB inverters and then all other frame sizes. There are no additional mounting sequence requirements for inverters other than FSAA and FSAB.

Recommended SD card

Article number: 6SL3054-4AG00-2AA0

Using memory cards from other manufacturers

SD card requirement:

Supported file format: FAT16 and FAT 32

Maximum card capacity: 32 GB

Minimum card space for parameter transfer: 8 KB

Note

You use memory cards from other manufacturers at your own risk. Depending on the card manufacturer, not all functions are supported (for example, download).

Methods to power on the inverter

Use one of the following methods to power on the inverter for downloading/uploading parameters:

- Power on from the mains supply.
- Power on from the built-in battery power supply. Press the power button on the Parameter Loader and the inverter is powered on.
- Power on from an external DC 5 V power supply that is connected to the Parameter Loader. Press the power button on the Parameter Loader and the inverter is powered on.

Transferring data from inverter to SD card

- 1. Fit the option module to the inverter.
- 2. Power on the inverter.
- 3. Insert the card into the option module.
- 4. Set P0003 (user access level) = 3.
- 5. Set P0010 (commissioning parameter) = 30.

6. Set P0804 (select clone file). This step is necessary only when the card contains the data files that you do not desire to be overwritten.

P0804 = 0 (default): file name is clone00.bin

P0804 = 1: file name is clone01.bin

...

P0804 = 99: file name is clone 99. bin

7. Set P0802 (transfer data from inverter to card) = 2.

The inverter displays "8 8 8 8 8" during transfer and the LED is lit up orange and flashes at 1 Hz. After a successful transfer, both P0010 and P0802 are automatically reset to 0. If any faults occur during the transfer, see Chapter "Faults and alarms (Page 323)" for possible reasons and remedies.

Transferring data from SD card to inverter

There are two ways to perform a data transfer.

Method 1:

(Precondition: Inverter is to be powered up after inserting the card)

- 1. Fit the option module to the inverter.
- 2. Insert the card into the option module. Make sure the card contains the file "clone00.bin".
- 3. Power on the inverter.
 - Data transfer starts automatically. Then the fault code F395 displays which means "Cloning has occurred. Do you want to keep the clone edits?".
- 4. To save the clone edits, press and the fault code is cleared. When the clone file is written to EEPROM, the LED is lit up orange and flashes at 1Hz.
 - If you do not wish to keep the clone edits, remove the card or the option module and restart the inverter. The inverter will power up with the fault code F395 (r0949 = 10) indicating that the previous cloning was aborted. To clear the fault code, press

Method 2:

(Precondition: Inverter is powered up before inserting the card)

- 1. Fit the option module to the powered inverter.
- 2. Insert the card into the option module.
- 3. Set P0003 (user access level) = 3.
- 4. Set P0010 (commissioning parameter) = 30.
- 5. Set P0804 (select clone file). This step is necessary only when the card does not contain the file "clone00.bin". The inverter copies by default the file "clone00.bin" from the card.
- 6. Set P0803 (transfer data from card to inverter) = 2 or 3.

The inverter displays "8 8 8 8 8" during transfer and the LED is lit up orange and flashes at 1 Hz. After a successful transfer, both P0010 and P0803 are automatically reset to 0.

Note that fault code F395 only occurs with power-up cloning.

B.1.2 External BOP and BOP Interface Module

External BOP

Article number: 6SL3255-0VA00-4BA1


The external BOP is used for remote control of the inverter operation. When mounted on a suitable cabinet door, the external BOP can achieve a UL/cUL Type 1 enclosure rating. The permissible operating temperature range for the external BOP is from -10 °C to 50 °C.

Components

- External BOP unit
- 4 x M3 screws


Rating plate

The rating plate for the external BOP is located on the back side of the BOP.

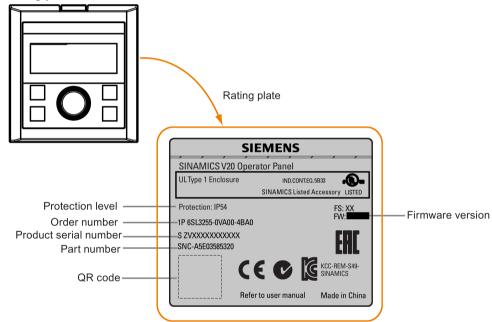

Panel layout

The SINAMICS V20 supports an external BOP for remote control of inverter operation. The external BOP connects to the inverter through an optional BOP Interface Module.

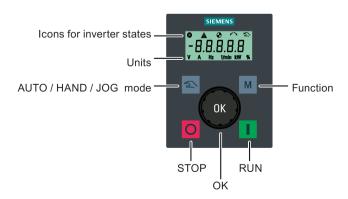

Button functions

Button	Description
	Stops the inverter Button functions the same as the button on the built-in BOP.
	button functions the same as the button on the built-in BOP.
	Starts the inverter
	Button functions the same as the 📘 button on the built-in BOP.
	Multi-function button
M	Button functions the same as the button on the built-in BOP.
OK	Pressing the button:
	Button functions the same as the button on the built-in BOP.
	Turning clockwise:
	Button functions the same as the 🛕 button on the built-in BOP. Fast turning functions
	the same as long press of the 🔳 button on the built-in BOP.
	Turning counter-clockwise:
	Button functions the same as the 🔻 button on the built-in BOP. Fast turning functions
	the same as long press of the ▼ button on the built-in BOP.
2	Button functions the same as the ** + ** buttons on the built-in BOP.

Inverter status icons

8	These icons have the same meaning as the corresponding icons on the built-in BOP.
A	
•	
\sim	
2	
Y	Commissioning icon. The inverter is in commissioning mode (P0010 = 1).

Screen display

The display of the external BOP is identical to the built-in BOP, except that the external BOP has a commissioning icon \(\mathbf{Y} \) which is used to indicate that the inverter is in commissioning mode.

On inverter power-up, the inverter-connected external BOP first displays "BOP.20" (BOP for the SINAMICS V20) and then the firmware version of the BOP. After that it detects and displays the baudrate and the USS communication address of the inverter automatically.


See the following table for settable baudrate and address values. To change the baudrate, set P2010[0]. To change the USS communication address, set P2011[0].

Baudrate	Communication address	Display example
(bps)		
9600	0 31	
19200	0 31	<u> 3 8.4.0 0 </u>
38400	0 31	
57600	0 31	Baudrate: 38400 Address: 0
76800	0 31	
93750	0 31	
115200	0 31	

In case of any communication errors, the screen displays "noCon" which means that no communication connection has been detected. The inverter then automatically restarts baudrate and address detection. In this case, check that the cable is correctly connected.

Mounting dimensions of the external BOP

The outline dimensions, drill pattern and cut-out dimensions of the external BOP are shown below:

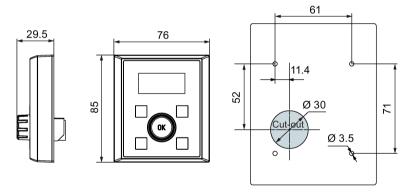

Unit: mm Fixings:

4 x M3 screws (length: 8 mm to 12 mm)

Tightening torque: 0.8 Nm ± 10%

BOP Interface Module

Article number: 6SL3255-0VA00-2AA1

Functionality

This module can be used as an interface module for the external BOP, thus realizing the remote control over the inverter by the external BOP.

The module contains a communication interface for connecting the external BOP to the inverter and a plug connector for connection to the expansion port on the inverter. The

permissible operating temperature range for the BOP Interface Module is from -10 $^{\circ}$ C to 50 $^{\circ}$ C.



Outline dimensions (mm)



Mounting (SINAMICS V20 + BOP Interface Module + external BOP)


Note

Connecting the BOP Interface Module to the external BOP is required only when you desire to control the inverter operation remotely with the external BOP. The BOP Interface Module needs to be screwed to the inverter with a tightening torque of 1.5 Nm (tolerance: \pm 10%).

Note

Make sure that you connect the cable shield to the shield connection kit. For more information about the shielding method, see Section "EMC-compliant installation (Page 45)".

B.1 Options

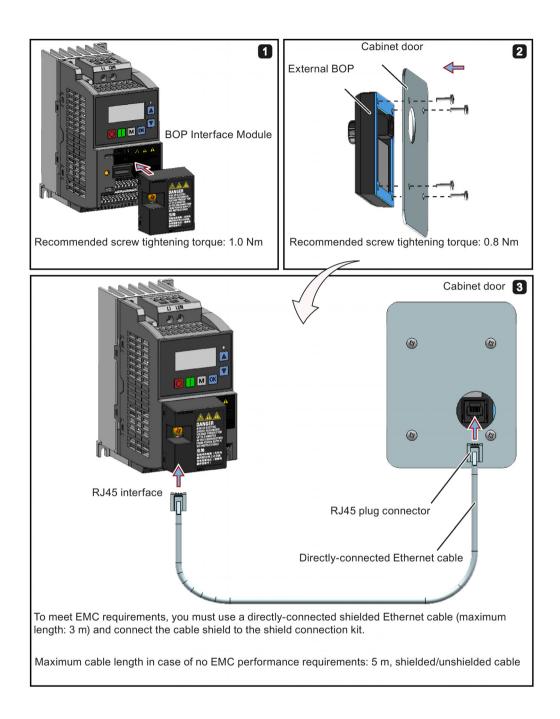

B.1.3 Dynamic braking module

Article number: 6SL3201-2AD20-8VA0

Note

This module is applicable for frame sizes AA to C only.


Functionality

The dynamic braking module is typically used in applications in which dynamic motor behavior is required at different speed or continuous direction changes, for example, for conveyor drives or hoisting gear.


Dynamic braking converts the regenerative energy, which is released when the motor brakes, into heat. Dynamic braking activity is limited by the duty cycle selected with the control knob.

Mounting orientation

The dynamic braking module must be installed in the orientation as shown in the following diagram. That is, the open slots must always point directly upwards to ensure adequate cooling.

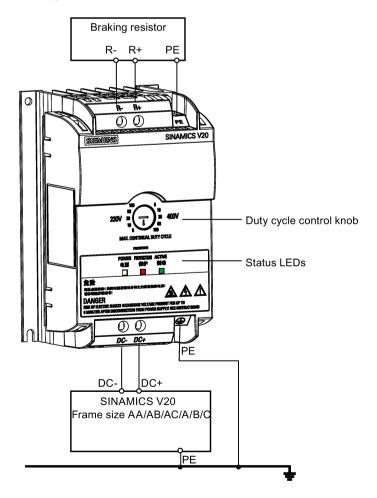

Drill pattern (mm)



Recommended cable cross-sections

Inverter frame size	Rated output power	Cable cross-sections for DC terminals (DC-, DC+)	
230 V			
FSAA/FSAB	0.12 0.75 kW	1.0 mm ²	
FSAC/FSB	1.1 1.5 kW	2.5 mm ²	
FSC	2.2 3.0 kW	4.0 mm ²	
400 V			
FSA	0.37 0.75 kW	1.0 mm ²	
	1.1 2.2 kW	1.5 mm ²	
FSB	3.0 4.0 kW	2.5 mm ²	
FSC	5.5 kW	4.0 mm ²	

Note: Do not use the cables with cross-sections less than 0.3 mm² (for inverter frame size AA/AB/A)/0.5 mm² (for inverter frame sizes AC/B/C). Use a screw tightening torque of 1.0 Nm/8.9 lbf.in (tolerance: ±10%).

NOTICE

Destruction of device

It is extremely important to ensure that the polarity of the DC link connections between the inverter and the dynamic braking module is correct. If the polarity of the DC terminals' connections is reversed, it could result in the destruction of the inverter and the module.

Status LEDs

LED	Color	Description	
POWER	Yellow	Module is powered up.	
STATUS	Red	Module is in protection mode.	
ACTIVE	Green	Module is releasing regenerative energy produced when the motor brakes into heat.	

Duty cycle selection

NOTICE

Damage to the braking resistor

Incorrect setting for the duty cycle/voltage could damage the attached braking resistor. Use the control knob to select the rated duty cycle of the braking resistor.

Value labels on the module have the following meanings:

Label	Meaning
230 V	Duty cycle values labeled are for 230 V inverters
400 V	Duty cycle values labeled are for 400 V inverters
5	5% duty cycle
10	10% duty cycle
20	20% duty cycle
50	50% duty cycle
100	100% duty cycle

Technical specifications

	One phase AC 230 V inverters	Three phase AC 400 V inverters	
Peak power rating	3.0 kW	5.5 kW	
RMS current at peak power	8.0 A	7.0 A	
Maximum continuous power rating	3.0 kW	4.0 kW	
Maximum continuous current rating	8.0 A	5.2 A	
Maximum continuous power rating (side-by-side mounted)	1.5 kW	2.75 kW	
Maximum continuous current rating (side-by-side mounted)	4.0 A	3.5 A	
Surrounding air temperature	- 10 °C to 50 °C: without derating	- 10 °C to 40 °C: without derating	
		40 °C to 50 °C: with derating	
Maximum continuous current rating at 50 °C surrounding air temperature	8.0 A	1.5 A	
Outline dimensions (L x W x D)	150 x 90 x 88 (mm)		
Mounting	Cabinet panel mounting (4 x M4 screws)		
Maximum duty cycle	100%		
Protection functions	Short-circuit protection, over-temperature protection		
Maximum cable length	Braking module to inverter: 1 m		
	Braking module to braking resistor: 10 m		
UL file number	E121068		

B.1.4 Braking resistor



Operating conditions

Make sure that the resistor to be fitted to the SINAMICS V20 is adequately rated to handle the required level of power dissipation.

All applicable installation, usage and safety regulations regarding high voltage installations must be complied with.

If the inverter is already in use, disconnect the prime power and wait at least five minutes for the capacitors to discharge before commencing installation.

This equipment must be earthed.





Hot surface

Braking resistors get hot during operation. Do not touch the braking resistor during operation.

Using an incorrect braking resistor can cause severe damage to the associated inverter and may result in fire.

A thermal cut-out circuit (see diagram below) must be incorporated to protect the equipment from overheating.

NOTICE

Device damage caused by improper minimum resistance values

A braking resistor with a resistance lower than the following minimum resistance values can damage the attached inverter or braking module:

- 400 V inverter frame sizes A to C: 56 Ω
- 400 V inverter frame size D/E: 27 Ω
- 230 V inverter frame sizes AA to C: 39 Ω

Functionality

An external braking resistor can be used to "dump" the regenerative energy produced by the motor, thus giving greatly improved braking and deceleration capabilities.

A braking resistor which is required for dynamic braking can be used with all frame sizes of inverters. Frame size D is designed with an internal braking chopper, allowing you to connect the braking resistor directly to the inverter; however, for frame sizes A to C, an additional dynamic braking module is required for connecting the braking resistor to the inverter.

Ordering data

Frame size	Inverter power rating	Resistor article number	Continuous power	Peak power (5% duty cycle)	Resistance ± 10%	DC voltage rating
Three phase	AC 400 V in	verters				
FSA	0.37 kW	6SL3201-0BE14-3AA0	75 W	1.5 kW	370 Ω	840 V +10%
	0.55 kW					
	0.75 kW					
	1.1 kW					
	1.5 kW					
	2.2 kW	6SL3201-0BE21-0AA0	200 W	4.0 kW	140 Ω	840 V +10%
FSB	3 kW					
	4 kW					
FSC	5.5 kW	6SL3201-0BE21-8AA0	375 W	7.5 kW	75 Ω	840 V +10%
FSD	7.5 kW					
	11 kW	6SL3201-0BE23-8AA0	925 W	18.5 kW	30 Ω	840 V +10%
	15 kW					
FSE	18.5 kW	6SE6400-4BD21-2DA0	1200 W	24 kW	27 Ω	900 V
	22 kW					
Single phase	AC 230 V ir	nverters				
FSAA/FSAB	0.12 kW	6SE6400-4BC05-0AA0	50 W	1.0 kW	180 Ω	450 V
	0.25 kW					
	0.37 kW					
	0.55 kW					
	0.75 kW					
FSAC/FSB	1.1 kW	6SE6400-4BC11-2BA0	120 W	2.4 kW	68 Ω	450 V
	1.5 kW					
FSC	2.2 kW					
	3 kW	6SE6400-4BC12-5CA0	250 W	4.5 kW	39 Ω	450 V

^{*} All the above resistors are rated for a maximum duty cycle of 5%.


Technical data


Surrounding operating temperature:	-10° C to +50° C
Storage/transport temperature:	-40° C to +70° C
Degree of protection:	IP20
Humidity:	0% to 95% (non-condensing)
cURus file number:	E221095 (Gino)
	E219022 (Block)

Installation

For three phase AC 400 V inverters FSA to FSD


The resistors can be installed in a vertical or horizontal position and secured to a heat resistant surface. The required minimum clearance distances are shown below:

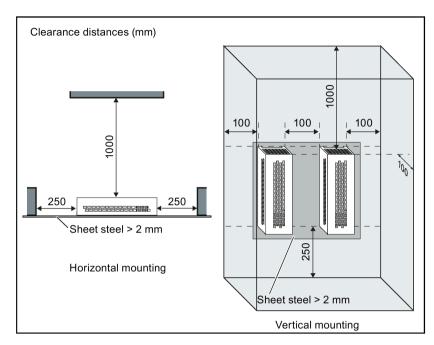


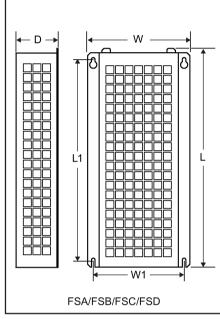

For single phase AC 230 V inverters and three phase AC 400 V inverter FSE

The resistors must be installed in a vertical position and secured to a heat resistant surface. At least 100 mm must be left above, below and to the side of the resistor to allow an unimpeded airflow.

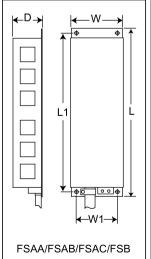

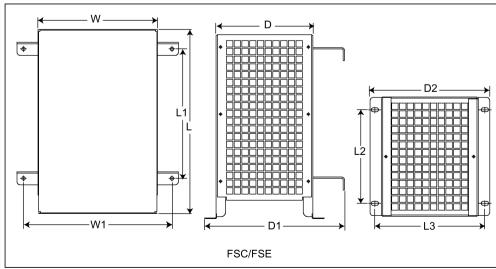


Mounting dimensions

Resistor article number	Dime	nsions	(mm)							Weight
	L	L1	L2	L3	D	D1	D2	w	W1	(kg)
Three phase AC 400 V inverters										
6SL3201-0BE14-3AA0	295	266	-	-	100	-	-	105	72	1.48
6SL3201-0BE21-0AA0	345	316	-	-	100	-	-	105	72	1.80
6SL3201-0BE21-8AA0	345	316	-	-	100	-	-	175	142	2.73
6SL3201-0BE23-8AA0	490	460	-	-	140	-	-	250	217	6.20
6SE6400-4BD21-2DA0	515	350	205	195	175	242	210	270	315	7.4
Single phase AC 230 V inverters	·									
6SE6400										
4BC05-0AA0	230	217	-	-	43.5	-	-	72	56	1.0
4BC11-2BA0	239	226	-	-	43.5	-	-	149	133	1.6
4BC12-5CA0	285	200	145	170	150	217	185	185	230	3.8

Connection

The mains supply to the inverter can be provided through a contactor which disconnects the supply if the resistor overheats. Protection is provided by a thermal cut-out switch (supplied with each resistor). The cut-out switch can be wired in-series with the coil supply for the main contactor (see diagram below). The thermal switch contacts close again when the resistor temperature falls; after which the inverter starts automatically (P1210 = 1). A fault message is generated with this parameter setting.

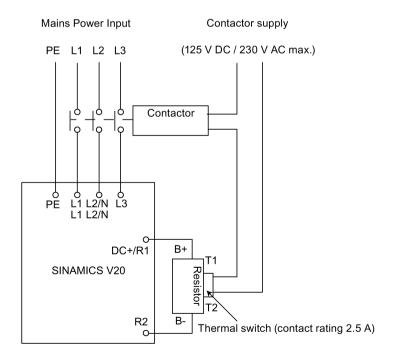

B.1 Options

Commissioning

The braking resistors are designed to operate on a 5% duty cycle. For inverter frame size D, set P1237 = 1 to enable the braking resistor function. For other frame sizes, use the dynamic braking module to select the 5% duty cycle.

Note

Additional PE terminal

Some resistors have an additional PE connection available on the resistor housing.

B.1.5 Line reactor





Heat during operation

The line reactors get hot during operation. Do not touch. Provide adequate clearance and ventilation.

When operating the larger line reactors in an environment with a surrounding air temperature in excess of 40° C, the wiring of the terminal connections must be accomplished using 75° C copper wire only.



Risk of equipment damage and electric shocks

Some of the line reactors in the table below have pin crimps for the connection to the inverter's mains terminals.

Use of these pin crimps can cause damage to the equipment and even electric shocks.

For safety reasons, replace the pin crimps using UL/cUL-certified fork crimps or stranded cables.



Protection rating

The line reactors have a protection rating of IP20 in accordance with EN 60529 and are designed to be mounted inside a cabinet.

Functionality

The line reactors are used to smooth voltage peaks or to bridge commutating dips. They also can reduce the effects of harmonics on the inverter and the line supply.


The larger line reactors for the 230 V variants of inverters have side mounting brackets to allow side-by-side mounting (see diagram below).

Ordering data

Frame size	Inverter power rating	Line reactor		
		Article number	Voltage	Current
Three phase A	C 400 V inverters			
FSA	0.37 kW	6SL3203-0CE13-2AA0	380 V to 480 V	4.0 A
	0.55 kW			
	0.75 kW			
	1.1 kW			
	1.5 kW	6SL3203-0CE21-0AA0	380 V to 480 V	11.3 A
	2.2 kW			
FSB	3 kW			
	4 kW			
FSC	5.5 kW	6SL3203-0CE21-8AA0	380 V to 480 V	22.3 A
FSD	7.5 kW			
	11 kW	6SL3203-0CE23-8AA0	380 V to 480 V	47.0 A
	15 kW			
FSE	18.5 kW	6SL3203-0CJ24-5AA0	200 V to 480 V	53.6 A
	22 kW	6SL3203-0CD25-3AA0	380 V to 600 V	86.9 A
Single phase A	C 230 V inverters			
FSAA/FSAB	0.12 kW	6SE6400-3CC00-4AB3	200 V to 240 V	3.4 A
	0.25 kW			
	0.37 kW	6SE6400-3CC01-0AB3	200 V to 240 V	8.1 A
	0.55 kW			
	0.75 kW			
FSAC/FSB	1.1 kW	6SE6400-3CC02-6BB3	200 V to 240 V	22.8 A
	1.5 kW			
FSC	2.2 kW			
	3 kW	6SE6400-3CC03-5CB3	200 V to 240 V	29.5 A


Connecting the line reactor to the inverter


The following illustration takes the line reactors for the 230 V variants of inverters as an example.

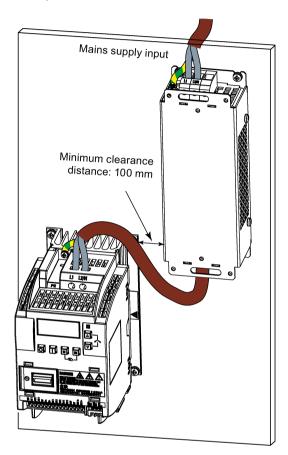



Mounting dimensions

For three phase AC 400 V inverters FSA to FSD

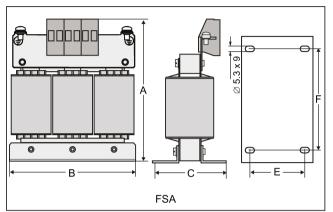

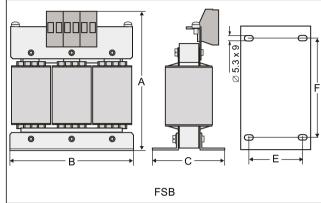

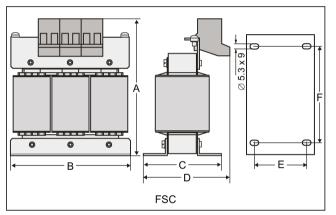


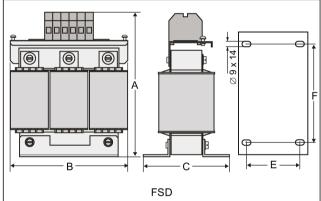

Article number	Dimen	sions (n	nm)				Weight	Fixing sci	rew	Cable cross
6SL3203	A	В	С	D	E	F	(kg)	Size	Tightening torque (Nm)	section (mm²)
0CE13-2AA0	120	125	71	-	55	100	1.10	M4 (4)	3.0	2.5
0CE21-0AA0	140	125	71	-	55	100	2.10	M4 (4)	3.0	2.5
0CE21-8AA0	145	125	81	91	65	100	2.95	M5 (4)	5.0	6.0
0CE23-8AA0	220	190	91	-	68	170	7.80	M5 (4)	5.0	16.0


B.1 Options


For three phase AC 400 V inverter FSE

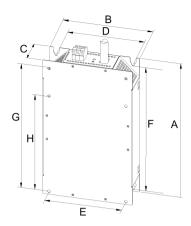


Article number 6SL3203	Electrical cl	naracteristics	Overa				ions Fixing dimensions (mm)			Fixing dimensions (mm)				Fixing screw	Weight (kg)
	Voltage (V)	Current (A)	Α	В	С	D	E	F	G	Н					
0CJ24-5AA0	380 to 480	47	455	275	84	235	235	421	419	325	4 x M8	13			
0CD25-3AA0		63									(13 Nm)				

For single phase AC 230 V inverters

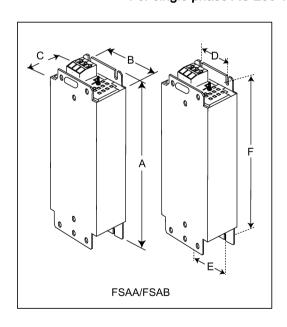

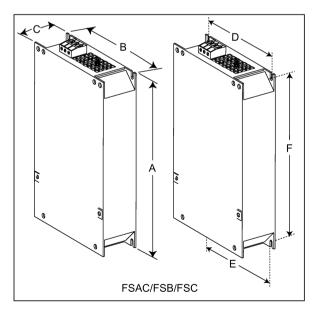

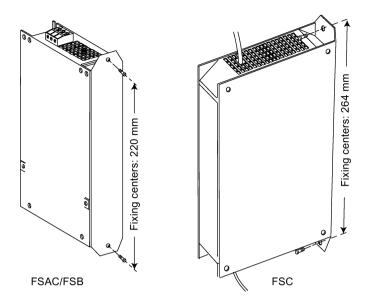

Article number 6SE6400	Dimensions	(mm)					Weight (kg)	Fixing sci	rew	Cable cross section (mm²)	
	A	В	С	D	E	F		Size	Tightening torque (Nm)	Min.	Max.
3CC00-4AB3	200	75.5	50	56	56	187	0.5	M4 (2)	1.1	1.0	2.5
3CC01-0AB3	200	75.5	50	56	56	187	0.5	M4 (2)			
3CC02-6BB3	213 (233*)	150	50	138	120	200	1.2	M4 (4)	1.5	1.5	6.0
3CC03-5CB3	245 (280*)	185	50 (50/80*)	174	156	230	1.0	M5 (4)	2.25	2.5	10

^{*} Height with side-mounting bracket

B.1.6 Output reactor



Pulse frequency restriction

The output reactor works only at 4kHz switching frequency. Before the output reactor is used, parameters P1800 and P0290 must be modified as follows: P1800 = 4 and P0290 = 0 or 1.

B.1 Options

Functionality

The output reactors reduce the voltage stress on the motor windings. At the same time, the capacitive charging/discharging currents, which place an additional load on the inverter output when long motor cables are used, are reduced.


For safety reasons, it is recommended to use a shielded cable (maximum length: 200 m) to connect the output reactor.

Ordering data

Frame size	Inverter power rating	Output reactor		
		Article number	Voltage	Current
Three phase A	C 400 V inverters			
FSA	0.37 kW	6SL3202-0AE16-1CA0	380 V to 480 V	6.1 A
	0.55 kW			
	0.75 kW			
	1.1 kW			
	1.5 kW			
	2.2 kW	6SL3202-0AE18-8CA0	380 V to 480 V	9.0 A
FSB	3 kW			
	4 kW	6SL3202-0AE21-8CA0	380 V to 480 V	18.5 A
FSC	5.5 kW			
FSD	7.5 kW	6SL3202-0AE23-8CA0	380 V to 480 V	39.0 A
	11 kW			
	15 kW			
FSE	18.5 kW	6SE6400-3TC03-8DD0	200 V to 480 V	45.0 A
	22 kW	6SE6400-3TC05-4DD0	200 V to 480 V	68.0 A
Single phase A	C 230 V inverters			
FSAA/FSAB	0.12 kW	6SE6400-3TC00-4AD3	200 V to 240 V	4.0 A
	0.25 kW			
	0.37 kW			
	0.55 kW			
	0.75 kW			
	1.1 kW	6SE6400-3TC01-0BD3	200 V to 480 V	10.4 A
FSAC/FSB	1.5 kW			
FSC	2.2 kW			
	3 kW	6SE6400-3TC03-2CD3	200 V to 480 V	26.0 A


Connecting the output reactor to the inverter


The following illustration takes the output reactors for the 230 V variants of inverters as an example.

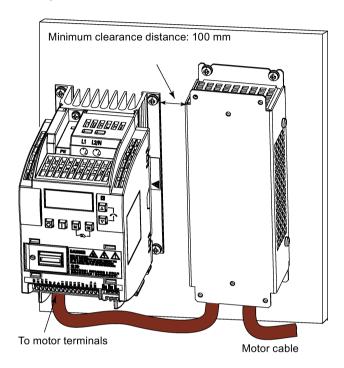


Mounting dimensions

For three phase AC 400 V inverters FSA to FSD

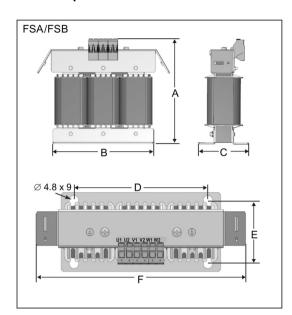


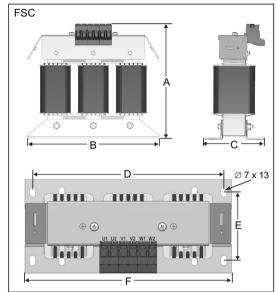

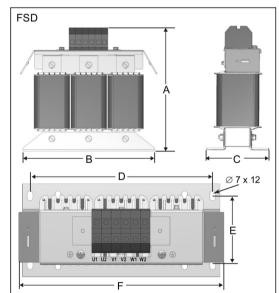


Article number	Dimens	sions (m	m)				Weight	Fixing sc	rew	Cable cross	
6SL3202	Α	В	С	D	E	F	(kg)	Size	Tightening torque (Nm)	section (mm²)	
0AE16-1CA0	175	178	72.5	166	56.5	207	3.4	M4 (4)	3.0	4.0	
0AE18-8CA0	180	178	72.5	166	56.5	207	3.9	M4 (4)	3.0	4.0	
0AE21-8CA0	215	243	100	225	80.5	247	10.1	M5 (4)	5.0	10.0	
0AE23-8CA0	235	243	114.7	225	84.7	257	11.2	M5 (4)	5.0	16.0	


For three phase AC 400 V inverter FSE

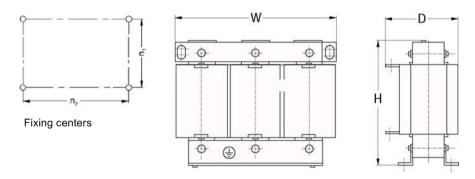

Article num- ber					Overa (mm)	ll dimer	nsions	Fixing dimensions (mm)		Fixing screw	Weight (kg)
6SE6400-	Voltage (V)	Current (A)	Torque (Nm)	bolt	Н	w	D	n1	n2		
3TC05-4DD0	200 to 480	54	3.5 to 4.0	M5	210	225	150	70	176	M6	10.7
3TC03-8DD0	380 to 480	38	3.5 to 4.0	M5	210	225	179	94	176	M6	16.1

For single phase AC 230 V inverters

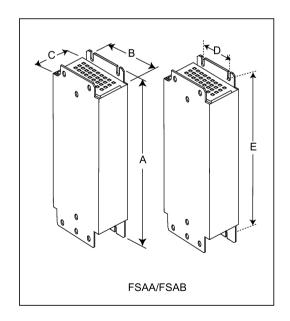

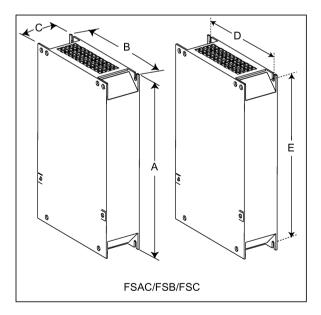

Article number 6SE6400	Dimens	ions (mm	1)			Weight (kg)	Fixing scre	ew .	Cable cro	ross section	
	Α	В	С	D	E		Size	Tightening torque (Nm)	Min.	Max.	
3TC00-4AD3	200	75.5	50	56	187	1.3	M4 (4)	1.1	1.0	2.5	
3TC01-0BD3	213	150	80	120	200	4.1	M4 (4)	1.5	1.5	6.0	
3TC03-2CD3	245	185	80	156	232	6.6	M4 (4)	2.25	2.5	10	

B.1.7 External line filter Class B



Risk of equipment damage and electric shocks

Some of the line filters in the table below have pin crimps for the connection to the inverter's PE and mains terminals.

Use of these pin crimps can cause damage to the equipment and even electric shocks.

For safety reasons, replace the pin crimps using appropriately sized UL/cUL-certified fork or ring crimps for PE terminal connection, and using UL/cUL-certified fork crimps or stranded cables for mains terminal connection.

Note

The line filter with an article number of 6SE6400-2FL02-6BB0 in the following table has two DC terminals (DC+, DC-) that are not used and should not be connected. The cables of these terminals need to be cut back and suitably insulated (for example, with heat shrink shroud).

Functionality

In order to achieve EN61800-3 Category C1/C2 (level equivalent to EN55011, Class B/A1) Radiated and Conducted Emission, the external line filters shown below are required for the SINAMICS V20 inverters (400 V filtered and unfiltered variants, as well as 230 V unfiltered variants). In this case, only a screened output cable can be used, and the maximum cable length is 25 m for the 400 V variants or 5 m for the 230 V variants.

Ordering data


Frame size	Inverter power rating	Line filter class B		
		Article number	Voltage	Current
Three phase A	C 400 V inverters			<u>.</u>
FSA	0.37 kW	6SL3203-0BE17-7BA0	380 V to 480 V	11.4 A
	0.55 kW			
	0.75 kW			
	1.1 kW			
	1.5 kW			
	2.2 kW			
FSB	3 kW	6SL3203-0BE21-8BA0	380 V to 480 V	23.5 A
	4 kW			
FSC	5.5 kW			
FSD	7.5 kW	6SL3203-0BE23-8BA0	380 V to 480 V	49.4 A
	11 kW			
	15 kW			
FSE	18.5 kW	6SL3203-0BE27-5BA0	380 V to 480 V	72 A
	22 kW			
Single phase A	C 230 V inverters			
FSAA/FSAB	0.12 kW	6SL3203-0BB21-8VA0	200 V to 240 V	20 A
	0.25 kW			
	0.37 kW			
	0.55 kW			
	0.75 kW			
FSAC	1.1 kW			
	1.5 kW			
FSB	1.1 kW	6SE6400-2FL02-6BB0	200 V to 240 V	26 A
	1.5 kW			
FSC	2.2 kW			
	3 kW	Siemens recommends you G136" or equivalent.	ou to use the line filter o	f Type "EPCOS B84113H00

Installation

For the EMC-compliant installation of the external line filters, refer to Section "EMC-compliant installation (Page 45)".


Connecting the line filter to FSAA ... FSA

The figure below is an example that shows how to connect the line fiter to the inverter.

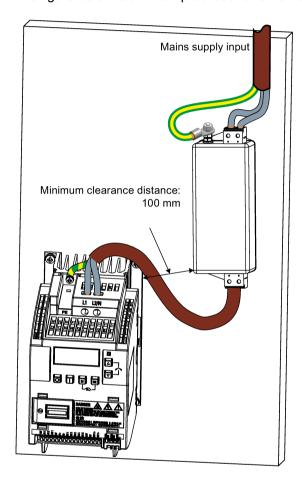


Connecting the line filter to FSB ... FSE

The figure below is an example that shows how to connect the line fiter to the inverter.

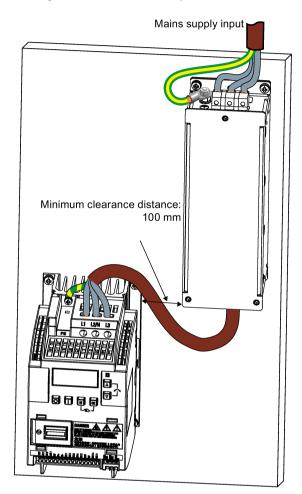

Mounting dimensions

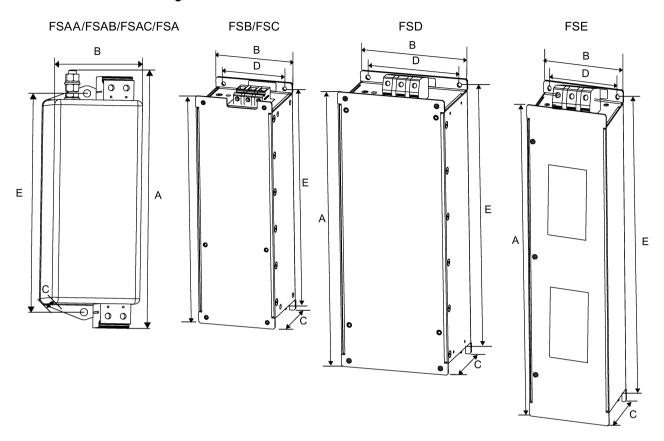

Article number	Dimensio	Dimensions (mm)			Weight (kg) Fixing screw		Cable cross section (mm²)			
	A	В	С	D	E		Size	Tightening torque (Nm)	Min.	Max.
Three phase AC 400 V inverters										
6SL3203-0BE17-7BA0	202	73	65	36.5	186	1.75	M4 (4)	0.6 to 0.8	1.0	2.5
6SL3203-0BE21-8BA0	297	100	85	80	281	4.0	M4 (4)	1.5 to 1.8	1.5	6.0
6SL3203-0BE23-8BA0	359	140	95	120	343	7.3	M4 (4)	2.0 to 2.3	6.0	16.0
6SL3203-0BE27-5BA0	400	100	140	75	385	7.6	M6 (4)	3.0	16.0	50.0
Single phase AC 230 V inverters										
6SL3203-0BB21-8VA0	168	59	53	-	143	0.9	M4 (2)	1.5	2.5	4
6SE6400-2FL02-6BB0	213	149	50.5	120	200	1.0	M5 (4)	1.5	1.5	6.0

B.1.8 Shield connection kits

Functionality

The shield connection kit is supplied as an option for each frame size. It allows easy and efficient connection of the necessary shield to achieve EMC-compliant installation of the inverter (see Section "EMC-compliant installation (Page 45)" for details).

Components


Inverter variant	Shield connection kit				
	Illustration	Components			
FSAA/FSAB	Article number: 6SL3266-1AR00-0VA0	① Shielding plate			
		② 3 × cable shield clamps			
		③ 4 × M4 screws (tightening torque: 1.8 Nm ± 10%)			
FSAC	Article number: 6SL3266-1AU00-0VA0	① Shielding plate			
	M M	② 3 × cable shield clamps			
		③ 4 × M4 screws (tightening torque: 1.8 Nm ± 10%)			
FSA	Article number: 6SL3266-1AA00-0VA0	① Shielding plate			
	и и и	② 3 × cable shield clamps			
	2 3	③ 4 × M4 screws (tightening torque: 1.8 Nm ± 10%)			

B.1 Options


Inverter variant	Shield connection kit					
	Illustration	Components				
FSB	Article number: 6SL3266-1AB00-0VA0	① Shielding plate				
		② 2 × clips¹)				
	2	③ 3 × cable shield clamps				
	3	④ 7 × M4 screws (tightening torque: 1.8 Nm ± 10%)				
FSC	Article number: 6SL3266-1AC00-0VA0	① Shielding plate				
		② 2 × clips¹)				
	2	③ 3 × cable shield clamps				
	3 4	④ 7 × M4 screws (tightening torque: 1.8 Nm ± 10%) ²⁾				
FSD/FSE	Article number: 6SL3266-1AD00-0VA0 (FSD)	① Shielding plate				
	Article number: 6SL3266-1AE00-0VA0 (FSE)	② 2 × clips ¹⁾				
		③ 4 × cable shield clamps				
	2	④ 8 × M4 screws (tightening torque: 1.8 Nm ± 10%) ²⁾				
	3					

- 1) The clips are required only when fixing the shielding plate to the cabinet panel-mounted inverter.
- For "push-through" applications, you must use two M5 screws and nuts (tightening torque: 2.5 Nm ± 10%) rather than two M4 screws (" "in the illustration) to fix the shielding plate to the inverter.


Outline dimensions (mm)

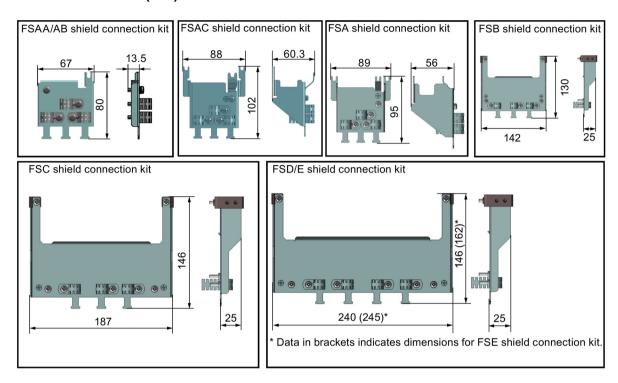

Fixing the shield connection kit to the inverter

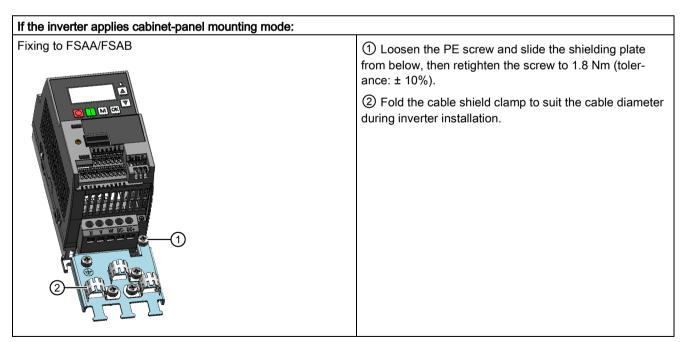


B.1 Options

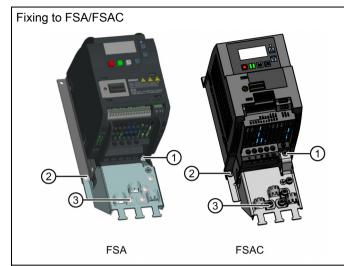


- ① Loosen the PE screw and slide the shielding plate from below, then retighten the screw to 1.8 Nm (tolerance: ± 10%).
- ② Clamp the heatsink between the shielding plate and the cabinet panel and tighten the screws and nuts to 1.8 Nm (tolerance: ± 10%).
- 3 Fold the cable shield clamp to suit the cable diameter during inverter installation.

Fixing to FSB/FSC/FSD/FSE

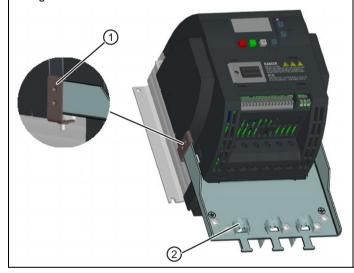

- ① Clamp the heatsink between the clip and the shielding plate, and tighten the screw to 1.8 Nm (tolerance: ± 10%).
- ② Fold the cable shield clamp to suit the cable diameter during inverter installation.

If the inverter applies push-through mounting mode:

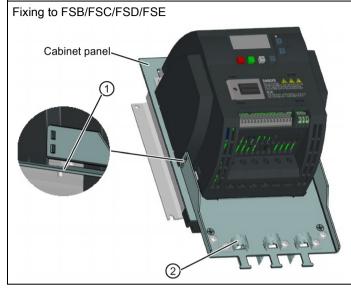

Note that the clips are not required in this case.

- ① Clamp the heatsink between the shielding plate and the cabinet panel, and use two mating nuts instead of the clips to tighten the screws (M4 screws if frame size B or M5 screws if frame size C or D) from the back of the cabinet panel. Screw tightening toque: M4 = 1.8 Nm \pm 10%; M5 = 2.5 Nm \pm 10%
- ② Fold the cable shield clamp to suit the cable diameter during inverter installation.

B.1.9 Memory card

Functionality

A memory card can be used on the Parameter Loader and allows you to upload/download parameter sets to/from the inverter. For detailed use of the memory card, refer to Appendix "Parameter Loader (Page 345)".

Article number

Recommended SD card: 6SL3054-4AG00-2AA0

B.1.10 RS485 termination resistor

An RS485 termination resistor is used to terminate the bus for the RS485 communication between the SINAMICS V20 and SIEMENS PLCs. For detailed use of the termination resistor, refer to Section "Communicating with the PLC (Page 169)".

Article number: 6SL3255-0VC00-0HA0

B.1.11 Residual current circuit breaker (RCCB)

Note

The SINAMICS V20 inverter has been designed to be protected by fuses; however, as the inverter can cause a DC current in the protective earthing conductor, if a Residual Current Circuit Breaker (RCCB) is to be used upstream in the supply, observe the following:

- SINAMICS V20 single phase AC 230 V inverters (filtered) FSAC can be operated only on a type A 100 mA or type B(k) 300 mA RCCB.
- All SINAMICS V20 three phase AC 400 V inverters (filtered or unfiltered) can be operated on a type B(k) 300 mA RCCB.
- SINAMICS V20 three phase AC 400 V inverters (unfiltered) FSA to FSD and FSA (filtered) can be operated on a type B(k) 30 mA RCCB.
- When multiple inverters are in use, one inverter must be operated on one RCCB of the corresponding type; otherwise, overcurrent trips will occur.

Ordering data

Frame size	Inverter power	Recommended RCCB article number 1)						
	rating	RCCB Type A 30 mA	RCCB Type A 100 mA	RCCB Type A(k) 30 mA ²⁾	RCCB Type B(k) 30 mA ³⁾	RCCB Type B(k) 300 mA		
Three phase	Three phase AC 400 V inverters							
FSA	0.37 kW to 2.2 kW	-	-	-	5SM3342-4	5SM3642-4		
FSB	3 kW to 4 kW							
FSC	5.5 kW							
FSD	7.5 kW	-	-	-	5SM3344-4	5SM3644-4		
	11 kW	-	-	-	5SM3346-4	5SM3646-4		
	15 kW							
FSE	18.5 kW	-	-	-	-	5SM3646-4		
	22 kW	-	-	-	-	5SM3647-4		
Single phase	e AC 230 V invert	ers						
FSAA/FSA B	0.12 kW to 0.75 kW	5SM3311-6	-	5SM3312-6KL01	5SM3321-4	5SM3621-4		
FSAC	1.1 kW	5SM3312-6	5SM3412-6		5SM3322-4	5SM3622-4		
	1.5 kW	5SM3314-6	5SM3414-6	5SM3314-6KL01	5SM3324-4	5SM3624-4		
FSB	1.1 kW	5SM3312-6	-	5SM3312-6KL01	5SM3322-4	5SM3622-4		
	1.5 kW	5SM3314-6		5SM3314-6KL01	5SM3324-4	5SM3624-4		
FSC	2.2 kW							
	3 kW	5SM3316-6		5SM3316-6KL01	5SM3326-4	5SM3626-4		


¹⁾ You can select commercially available 5SM3 series RCCBs (as given in the table) or equivalent.

¹⁾ To use a type A RCCB, the regulations in this FAQ must be followed: Siemens Web site (http://support.automation.siemens.com/WW/view/en/49232264)

²⁾ Letter "k" in the RCCB type names indicates RCCB types with time delay.

³⁾ SINAMICS V20 three phase AC 400 V inverters (filtered) FSB to FSD cannot be operated on a type B(k) 30 mA RCCB.

B.1.12 DIN rail mounting kits (only for FSAA ... FSB)

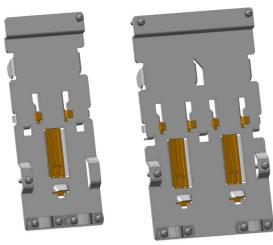

DIN rail mounting kit for FSAA/FSAB/FSAC/FSA

DIN rail mounting kit for FSB

Article numbers:

- 6SL3261-1BA00-0AA0 (for frame size AA/AB/AC/A)
- 6SL3261-1BB00-0AA0 (for frame size B)

B.1.13 Migration mounting kit for FSAA ... FSAC

Article numbers:


- 6SL3266-1ER00-0VA0 (for frame size AA/AB)
- 6SL3266-1EB00-0VA0 (for frame size AC)

Functionality

As frame size FSAA/FSAB has smaller outline dimensions, this migration mounting kit is supplied for easy installation of frame size AA/AB inverters to the G110 control cabinet or DIN rail. If the holes on your control cabinet were drilled to match frame size A, you can drill additional holes according to the outline dimensions of FSAA/FSAB, or use this option for installation.


Frame size FSAC can be directly installed to an FSA DIN rail mounting kit. You can also use the migration mounting kit for FSAC to install the FSAC to an FSB DIN rail mounting kit. If the holes on your control cabinet were drilled to match frame size B, you can drill additional holes according to the outline dimensions of FSAC, or use this option for an FSAC inverter.

Outline dimensions (mm)

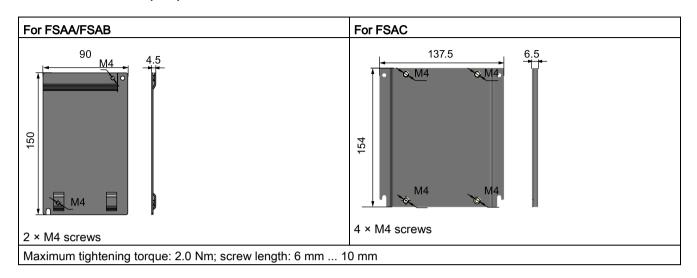



Fixing the migration mounting kit to the inverter


• Cabinet-panel mounting mode:

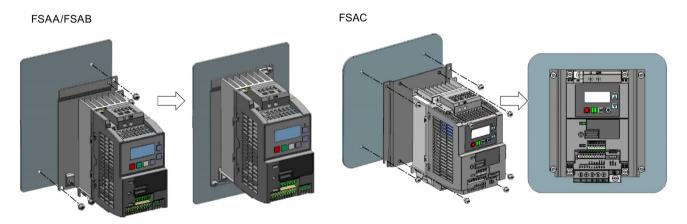


• DIN rail mounting mode:

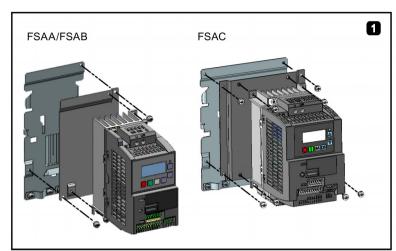

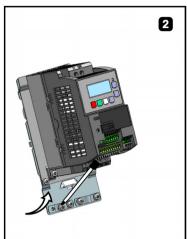


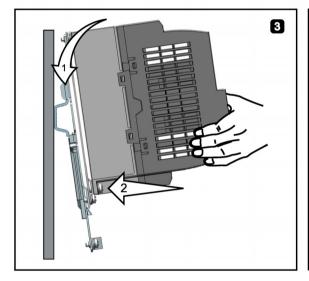

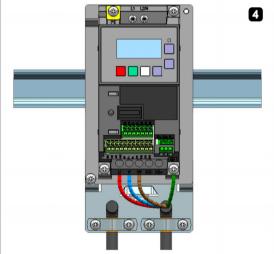


B.1.14 SINAMICS V20 Smart Access

Article number: 6SL3255-0VA00-5AA0

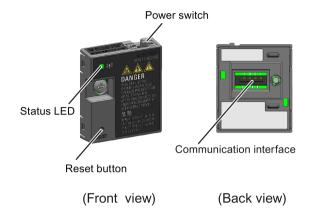

Outline dimensions (mm)

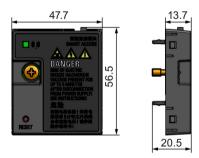

Functionality

SINAMICS V20 Smart Access is a Web server module with integrated Wi-Fi connectivity. It allows Web-based access to the inverter from a connected device (conventional PC with wireless network adapter installed, tablet or smart phone) to realize inverter operations including quick commissioning, inverter parameterization, JOG, monitoring, diagnostics, backup and restore, etc. This module is only for commissioning and thus cannot be used with the inverter permanently. For more information, see Chapter "Commissioning using SINAMICS V20 Smart Access (Page 135)".

Button description

The reset button on SINAMICS V20 Smart Access enables you to perform the following functions:

- Basic upgrading (Page 164)
- Wi-Fi configuration resetting

For more information, see the description later in this section.

Technical specifications


Firmware version	≥ V01.02.05
Rated voltage	24 V DC
Wireless technology and working frequency	Wi-Fi 2400 MHz to 2483.5 MHz
Maximum radio frequency power	17.5 dBm (EIRP*)
Wireless modulation type	802.11 b/g
Modulation technology	• 802.11b: CCK, DSSS
	• 802.11g: OFDM
Antenna gain	1.9 dBi
Extreme temperature range	-10 °C to 60 °C

^{*} EIRP means effective isotropic radiated power.

Note

The wireless communication distance (without barrier) can reach a maximum of 140 m; however, this value can vary with the environmental conditions.

Fitting SINAMICS V20 Smart Access to the inverter

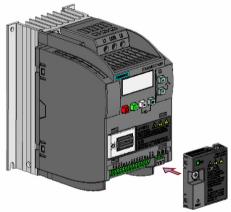

Recommended tightening torque: 0.8 Nm ± 10%

For more safety instructions during the fitting process, see Section "Fitting SINAMICS V20 Smart Access to the inverter (Page 137)".

B.1 Options

Resetting Wi-Fi configuration

When the inverter is in power-on state, pressing the reset button on the module resets the Wi-Fi configuration to defaults:

- Wi-Fi SSID: V20 smart acess_xxxxxx ("xxxxxxx" stands for the last six characters of the MAC address of SINAMICS V20 Smart Access)
- Wi-Fi password: 12345678
- Frequency channel: 1

Note

Check and make sure the status LED lights up solid green/solid yellow or flashes green before pressing the reset button to reset the Wi-Fi configuration. After you press the reset button, make sure you keep the button pressed until the status LED flashes yellow. Only then can the Wi-Fi configuration be reset successfully with the reset button.


Status LED

LED color	-	Meaning		
Solid red		One client is connected to the module and USS communication between the module and the inverter fails.		
Solid gree	en	The module is running and one client is connected to it.		
Solid yello	ow .	The module is running and no client is connected to it.		
Flashing red	Flashing at 1 Hz	No client is connected to the module and USS communication between the module and the inverter fails. *		
	Flashing at 0.5 Hz	The module is starting.		
Flashing	green	The module is running and one WebSocket channel is connected to it.		
Flashing yellow		Reminder of restarting the module.		
Flashing red and yellow alternatively		The Web application, firmware, or service package is upgrading.		

^{*} In case of USS communication failure between the module and the inverter, you must power off the module by sliding its power switch to "OFF" first, keep the reset button pressed and power on the module by sliding its power switch to "ON", and then update the firmware version of the module. For more information about firmware update, see Section "Upgrading Web application and SINAMICS V20 Smart Access firmware versions (Page 164)".

B.1.15 I/O Extension Module

Article number: 6SL3256-0VE00-6AA0

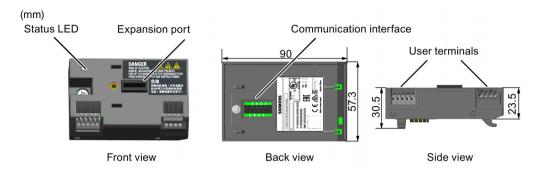


Functionality

The SINAMICS V20 I/O Extension Module supports the SINAMICS V20 400 V variants with firmware version 3.94 and later versions. It expands the number of V20 I/O terminals, enabling more inverter control functions. You can use the expansion port on the SINAMICS V20 inverter to connect the module. This module provides an expansion port to connect the SINAMICS V20 Smart Access or the BOP Interface Module.

Status LED

LED color	Description
Solid yellow	The module is powered on and is initializing.
Solid green	The module works properly and the communication between the module and the inverter is successfully established.
Flashing red at 2 Hz	The communication between the module and the inverter fails.

Connecting the device

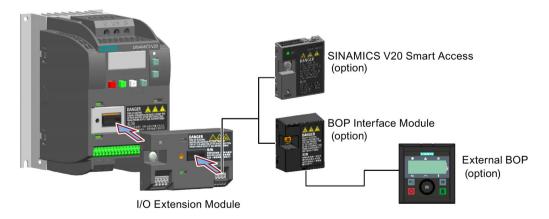

B.2 Spare parts - replacement fans

NOTICE

Equipment malfunctions due to improper installing or removing

Installing or removing the SINAMICS V20 I/O Extension Module when the V20 inverter is in power-on state can cause malfunctions of the SINAMICS V20 I/O Extension Module.

 Make sure that the V20 inverter is powered off before installing or removing the SINAMICS V20 I/O Extension Module.

Note

Remove the I/O Extension Module before fitting the Parameter Loader to upload and download V20 parameters.

Wiring diagram and terminal description

For more information about the wiring diagram and terminal description, see Sections "Typical system connections (Page 34)" and "Terminal description (Page 39)".

B.1.16 User documentation

Operating Instructions (Chinese version)

Article number: 6SL3298-0AV02-0FP0

B.2 Spare parts - replacement fans


Article numbers

- 6SL3200-0UF06-0AA0 (for frame size AC)
- 6SL3200-0UF01-0AA0 (for frame size A)
- 6SL3200-0UF02-0AA0 (for frame size B)
- 6SL3200-0UF03-0AA0 (for frame size C)
- 6SL3200-0UF04-0AA0 (for frame size D)
- 6SL3200-0UF05-0AA0 (for frame size E)


Replacing fans

Proceed through the steps as illustrated below to remove the fan from the inverter. To reassemble the fan, proceed in reverse order. When re-assembling the fan, make sure that the arrow symbol ("A" in the illustration) on the fan points to the inverter rather than the fan housing, the position for the fan cable exit point ("B") as well as the mounting orientation and position of the cable connector ("C") are sufficient for connecting the fan cable to the inverter.


Replacing the fan from FSAC

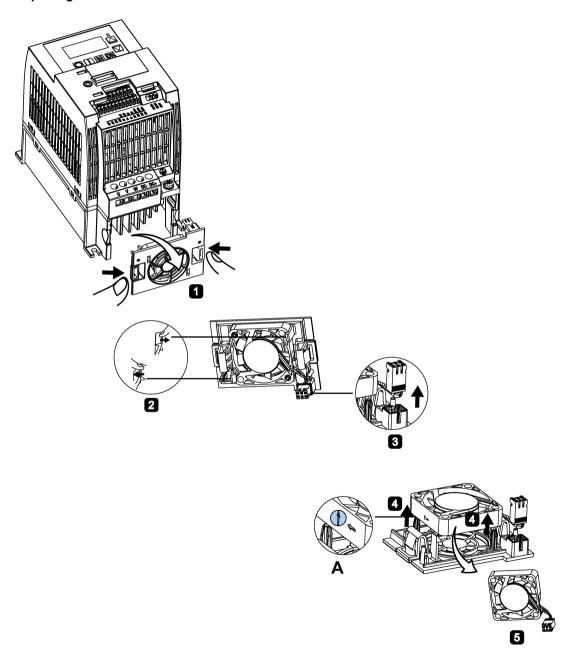


Replacing the fan from FSA

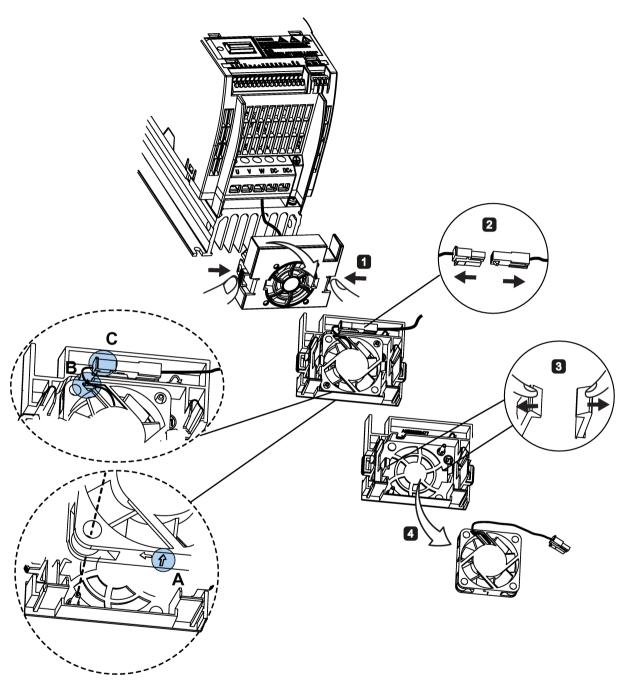

Replacing the fan(s) from FSB, FSC or FSD

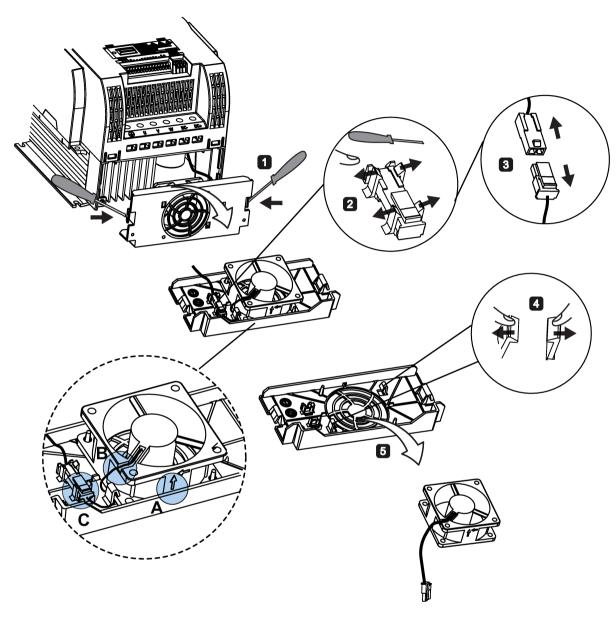

Replacing the fans from FSE

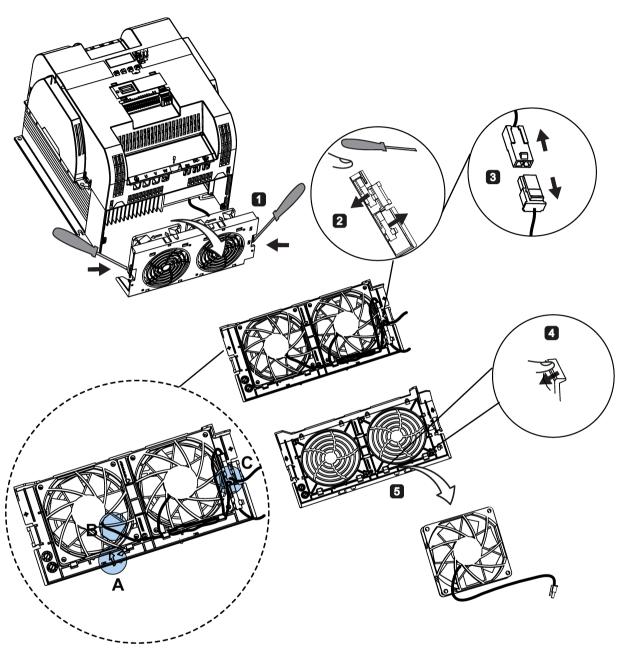

General license conditions

For Resellers: In order to avoid infringements of the license conditions by the reseller or the buyer these instructions and license conditions and accompanying CD – if applicable - have to be forwarded to the buyers.

1) Siemens License Conditions

General License Conditions for Software Products for Automation and Drives (2011-08-01)

1 Supply of Software to Licensee and Granting of Rights to use the Software

- 1.1 These General License Conditions shall exclusively apply to the delivery of Software for Automation and Drives to the Licensee. General terms and conditions of the Licensee shall apply only where expressly accepted in writing by us. The scope of delivery of the Software shall be determined by the congruent mutual written declarations of both parties. We shall grant the Licensee rights to use the software specified in the Confirmation of Order or, if the Licensee does not receive a Confirmation of Order, the software specified in the Certificate of License or that specified in the Software Product Sheet, if the Licensee is instead submitted a Software Product Sheet (hereinafter referred to as "SW"). The Certificate of License and the Software Product Sheet shall be collectively referred to as "CoL" hereinafter. The Licensee shall be submitted the CoL when the SW is supplied or in conjunction with the delivery bill. The way in which the SW is supplied is also derived directly from the Confirmation of Order or from the SW purchase order number contained in the Confirmation of Order, in conjunction with the associated order data of our catalog valid at the time of the Confirmation of Order (hereinafter collectively referred to as "Order Data"), or from the CoL. If the Licensee does not receive a data medium, it shall be authorized to copy the SW already available to it to the extent necessary to exercise the rights to use the SW granted to it. The aforesaid shall apply, mutatis mutandis, to electronic supply of the software (downloading). Where reference is made to the Order Data or the CoL in these General License Conditions, the reference to the CoL is of significance if the Licensee has not received a Confirmation of Order. In any case, the data contained in the Order Data is also contained in the CoL.
- 1.2 The Documentation relating to the SW (hereinafter referred to as "Documentation") shall be purchased separately, unless either the Order Data or CoL contains a stipulation stating that it belongs to the scope of delivery. If the Licensee is authorized to copy the SW in accordance with Clause 1.1, this shall also apply to the Documentation provided that it is included in the scope of delivery.
- 1.3 In the event that we submit a License Key to the Licensee, which unlocks the SW (hereinafter referred to as "License Key"), this License Key must also be installed.
- 1.4 The rights granted to the Licensee with respect to the SW are based on the License Type (see Section 2) and the Software Type (see Section 3). The license and Software Types are detailed in the Order Data or CoL. If the SW is supplied electronically or if copying rights are granted for it, the rights and duties specified in these General License Conditions shall apply to the legitimately generated copies.

- 1.5 If the Licensee is legitimately in possession of a previous SW version/release (hereinafter referred to as "Previous Version"), the Licensee shall be authorized to exercise the rights to use the SW granted to it either with respect to the SW or if this is intended from a technical point of view to the Previous Version, at its own discretion (downgrading). If the SW is an Upgrade or PowerPack in accordance with Section 4, Section 4 shall apply additionally.
- 1.6 If Previous Versions are listed in the Readme file of the SW under the category "parallel use", the Licensee has the right to exercise, alternatively to the user rights granted to him for the SW, the user rights for the listed Previous Versions in one (1) Instance. If the "Type of use" named in the Order Data or the CoL is: "Installation" or "User", the Licensee is entitled to the previously described right additionally to and at the same time as the Previous Versions listed in one Instance. An "Instance" in the context of these General License Conditions is either an instance in a physical operating system environment or an instance in a virtual operating system environment. The transferability of the user rights onto Previous Versions is only permissible in conjunction with the user rights for the SW in accordance with Clause 5.3.
- 1.7 In case the Licensee obtains only the data media but no license as per the Order Data or the CoL, any use of the SW by the Licensee is subject to the acquisition of a license according to Section 2. Up to the acquisition of the license, the Licensee is not entitled to supply the SW to third parties.
- 1.8 In case the SW contains Open Source Software or any similar software of a third party (hereinafter referred to as "OSS") the OSS is listed in the Readme_OSS-file of the SW. The Licensee is entitled to use the OSS in accordance with the respective license conditions of the OSS. The license conditions are provided on the same data carrier as the SW. The license conditions of the respective OSS shall prevail over these General License Conditions with respect to the OSS. If the license conditions of the OSS require the distribution of the source code of such OSS we shall provide such source code on request against payment of the shipping and handling charges.
- 1.9 The SW may be or contain licensed software other than OSS, i.e. software which has not been developed by us itself but which has been licensed to us by a third party (hereinafter referred to as the "Licensor"), e.g. Microsoft Licensing Inc. If the Licensee receives the terms and conditions stipulated by the relevant Licensor together with the SW in the Readme_OSS file in this case, such terms and conditions shall apply with respect to the Licensor's liability vis-à-vis the Licensee. Our own liability vis-à-vis the Licensee shall be governed in any case by these General License Conditions.

2 License Type

Depending on the License Type, the Licensee shall be granted the following rights to the SW:

- 2.1 Single License (One Off License, Copy License) The term "One Off License" or "Copy License" which may be used in the Software Product Sheet corresponds to the term "Single License". The following regulation shall apply to the full scope of the One Off License / Copy License. The Licensee shall be granted the non-exclusive right, transferable in accordance with Clause 5.3 and valid for an unlimited period of time, to install the SW in one (1) Instance and to utilize the SW thus installed in the manner specified in the Order Data or CoL (see "Type of Use").
- 2.2 Floating License The Licensee shall be granted the non-exclusive right, transferable in accordance with Clause 5.3 and valid for an unlimited period of time, to install the SW on any desired number of the Licensee's hardware devices. The number of objects (for example,

users or devices) permitted to utilize the SW at the same time can be derived from the Order Data or CoL (see "Type of Use).

- 2.3 Rental License The Licensee shall be granted the non-exclusive right, transferable in accordance with Clause 5.3 and limited in time as stipulated in the Order Data or CoL (see "Type of Use"), to install and use the SW in one (1) Instance. If the period of use is specified in hours, the usage decisive for the calculation of the time limit commences with the software start-up and finishes with its shut-down. If the period of usage is specified in days, weeks or months, the specified period, which commences in conjunction with the first SW start-up, shall apply independently of the actual time of usage. If the period of use is specified with a date, the right of use ends on this date regardless of the actual period of use.
- 2.4 Rental Floating License The Licensee shall be granted the non-exclusive right, transferable in accordance with Clause 5.3 and limited in time as stipulated in the Order Data or the CoL (s. "Type of use"), to install the SW on any desired number of the Licensee's hardware devices. The number of objects (for example, users or devices) permitted to utilize the SW at the same time can be derived from the Order Data or CoL (see "Type of Use) as well. If the period of use is specified in hours, the usage decisive for the calculation of the time limit commences with the software start-up and finishes with its shut-down. If the period of usage is specified in days, weeks or months, the specified period, which commences in conjunction with the first SW start-up, shall apply independently of the actual time of usage. If the period of use is specified with a date, the right of use ends on this date regardless of the actual period of use.
- 2.5 Demo License The Licensee shall be granted the non-exclusive right, transferable in accordance with Clause 5.3 and limited in time as stipulated in the Order Data or the CoL (s. "Type of use"), to install the SW in one (1) Instance and to use it for validation purposes. If the period of usage is specified in days, weeks or months, the specified period, which commences in conjunction with the first SW start-up, shall apply independently of the actual time of usage. If the period of use is specified with a date, the right of use ends on this date regardless of the actual period of use.
- 2.6 Demo Floating License The Licensee shall be granted the non-exclusive right, transferable in accordance with Clause 5.3 and limited in time as stipulated in the Order Data or the CoL (s. "Type of use"), to install the SW on any desired number of the Licensee's hardware devices. The number of objects (for example, users or devices) permitted to utilize the SW at the same time can be derived from the Order Data or CoL (see "Type of Use) as well. If the period of usage is specified in days, weeks or months, the specified period, which commences in conjunction with the first SW start-up, shall apply independently of the actual time of usage. If the period of use is specified with a date, the right of use ends on this date regardless of the actual period of use.
- 2.7 Trial License The Licensee shall be granted the non-exclusive and non-transferable right to install the SW in one (1) Instance and to use it for validation purposes in the manner specified in the Order Data or CoL (see "Type of Use"). The period of usage is limited to 14 days and commences with the SW start-up, unless a different period of usage is specified in the Order Data or CoL.

3 Software Type

If the Software Type is not specified in the Order Data or CoL, the rights specified in Clause 3.2 (Runtime Software) shall apply to the SW.

3.1 Engineering Software (hereinafter referred to as "E-SW") In the event that the Licensee uses E-SW to generate its own programs or data containing parts of the E-SW, the Licensee shall have the right, without having to pay any license fee, to copy and to use these parts of

the E-SW as a part of its own programs or data, or to supply them to third parties for use. In the event that such parts are supplied to third parties for use, these parties shall be bound in writing to comply with stipulations corresponding to those in Clauses 5.1 and 5.2 with respect to the above parts of the E-SW.

3.2 Runtime Software (hereinafter referred to as "R-SW") If the Licensee incorporates R-SW or any parts thereof into its own programs or data, it shall purchase a license with respect to the R-SW each time it installs or copies - depending on what is done first - its own programs or data containing RSW or parts thereof, in accordance with the relevant intended Type of Use and on the basis of the Siemens catalog valid at that time. In the event that the Licensee supplies the specified programs or data to third parties for their use, these parties shall be bound in writing to adhere to stipulations corresponding to those in Section 5, with respect to the R-SW parts contained therein. The aforesaid shall not affect the Licensee's obligation to purchase a license for the R-SW if the RSW original is copied. If the R-SW contains tools for parameterization/configuration and extended rights have been granted in this regard, this will be detailed in the readme file of the R-SW.

4 Upgrade and PowerPack

If it is apparent from the Order Data or CoL, e.g. by the addition "Upgrade" or "PowerPack" after the SW product name, that the SW is an upgrade for another software item (hereinafter referred to as "Source License"), the rights originally granted to the Licensee to use the Source License end in conjunction with the upgrade measure. The rights of use in accordance with Clause 1.6 remain unaffected by this. However, the Licensee is entitled to undo the upgrading (downgrading) - if this is intended from a technical point of view - and to exercise the rights to use the SW granted to it with respect to the Source Version in accordance with Clause 1.5.

5 Further Rights and Duties of the Licensee

- 5.1 Unless a stipulation to the contrary relating to a specific number of copies is contained on the data medium or in the readme file of the SW, the Licensee may generate an appropriate number of copies of every item of SW which it is authorized to use in accordance with these General License Conditions, where such copies shall be used exclusively for data backup purposes. Furthermore the Licensee may only copy the SW if and insofar as it has been granted copying rights by us in writing.
- 5.2 The Licensee shall not be entitled to modify, decompile or reverse engineer the SW. Nor may it extract any individual parts unless this is permitted by mandatory copyright law. Furthermore, the Licensee shall not be entitled to remove any alphanumeric identifiers, trademarks or copyright notices from the SW or the data medium and, insofar as it is entitled to make copies of the SW, shall copy them without alteration. The aforementioned regulation shall apply accordingly to the Documentation supplied in accordance with Section 1.
- 5.3 The Licensee shall be entitled to completely transfer the right to use the SW granted to it to a third party, provided that it concludes a written agreement with the third party in conformance with all of the conditions contained in this Section 5 and on the proviso that it does not retain any copies of the SW. If the Licensee has received a License Key for the SW, this key shall be supplied to the third party together with the SW. Furthermore, the third party shall be submitted the CoL together with these General License Conditions. The Licensee shall submit the CoL received for the SW to us at any time, if requested.
- 5.4 If the SW is a PowerPack or an Upgrade, the Licensee shall keep the CoL of the Source License and submit it to us at any time, if requested, together with the CoL for the SW. In the event that the Licensee transfers its right to use the PowerPack SW or Upgrade SW in

accordance with Clause 5.3, it shall also submit the CoL of the Source License to the third party.

5.5 If the Licensee receives a data medium which, in addition to the SW, contains further software products which are released for use, then it shall have the right to use these released software products exclusively for validation purposes, for a limited period of time and free of charge. The period of use shall be limited to 14 days, commencing with the first start-up of the relevant software program unless a different period is specified e.g. in the readme file of the relevant software product. These software products supplied exclusively for validation purposes shall be governed, mutatis mutandis, by the stipulations contained in these General License Conditions. The Licensee shall not be authorized to pass on these software products separately, i.e. without the SW, to a third party.

The conditions of the purchase contract apply if not otherwise stipulated hereafter for the Open Source Software.

2) License Conditions and Disclaimers for Open Source Software and other Licensed Software

In the product "SINAMICS V20", Copyright Siemens AG, 2015 (hereinafter "Product"), the following Open Source Software is used either unchanged or in a form that we have modified, and additionally the other License Software noted below:

Liability for Open Source Software

Open Source Software is provided free of charge. We are liable for the Product including Open Source Software contained in accordance with the license conditions applicable to the Product. Any liability for use of Open Source Software beyond the program flow intended for the Product is explicitly excluded. Furthermore, any liability for defects resulting from modifications to the Open Source Software by you or third parties is excluded.

We do not provide any technical support for the Product if it has been modified.

Availability of Source Code

Certain license conditions of third-party software components used in this product may require Siemens to provide you with the source code and additional information for such components. In most cases, Siemens provides this information on or with the device. In case Siemens is technically unable to do so, you may request a copy of this information against payment of shipping and handling charges. Please send your request to the address provided at the end of this section.

Siemens AG

Digital Factory

Customer Services DF&PD

DF CS SD CCC TS

Gleiwitzer Str. 555

90475 Nuernberg, Deutschland

Internet: http://www.siemens.com/automation/support-request

Tel.: +49 911 895 7222

Email: support.automation@siemens.com

Please note the following license conditions and copyright notices applicable to Open Source Software and other License Software:

Component	Open Source Software ("OSS") [Yes/No]	Copyright Information / File
FatFS R0.08a	YES	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT FATFS R0.08A
FatFS R0.10c ¹⁾	YES	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT FATFS R0.10c
Jquery.touchSwipe.js 1.6.15 2)	YES	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT jquery.touchSwipe.js 1.6.15
TI CC3200 HTTPServer 1.2.0 ³⁾	YES	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT TI CC3200 HTTPServer 1.2.0
GNU GCC libgcc 4.8.3	YES	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT GNU GCC LIBGCC 4.8.3
Lua 5.2.1	YES	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT LUA 5.2.1
STM32F4xx Standard Peripherals Library V1.3.0	NO	LICENSE AND COPYRIGHT INFORMATION FOR COMPONENT STM32F4XX STANDARD PERIPHERALS LIBRARY V1.3.0

^{1), 2), 3)} Apply to SINAMICS V20 Smart Access only

LICENSE CONDITIONS AND COPYRIGHT NOTICES

For detailed information about license conditions and copyright notices of the individual software mentioned in the above table, visit Siemens Service and Support Web site at https://support.industry.siemens.com/cs/ww/en/ps/13208.

Index

Α	P0840[02], 225
Advanced functions	P0842[02], 226
Automatic restart, 117	P0843[02], 226
Blockage clearing, 111	P0844[02], 226
Cavitation protection, 126	P0845[02], 226
Condensation protection, 119	P0848[02], 226
Dual ramp function, 128	P0849[02], 226
Economy mode, 113	P0852[02], 227
Flying start, 116	P0881[02], 227
Free functions blocks (FFBs), 115	P0882[02], 227
Frost protection, 118	P0883[02], 227
Hammer start, 109	P1020[02], 236
High/low overload (HO/LO) mode, 132	P1021[02], 236
Motor staging, 123	P1022[02], 236
Sleep mode, 120	P1023[02], 237
Super torque, 108	P1035[02], 237
UL508C/UL61800-5-1-compliant motor overheat	P1036[02], 237
protection, 114	P1041[02], 238
User default parameter set, 127	P1043[02], 238
Wobble function, 122	P1055[02], 239
Alarm code list, 331	P1056[02], 239
Article numbers of inverters, 17	P1074[02], 240
	P1110[02], 242
	P1113[02], 243
В	P1124[02], 244
	P1140[02], 245
Basic functions	P1141[02], 245
Boost functions, 89	P1142[02], 245
Braking functions, 93	P1175[02], 245
Imax controller, 104	P1218[02], 250
JOG function, 88	P1230[02], 250
Load torque monitoring, 106	P2103[02], 278
OFF functions, 85	P2104[02], 278
PID controller, 91 Ramp time, 102	P2106[02], 278
Vdc controller, 105	P2200[02], 284
BI	P2220[02], 286
P0731[02], 218	P2221[02], 286 P2222[02], 286
P0732[02], 218	P2222[02], 287
P0733[02], 218	P2235[02], 287
P0734[02], 218	P2236[02], 287
P0806, 224	P2241[02], 288
P0810, 225	P2241[02], 288
P0810, 225	P2810[02], 200
P0820, 225	P2812[01], 302
P0821, 225	P2814[01], 302
1 0021, 220	1 20 14[01], 302

P2816[01], 302 P2818[01], 303 P2820[01], 303 P2822[01], 303 P2824[01], 303 P2826[01], 303 P2828, 304 P2830, 304 P2832, 304 P2832, 304 P2834[03], 305 P2837[03], 305 P2840[01], 306 P2843[01], 306 P2843[01], 306 P2849, 307	r2858.0, 308 r2862.0, 309 r2863.0, 309 r2867.0, 309 r2868.0, 309 r2886.0, 312 r2888.0, 312 Built-in BOP button functions, 52 operating modes Hand/Jog/Auto, 52 screen displays, 58 status icons, 53 status LEDs, 59
P2854, 308	С
P2859, 308	
P2864, 309	CDS
P2940, 312	P0700[02], 212 P0701[02], 213
P3351[02], 316	P0701[02], 213 P0702[02], 214
P3852[02], 318	P0703[02], 214
ВО	P0704[02], 214
r0807.0, 224	P0705[02], 214
r1025.0, 237	P0706[02], 214
r2036.015, 276	P0712[02], 214
r2037.015, 276	P0713[02], 214
r2225.0, 287	P0719[02], 215
r2811.0, 302	P0727[02], 216
r2813.0, 302 r2815.0, 302	P0731[02], 218
r2817.0, 302	P0732[02], 218
r2819.0, 303	P0733[02], 218
r2821.0, 303	P0734[02], 218
r2823.0, 303	P0840[02], 225
r2825.0, 303	P0842[02], 226
r2827.0, 304	P0843[02], 226
r2829.0, 304	P0844[02], 226
r2831.0, 304	P0845[02], 226 P0848[02], 226
r2833.0, 304	P0849[02], 226
r2835.0, 305	P0852[02], 227
r2836.0, 305	P0881[02], 227
r2838.0, 305	P0882[02], 227
r2839.0, 305	P0883[02], 227
r2841.0, 306	P0886[02], 227
r2842.0, 306	P1000[02], 233
r2844.0, 306	P1020[02], 236
r2845.0, 306	P1021[02], 236
r2847.0, 306 r2848.0, 306	P1022[02], 236
r2852.0, 308	P1023[02], 237
r2853.0, 308	P1035[02], 237
r2857.0, 308	P1036[02], 237
12001.0, 000	P1041[02], 238

```
P1042[0...2], 238
                                                             P2242[0...2], 288
   P1043[0...2], 238
                                                             P2244[0...2], 288
                                                             P2253[0...2], 289
   P1044[0...2], 238
   P1055[0...2], 239
                                                             P2254[0...2], 289
   P1056[0...2], 239
                                                             P2264[0...2], 290
   P1070[0...2], 240
                                                             P2869[0...1], 309
   P1071[0...2], 240
                                                             P2871[0...1], 310
   P1074[0...2], 240
                                                             P2873[0...1], 310
   P1075[0...2], 240
                                                             P2875[0...1], 310
   P1076[0...2], 240
                                                             P2877[0...1], 310
   P1110[0...2], 242
                                                             P2879[0...1], 310
   P1113[0...2], 243
                                                             P2881[0...1], 311
   P1124[0...2], 244
                                                             P2883[0...1], 311
   P1140[0...2], 245
                                                             P2885[0...1], 311
   P1141[0...2], 245
                                                             P2887[0...1], 312
   P1142[0...2], 245
                                                         Clone saved parameter settings, 346
   P1175[0...2], 245
                                                         CO
   P1218[0...2], 250
                                                             P2378, 297
   P1230[0...2], 250
                                                             P2889, 312
   P1330[0...2], 258
                                                             P2890, 312
   P2103[0...2], 278
                                                             r0020, 191
   P2104[0...2], 278
                                                             r0021, 191
   P2106[0...2], 278
                                                             r0024, 191
   P2200[0...2], 284
                                                             r0025, 191
   P2220[0...2], 286
                                                             r0026[0], 191
   P2221[0...2], 286
                                                             r0027, 191
   P2222[0...2], 286
                                                             r0028, 191
   P2223[0...2], 287
                                                             r0031, 191
                                                             r0032, 191
   P2235[0...2], 287
   P2236[0...2], 287
                                                             r0035[0...2], 192
   P2241[0...2], 288
                                                             r0036, 192
   P2242[0...2], 288
                                                             r0037[0...1], 192
   P2243[0...2], 288
                                                             r0038, 192
   P2244[0...2], 288
                                                             r0039, 192
   P2253[0...2], 289
                                                             r0051[0...1], 193
   P2254[0...2], 289
                                                             r0066, 196
   P2264[0...2], 290
                                                             r0067, 196
   P2803[0...2], 301
                                                             r0068, 196
   P3351[0...2], 316
                                                             r0069[0...5], 196
   P3852[0...2], 318
                                                             r0070, 196
CI
                                                             r0071, 196
   P0095[0...9], 197
                                                             r0072, 196
   P0771[0], 222
                                                             r0074, 196
   P1042[0...2], 238
                                                             r0078, 197
   P1044[0...2], 238
                                                             r0080, 197
   P1070[0...2], 240
                                                             r0084, 197
   P1071[0...2], 240
                                                             r0085, 197
   P1075[0...2], 240
                                                             r0086, 197
   P1076[0...2], 240
                                                             r0087, 197
                                                            r0395, 209
   P1330[0...2], 258
   P2019[0...7], 273
                                                             r0512, 210
   P2151[0...2], 280
                                                             r0623[0...2], 211
```

r0630[02], 212	r0054.015, 194
r0631[02], 212	r0055.015, 195
r0632[02], 212	r0056.015, 195
r0633[02], 212	r0722.012, 215
r0755[01], 220	r0747.01, 219
r0947[063], 228	r0751.09, 219
r0949[063], 229	r0785.0, 223
r0954[02], 229	r0955[02], 230
r0956[02], 230	r1199.712, 246
r0957[02], 230	r2067.012, 277
r0958[02], 230	r2197.012, 283
r1024, 237	r2198.012, 284
r1045, 239	r2349, 292
r1050, 239	r2379.02, 298
r1078, 240	r2399, 299
r1079, 240	r3113.015, 313
r1114, 243	r3365, 318
r1119, 243	Communication
r1170, 245	MODBUS communication, 173
r1242, 253	USS communication, 169
r1246[02], 253	Connecting
r1315, 257	EMC-compliant cabinet design, 48
r1337, 259	EMC-compliant installation, 45
r1343, 261	terminal layout, 39
r1344, 261	typical system connections, 34
r1801[01], 262	wiring diagram, 37
r2018[07], 271	wiring diagram, or
r2110[03], 278	
	D
r2224, 287	D
r2245, 289	DDS
r2250, 289	P0291[02], 202
r2260, 290	P0301[02], 203
r2262, 290	P0304[02], 203
r2266, 290	P0305[02], 204
r2272, 291	P0307[02], 204
r2273, 291	P0308[02], 204
r2294, 292	2 2
r2870, 309	P0309[02], 205
r2872, 310	P0310[02], 205
r2874, 310	P0311[02], 205
r2876, 310	P0314[02], 205
r2878, 310	P0320[02], 205
r2880, 311	P0335[02], 206
r2882, 311	P0340[02], 206
r2884, 311	P0341[02], 207
r2955, 313	P0342[02], 207
· · · · · · · · · · · · · · · · · · ·	P0344[02], 207
r3237.01, 314	P0346[02], 207
CO/BO, 190	P0347[02], 208
r0019.014, 190	P0350[02], 208
r0050, 193	P0352[02], 208
r0052.015, 193	P0354[02], 208
r0053.015, 194	P0356[02], 208

P0358[02], 2	208	P1232[02]	. 250
P0360[02], 2		P1233[02]	
P0604[02], 2		P1234[02]	
P0610[02], 2		P1236[02]	
P0622[02], 2		P1240[02]	
P0625[02], 2		P1243[02]	
P0626[02], 2		P1245[02]	
P0627[02], 2		P1247[02]	
P0628[02], 2		P1250[02]	
P0640[02], 2		P1251[02]	
P1001[02], 2		P1252[02]	
P1002[02], 2		P1253[02]	
P1003[02], 2		P1256[02]	
P1004[02], 2		P1257[02]	
P1005[02], 2		P1300[02]	
P1005[02], 2		P1310[02]	
P1007[02], 2		P1311[02]	
P1007[02], 2		P1311[02]	
P1000[02], 2		P1316[02]	
P1010[02], 2		P1320[02]	
P1011[02], 2		P1321[02]	
P1012[02], 2		P1322[02]	
P1013[02], 2		P1323[02]	
P1014[02], 2		P1324[02]	
P1015[02], 2		P1325[02]	
P1016[02], 2		P1333[02]	
P1031[02], 2		P1334[02]	
P1040[02], 2		P1335[02]	
P1047[02], 2		P1336[02]	
P1048[02], 2		P1338[02]	
P1058[02], 2		P1340[02]	
P1060[02], 2		P1341[02]	
P1061[02], 2		P1345[02]	
P1080[02], 2		P1346[02]	
P1082[02], 2		P1350[02]	
P1091[02], 2		P1780[02]	
P1092[02], 2		P1800[02]	
P1093[02], 2		P1803[02]	, 262
P1094[02], 2		P1810, 263	
P1101[02], 2		P1820[02,	
P1120[02], 2		P1909[02]	
P1121[02], 2		P2000[02]	
P1130[02], 2		P2001[02]	
P1131[02], 2		P2002[02]	
P1132[02], 2		P2003[02]	
P1133[02], 2		P2004[02]	
P1134[02], 2		P2150[02]	
P1135[02], 2		P2151[02]	
P1138[02], 2		P2155[02]	
P1139[02], 2	245	P2156[02]	
P1202[02], 2	247	P2157[02]	, 280
P1227[02], 2	250	P2158[02]	, 280
_		_	

D0.45070 01 000	D007070 01 000
P2159[02], 280	P2373[02], 296
P2160[02], 280	P2374[02], 296
P2162[02], 280	P2375[02], 297
P2164[02], 280	P2376[02], 297
P2166[02], 280	P2377[02], 297
P2167[02], 281	P2378[02], 297
P2168[02], 281	P3853[02], 318
P2170[02], 281	P3854[02], 319
P2171[02], 281	r0035[02], 192
P2172[02], 281	r0313[02], 205
P2173[02], 281	r0330[02], 205
P2177[02], 281	r0331[02], 205
P2181[02], 282	r0332[02], 206
P2182[02], 282	r0333[02], 206
P2183[02], 282	r0345[02], 207
P2184[02], 282	r0370[02], 209
P2185[02], 283	r0372[02], 209
P2186[02], 283	r0373[02], 209
P2187[02], 283	r0374[02], 209
P2188[02], 283	r0376[02], 209
P2189[02], 283	r0377[02], 209
P2190[02], 283	r0382[02], 209
P2192[02], 283	r0384[02], 209
P2201[02], 285	r0386[02], 209
P2202[02], 285	r0623[02], 211
P2203[02], 285	r0630[02], 212
P2204[02], 285	r0631[02], 212
P2205[02], 285	r0632[02], 212
P2206[02], 285	r0633[02], 212
P2207[02], 285	r1246[02], 253
P2208[02], 285	2
P2209[02], 286	
P2210[02], 286	F
P2211[02], 286	F 11 1 1 1 1 00 4
P2212[02], 286	Fault code list, 324
P2213[02], 286	
P2214[02], 286	0
P2215[02], 286	G
P2216[02], 286	General license conditions, 395
P2231[02], 287	,
P2240[02], 288	
P2247[02], 289	1
P2248[02], 289	
P2360[02], 294	Inverter functions, 83
P2361[02], 294	Inverter menu structure
P2362[02], 294	50/60 Hz selection menu, 60
P2365[02], 294	Display menu, 55
P2366[02], 295	Main menu, 53
P2367[02], 295	Parameter menu, 53, 80
P2370[02], 295	Setup menu, 63
P2371[02], 295	Setup menu: application macros sub-menu,
P2372[02], 296	Setup menu: common parameters sub-menu,

Setup menu: connection macros sub-menu,
Setup menu: motor data sub-menu,
Inverter status at fault, 324

L
List of modified parameters, 84

Μ

Macros
application macros, 76
connection macros, 65
Mounting
cabinet panel mounting, 22
push-through mounting, 27
Mounting orientation and clearance, 21

0

Options BOP Interface Module, 352 braking resistor, 358 DIN rail mounting kit, 383 dynamic braking module, 355 external BOP, 350 external line filter, 372 I/O Extension Module, 389 line reactor, 363 memory card, 381 migration mounting kit, 383 output choke, 368 Parameter Loader, 346 residual current circuit breaker (RCCB), 382 RS485 termination resistor, 381 shield connection kit. 377 SINAMICS V20 Smart Access, 386 user documentation, 390

Р

Parameter resets, 133
Parameters
access levels, 186
BICO parameters, 184
C, C(1), C(30),U, T, 187
data set, 183
Digit-by-digit editing, 57
Normal editing of parameters, 56

Parameter types, 56 scaling, 187
Product maintenance, 4

Q

Quick commissioning through the parameter menu, 79 through the setup menu, 62

R

Replacement fans, 390

T

Technical support, 4
Text menu
for common parameters, 78
for motor parameters, 64

U

Use of third-party products, 4
User documentation components, 3

Siemens AG Digital Factory Motion Control P.O. Box 3180 91050 Erlangen Germany



